



Framework 8.0

T-Server for Siemens HiPath DX

Deployment Guide

The information contained herein is proprietary and confidential and cannot be disclosed or duplicated without the prior written consent of Genesys Telecommunications Laboratories, Inc.

Copyright © 2000–2010 Genesys Telecommunications Laboratories, Inc. All rights reserved.

About Genesys

Genesys Telecommunications Laboratories, Inc., a subsidiary of Alcatel-Lucent, is 100% focused on software for contact centers. Genesys recognizes that better interactions drive better business and build company reputations. Customer service solutions from Genesys deliver on this promise for Global 2000 enterprises, government organizations, and telecommunications service providers across 80 countries, directing more than 100 million customer interactions every day. Sophisticated routing and reporting across voice, e-mail, and Web channels ensure that customers are quickly connected to the best available resource—the first time. Genesys offers solutions for customer service, help desks, order desks, collections, outbound telesales and service, and workforce management. Visit www.genesyslab.com for more information.

Each product has its own documentation for online viewing at the Genesys Technical Support website or on the Documentation Library DVD, which is available from Genesys upon request. For more information, contact your sales representative.

Notice

Although reasonable effort is made to ensure that the information in this document is complete and accurate at the time of release, Genesys Telecommunications Laboratories, Inc., cannot assume responsibility for any existing errors. Changes and/or corrections to the information contained in this document may be incorporated in future versions.

Your Responsibility for Your System's Security

You are responsible for the security of your system. Product administration to prevent unauthorized use is your responsibility. Your system administrator should read all documents provided with this product to fully understand the features available that reduce your risk of incurring charges for unlicensed use of Genesys products.

Trademarks

Genesys, the Genesys logo, and T-Server are registered trademarks of Genesys Telecommunications Laboratories, Inc. All other trademarks and trade names referred to in this document are the property of other companies. The Crystal monospace font is used by permission of Software Renovation Corporation, www.SoftwareRenovation.com.

Technical Support from VARs

If you have purchased support from a value-added reseller (VAR), please contact the VAR for technical support.

Technical Support from Genesys

If you have purchased support directly from Genesys, please contact Genesys Technical Support at the regional numbers provided on [page 15](#). For complete contact information and procedures, refer to the [Genesys Technical Support Guide](#).

Ordering and Licensing Information

Complete information on ordering and licensing Genesys products can be found in the [Genesys Licensing Guide](#).

Released by

Genesys Telecommunications Laboratories, Inc. www.genesyslab.com

Document Version: 80fr_dep-ts_hipathDX_05-2010_v8.0.001.00



Table of Contents

List of Procedures	9
Preface	11
	About T-Server for Siemens HiPath DX	11
	Intended Audience.....	12
	Usage Guidelines	12
	Making Comments on This Document	14
	Contacting Genesys Technical Support.....	15
Part 1	Common Functions and Procedures	17
	New for All T-Servers in 8.0.....	17
Chapter 1	T-Server Fundamentals.....	19
	Learning About T-Server	20
	Framework and Media Layer Architecture	20
	T-Server Requests and Events.....	22
	Advanced Disconnect Detection Protocol	25
	Redundant T-Servers	26
	Multi-Site Support	30
	Agent Reservation	30
	Client Connections	31
	Next Steps	31
Chapter 2	T-Server General Deployment.....	33
	Prerequisites.....	33
	Software Requirements	34
	Hardware and Network Environment Requirements	35
	Licensing Requirements	35
	About Configuration Options.....	37
	Deployment Sequence	38
	Wizard Deployment of T-Server	38

	Wizard Configuration of T-Server	39
	Wizard Installation of T-Server	39
	Manual Deployment of T-Server	41
	Manual Configuration of Telephony Objects	42
	Manual Configuration of T-Server	44
	Manual Installation of T-Server	46
	Next Steps	48
Chapter 3	High-Availability Deployment.....	51
	Warm Standby Redundancy Type	52
	Hot Standby Redundancy Type	53
	Prerequisites.....	55
	Requirements	55
	Synchronization Between Redundant T-Servers	55
	Warm Standby Deployment.....	56
	General Order of Deployment.....	56
	Manual Modification of T-Servers for Warm Standby	57
	Warm Standby Installation of Redundant T-Servers	58
	Hot Standby Deployment.....	58
	General Order of Deployment.....	58
	Manual Modification of T-Servers for Hot Standby	59
	Hot Standby Installation of Redundant T-Servers.....	62
	Next Steps	62
Chapter 4	Multi-Site Support.....	63
	Multi-Site Fundamentals	64
	ISCC Call Data Transfer Service	65
	ISCC Call Flows.....	66
	ISCC Transaction Types	72
	T-Server Transaction Type Support.....	80
	Transfer Connect Service Feature	84
	ISCC/Call Overflow Feature	85
	Number Translation Feature	89
	Number Translation Rules	90
	Network Attended Transfer/Conference Feature.....	98
	Event Propagation Feature.....	100
	User Data Propagation	100
	Party Events Propagation	101
	Switch Partitioning	102
	Event Propagation Configuration.....	104
	ISCC Transaction Monitoring Feature	107
	Configuring Multi-Site Support.....	107

	Applications	108
	Switches and Access Codes	109
	DNs	115
	Configuration Examples	119
	Next Steps	121
Chapter 5	Start and Stop T-Server Components	123
	Command-Line Parameters	123
	Starting and Stopping with the Management Layer	125
	Starting with Startup Files	126
	Starting Manually	127
	HA Proxy	130
	T-Server	131
	Verifying Successful Startup	133
	Stopping Manually	133
	Starting and Stopping with Windows Services Manager	134
	Next Steps	134
Part 2	Reference Information	135
	New in T-Server for Siemens HiPath DX	136
Chapter 6	HiPath DX Switch-Specific Configuration	137
	Known Limitations	137
	Support of Switch/CTI Environments	139
	Setting the DN Properties	140
	Switch Terminology	143
	Support for Emulated and Supervised Routing	144
	Configuring Hunt Groups as Routing Points	145
	Support for Hot Desking	146
	Creating/Destroying Hot Desking Sessions Through T-Server	146
	Support for Trunk Monitoring	147
	Support for Account Codes	147
	Description	147
	Call-Related Account Codes	148
	Walk-Away Codes	149
	Key Name Indexing	149
	Account Code Private Services	150
	Call Locking	150
	Configuration Options	150

Chapter 7	Supported Functionality in T-Server for HiPath DX	151
	Business-Call Handling	152
	T-Server Call Classification.....	152
	Emulated Agents	154
	Emulated Agent Login/Logout	154
	Emulated Agent Ready/NotReady	155
	Emulated After-Call Work (ACW).....	155
	HA Synchronization	159
	Emulated Predictive Dialing.....	159
	Limiting Distribution Time.....	159
	Call Progress Detection	160
	Unsolicited Calls on Predictive Dialing Devices.....	160
	No-Answer Supervision	161
	Agent No-Answer Supervision	161
	Extension No-Answer Supervision	161
	ACD Position No-Answer Supervision	162
	Configuration Options for Device-Specific Overrides	162
	Extension Attributes for Overrides for Individual Calls.....	162
	Private Calls.....	162
	Recall Scenarios	162
	Reporting	163
	Smart OtherDN Handling.....	163
	Supported Requests	163
	Keep-Alive Feature Handling.....	164
	Examples	165
	Call Type Prediction.....	169
	Call Release Tracking.....	170
	DN-Based Reporting.....	170
	Call-Based Reporting.....	170
	Failed Route Notification	171
	HA Considerations	171
	Link Bandwidth Monitoring	171
	High and Low Watermarks.....	172
	HA Considerations	173
	Request Handling Enhancements	173
	T-Library Functionality	174
	Using the Extensions Attribute	183
	Private Services and Events.....	188
	User Data Keys	189
	Error Messages	190
	Hot-Standby HA Synchronization	193
	Support for Boss/Secretary Functionality	194

	Partitioned-Switch Configuration	195
	T-Server and PBX Licensing	195
Chapter 8	Common Configuration Options	197
	Setting Configuration Options	198
	Mandatory Options	198
	Log Section	198
	Log Output Options	204
	Examples	209
	Debug Log Options	210
	Log-Extended Section	212
	Log-Filter Section	214
	Log-Filter-Data Section	215
	SML Section	215
	Common Section	216
	Changes from 7.6 to 8.0	216
Chapter 9	T-Server Common Configuration Options	219
	Setting Configuration Options	219
	Mandatory Options	220
	T-Server Section	220
	License Section	225
	Agent-Reservation Section	228
	Multi-Site Support Section	229
	ISCC Transaction Options	231
	Transfer Connect Service Options	235
	ISCC/COF Options	236
	Event Propagation Options	238
	Number Translation Option	239
	Translation Rules Section	239
	Backup-Synchronization Section	240
	Call-Cleanup Section	241
	Security Section	243
	Timeout Value Format	243
	Changes from Release 7.6 to 8.0	244
Chapter 10	Configuration Options in T-Server for HiPath DX	247
	Application-Level Options	247
	Mandatory Options	247
	T-Server Section	248

	Call-Type-Rules Section	272
	Link-Control Section	272
	Agent Login-Level and DN-Level Options	278
	Changes from 7.2 to 8.0	281
Supplements	Related Documentation Resources	283
	Document Conventions	285
Index	287



List of Procedures

Installing T-Server on UNIX using Wizard	40
Installing T-Server on Windows using Wizard	41
Configuring T-Server manually.	44
Configuring multiple ports	45
Installing T-Server on UNIX manually	46
Installing T-Server on Windows manually	47
Verifying the manual installation of T-Server	48
Modifying the primary T-Server configuration for warm standby	57
Modifying the backup T-Server configuration for warm standby	58
Modifying the primary T-Server configuration for hot standby	59
Modifying the backup T-Server configuration for hot standby	61
Activating Transfer Connect Service	85
Configuring Number Translation.	97
Activating Event Propagation: basic configuration	104
Modifying Event Propagation: advanced configuration	105
Configuring T-Server Applications	108
Configuring Default Access Codes.	110
Configuring Access Codes	111
Configuring access resources for the route transaction type	115
Configuring access resources for the dnis-pool transaction type.	116
Configuring access resources for direct-* transaction types	117
Configuring access resources for ISCC/COF.	117
Configuring access resources for non-unique ANI.	118
Modifying DNs for isolated switch partitioning	119
Configuring T-Server to start with the Management Layer.	125
Starting T-Server on UNIX with a startup file	126
Starting T-Server on Windows with a startup file	127
Starting HA Proxy on UNIX manually.	131
Starting HA Proxy on Windows manually.	131

Starting T-Server on UNIX manually	132
Starting T-Server on Windows manually	132
Stopping T-Server on UNIX manually	133
Stopping T-Server on Windows manually	133



Preface

Welcome to the *Framework 8.0 T-Server for Siemens HiPath DX*. This document introduces you to the concepts, terminology, and procedures relevant to T-Servers® in general and provides detailed reference information about T-Server for T-Server for Siemens HiPath DX. The reference information includes, but is not limited to, configuration options, limitations, and switch-specific functionality. You must configure the configuration objects and options described in this document in the Framework Configuration Layer.

This document is valid only for the 8.0 release of this product.

Note: For versions of this document created for other releases of this product, visit the Genesys Technical Support website, or request the Documentation Library DVD, which you can order by e-mail from Genesys Order Management at orderman@genesyslab.com.

This preface contains the following sections:

- [About T-Server for Siemens HiPath DX, page 11](#)
- [Intended Audience, page 12](#)
- [Usage Guidelines, page 12](#)
- [Making Comments on This Document, page 14](#)
- [Contacting Genesys Technical Support, page 15](#)

For information about related resources and about the conventions that are used in this document, see the supplementary material starting on [page 283](#).

About T-Server for Siemens HiPath DX

T-Server is the Genesys software component that provides an interface between your telephony hardware and the rest of the Genesys software components in your enterprise. It translates and keeps track of events and requests that come from, and are sent to, the CTI (computer-telephony integration) link in the telephony device. T-Server is a TCP/IP-based server that can also act as a messaging interface between T-Server clients. It is the critical point in allowing your Genesys solution to facilitate and track the contacts that flow through your enterprise.

Note that the T-Server name has changed over the course of previous releases for various reasons (including, but not limited to, changes in vendor name or in Genesys policy). The former names include:

- T-Server for Siemens Realitis DX iCCL.

Intended Audience

This guide is intended primarily for system administrators, both those who are new to T-Server and those who are familiar with it.

- If you are new to T-Server, read the *Framework 8.0 Deployment Guide* and the Release Note, and then read all of the sections of this document that apply to your software and its accompanying components. Refer back to the *Framework 8.0 Deployment Guide* as needed.
- If you are an experienced T-Server user—someone with computer expertise, who is used to installing, configuring, testing, or maintaining Genesys software—you may find it more time efficient to go to the Index to see what is new or different in T-Server release 8.0. If you take that approach, please also read Release Notes and refer to other related resources, such as the *Genesys 7 Events and Models Reference Manual* and *Voice Platform SDK 8.0 .NET (or Java) API Reference* for complete information on T-Server events, call models, and requests.

In general, this document assumes that you have a basic understanding of, and familiarity with:

- Computer-telephony integration concepts, processes, terminology, and applications.
- Network design and operation.
- Your own network configurations.
- Your telephony hardware and software.
- Genesys Framework architecture and functions.
- Configuration Manager interface and object-managing operations.

Based on your specific contact center environment and your responsibilities in it, you may need to be familiar with a much wider range of issues as you deploy T-Server.

Usage Guidelines

The Genesys developer materials outlined in this document are intended to be used for the following purposes:

- Creation of contact center agent desktop applications associated with Genesys software implementations.

- Server-side integration between Genesys software and third-party software.
- Creation of a specialized client application specific to customer needs.

The Genesys software functions available for development are clearly documented. No undocumented functionality is to be utilized without the express written consent of Genesys.

The following Use Conditions apply in all cases for developers employing the Genesys developer materials outlined in this document:

1. Possession of interface documentation does not imply a right to use by a third party. Genesys conditions for use, as outlined below or in the *Genesys Developer Program Guide*, must be met.
2. This interface shall not be used unless the developer is a member in good standing of the Genesys Interacts program or has a valid Master Software License and Services Agreement with Genesys.
3. A developer shall not be entitled to use any licenses granted hereunder unless the developer's organization has met or obtained all prerequisite licensing and software as set out by Genesys.
4. A developer shall not be entitled to use any licenses granted hereunder if the developer's organization is delinquent in any payments or amounts owed to Genesys.
5. A developer shall not use the Genesys developer materials outlined in this document for any general application development purposes that are not associated with the above-mentioned intended purposes for the use of the Genesys developer materials outlined in this document.
6. A developer shall disclose the developer materials outlined in this document only to those employees who have a direct need to create, debug, and/or test one or more participant-specific objects and/or software files that access, communicate, or interoperate with the Genesys API.
7. The developed works and Genesys software running in conjunction with one another (hereinafter referred to together as the "integrated solutions") should not compromise data integrity. For example, if both the Genesys software and the integrated solutions can modify the same data, then modifications by either product must not circumvent the other product's data integrity rules. In addition, the integration should not cause duplicate copies of data to exist in both participant and Genesys databases, unless it can be assured that data modifications propagate all copies within the time required by typical users.
8. The integrated solutions shall not compromise data or application security, access, or visibility restrictions that are enforced by either the Genesys software or the developed works.

9. The integrated solutions shall conform to design and implementation guidelines and restrictions described in the *Genesys Developer Program Guide* and Genesys software documentation. For example:
 - a. The integration must use only published interfaces to access Genesys data.
 - b. The integration shall not modify data in Genesys database tables directly using SQL.
 - c. The integration shall not introduce database triggers or stored procedures that operate on Genesys database tables.

Any schema extension to Genesys database tables must be carried out using Genesys Developer software through documented methods and features.

The Genesys developer materials outlined in this document are not intended to be used for the creation of any product with functionality comparable to any Genesys products, including products similar or substantially similar to current Genesys general-availability, beta, and announced products.

Any attempt to use the Genesys developer materials outlined in this document or any Genesys Developer software contrary to this clause shall be deemed a material breach with immediate termination of this addendum, and Genesys shall be entitled to seek to protect its interests, including but not limited to, preliminary and permanent injunctive relief, as well as money damages.

Making Comments on This Document

If you especially like or dislike anything about this document, feel free to e-mail your comments to Techpubs.webadmin@genesyslab.com.

You can comment on what you regard as specific errors or omissions, and on the accuracy, organization, subject matter, or completeness of this document. Please limit your comments to the scope of this document only and to the way in which the information is presented. Contact your Genesys Account Representative or Genesys Technical Support if you have suggestions about the product itself.

When you send us comments, you grant Genesys a nonexclusive right to use or distribute your comments in any way it believes appropriate, without incurring any obligation to you.

Contacting Genesys Technical Support

If you have purchased support directly from Genesys, contact Genesys Technical Support at the following regional numbers:

Region	Telephone	E-Mail
North America and Latin America	+888-369-5555 (toll-free) +506-674-6767	support@genesyslab.com
Europe, Middle East, and Africa	+44-(0)-1276-45-7002	support@genesyslab.co.uk
Asia Pacific	+61-7-3368-6868	support@genesyslab.com.au
Malaysia	1-800-814-472 (toll-free) +61-7-3368-6868	support@genesyslab.com.au
India	000-800-100-713 (toll-free) +91-(022)-3918-0537	support@genesyslab.com.au
Japan	+81-3-6361-8950	support@genesyslab.co.jp
Before contacting technical support, refer to the <i>Genesys Technical Support Guide</i> for complete contact information and procedures.		



Part

1

Common Functions and Procedures

Part One of this *T-Server Deployment Guide* familiarizes the reader with T-Server in general. It addresses architectural, functional, and procedural information common to all T-Servers.

The information in Part One is divided into the following chapters:

- Chapter 1, “T-Server Fundamentals,” on [page 19](#), describes T-Server, its place in the Framework 8 architecture, T-Server redundancy, and multi-site issues. It stops short of providing configuration and installation information.
- Chapter 2, “T-Server General Deployment,” on [page 33](#), presents configuration and installation procedures for all T-Servers.
- Chapter 3, “High-Availability Deployment,” on [page 51](#), addresses high availability (HA).
- Chapter 4, “Multi-Site Support,” on [page 63](#), details the variations available for T-Server implementations across geographical locations.
- Chapter 5, “Start and Stop T-Server Components,” on [page 123](#), describes how, and in what order, to start up T-Server among other Framework components. It also provides possible stopping commands.

New for All T-Servers in 8.0

Before looking at T-Server’s place in Genesys solutions and in the architecture of the Genesys Framework, note the following general changes that have been implemented in the 8.0 release of T-Server:

- **Enhanced Event Propagation support for switch partitioning.** T-Server now supports the Event Propagation feature in deployments that use switch partitioning or intelligent trunks. See “Switch Partitioning” on [page 102](#).

- **Enhanced ISCC Transaction Monitoring support.** T-Server now supports new key-value pairs in `AttributeExtensions` with ISCC transaction data requested using `TGetAccessNumber` in the following requests: `TMakeCall`, `TRouteCall`, `TSingleStepTransfer`, `TInitiateTransfer`, `TInitiateConference`, and `TMuteTransfer`. The ISCC Transaction Monitoring allows T-Server clients to monitor ISCC transactions of the call data transfer between T-Servers in a multi-site environment. See “ISCC Transaction Monitoring Feature” on [page 107](#) and the *Genesys 7 Events and Models Reference Manual* for details about key-value pairs in `AttributeExtensions`.
- **Enhanced Agent Reservation support.** T-Server now supports Agent Reservation failure optimization, to ensure that only agent reservation requests of the highest priority are collected. This functionality can now be controlled with the `collect-lower-priority-requests` configuration option. See “Agent Reservation” on [page 30](#) for details.
- **Link bandwidth reporting support.** T-Server now supports notification of link bandwidth utilization. The following two new log events have been introduced:
 - 20009|STANDARD|MSG_TS_COMMON_LINK_ALARM_HIGH
 - 20010|STANDARD|MSG_TS_COMMON_LINK_ALARM_LOW
 Refer to *Framework 8.0 Combined Log Events Help* for information about the log events.
- **Notification of failed routing attempts and failed ISCC transactions.** T-Server now supports notification of failed routing attempts and failed ISCC transactions. The following new log events have been introduced:
 - 20011|STANDARD|MSG_TS_COMMON_ALARM_ROUTE_FAILURE_HIGH_WATER_MARK
 - 20012|STANDARD|MSG_TS_COMMON_ALARM_ROUTE_FAILURE_LOW_WATER_MARK
 - 21019|STANDARD|ISCC_LOGMSG_TRANSACTION_FAILED
 Refer to *Framework 8.0 Combined Log Events Help* for information about the log events.
- **Real-time SDN licenses query support.** T-Server can now report how many SDN licenses are currently available and in use, using the following key-value pairs in `AttributeExtensions` in `EventServerInfo` messages: `sdn-licenses-in-use` and `sdn-licenses-available`. See Part Two of this document for details on the use of `AttributeExtensions` in a particular T-Server.

Notes: Configuration option changes common to all T-Servers are described in “Changes from Release 7.6 to 8.0” on [page 244](#).

For information about the new features that are available in your T-Server in the initial 8.0 release, see Part Two of this document.



Chapter

1

T-Server Fundamentals

This chapter provides general information about T-Server features and functionality and about its configuration and installation. For reference information about your specific T-Server and about options for all T-Servers, see “Part Two: Reference Information.”

This chapter has various levels of information, some of it intended for people who have configured, installed, and used previous releases of T-Server, and some of it aimed at those less familiar with such T-Server operations. That means some sections will not necessarily be relevant for you.

- If you are an experienced user of T-Server, start with “New for All T-Servers in 8.0” on [page 17](#), and then move to the chapters comprising Part Two of this document, where specific information about your T-Server is available.
- If you are new to T-Server, begin with “[Learning About T-Server.](#)” Once you have read through that and subsequent sections, you are ready for the other chapters in Part One that go into detail about T-Server configuration and installation.

Generally, this chapter presents overview information that applies to all T-Servers (and Network T-Servers) and their deployment. This chapter is divided into the following sections:

- [Learning About T-Server, page 20](#)
- [Advanced Disconnect Detection Protocol, page 25](#)
- [Redundant T-Servers, page 26](#)
- [Multi-Site Support, page 30](#)
- [Agent Reservation, page 30](#)
- [Client Connections, page 31](#)
- [Next Steps, page 31](#)

Learning About T-Server

The *Framework 8.0 Deployment Guide* provides you with a high-level introduction to the role that T-Server plays in the Genesys Framework. If you have already looked through that guide, you may recall that T-Server is the most important component of the Framework Media Layer (the other two components are Load Distribution Server (LDS) and HA Proxy). The Media Layer enables Genesys solutions to communicate with various media, including traditional telephony systems, voice over IP (VoIP), e-mail, and the Web. This layer also provides the mechanism for distributing interaction-related business data, also referred to as *attached data*, within and across solutions.

Framework and Media Layer Architecture

[Figure 1](#) illustrates the position Framework holds in a Genesys solution.

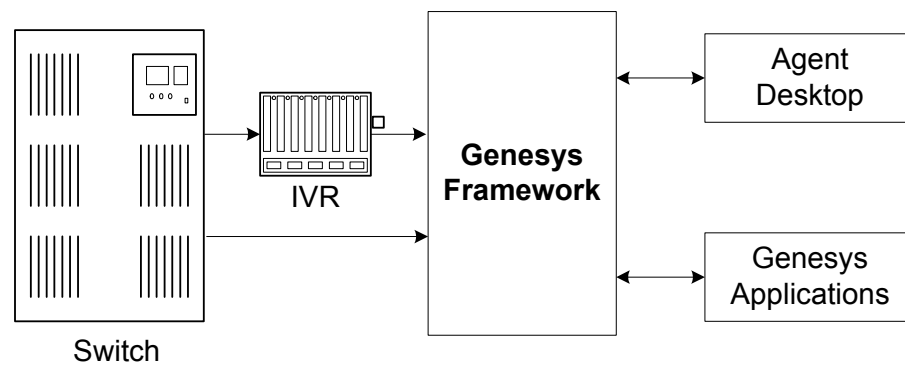


Figure 1: Framework in a Genesys Solution

Moving a bit deeper, [Figure 2](#) presents the various layers of the Framework architecture.

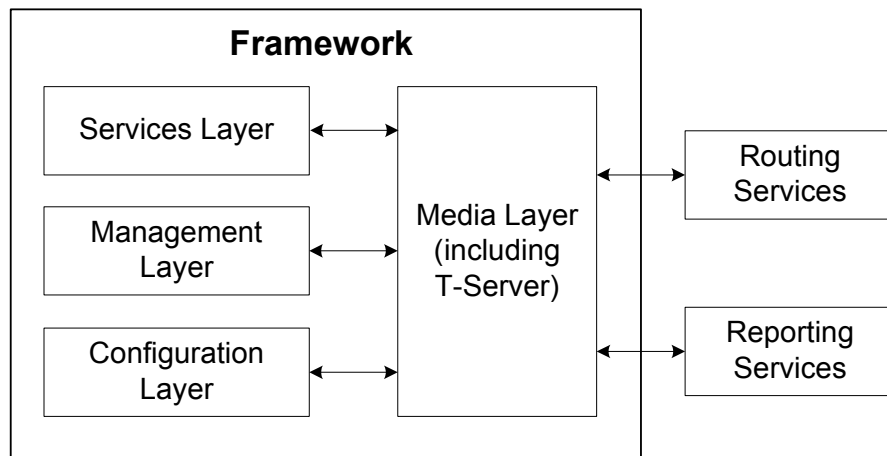


Figure 2: The Media Layer in the Framework Architecture

T-Server is the heart of the Media Layer—translating the information of the media-device realm into information that Genesys solutions can use. It enables your contact center to handle the computer-based form of the interactions that arrive and it translates the information surrounding a customer contact into reportable and actionable data.

[Figure 3](#) presents the generalized architecture of the Media Layer.

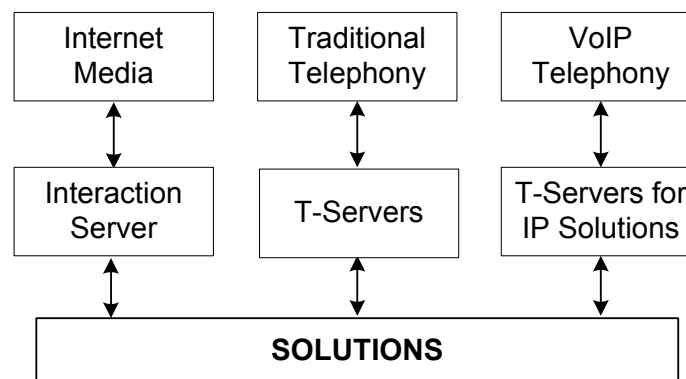


Figure 3: Media Layer Architecture

In addition to being the most important component of the Media Layer, T-Server plays the most significant role in making information about telephony traffic and its data available to Framework as a whole.

One or more components in practically every solution are T-Server clients. Solutions comprise a number of different Genesys software packages, from collections of components for various types of routing to those that allow for

outbound dialing to still others. Framework in general, and T-Server in particular, enable these solutions to function in your enterprise.

T-Server has several typical clients: Stat Server, Call Concentrator, Universal Routing Server, and agent desktop applications. T-Server gets the information it needs about the enterprise from Configuration Server. Additionally, if you use the Management Layer, T-Server provides its ongoing status and various other log messages to server components of the Management Layer (for instance, allowing you to set alarms).

T-Server Requests and Events

This section outlines the roles that T-Server plays in a contact center. While it is possible to describe roles for all T-Servers, at a detailed level, T-Server's functionality depends on the hardware to which it is connected. (For example, when connected to a traditional switch, it performs CTI functions, but when connected to a VOIP-based telephony device, it controls IP traffic.) The CTI connection is only for the switch.

Details of T-Server Functionality

T-Server is a TCP/IP server that enables intelligent communication between media-specific protocols (such as the various CTI protocols, including CSTA and ASAI) and TCP/IP-based clients of T-Server. Applications that are clients to T-Server use the T-Library format to transmit requests to T-Server through a TCP/IP socket. T-Server can then either translate those requests to CTI protocol for switch use or relay them directly to other TCP/IP clients.

T-Server performs three general functions in the contact center: Bridging, Messaging, and Interaction Tracking.

Bridging

T-Server acts as a platform-independent interface between media devices and business applications. In the case of a telephony device, for instance, it receives messages from and sends commands to the telephony equipment using either CTI links provided by the switch manufacturer or interface protocols provided by telephony network vendors.

On the client-application end, T-Server offers three models (call model, agent model, and device model) unified for all switches. The core functionality (such as processing an inbound call, an agent login, or a call-forwarding request) translates into a unified application programming interface (API) called T-Library, so that applications do not need to know what specific switch model they are dealing with. On the other hand, T-Library accommodates many functions that are unique to a specific switch, so that client applications are able to derive the maximum functionality offered by a particular switch.

Refer to the *Genesys 7 Events and Models Reference Manual* for complete information on all T-Server events and call models and to the

TServer.Requests portion of the *Voice Platform SDK 8.0 .NET (or Java) API Reference* for technical details of T-Library functions.

Messaging

In addition to translating requests and events for the client application involved in an interaction, T-Server:

- Provides a subscription mechanism that applications can use to receive notifications about interaction-related and non-interaction-related events within the contact center.
- Broadcasts messages of major importance (such as a notification that the link is down) to all clients.
- Broadcasts messages originated by a T-Server client to other T-Server clients.

The subscription mechanism consists of two parts, the DN subscription and event-type masking. Applications must register for a DN or a set of DNs to receive notifications about all events that occur in association with each registered DN. For example, when two softphone applications are registered for the same DN, and the first application initiates a call from the DN, T-Server notifies both applications that the call is initiated from the DN.

Client applications can also specify one or more types of events, and T-Server will filter out events of the non-specified types and only send events of the requested types. For example, if agent supervisors are interested in receiving agent-related events, such as AgentLogin and AgentLogout, they have to mask EventAgentLogin and EventAgentLogout, provided that a particular T-Server supports these events.

The combination of each client's subscription for DNs and masking of event types defines what messages T-Server distributes to what client.

Interaction Tracking

T-Server maintains call information for the life of the call (or other T-Server-supported media type) and enables client applications to attach user data to the call. Call information includes:

- A unique identifier, connection ID, that T-Server assigns when creating the call.
- Automatic Number Identification (ANI) and Dialed Number Identification Service (DNIS), if reported by the CTI link.
- User data that a client application (such as an Interactive Voice Response unit or Genesys Universal Routing Server) provides.

Difference and Likeness Across T-Servers

Although Figure 3 on [page 21](#) (and other figures) depicts T-Server that works with telephony systems as a single product, this is a simplification. Because

almost every traditional telephony device has its own characteristics and communication protocols, Genesys makes different T-Servers for different telephony systems. (That means your T-Server will not work with another switch.) Thus, all T-Servers play a common role in the architecture, but their specific features differ from implementation to implementation, based on the media device in use.

Despite their switch-based differences, T-Servers for telephony systems are similar to one another in at least one important respect: they are all built with a certain amount of shared software code. This shared code is rolled into a single unit and is called T-Server Common Part (TSCP). TSCP is the central, common component for all T-Servers and has its own Release Note, which is accessible via a hyperlink from your T-Server's Release Note.

Note: This document separates common-code features based on TSCP into separate sections and chapters, such as the “T-Server Common Configuration Options” chapter. These are the options for all T-Servers that TSCP makes available for configuration.

T-Server Functional Steps During a Sample Call

The following example, [Figure 4](#), outlines some basic steps that T-Server might take when a call arrives from outside the contact center. In this scenario, T-Server starts tracking the call even before it is delivered to the agent. T-Server then informs the selected agent that a call has arrived. When the switch delivers the call to the agent's extension, T-Server presents account information, collected at an Interactive Voice Response (IVR) unit, to the agent at the agent desktop application.

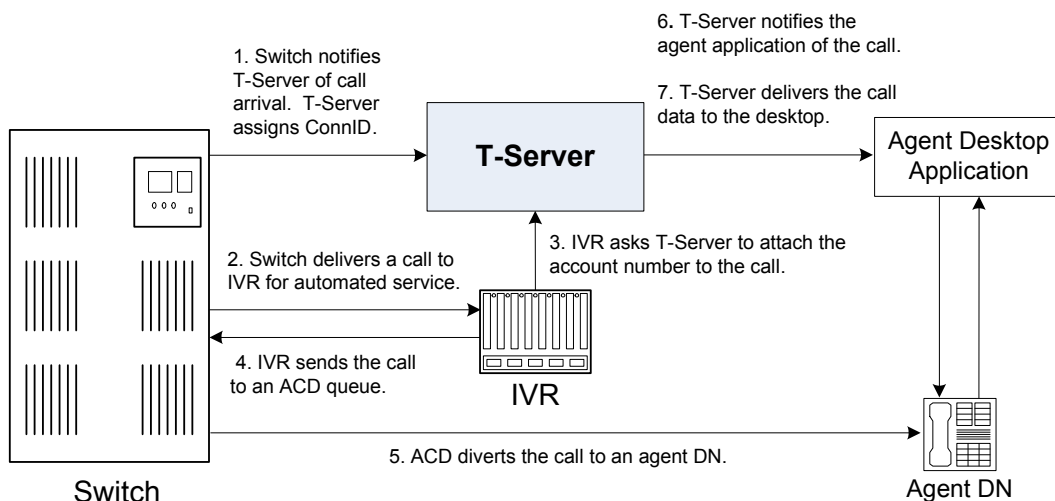


Figure 4: Functional T-Server Steps

Step 1

When the call arrives at the switch, T-Server creates a call in its internal structure. T-Server assigns the call a unique identifier, connection ID.

Step 2

The switch delivers the call to an Interactive Voice Response (IVR) unit, which begins automated interactions with the caller.

Step 3

IVR acquires user information from the caller through prompts and requests T-Server to attach that information to the call. T-Server updates the call with the user information.

Step 4

IVR sends the call to an ACD (Automated Call Distribution) queue.

Step 5

The ACD unit distributes the call to an available agent logged in to a particular DN (directory number).

Step 6

T-Server notifies the agent desktop application that the call is ringing on the agent DN. The notification event contains call data including ANI, DNIS, and account information that the IVR has collected.

Step 7

The agent desktop application presents the account information, including the name of the person whose account this is, on the agent's screen, so that the agent answering the call has all the relevant information.

These seven steps illustrate just a small part of T-Server's bridging, messaging, and interaction-processing capabilities.

Advanced Disconnect Detection Protocol

Since the 6.0 release of T-Server, the Advanced Disconnect Detection Protocol (ADDP) has replaced the Keep-Alive Protocol (KPL) as the method to detect

failures for certain T-Server connections, including connections between two T-Servers and between a T-Server and its clients.

Notes: Starting with release 7.5, the KPL backward-compatibility feature is no longer supported.

ADDP applies only to connections between Genesys software components.

With ADDP, protocol activation and initialization is made on the client's side and you can change these parameters. No additional messages are sent when there is existing activity over the connection. T-Server client applications and the remote T-Server (if any) must be listening to the socket and respond promptly to the polling signal for the connection to be preserved.

If you are going to enable ADDP, you must do it using the [protocol](#), [addp-timeout](#), [addp-remote-timeout](#), and [addp-trace](#) configuration options. When configuring a timeout, consider the following issues:

- The configured timeout must be at least twice as long as the maximum network latency.
- There may be an interval when T-Server does not check for network activity.
- If the link connection fails but the client is not notified (for example, because the host is turned off, or because a network cable is unplugged), the maximum reaction time to a link-connection failure is equal to double the configured timeout plus the established network latency.

Also keep in mind that the T-Server receiving the polling signal may not respond immediately, and that a delay occurs after the polling signal, while the response travels from one T-Server to another. If you do not account for these contingencies when configuring a timeout, the connection that ADDP is monitoring will be dropped periodically.

Redundant T-Servers

T-Servers can operate in a high-availability (HA) configuration, providing you with redundant systems. The basics of each T-Server's redundant capabilities differ from T-Server to T-Server. One basic principle of redundant T-Servers is the standby redundancy type, which dictates how quickly a backup T-Server steps in when the primary T-Server goes down.

The Framework Management Layer currently supports two types of redundant configurations: warm standby and hot standby. All T-Servers offer the warm standby redundancy type and, starting with release 7.1, the hot standby redundancy type is implemented in T-Servers for most types of switches. (See Table 1 on [page 27](#).)

Instructions for configuring T-Server redundancy are available in Chapter 3, “High-Availability Configuration and Installation.” Specifics on your T-Server’s HA capabilities are outlined in Part Two of this document.

Notes: IVR Server and some Network T-Servers can be configured for load sharing or warm or hot standby; however, they do not support any combination of these redundancy types. Details of your component’s HA capabilities are discussed in Part Two of this document.

Support for Hot Standby Redundancy in Various T-Servers

Use [Table 1](#) to determine whether your T-Server supports the hot standby redundancy type. The table also indicates whether HA Proxy components are required for this support, and, if so, how many are required per pair of redundant T-Servers (or per link if so noted).

[Table 1](#) only summarizes hot standby redundancy support in various T-Servers. For detailed, up-to-date information on the subject, see the *Genesys Supported Media Interfaces* white paper located on the Technical Support website at

<http://genesyslab.com/support/dl/retrieve/default.asp?item=A9CB309AF4DEB8127C5640A3C32445A7&view=item>.

Table 1: T-Server Support of the Hot Standby Redundancy Type

T-Server Type	Hot Standby Supported	HA Proxy Required	Number of HA Proxy Components
Alcatel A4200/OXO	Yes	No	—
Alcatel A4400/OXE	Yes	No	—
Aspect ACD	Yes	No	—
Avaya Communication Manager	Yes	No ^a	—
Avaya INDeX	Yes	No	—
Avaya TSAPI	Yes	No	—
Cisco Unified Communications Manager	Yes	No	—
Cisco UCCE	Yes	No	—
DataVoice Dharma	Yes	No	—
Digitro AXS/20	Yes	No	—
EADS Intecom M6880	Yes	No	—

Table 1: T-Server Support of the Hot Standby Redundancy Type (Continued)

T-Server Type	Hot Standby Supported	HA Proxy Required	Number of HA Proxy Components
EADS Telecom M6500	Yes	No	—
eOn eQueue	Yes	No	—
Ericsson MD110	Yes	No	—
Fujitsu F9600	Yes	No	—
Huawei C&C08	Yes	No	—
Huawei NGN	Yes	No	—
Mitel SX-2000/MN-3300	Yes	No	—
NEC NEAX/APEX	Yes	No	—
Nortel Communication Server 2000/2100	Yes	Yes ^b , No ^c	1 per link
Nortel Communication Server 1000 with SCCS/MLS	Yes	No	—
Philips Sopho iS3000	Yes	No ^d	1
Radvision iContact	No	—	—
Rockwell Spectrum	Yes	No	—
Samsung IP-PCX IAP	Yes	No	—
Siemens Hicom 300/HiPath 4000 CSTA I	Yes	No	—
Siemens HiPath 3000	Yes	No	—
Siemens HiPath 4000 CSTA III	Yes	No	—
Siemens HiPath DX	Yes	No	—
SIP Server	Yes	No	—
Tadiran Coral	Yes	No	—
Teltronics 20-20	Yes	Yes	1
Tenovis Integral 33/55	Yes	No	—
Network T-Servers^e			
AT&T	No	—	—

Table 1: T-Server Support of the Hot Standby Redundancy Type (Continued)

T-Server Type	Hot Standby Supported	HA Proxy Required	Number of HA Proxy Components
Concert	No	—	—
CRSP	No	—	—
DTAG	No	—	—
GenSpec	No	—	—
ISCP	No	—	—
IVR Server, using network configuration	Yes	—	—
KPN	No	—	—
MCI	No	—	—
NGSN	No	—	—
Network SIP Server	No	—	—
Sprint	No	—	—
SR3511	No	—	—
Stentor	No	—	—

- a. With release 7.1, T-Server for Avaya Communication Manager no longer uses HA Proxy for its support of hot standby. Earlier releases of this T-Server require two HA Proxies (for which there is a Configuration Wizard) to support hot standby.
- b. For T-Server for Nortel Communication Server 2000/2100 in high-availability (hot standby) configuration, Genesys recommends that you use link version SCA114 or above with call-progress and noncontroller-released messages enabled. See the switch-specific information in Part 2 of this *Deployment Guide* for additional information on HA configurations.
- c. Starting with release 7.5, T-Server for Nortel Communication Server 2000/2100 supports HA without HA Proxy when operating in Dual CTI Links mode. See the switch-specific information in Part 2 of this *Deployment Guide* for additional information on HA configurations.
- d. Starting with release 6.5.3, T-Server for Philips Sopho iS3000 supports HA both with and without HA Proxy.
- e. Although they do not support high availability per se, Network T-Servers do support a load-sharing schema.

Multi-Site Support

Multi-site configuration implies the existence of two or more switches that belong to the same enterprise or service provider, and that share the Genesys Configuration Database. (In some cases this may include isolated partitions on a given switch served by different T-Servers.) The main goal of T-Server support for multi-site operations is to maintain critical information about a call as it travels from one switch to another.

For instructions on installing and configuring a multi-site environment, including information on the Inter Server Call Control (ISCC) features, please see Chapter 4, “Multi-Site Support,” on [page 63](#).

Agent Reservation

T-Server provides support for clients to invoke the agent reservation function, `TReserveAgent()`. This function allows a server application that is a client of T-Server to reserve a DN along with an agent, a `Place`, or both, so that no other T-Server client can route calls to it during a specified reservation interval. Alternatively, when clients use the ISCC feature (see “ISCC Call Data Transfer Service” on [page 65](#)), they can use an agent reservation embedded in an ISCC request. (To do so, clients have to specify a certain `Extensions` attribute in an ISCC request when initiating an ISCC transaction. See [page 72](#) for the list of ISCC requests.)

The reservation does not currently prevent the reserved objects from receiving direct calls or calls distributed from ACD Queues; agent reservation is intended as a way of synchronizing the operation of several clients. See `RequestReserveAgent` in the *Voice Platform SDK 8.0 .NET (or Java) API Reference* for more details on this function from the client’s point of view.

In addition to invoking the `TReserveAgent` function, you can customize the Agent Reservation feature by configuring options in the `T-Server Application` object. See “Agent-Reservation Section” on [page 228](#) in the “T-Server Common Configuration Options” chapter in Part Two for more details.

Starting with version 8.0, T-Server supports Agent Reservation failure optimization, to ensure that only agent reservation requests of the highest priority are collected. T-Server responds immediately with the `EventError` message to existing or new reservation requests of a lower priority while collecting the agent reservation requests of the highest priority only. This functionality is controlled with the `collect-lower-priority-requests` configuration option (see [page 228](#)).

Client Connections

The number of connections T-Server can accept from its clients depend on the operating system that T-Server runs. [Table 2](#) illustrates the number of client connections that T-Server support.

Table 2: Number of T-Server's Client Connections

Operating System	Number of Connections
AIX 32-bit mode (versions 5.1, 5.2, 5.3)	32767
AIX 64-bit mode (versions 5.1, 5.2, 5.3, 6.1)	32767
HP-UX 32-bit mode (versions 11.11, 11i v2)	2048
HP-UX 64-bit mode (versions 11.11, 11i v2, 11i v3)	2048
Linux 32-bit mode (versions RHEL 3.0, RHEL 4.0, RHEL 5.0)	32768
Solaris 32-bit mode (versions 8, 9)	4096
Solaris 64-bit mode (versions 8, 9, 10)	65536
Tru64 UNIX (versions 4.0F, 5.1, 5.1B)	4096
Windows Server 2003, 2008	4096

Next Steps

Now that you have gained a general understanding of the roles and features available with T-Servers, you are ready to learn how T-Servers are installed and configured. That information is presented in the next few chapters of this *Deployment Guide*. So unless you are already familiar with T-Server deployment and operation procedures, continue with Chapter 2, “T-Server General Deployment,” on [page 33](#). Otherwise, you may want to jump to Part Two of this *Deployment Guide*, where you will find information about your specific T-Server.



Chapter

2

T-Server General Deployment

This chapter contains general information for the deployment, configuration, and installation of your T-Server. You may have to complete additional configuration and installation steps specific to your T-Server and switch. You will find these steps in Part Two of this document.

This chapter contains these sections:

- [Prerequisites, page 33](#)
- [Deployment Sequence, page 38](#)
- [Wizard Deployment of T-Server, page 38](#)
- [Manual Deployment of T-Server, page 41](#)
- [Next Steps, page 48](#)

Note: You *must* read the *Framework 8.0 Deployment Guide* before proceeding with this T-Server guide. That book contains information about the Genesys software you must deploy before deploying T-Server.

Prerequisites

T-Server has a number of prerequisites for deployment. Read through this section before deploying your T-Server.

Software Requirements

Framework Components

You can only configure T-Server after you have deployed the Configuration Layer of Genesys Framework. This layer contains DB Server, Configuration Server, Configuration Manager, and, at your option, Deployment Wizards. If you intend to monitor or control T-Server through the Management Layer, you must also install and configure components of this Framework layer, such as Local Control Agent (LCA), Message Server, Solution Control Server (SCS), and Solution Control Interface (SCI), before deploying T-Server.

Refer to the *Framework 8.0 Deployment Guide* for information about, and deployment instructions for, these Framework components.

Media Layer and LCA

To monitor the status of components in the Media Layer through the Management Layer, you must load an instance of LCA on every host running Media Layer components. Without LCA, Management Layer cannot monitor the status of any of these components. If you do not use the Management Layer, LCA is not required.

Supported Platforms

Refer to the *Genesys Supported Operating Environment Reference Manual* for the list of operating systems and database systems supported in Genesys releases 6.x, 7.x, and 8.x. You can find this document on the Genesys Technical Support website at

<http://genesyslab.com/support/dl/retrieve/default.asp?item=B6C52FB62DB42BB229B02755A3D92054&view=item>.

For UNIX-based (UNIX) operating systems, also review the list of patches Genesys uses for software product builds, and upgrade your patch configuration if necessary. A description of patch configuration is linked to installation `read_me.html` files for the Genesys applications that operate on UNIX, and is available within the installation packages.

Security

Starting with release 7.5, T-Server supports the Genesys Transport Layer Security (TLS) and can be configured for secure data exchange with the other Genesys components that support this functionality.

The Genesys TLS is not supported on all operating systems that T-Server itself supports. For information about the supported operating systems, see the *Genesys 8.0 Security Deployment Guide*.

Hardware and Network Environment Requirements

Hosting

Genesys recommends that you or your IT specialist assign host computers to Genesys software before you start Genesys installation. Remember the following restrictions:

- Do not install all the Genesys server applications on the same host computer.
- When installing a few server applications on the same host computer, prevent them (except for Configuration Server) from using the swap area.

Installation Privileges

During deployment, be sure to log in with an account that will permit you to perform administrative functions—that is, one that has root privileges.

Server Locations

Refer to the “Network Locations for Framework Components” chapter of the *Framework 8.0 Deployment Guide* for recommendations on server locations.

Supported Platforms

Refer to the *Genesys Supported Media Interfaces* white paper for the list of supported switch and PBX versions. You can find this document on the Genesys Technical Support website at <http://genesyslab.com/support/dl/retrieve/default.asp?item=A9CB309AF4DEB8127C5640A3C32445A7&view=item>.

Licensing Requirements

All Genesys software is licensed—that is, it is not shareware. Genesys products are protected through legal license conditions as part of your purchase contract. However, the level of technical license-control enforcement varies across different solutions and components.

Before you begin to install T-Server, remember that, although you may not have had to use technical licenses for your software when you deployed the Configuration and Management Layers in their basic configurations, this is not the case with the Media Layer.

T-Server requires seat-related DN technical licenses to operate even in its most basic configuration. Without appropriate licenses, you cannot install and start T-Server. If you have not already done so, Genesys recommends that you install License Manager and configure a license file at this point. For complete

information on which products require what types of licenses, and on the installation procedure for License Manager, refer to the *Genesys Licensing Guide* available on the Genesys Documentation Library DVD.

The sections that follow briefly describe the T-Server license types.

Note: Starting with release 7.2, the licensing requirements for T-Server have changed from previous releases. Please read this section carefully and refer to the *Genesys Licensing Guide* for complete licensing information.

Licensing Basic Implementations

A stand-alone T-Server serving a single site requires licenses to register all DNs it monitors. DNs that agents use in day-to-day contact center operations, such as Extensions and ACD Positions, have to be registered using licenses that control agent seats.

Note: Configure all seat DNs that agents use (Extensions and ACD Positions) in the Configuration Layer. This enables detailed call monitoring through Genesys reporting, and generally allows you to control access to individual DNs.

Licensing HA Implementations

T-Servers operating with the hot standby redundancy type require a special CTI HA technical license, which allows for high-availability implementations, in addition to regular T-Server licenses. Neither T-Server in a redundant pair configured for hot standby starts if this license is unavailable. Moreover, the primary and backup T-Servers must use the same licenses to control the same pool of DNs. If your T-Servers are configured with the hot standby redundancy type, order licenses for CTI HA support.

Licensing Multi-Site Implementations

T-Servers performing multi-site operations require licenses that allow for such operations, in addition to regular T-Server licenses. If some of your T-Servers are configured for multi-site routing while others are not, either order licenses for multi-site support for all T-Servers or install an additional License Manager to handle the T-Servers involved in multi-site routing.

Note: You do not need licenses for multi-site support if some T-Server clients include the local location as the `location` attribute value in their requests for routing within the same site.

Configuring License Files

You need a license to configure and install Media Layer components. Genesys recommends that, if you have not already done so, at this point you:

1. Install License Manager.
2. Configure license files.

Note: If you use the `<port>@<server>` format when entering the name of the license server during installation, remember that some operating systems use `@` as a special character. In this case, the installation routine is unable to write license information for T-Server to the Configuration Layer or the `run.sh` file. Therefore, when you use the `<port>@<server>` format, you must manually modify the command-line license parameter after installing T-Server.

For information about which products require what types of licenses and for the installation procedure for License Manager, refer to the *Genesys Licensing Guide* available on the Genesys Documentation Library DVD.

About Configuration Options

Configuring T-Server is not a onetime operation. It is something you do at the time of installation and then in an ongoing way to ensure the continued optimal performance of your software. You must enter values for T-Server configuration options in the relevant Wizard screens or on the `Options` tab of your T-Server `Application` object in Configuration Manager. The instructions for configuring and installing T-Server that you see here are only the most rudimentary parts of the process. You must refer extensively to the configuration options chapters located in Part Two of this book. Pay particular attention to the configuration options specific to your own T-Server.

Configuration options common to all T-Servers, independent of switch type, are described in Chapter 9, “T-Server Common Configuration Options,” on [page 219](#). *Switch-specific* configuration options are described in a separate chapter. T-Server also supports unified Genesys log options, as described in the “Common Configuration Options” chapter.

Options that configure values for the TSCP software in your T-Server are common to all T-Servers. Options based on the custom features of your switch apply to your T-Server only. Familiarize yourself with both types of options. You will want to adjust them to accommodate your production environment and the business rules that you want implemented there.

Deployment Sequence

Genesys recommends deploying T-Server by using the Media Configuration Wizard. However, if for some reason you must manually deploy T-Server, you will also find instructions for doing that in this chapter.

This is the recommended sequence to follow when deploying T-Server.

Task Summary: T-Server Deployment Sequence

Objective	Related Procedures and Actions
1. Deploy Configuration Layer objects and ensure Configuration Manager is running.	See the <i>Framework 8.0 Deployment Guide</i> for details.
2. Deploy Network objects (such as Host objects).	See the <i>Framework 8.0 Deployment Guide</i> for details.
3. Deploy the Management Layer.	See the <i>Framework 8.0 Deployment Guide</i> for details.
4. Deploy T-Server using the Wizard (recommended), or manually.	See “Wizard Deployment of T-Server” on page 38 . If you are deploying T-Server manually, see “Manual Deployment of T-Server” on page 41 .
5. Test your configuration and installation.	See Chapter 5, “Start and Stop T-Server Components,” on page 123 .

Note: If, during the installation procedure for any of the Genesys applications, the script warns you that Configuration Server is unavailable and that the configuration cannot be updated, continue with the installation. Following the installation, you must complete the information on the Start Info tab to ensure that T-Server will run.

Wizard Deployment of T-Server

Configuration Wizards facilitate component deployment. T-Server configuration and installation involves many steps, and Genesys strongly recommends that you set up T-Server using the Wizard rather than manually. T-Server Wizard guides you through a series of steps and options to customize your deployment of T-Server.

Wizard Configuration of T-Server

The first step to take for a Wizard-based configuration is to install and launch Genesys Wizard Manager. (Refer to the *Framework 8.0 Deployment Guide* for instructions.) When you first launch Genesys Wizard Manager, it suggests that you set up the Management Layer and then the Framework. The Framework setup begins with configuring and creating the objects related to T-Server, starting with the Switch and Switching Office objects, and the T-Server's Application object itself.

Note: With the Wizard, you create your T-Server Application object in the course of creating your Switch object.

During creation of the Switch object, you also have an opportunity to run the Log Wizard to set up T-Server logging. Then, you can specify values for the most important T-Server options. Finally, you can create contact center objects related to T-Server, such as DNS, Agent Logins, and some others.

Note: During configuration of a Switch object, the Wizard prompts you to copy a T-Server installation package to an assigned computer. After that package is copied to the destination directory on the T-Server host, complete the last steps of the T-Server configuration. Then, install T-Server on its host.

After you complete the Framework configuration, the Genesys Wizard Manager screen no longer prompts you to set up the Framework. Instead, it suggests that you set up your solutions or add various contact center objects to the Framework configuration, including the Switch, DNS and Places, Agent Logins, Agent Groups, Place Groups, and, in a multi-tenant environment, a Tenant. In each case, click the link for the object you wish to create. Again, you create a new T-Server Application object in the course of creating a new Switch object.

Wizard Installation of T-Server

After creating and configuring your T-Server and its related components with the Wizard, proceed to T-Server installation. That installation process is similar to that of previously installed components.

Note: Certain Wizard-related procedures are not described in this document. Refer to the *Framework 8.0 Deployment Guide* for general instructions.

Warning! Genesys does not recommend installation of its components using a Microsoft Remote Desktop connection. The installation should be performed locally

Procedure: Installing T-Server on UNIX using Wizard

Start of procedure

1. In the directory to which the T-Server installation package was copied during Wizard configuration, locate a shell script called `install.sh`.
2. Run this script from the command prompt by typing `sh` and the file name. For example: `sh install.sh`.
3. When prompted, confirm the host name of the computer on which you are installing T-Server.
4. When prompted, confirm the application name of the T-Server that you are installing.
5. Specify the destination directory into which you are installing T-Server, with the full path to it.
6. If the target installation directory has files in it, do one of the following:
 - Type 1 to back up all the files in the directory (recommended).
 - Type 2 to overwrite only the files in this installation package. Use this option only if the installation being upgraded operates properly.
 - Type 3 to erase all files in this directory before continuing with the installation.

The list of file names will appear on the screen as the files are copied to the destination directory.

7. If asked which version of the product to install, the 32-bit or the 64-bit, choose the one appropriate to your environment.
8. If asked, specify the license information that T-Server is to use.
9. As soon as the installation process is finished, a message appears announcing that installation was successful. The process places T-Server in the directory with the name specified during the installation.

End of procedure

Next Steps

- To test your configuration and installation, go to Chapter 5, “Start and Stop T-Server Components,” on [page 123](#), and try it out.
- To configure and install redundant T-Servers, see Chapter 3, “High-Availability Deployment,” on [page 51](#).

- To install T-Servers for a multi-site environment, proceed to Chapter 4, “Multi-Site Support,” on [page 63](#).

Procedure: Installing T-Server on Windows using Wizard

Start of procedure

1. Open the directory to which the T-Server installation package was copied during Wizard configuration.
2. Locate and double-click `Setup.exe` to start the installation. The `Welcome` screen launches.
3. When prompted, specify the connection parameters to the Configuration Server associated with this T-Server.
4. Identify the T-Server Application object in the Configuration Layer to be used by this T-Server.
5. Specify the license information that T-Server is to use.
6. Specify the destination directory into which you are installing T-Server.
7. Click `Install` to begin the installation.
8. Click `Finish` to complete the installation.

By default, T-Server is installed as a Genesys service (Windows Services) with `Automatic` startup type.

End of procedure

Next Steps

- To test your configuration and installation, go to Chapter 5, “Start and Stop T-Server Components,” on [page 123](#), and try it out.
- To configure and install redundant T-Servers, see Chapter 3, “High-Availability Deployment,” on [page 51](#).
- To install T-Servers for a multi-site environment, proceed to Chapter 4, “Multi-Site Support,” on [page 63](#).

Manual Deployment of T-Server

Deploying T-Server manually requires that you configure a number of different objects in the Configuration Layer prior to setting up your T-Server

objects and then install T-Server. This section describes the manual deployment process.

Manual Configuration of Telephony Objects

This section describes how to manually configure T-Server Telephony objects if you are using Configuration Manager.

Recommendations

Genesys recommends registering (configuring) only those entities you plan to use in the current configuration. The more data there is in the Configuration Database, the longer it takes for the CTI setup to start, and the longer it will take to process configuration data. Remember that adding configuration objects to the Genesys Configuration Database does not cause any interruption in contact center operation.

Depending on how much work is required to manually configure all applications and objects, consider registering more `Person` objects first, with a set of privileges that lets them perform configuration tasks.

Switching Offices

Your telephony network may contain many switching offices, but you should only configure those that are involved with customer interactions.

Using Configuration Manager, be sure to register a `Switching Office` object that accommodates your `Switch` object under `Environment`. Until you have done this, you cannot register a `Switch` object under `Resources` (single-tenant environment) or a `Tenant` (multi-tenant environment).

Note: The value for the switching office name must not have spaces in it.

Switches

1. Configure a `Switch` object for each switch on your telephony network. Assign each `Switch` object to the appropriate `T-Server` object.
2. If implementing the multi-site configuration, specify access codes for all switches on the network so that the call-processing applications can route and transfer calls between switches.

Two types of access codes exist in a Genesys configuration:

- Default access codes that specify how to reach this switch from any other switch in the Genesys environment.

- Switch-to-switch access codes that specify how to reach a particular switch from any other switch. Use this type when either a nondefault dial number or routing type is required between any two locations. When a switch-to-switch access code is configured, its value has a higher priority than that of a default access code.

See Chapter 4, “Multi-Site Support,” on [page 63](#), for step-by-step instructions.

Note: When the numbering plan uses unique directory number (DN) assignment across sites and multi-site routing is not used, you do not have to configure access codes.

DNs and Agent Logins

Note: Starting with release 7.2, the requirements for configuring DNs in the Configuration Layer have changed. Refer to Part Two of this guide for information about the requirements on configuring specific DN types for your T-Server.

For each T-Server for which you are configuring DNs, you must configure all DNs that agents and their supervisors use in day-to-day contact center operation—so-called *seat-related DNs*—such as Extensions and ACD Positions. Otherwise, T-Server does not register such DNs.

1. To configure Telephony objects within each switch, consult the switch documentation. Information specific to your T-Server in Part Two of this document contains tables that indicate how to set DN types in the Genesys Configuration Database depending on the switch DN types and configuration.
2. Check the numbering plan for different types of DNs, to see if you can save time by registering Ranges of DNs. Usually, DNs of the same type have consecutive numbers, which will make an otherwise tedious configuration task easy. Agent Login objects almost always have consecutive numbers, which means you can register them through the Range of Agent Logins feature as well.
3. If you plan to use Virtual Queues and Virtual Routing Points in the contact center operation, Genesys recommends registering them after you have outlined the call-processing algorithms and identified your reporting needs.

Note: Remember that CTI applications, not the switch, generate telephony events for DNs of these types.

Warning! When setting the `Register` flag for a DN, make sure you select the value according to your needs. The `Register` flag values are as follows:

- `False`—T-Server processes this DN locally, and never registers it on the switch.
 - `True`—T-Server always registers this DN on the switch during T-Server startup or CTI link reconnect.
 - `On Demand`—T-Server registers this DN on the switch only if a T-Server client requests that it be registered.
-

Multi-Site Operations

See the section, “Configuring Multi-Site Support” on [page 107](#), for information on setting up DNs for multi-site operations.

Manual Configuration of T-Server

Use the *Framework 8.0 Deployment Guide* to prepare accurate configuration information. You may also want to consult *Configuration Manager Help*, which contains detailed information about configuring objects.

Recommendations

Genesys recommends using an Application Template when you are configuring your T-Server application. The Application Template for your particular T-Server contains the most important configuration options set to the values recommended for the majority of environments. When modifying configuration options for your T-Server application later in the process, you can change the values inherited from the template rather than create all the options by yourself.

Procedure: Configuring T-Server manually

Start of procedure

1. Follow the standard procedure for configuring all `Application` objects to begin configuring your T-Server `Application` object. Refer to the *Framework 8.0 Deployment Guide* for instructions.
2. In a `Multi-Tenant` environment, specify the `Tenant` to which this T-Server belongs on the `General` tab of the `Properties` dialog box.

3. On the **Connections** tab:
 - Add all Genesys applications to which T-Server must connect.

Note: For multi-site deployments you should also specify T-Server connections on the **Connections** tab for any T-Servers that may transfer calls directly to each other.

4. On the **Options** tab, specify values for configuration options as appropriate for your environment.

Note: For T-Server option descriptions, see Part Two of this document.

5. In a multi-site environment, you must complete additional T-Server configuration steps to support multi-site operations; see Chapter 4, “Multi-Site Support,” on [page 63](#).

End of procedure

Next Steps

- See “Manual Installation of T-Server” on [page 46](#).

Procedure: Configuring multiple ports

Purpose: To configure multiple ports in T-Server for its client connections.

Start of procedure

1. Open the T-Server Application Properties dialog box.
2. Click the **Server Info** tab.
3. In the **Ports** section, click **Add Port**.
4. In the **Port Properties** dialog box, on the **Port Info** tab:
 - a. In the **Port ID** text box, enter the port ID.
 - b. In the **Communication Port** text box, enter the number of the new port.
 - c. In the **Connection Protocol** box, select the connection protocol, if necessary.
 - d. Select the **Listening Mode** option.

Note: For more information on configuring secure connections between Framework components, see *Genesys 8.0 Security Deployment Guide*.

- e. Click OK.
5. Click OK to save the new configuration.

End of procedure

Manual Installation of T-Server

The following directories on the Genesys 8.0 Media product DVD contain T-Server installation packages:

- `media_layer/<switch>/<platform>` for UNIX installations, where `<switch>` is your switch name and `<platform>` is your operating system.
- `media_layer\<switch>\windows` for Windows installations, where `<switch>` is your switch name.

Procedure: Installing T-Server on UNIX manually

Note: During installation on UNIX, all files are copied into the directory you specify. No additional directories are created within this directory. Therefore, do not install different products into the same directory.

Start of procedure

1. In the directory to which the T-Server installation package was copied, locate a shell script called `install.sh`.
2. Run this script from the command prompt by typing `sh` and the file name. For example: `sh install.sh`.
3. When prompted, confirm the host name of the computer on which T-Server is to be installed.
4. When prompted, specify the host and port of Configuration Server.
5. When prompted, enter the user name and password to access Configuration Server.
6. When prompted, select the T-Server application you configured in “Configuring T-Server manually” on [page 44](#) from the list of applications.
7. Specify the destination directory into which T-Server is to be installed, with the full path to it.
8. If the target installation directory has files in it, do one of the following:
 - Type 1 to back up all the files in the directory (recommended).
 - Type 2 to overwrite only the files in this installation package. Use this option only if the installation being upgraded operates properly.

- Type 3 to erase all files in this directory before continuing with the installation.

The list of file names will appear on the screen as the files are copied to the destination directory.

9. If asked which version of the product to install, the 32-bit or the 64-bit, choose the one appropriate to your environment.
10. If asked about the license information that T-Server is to use: specify either the full path to, and the name of, the license file, or the license server parameters.
11. As soon as the installation process is finished, a message appears announcing that installation was successful. The process places T-Server in the directory with the name specified during the installation.

End of procedure

Next Steps

- To verify manual installation, go to “Verifying the manual installation of T-Server” on [page 48](#).
- To test your configuration and installation, go to Chapter 5, “Start and Stop T-Server Components,” on [page 123](#), and try it out.
- To configure and install redundant T-Servers, see Chapter 3, “High-Availability Deployment,” on [page 51](#).
- To install T-Servers for a multi-site environment, proceed to Chapter 4, “Multi-Site Support,” on [page 63](#).

Procedure: Installing T-Server on Windows manually

Start of procedure

1. In the directory to which the T-Server installation package was copied, locate and double-click `Setup.exe` to start the installation.
2. When prompted, specify the connection parameters to the Configuration Server associated with this T-Server.
3. When prompted, select the T-Server Application you configured in “Configuring T-Server manually” on [page 44](#) from the list of applications.
4. Specify the license information that T-Server is to use: either the full path to, and the name of, the license file, or the license server parameters.
5. Specify the destination directory into which T-Server is to be installed.
6. Click `Install` to begin the installation.
7. Click `Finish` to complete the installation.

By default, T-Server is installed as a Genesys service (Windows Services) with Automatic startup type.

End of procedure

Next Steps

- To verify manual installation, go to “Verifying the manual installation of T-Server” on [page 48](#).
- To test your configuration and installation, go to Chapter 5, “Start and Stop T-Server Components,” on [page 123](#), and try it out.
- To configure and install redundant T-Servers, see Chapter 3, “High-Availability Deployment,” on [page 51](#).
- To install T-Servers for a multi-site environment, proceed to Chapter 4, “Multi-Site Support,” on [page 63](#).

Procedure:

Verifying the manual installation of T-Server

Purpose: To verify the completeness of the manual installation of T-Server to ensure that T-Server will run.

Prerequisites

- [Procedure: Installing T-Server on UNIX manually](#), on [page 46](#)
- [Procedure: Installing T-Server on Windows manually](#), on [page 47](#)

Start of procedure

1. Open the Properties dialog box for a corresponding Application object in Configuration Manager.
2. Verify that the State Enabled check box on the General tab is selected.
3. Verify that the Working Directory, command-Line, and Command-Line Arguments are specified correctly on the Start Info tab.
4. Click Apply and OK to save any configuration updates.

End of procedure

Next Steps

At this point, you have either used the Wizard to configure and install T-Server, or you have done it manually, using Configuration Manager. In either case, if you want to test your configuration and installation, go to Chapter 5,

“Start and Stop T-Server Components,” on [page 123](#), and try it out. Otherwise, if you want to configure and install redundant T-Servers, see Chapter 3, “High-Availability Deployment,” on [page 51](#). If you want to install T-Servers for a multi-site environment, proceed to Chapter 4, “Multi-Site Support,” on [page 63](#).



Chapter

3

High-Availability Deployment

This chapter describes the general steps for setting up a high-availability (HA) environment for your T-Server. The high-availability architecture implies the existence of redundant applications, a primary and a backup. These are monitored by a management application so that, if one application fails, the other can take over its operations without any significant loss of contact center data.

Every switch/T-Server combination offers different high-availability options. The Framework Management Layer currently supports two types of redundant configurations: warm standby and hot standby. All T-Servers offer the warm standby redundancy type and, starting with release 7.1, the hot standby redundancy type is implemented in T-Servers for most types of switches. Some T-Servers support a switch's ability to provide two CTI links to two T-Servers or even one CTI link to two T-Servers. Other T-Servers require Genesys's HA Proxy in order to support the hot standby redundancy type. See Table 1 on [page 27](#) and the T-Server-specific information later in this document for details on your T-Server.

This chapter describes the redundant architecture and how to configure T-Server so that it operates with either type. Information in this chapter is divided into the following sections:

- [Warm Standby Redundancy Type, page 52](#)
- [Hot Standby Redundancy Type, page 53](#)
- [Prerequisites, page 55](#)
- [Warm Standby Deployment, page 56](#)
- [Hot Standby Deployment, page 58](#)
- [Next Steps, page 62](#)

Warm Standby Redundancy Type

Genesys uses the expression *warm standby* to describe the redundancy type in which a backup server application remains initialized and ready to take over the operations of the primary server. The warm standby redundancy type reduces to a minimum the inability to process interactions that may have originated during the time it took to detect the failure. It also eliminates the need to bring a standby server online, thereby increasing solution availability.

Warm Standby Redundancy Architecture

Figure 5 illustrates the warm standby architecture. The standby server recognizes its role as a backup and does not process client requests until the Management Layer changes its role to primary. When a connection is broken between the primary server and the Local Control Agent (LCA, not shown in the diagram) running on the same host, a failure of the primary process is reported, and the switchover occurs; or, if the host on which the T-Server is running fails, the switchover also occurs. (See the *Framework 8.0 Deployment Guide* for information on LCA.) As a result:

1. The Management Layer instructs the standby process to change its role from backup to primary.
2. A client application reconnects to the new primary.
3. The new primary (former backup) starts processing all new requests for service.

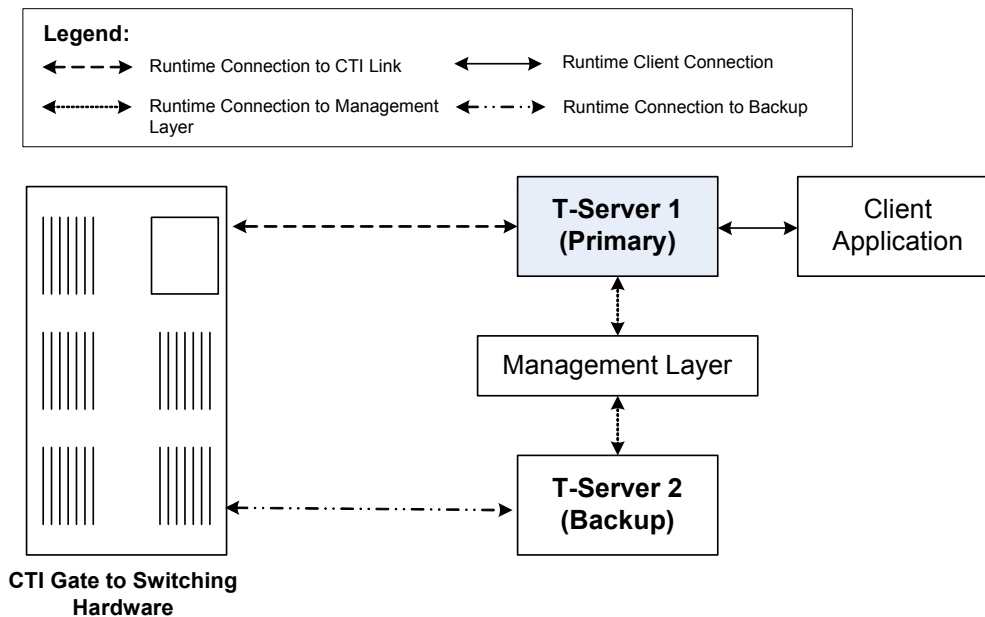


Figure 5: Warm Standby Redundancy Architecture

Although normal operations are restored as soon as the backup process takes over, the fault management effort continues. That effort consists of repeated attempts to restart the process that failed. Once successfully restarted, the process is assigned the backup role.

Note: You can find full details on the role of the Management Layer in redundant configurations in the *Framework 8.0 Deployment Guide*.

Hot Standby Redundancy Type

Genesys uses the expression *hot standby* to describe the redundancy type in which a backup server application remains initialized, clients connect to both the primary and backup servers at startup, and the backup server data is synchronized from the primary server. Data synchronization and existing client connections to the backup guarantee higher availability of a component. (See Figure 6 on [page 54](#).)

Starting with release 7.1, the hot standby redundancy type is implemented in T-Servers for most types of switches. However, for some switches, you must compensate for the lack of link redundancy by using an additional Genesys component called *HA Proxy*.

Hot Standby Redundancy Architecture

[Figure 6](#) illustrates the switch-independent side of a hot standby implementation. Here, T-Servers start simultaneously and connect to the switch. At T-Server startup, the Management Layer assigns the role of the primary server to T-Server 1, and the role of backup to T-Server 2. T-Server clients register with both T-Servers, but only the primary T-Server handles client requests other than the registration requests. The internal T-Server information, such as a DN status, ConnID, UserData, and Call Type, is synchronized between the primary and backup T-Servers. Therefore, the backup T-Server has the same information as the primary T-Server.

If T-Server 1 fails, the Management Layer makes T-Server 2 the new primary server, and it starts processing client requests. The Management Layer attempts to restart T-Server 1, and if it is successful, it makes T-Server 1 the new backup server.

The details of hot standby redundancy implementation between T-Servers and their switches vary depending on switch support for multiple CTI links. If your T-Server supports hot standby (see Table 1 on [page 27](#)), refer to Part Two for detailed information on the available hot standby schema.

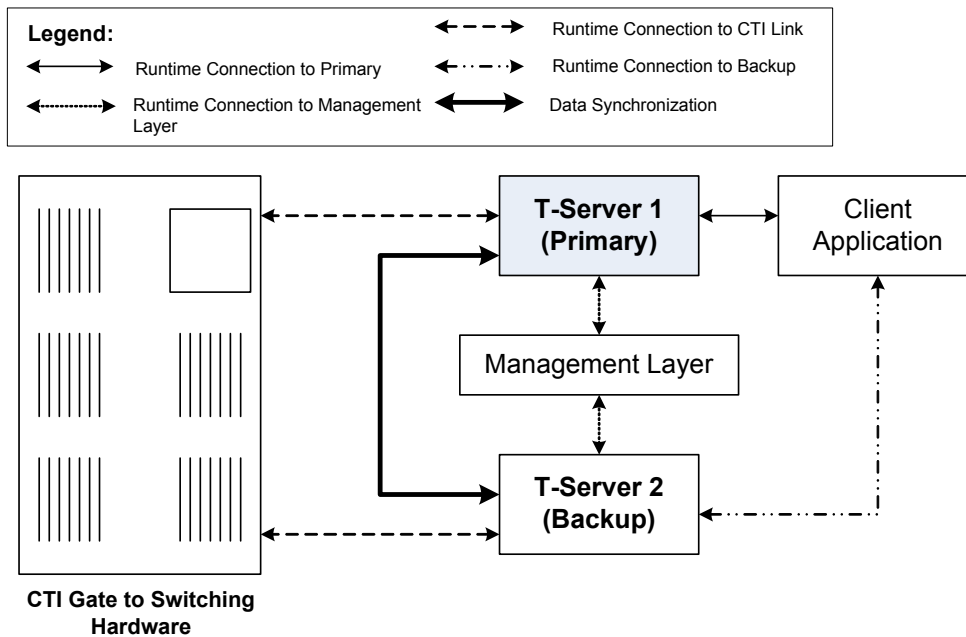


Figure 6: Hot Standby Redundancy Architecture

Benefits of Hot Standby Redundancy

The hot standby redundancy type provides the following benefits over the warm standby type:

- Using hot standby ensures the processing of interactions in progress if a failure occurs. After the primary T-Server (T-Server 1) fails, T-Server 2 handles all new interactions and takes over the processing of interactions that are currently in progress.
- T-Servers perform one-way (from primary to backup) synchronization of call-associated data, including, but not limited to:
 - Connection IDs.
 - Attached user data.
 - Inter Server Call Control (ISCC; formerly called External Routing) call references to another site in a multi-site environment (to support the ISCC/COF feature).

Note: Refer to “ISCC Call Data Transfer Service” on [page 65](#) for ISCC feature descriptions.

- Allocation of ISCC-controlled resources.
- When mirrored links are not available, HA Proxy helps T-Server synchronize the current states of agents, calls, parties, and devices between the primary and backup T-Servers.

However, keep the following hot standby limitations in mind:

- Client requests sent during the failure and switchover may be lost.
- Routing requests sent by the switch during the failure and switchover may be lost.
- T-Server does not synchronize interactions that begin before it starts.
- Some T-Library events might be duplicated or lost.
- Reference IDs from client requests can be lost in events.

Prerequisites

This section presents basic requirements and recommendations for configuring and using redundant T-Servers.

Requirements

You must install the Management Layer if you are installing redundant T-Server applications. In particular, install Local Control Agent (LCA) on each computer that runs T-Server.

Warning! Genesys strongly recommends that you install the backup and primary T-Servers on different host computers.

Synchronization Between Redundant T-Servers

When T-Servers operate in a high-availability environment, the backup T-Server must be ready to take on the primary role when required. For this purpose, both T-Servers must be running and must have the same information. When you configure redundant T-Servers to operate with the hot standby type, the primary T-Server uses the connection to the backup to deliver synchronization updates. Genesys recommends that you enable the Advanced Disconnect Detection Protocol (ADDP), described in Chapter 1, for this connection. Do so using the configuration options in the “Backup-Synchronization Section” section. Refer to the “T-Server Common Configuration Options” chapter for option descriptions.

Configuration Warnings

When configuring T-Servers to support either the warm standby or hot standby redundancy type, remember:

1. When at least one of the two T-Servers that operate in a redundant mode is running, do not change a redundancy type, host, or port in either T-Server configuration.
2. When both the primary and backup T-Servers are running, do not remove the backup T-Server Application object from the configuration.

You are responsible for the option synchronization in the configuration of the primary and backup T-Servers; Configuration Server does not synchronize either options or their values in different T-Server Application objects. That is, you must configure both T-Servers to have the same options with the same values. If you change a value in one T-Server configuration, you must change it in the other T-Server configuration manually. The log options in the primary T-Server can differ from those in the backup T-Server configuration. The link configuration options in the primary T-Server can also differ from those in the backup T-Server configuration.

Warm Standby Deployment

This section describes how to configure redundant T-Servers to work with the warm standby redundancy type, including details on their connections and settings.

General Order of Deployment

The general guidelines for T-Server warm standby configuration are:

Wizard Deployment

- If you used wizards to configure T-Servers and selected the warm standby redundancy type, no additional configuration is required for your T-Servers.

Manual Deployment

- If you did not use wizards to configure T-Servers:
 - a. Manually configure two T-Server Application objects as described in “Manual Configuration of T-Server” on [page 44](#).
 - b. Make sure the Switch object is configured for the switch these T-Servers should serve, as described in “Manual Configuration of T-Server” on [page 44](#).
 - c. Modify the configuration of the primary and backup T-Servers as instructed in the following sections.

After completing the configuration steps, ensure that both T-Servers are installed (see [page 58](#)).

Manual Modification of T-Servers for Warm Standby

Modify the configuration of both the primary and backup T-Server Application objects as described in the following sections.

Note: Starting with release 7.5, you can configure multiple ports for any application of type server. When multiple ports are configured for a server in a warm standby redundancy pair, the number of ports, their Port IDs, and the Listening Mode settings of the primary and backup servers must match respectively.

Procedure: Modifying the primary T-Server configuration for warm standby

Start of procedure

1. Stop both the primary and backup T-Servers if they are already running.
2. Open the Configuration Manager main window.
3. Open the Properties dialog box of the Application object for the T-Server that you want to configure as a primary server.
4. Click the Switches tab.
5. Ensure that it specifies the Switch that this T-Server Application should serve. If necessary, select the correct Switch using the Browse button.
6. Click Apply to save the configuration changes.
7. Click the Server Info tab.
8. Specify the T-Server Application you want to use as the backup server. Use the Browse button next to the Backup Server field to locate the backup T-Server Application object.
9. Select Warm Standby as the Redundancy Type.
10. Click Apply to save the configuration changes.
11. Click the Start Info tab.
12. Select Auto-Restart.
13. Click Apply and OK to save the configuration changes.

End of procedure

Next Steps

- [Procedure: Modifying the backup T-Server configuration for warm standby](#), on page 58

Procedure: Modifying the backup T-Server configuration for warm standby

Start of procedure

1. Make sure the two T-Servers are *not* running.
2. Open the Configuration Manager main window.
3. Open the Properties dialog box of the Application object for the T-Server that you want to configure as a backup server.
4. Click the Switches tab.
5. Using the Browse button, select the same Switch object you associated with the primary T-Server Application object.
6. Click Apply to save the configuration changes.
7. Click the Start Info tab.
8. Select Auto-Restart.
9. Click Apply and OK to save the configuration changes.

End of procedure

Warm Standby Installation of Redundant T-Servers

The installation of a redundant T-Server is the same as that for the stand-alone T-Server. If you have not installed the primary and backup T-Servers yet, follow the instructions in “Manual Installation of T-Server” on [page 46](#) for both installations.

Hot Standby Deployment

This section describes how to configure redundant T-Servers to work with the hot standby redundancy type, including details on their connections and settings.

General Order of Deployment

The general guidelines for T-Server hot standby configuration are:

Wizard Deployment

- If you used wizards to configure T-Servers and selected the hot standby redundancy type, no additional configuration is required for your T-Servers.

**Manual
Deployment**

- If you did not use wizards to configure T-Servers:
 - a. Manually configure two T-Server Applications objects as described in “Configuring T-Server manually” on [page 44](#).
 - b. Make sure the Switch object is configured for the switch these T-Servers should serve, as described in “Manual Configuration of Telephony Objects” on [page 42](#).
 - c. Modify the configuration of the primary and backup T-Servers as instructed in the following sections.

After completing the configuration steps, ensure that both T-Servers are installed (see [page 62](#)).

Table 1 on [page 27](#) summarizes hot standby redundancy support in various T-Servers. For detailed, up-to-date information on the subject, see the *Genesys Supported Media Interfaces* white paper located on the Technical Support website at

<http://genesyslab.com/support/dl/retrieve/default.asp?item=A9CB309AF4DEB8127C5640A3C32445A7&view=item>.

Manual Modification of T-Servers for Hot Standby

Modify the configuration of both the primary and backup T-Server Application objects for hot standby redundancy as described in the following sections.

Note: Starting with release 7.5, you can configure multiple ports for any application of type server. When multiple ports are configured for a server in a hot standby redundancy pair, the number of ports, their Port IDs, and the Listening Mode settings of the primary and backup servers must match respectively.

Procedure:

Modifying the primary T-Server configuration for hot standby

Start of procedure

1. Stop both primary and backup T-Servers if they are already running.
2. Open the Configuration Manager main window.
3. Open the Properties dialog box of the Application object for the T-Server that you want to configure as a primary server.
4. Click the Switches tab.
5. Ensure that it specifies the Switch that this T-Server Application should serve. If necessary, select the correct Switch using the Browse button.

6. Click Apply to save the configuration changes.
7. Click the Server Info tab.
8. In the Ports section, select the port to which the backup server will connect for HA data synchronization and click Edit Port.

Note: For information on adding multiple ports, see “Configuring multiple ports” on [page 45](#).

- a. In the Port Properties dialog box, on the Port Info tab, select the HA sync check box.
- b. Click OK.

Note: If the HA sync check box is not selected, the backup T-Server will connect to the *default* port of the primary T-Server.

9. Specify the T-Server Application you want to use as the backup server. Use the Browse button next to the Backup Server field to locate the backup T-Server Application object.
10. Select Hot Standby as the Redundancy Type.
11. Click Apply to save the configuration changes.
12. Click the Start Info tab.
13. Select Auto-Restart.
14. Click Apply to save the configuration changes.
15. To enable ADDP between the primary and backup T-Servers, click the Options tab. Open or create the backup-sync section and configure corresponding options.

Note: For a list of options and valid values, see the “Backup-Synchronization Section” section of “T-Server Common Configuration Options” chapter in Part Two of this document.

16. Click Apply and OK to save the configuration changes.

End of procedure

Next Steps

- [Procedure: Modifying the backup T-Server configuration for hot standby, on page 61](#)

Procedure: Modifying the backup T-Server configuration for hot standby

Start of procedure

1. Make sure the two T-Servers are *not* running.
2. Open the Configuration Manager main window.
3. Open the Properties dialog box of the Application object for the T-Server that you want to configure as a backup server.
4. Click the Switches tab.
5. Using the Browse button, select the same Switch object you associated with the primary T-Server Application.
6. Click the Server Info tab.
7. In the Ports section, select the port to which the primary server will connect for HA data synchronization and click Edit Port.

Note: For information on adding multiple ports, see “Configuring multiple ports” on [page 45](#).

- a. In the Port Properties dialog box, on the Port Info tab, select the HA sync check box.
- b. Click OK.

Note: If the HA sync check box is not selected, the primary T-Server will connect to the *default* port of the backup T-Server.

8. Click Apply to save the configuration changes.
9. Click the Start Info tab.
10. Select Auto-Restart.
11. Click the Options tab.
12. Modify the values for all necessary configuration options. Genesys recommends that you set all configuration options for the backup T-Server to the same values as for the primary T-Server; the only exceptions are the log options and the server-id option.
13. Click Apply and OK to save the configuration changes.

End of procedure

Hot Standby Installation of Redundant T-Servers

The installation of a redundant T-Server is the same as that for the stand-alone T-Server. If you have not installed the primary and backup T-Servers yet, follow instructions in “Manual Installation of T-Server” on [page 46](#) for both installations.

Next Steps

At this point, you have learned how to configure and install redundant T-Servers. Go to Chapter 5, “Start and Stop T-Server Components,” on [page 123](#), to test your configuration and installation, or continue with Chapter 4, “Multi-Site Support,” on [page 63](#), for more possibilities.



Chapter

4

Multi-Site Support

This chapter contains general information about multi-site environments, as well as information on deploying a multi-site environment for your T-Server.

This chapter is divided into the following sections:

- [Multi-Site Fundamentals, page 64](#)
- [ISCC Call Data Transfer Service, page 65](#)
- [ISCC/Call Overflow Feature, page 85](#)
- [Number Translation Feature, page 89](#)
- [Network Attended Transfer/Conference Feature, page 98](#)
- [Event Propagation Feature, page 100](#)
- [ISCC Transaction Monitoring Feature, page 107](#)
- [Configuring Multi-Site Support, page 107](#)
- [Next Steps, page 121](#)

Note: Each switch/T-Server combination offers different multi-site options. For details describing your specific switch/T-Server environment, refer to Chapter 9, “T-Server Common Configuration Options,” on [page 219](#).

The following instructions apply to both local and remote switches and T-Servers. Because different vendor switches can be installed at the local and remote locations, this chapter covers several, but not all, possible configurations. To help determine which sections of this chapter apply to your situation, refer to Table 3 on [page 81](#) and Table 4 on [page 86](#).

For more information on your specific switch/T-Server environment, refer to the multi-site topics in Part Two of this guide.

Multi-Site Fundamentals

A multi-site configuration has two or more switches that belong to the same enterprise or service provider and that share the Genesys Configuration Database. (In some cases, this may include isolated partitions on a given switch served by different T-Servers.) The main goal of T-Server support for multi-site operations is to maintain critical information about a call as it travels from one switch to another.

T-Server supports multi-site operations using its *Inter Server Call Control* (ISCC; formerly called External Routing), which supports the following functions:

- **Call matching**—To link instances of a call distributed across multiple sites and to re-attach essential data associated with the call (ConnID, UserData, CallType, and CallHistory). The following T-Server features support this capability:
 - ISCC Call Data Transfer Service (active external routing)—when requested by a T-Server client by specifying the desired destination in the location parameter, and also with various ISCC strategies performed by direct dial or by using the Transfer Connect Service. See “ISCC Transaction Types” on [page 72](#) and “Transfer Connect Service Feature” on [page 84](#).
 - Inter Server Call Control/Call Overflow (ISCC/COF) feature (passive external routing)—applicable when calls are overflowed to another site either directly or manually (see [page 85](#)).
 - Number Translation feature (see [page 89](#)).
 - Network Attended Transfer/Conference (NAT/C) feature (see [page 98](#)).

Note: When ISCC detects call instance reappearance on a given site, the call is assigned a unique ConnID and the user data is synchronized with the previous call instances. This ensures that ConnIDs assigned to different instances of the same call on a given site are unique.

- **Call data synchronization between associated call instances (ISCC Event Propagation)**—To provide the most current data to call instances residing on remote T-Servers. The following T-Server features support this capability:
 - User Data propagation (see [page 100](#))
 - Party Events propagation (see [page 101](#))

Note: ISCC automatically detects topology loops and prevents continuous updates.

Note: In distributed networks, Genesys recommends using call flows that prevent call topology loops and multiple reappearances of the same call instance. This approach ensures that all T-Servers involved with the call report the same ConnID, and also optimizes telephony trunk allocation by preventing trunk tromboning.

The T-Server configuration contains information about other T-Servers with which it will communicate. T-Server uses this information to connect with the other T-Servers. During this “handshake” process, T-Servers exchange information about the following parameters:

- Protocol type
- Switch type
- Server name
- Location name (switch name)
- T-Server role (primary or backup)

To complete the handshake process, T-Servers exchange messages about the current condition of the links to their switches. After the handshake process is complete, T-Server is ready to support a multi-site operation.

ISCC Call Data Transfer Service

Because ISCC supports active external routing, T-Servers that serve different switches (usually on different sites) can exchange call data when a call is passed from one switch to another. With this functionality, T-Server provides its clients with the following additional information about each call received from another switch:

- The connection identifier of the call (attribute ConnID).
- Updates to user data attached to the call at the previous site (attribute UserData).
- The call type of the call (attribute CallType)—In multi-site environments the CallType of the call may be different for each of its different legs. For example, one T-Server may report a call as an Outbound or Consult call, but on the receiving end this call may be reported as Inbound.
- The call history (attribute CallHistory)—Information about transferring/routing of the call through a multi-site contact center network.

Note: Load-sharing IVR Servers and Network T-Servers cannot be designated as the destination location for ISCC, except when cast-type is set to dnis-pool. Consult the *Universal Routing Deployment Guide* for specific configuration details.

Figure 7 shows the steps that occur during a typical external routing (ISCC) transaction. Note that the location where a call is initially processed is called the *origination location*, and the location to which the call is passed is called the *destination location*.

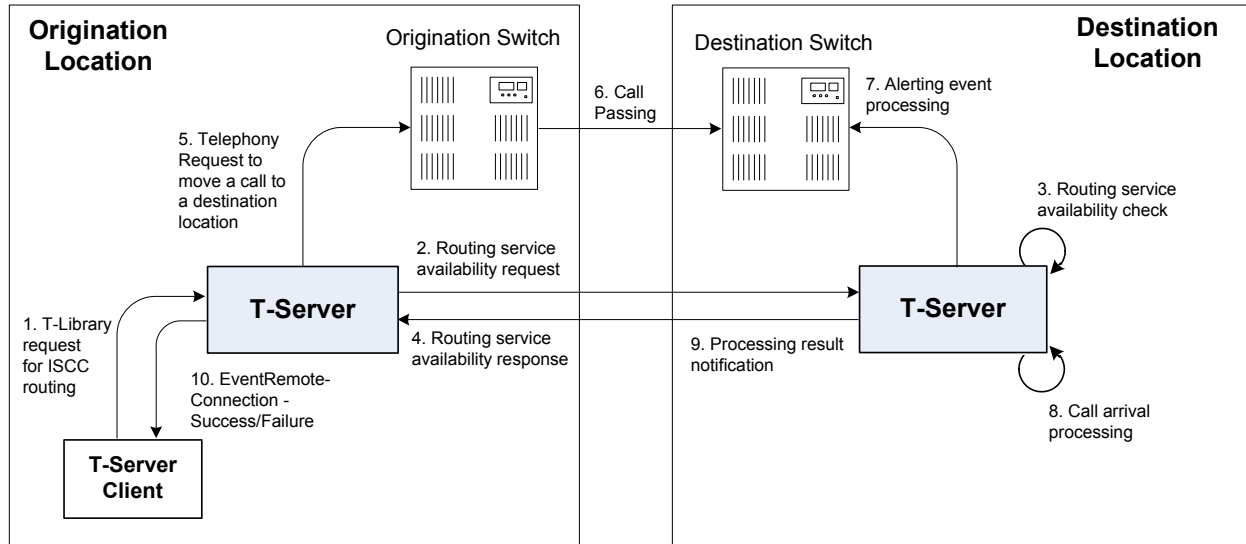


Figure 7: Steps in the ISCC Process

ISCC Call Flows

The following section identifies the steps (shown in Figure 7) that occur during an ISCC transfer of a call.

Step 1

A client connected to the T-Server at the origination location requests this T-Server to pass a call with call data to another location. For this purpose, the client must specify the `location` parameter (Attribute `Location`) when calling a corresponding T-Library function. ISCC processes the following T-Library requests:

- `TInitiateConference`
- `TInitiateTransfer`
- `TMakeCall`
- `TMuteTransfer`
- `TRouteCall`
- `TSingleStepTransfer`

Step 2

Upon receiving a client's request, the origination T-Server checks that the:

1. Connection to the destination T-Server is configured in the origination T-Server Properties dialog box.
2. The connection to the destination T-Server is active.
3. The destination T-Server is connected to its link.
4. The origination T-Server is connected to its link.

If these four conditions are met, the origination T-Server determines the transaction type that will be used for passing call data to another location in this transaction. The following possibilities exist:

- The client can request what *ISCC transaction type* (or simply *transaction type*) to use by specifying an appropriate key-value pair in the Extensions attribute of the request. The key-value pair must have a key equal to `iscc-xaction-type` and either an integer value as specified in the `TXRouteType` enumeration (see the *Voice Platform SDK 8.0 .NET (or Java) API Reference*) or a string value equal to one of the following: `default`, `route`, `direct` (or `direct-callid`), `direct-network-callid`, `direct-notoken`, `direct-ani`, `direct-uu`, `direct-digits`, `reroute`, `dnis-pool`, `pullback`, or `route-uu`.
- If the client does not specify the transaction type in the request or specifies the `default` transaction type, T-Server checks the Switch configuration for the transaction type configured in the Access Code (or Default Access Code) properties:
 - If the Route Type property of the Access Code is set to any value other than `default`, T-Server uses the specified value as the transaction type.
 - If the Route Type property of the Access Code is set to the `default` value, T-Server uses the first value from the list specified in the `cast-type` configuration option configured for the destination T-Server. If no value has been specified for the `cast-type` option, the default value of `route` is used as the transaction type.

Note: For more information on Access Codes and Default Access Code, see “Switches and Access Codes” on [page 109](#).

After the origination T-Server determines the requested transaction type, it determines if the destination T-Server supports this transaction type.

You must list the transaction types T-Server supports in the `cast-type` configuration option.

The origination T-Server issues a request for routing service availability and sends it to the destination T-Server. The T-Server request contains data that should be passed along with the call to the destination location. This data includes the transaction type, ConnID, UserData, CallType, and CallHistory.

The timer specified by the `request-tout` configuration option is set when the origination T-Server sends the request. If either the specified timeout expires or the call is abandoned before the origination T-Server receives a response from the destination T-Server, the operation is considered failed. In this scenario, the origination T-Server:

1. Generates a request to the destination T-Server to cancel the request for routing service.
2. Sends `EventError` to the client that requested the service.
3. Deletes information about the request.

Step 3

The destination T-Server receives the request for routing service availability and checks the requested type of routing. Depending on the ISCC transaction type, it stores the request information and, when appropriate, allocates access resources for the coming call. For example, an External Routing Point is allocated when the transaction type is `route`, and an Access Resource of type `dnis` is allocated when the transaction type is `dnis-pool`.

Note: The `resource-allocation-mode` and `resource-load-maximum` configuration options determine how resources are allocated. For option descriptions, refer to Chapter 9, “T-Server Common Configuration Options,” on [page 219](#) for option descriptions.

If resources are unavailable, the request is queued at the destination location until a resource is free or the origination T-Server cancels the request. If the request is canceled, the destination T-Server deletes all information about the request.

If resources are unavailable because of incorrect configuration, the destination T-Server returns an error event to the origination T-Server.

Step 4

If resources are available, the destination T-Server generates a positive response and the timer is started for the interval specified by the `timeout` configuration option of the destination T-Server.

Step 5

If the origination T-Server receives a negative response, it sends an `EventError` message to the client and clears all data about the request.

If the origination T-Server receives the confirmation about routing service availability, it processes the client’s request and sends a corresponding message to the switch. The timer on the origination T-Server is also started for the interval specified by the `timeout` configuration option of the destination T-Server.

Step 6

The origination switch processes the T-Server request and passes the call to the destination switch.

Step 7

If the call arrives at the destination switch, the switch generates an alerting event.

The destination T-Server waits for the call no longer than the interval specified by the timeout configured on the destination T-Server. If the call is not received at the destination location within this interval, the destination T-Server issues a failure notification to the origination T-Server, deletes all data about the request, and, when appropriate, frees the resources previously allocated for the request.

If either the specified timeout expires or the call is abandoned before the origination T-Server receives a response from the destination T-Server, the operation is considered failed. In this case, the origination T-Server:

1. Generates a request to the destination T-Server to cancel the request for routing service.
2. Responds to the client that requested the service in one of the following ways:
 - If the origination T-Server has already sent a response to the request the client sent in Step 1, the origination T-Server supplements its response with `EventRemoteConnectionFailed`.
 - If the origination T-Server has not yet sent a response to the client, the origination T-Server sends `EventError`.
3. Deletes information about the request.

Step 8

If the destination T-Server matches the arrived call, it updates the `ConnID`, `UserData`, `CallType`, and `CallHistory` attributes with the data received in the request for routing service availability. The connection ID is updated as follows:

The arrived call is assigned the `ConnID` that is specified in the request for routing service availability, but only if this `ConnID` does not coincide with the `ConnID` of a call that has existed at the destination site. If two such `ConnIDs` are identical, the arrived call is assigned a new unique `ConnID`.

For `direct-*` transaction types (where the asterisk stands for a `callid`, `uui`, `ani`, or `digits` extension), the call reaches the destination DN directly.

For the transaction types `route` and `route-uui`, the call first arrives at an External Routing Point from which it is routed to the destination DN. The call info is updated when the call reaches the External Routing Point. An External

Routing Point is considered free when the first alerting event (`EventQueued` or `EventRouteRequest`) is distributed.

Please keep the following issues in mind when using the ISCC feature:

- If routing from a dedicated External Routing Point to the destination DN fails, T-Server considers the transaction failed. However, the `ConnID`, `UserData`, `CallType`, and `CallHistory` attributes are updated. Then, T-Server attempts to route the call to one of the Default DNs configured for this External Routing Point.
- If the destination T-Server did not receive a request for routing service availability, but a call arrives at an External Routing Point, T-Server considers the call to be unexpected and routes the call to the DN specified by the `dn-for-unexpected-calls` configuration option. When no alternative targets are defined, the call remains at the External Routing Point until diverted by the switch or abandoned by the caller.

For `reroute` and `pullback` transaction types, the call returns to the network location. For the `dnis-pool` transaction type, the call reaches the destination DN directly.

Step 9

If, in Step 8, the call does not arrive within the configured timeout, or the transaction fails, the destination T-Server sends a notification of failure to the origination T-Server.

Otherwise, the destination T-Server notifies the origination T-Server that the routing service was successful and deletes all information about the request.

Step 10

The origination T-Server notifies the client that the routing service was successful (or failed) and deletes all information about the request.

Client-Controlled ISCC Call Flow

The following section identifies the steps that occur during a client-controlled ISCC transfer of a call.

Step 1

A client, such as Universal Routing Server (URS), that is connected to the T-Server at the origination location detects a call to be delivered to another destination location.

Step 2

The client chooses a destination location and the target DN for the call. Then, it sends the `TGetAccessNumber` request to the destination T-Server for routing service availability, indicating the target DN and other call context (`ConnID`, `UserData`, and `CallHistory` attributes).

Step 3

The destination T-Server receives the request for routing service availability. Depending on the ISCC transaction type, it stores the request information, including the call context. When appropriate, it allocates access resources for the coming call, such as External Routing Point.

If resources are unavailable, the request is queued at the destination T-Server until an appropriate ISCC resource is free or the client cancels the request. If the request is canceled, the destination T-Server deletes all information about the request.

If resources are unavailable because of incorrect configuration, the destination T-Server returns an `EventError` message to the client.

Step 4

The destination T-Server replies to the client with the `EventAnswerAccessNumber` message, which contains the allocated ISCC resource.

Step 5

The client requests that the origination T-Server delivers the call to the destination location using the allocated access resource.

Step 6

The origination T-Server receives and processes the client's request, and then sends a corresponding message to the switch.

Step 7

The call arrives at the destination switch and is reported to the destination T-Server via CTI. The call is matched by means of ISCC, based on the specified `cast-type` setting and allocated resource, and then the call is assigned a requested call context (such as `ConnID` or call data). Upon successful transaction completion, the destination T-Server notifies the client by sending `EventRemoteConnectionSuccess`.

The destination T-Server waits for the call no longer than the interval specified by the timeout that is configured on the destination T-Server. If the call is not received at the destination location within this interval, the destination T-Server issues a failure notification to the client by sending

`EventRemoteConnectionFailed`, deletes all data about the request, and, when appropriate, frees the resources previously allocated for the request.

The destination T-Server notifies the client whether the routing service succeeded or failed by sending either the `EventRemoteConnectionSuccess` or `EventRemoteConnectionFailure`, respectively.

ISCC Transaction Types

As switches of different types provide calls with different sets of information parameters, a single mechanism for passing call data between the switches is not feasible in some cases. Therefore, the ISCC feature supports a number of mechanisms for passing call data along with calls between locations. This section describes ISCC transaction type principles, identifies which transaction types are supported for each T-Server, and defines each transaction type (beginning with “direct-ani” on [page 73](#)).

It is important to distinguish the two roles that T-Servers play in an external routing (ISCC) transaction—namely *origination T-Server* and *destination T-Server*:

- The origination T-Server initiates an ISCC transaction. It prepares to send the call to another T-Server and coordinates the process.
- The destination T-Server receives call data from an origination T-Server and matches this data to a call that will arrive at some time in the future.

The distinction between these roles is important because the range of telephony-hardware functionality often requires T-Servers to support two entirely different sets of ISCC transactions based on which of the two roles they play. For instance, it is very common for a particular T-Server to support many types of ISCC transactions when it takes on the origination role, but fewer when it takes on the role of a destination T-Server.

The ISCC transaction type `reroute` is a good example. Most T-Servers support `Reroute` as origination T-Servers, but very few support `Reroute` as destination T-Servers.

Determining and Configuring Transaction Type Support

You can find descriptions of these transaction types starting on [page 73](#). Use Table 3 on [page 81](#) to identify the transaction types your destination T-Server supports. A blank table cell indicates that T-Server does not support a certain transaction type.

You can configure the transaction types specific to your T-Server as values of the `cast-type` configuration option specified in the ISCC configuration section `extrouter`. Refer to Chapter 9, “T-Server Common Configuration Options,” on [page 219](#) for the option description.

ISCC Transaction Type General Principles

Generally, since most of the ISCC implementation is done at the T-Server Common Part (TSCP) code level, all T-Servers support certain ISCC transaction types. Any T-Server can act as the origination T-Server for the following transaction types:

- `direct-ani`, [page 73](#)
- `direct-notoken`, [page 75](#)
- `dnis-pool`, [page 76](#)
- `pullback`, [page 77](#)
- `reroute`, [page 78](#)
- `route` (aliased as `route-notoken`), the default transaction type, [page 79](#)

The following transaction types are unevenly supported for both the origination and destination T-Server roles:

- `direct-callid` (aliased as `direct`), [page 74](#)
- `direct-digits` (reserved for Genesys Engineering)
- `direct-network-callid`, [page 74](#)
- `direct-uui`, [page 75](#)
- `route-uui`, [page 80](#)

The `reroute` and `pullback` transaction types are supported only for selected T-Servers in the *destination* role. However, if you implement this support, other transaction types require additional configuration and testing—even those that would normally be supported by default.

direct-ani

With the transaction type `direct-ani`, the ANI call attribute is taken as the parameter for call matching. Properly configured switches and trunks can keep the ANI attribute when a call is transferred over the network. T-Server can use this network feature for call matching.

Warning! Depending on the switch platform, it may be possible to inherit the ANI attribute after routing a call to a remote destination, and after performing a single-step transfer and other telephone actions. However, ISCC only works properly in scenarios where the ANI attribute on the destination T-Server is represented by exactly the same digit string as on the origination T-Server.

Typically, the ANI attribute represents the original call identifier (customer phone number), which guarantees that the attribute remains unique. However, you can use the `non-unique-ani` resource type to block ISCC from matching calls based on an ANI that is known to be non-unique. (See “Configuring access resources for non-unique ANI” on [page 118](#) for details.)

direct-callid

With the transaction type `direct-callid`, the call reaches the destination DN directly from another location, and the `CallID` of the call is taken as the attribute for call matching. When a call arrives at the final destination, the destination T-Server identifies its `CallID`, and updates the call info if the `CallID` matches.

Use this transaction type when the destination switch has the capability to assign to an incoming call the same network-wide unique `CallID` that the origination switch has already assigned to that call.

Notes: The `direct-callid` transaction type is used only in conjunction with the `TRouteCall` and `TSingleStepTransfer` function calls. It is applied only to the call that is in progress, and does not apply to functions that involve in the creation of a new call, such as `TMakeCall`.

For T-Server for Nortel Communication Server 2000/2100, the `direct-callid` transaction type is also applied to the `TMuteTransfer` function.

direct-network-callid

With the transaction type `direct-network-callid`, the call reaches the destination DN directly from another location, and the `NetworkCallID` of the call is taken as the attribute for call matching. When a call arrives at the final destination, the destination T-Server identifies its `NetworkCallID`, and updates the call info if the `NetworkCallID` matches.

Use this transaction type when the destination switch has the capability to assign to an incoming call the same network-wide unique `NetworkCallID` that the origination switch has already assigned to that call.

Note: To support this transaction type, you must configure `Target Type` and `ISCC Protocol Parameters` fields of the corresponding `Switch Access Code` in the Configuration Layer. For information about settings that are specific for your T-Server type, refer to Part Two of this document.

direct-uui

With the transaction type `direct-uui`, so-called user-to-user information (UUI) is taken as the attribute for call matching. Some switches make it possible to send a small data packet along with a call. T-Server can use this data to recognize a call passed from one switch to another. The destination T-Server generates a local unique value for UUI, and then notifies the origination T-Server. The origination T-Server uses a provided value to mark the call coming from the origination location. The destination T-Server receives a call and checks whether it is marked with an exact UUI value. If so, the call is considered to be matched.

On the Avaya Communication Manager and the Aspect ACD, UUI is referred to as “user-to-user information.” On the Siemens Hicom 300 switch with CallBridge, UUI is referred to as “Private User Data.” On the Alcatel A4400/OXE switch, UUI is referred to as “correlator data.”

Note: To support this transaction type, you must configure your switches to pass the UUI provided by your T-Server. You must also ensure that the trunks involved do not drop this data.

direct-notoken

With the transaction type `direct-notoken`, T-Server expects a call to arrive from another location to the destination DN specified in the request for routing service availability. When a call reaches the specified DN, T-Server processes the call as the expected externally-routed call.

Notes: This matching criterion is weak because any call that reaches the specified DN is considered to be the expected call. Genesys recommends that you use this transaction type only in a contact center subdivision that can only be reached from within the contact center (such as the second line of support, which customers cannot contact directly).

When using direct transaction types, Network T-Servers and load-sharing IVR Servers are not meant to act as destination T-Servers for call routing. Using Network T-Server with these transaction types requires special architecture.

dnis-pool

With the `dnis-pool` transaction type, T-Server reserves one of its DNIS access resources and waits for the call that has the same DNIS attribute as the name of the reserved DNIS access resource.

If the arrived call is matched successfully, the destination T-Server may update the value of the DNIS attribute of the call (along with `ConnID`, `UserData`, `CallType`, and `CallHistory`) with the value of the DNIS attribute of the original call. This occurs when the value of the DNIS attribute of the original call is specified as a value of the key-value pair `_ISCC_TRACKING_NUMBER_` in the `Extensions` attribute of the original client request.

The DNIS matching can be based on any number of digits out of all the digits that comprise the DNIS attribute. The number of digits that T-Server should use for DNIS matching is specified for the destination switch as the `ISCC Protocol Parameters` property of the Switch Access Code. The value syntax should be as follows:

`dnis-tail=<number-of-digits>`

For example, if this property is set to the `dnis-tail=7` value, ISCC matches only the last seven digits of a DNIS.

You must configure DNIS access resources in the switch; otherwise, ISCC fails to use this transaction type and sends `EventError` in response to the client application request.

Note: The `dnis-pool` transaction type is typically used for networks that employ a “behind the SCP” architecture, such as network IVR. Network T-Server for GenSpec and IServer are two examples of this, but other Network T-Servers might also be used in this architecture.

In Load-Balancing Mode

When T-Server uses load balancing for call routing with the `dnis-pool` transaction type, the following processes occur:

1. A client of the origination T-Server sends a request to pass a call to the location with a DNIS access resource specified in the key-value pair `iscc-selected-dnis`.
2. The origination T-Server distributes the request for a routing service to all destination T-Servers.
3. The destination T-Servers receive the request and check that the specified DNIS is not being used by another routing service request.
4. The origination T-Server expects to receive a positive response from each destination T-Server. If the origination T-Server receives a negative response from at least one T-Server, it sends an `EventError` to the client and clears all data about the request. If the origination T-Server receives the confirmation about routing service availability from all destination T-Servers, it processes the client's request and sends a corresponding message to the switch.
5. The origination switch processes the T-Server request and passes the call to the destination switch.
6. The call arrives at the destination switch, which generates an alerting event to one of the corresponding load-balanced destination T-Servers.
7. That destination T-Server processes the call and notifies the origination T-Server that the routing service was successful and deletes all information about the request.
8. The origination T-Server sends a routing service request cancellation to all other destination T-Servers.
9. The origination T-Server notifies the client that the routing service has been successful and deletes all information about the request.

pullback

`PULLBACK` is used in the following scenario, for those T-Servers that support it:

1. A call arrives at Site A served by a Network T-Server.
2. At Site A, a Network T-Server client requests to pass the call by means of ISCC routing to Site B served by a premise T-Server. Any transaction type except `reroute` or `pullback` can be specified in this request.
3. The call arrives at Site B and is either answered by an agent or delivered to a routing point.
4. A client of the premise T-Server at Site B sends a `TRouteCall` or `TSingleStepTransfer` request to transfer the call to the network.

5. The Site B premise T-Server notifies the Network T-Server about this request.
6. The network T-Server receives the notification and issues an `EventRouteRequest` to obtain a new destination.
7. After receiving the new destination information, the Network T-Server disconnects the call from its current premise location at Site B and attempts to route the call to the new destination.
8. The Site B premise T-Server stops tracking the call, which has disconnected from the premise's agent DN or routing point and is delivered to the network.
9. The network T-Server completes routing the call to its new destination.

Note: The transaction type `pullback` can only be used to return a call from a premise T-Server to the Network T-Server that serves the site from which the call was previously transferred.

reroute

`Reroute` is used in the following scenario, for those T-Servers that support it:

1. A call arrives at Site A served by a Network T-Server.
2. At Site A, a Network T-Server client requests to pass the call by means of ISCC to Site B served by a premise T-Server. Any transaction type except `reroute` or `pullback` can be specified in this request.
3. An agent at Site B answers the call.
4. A client of the premise T-Server at Site B sends a `TSingleStepTransfer` or `TRouteCall` request to transfer the call elsewhere (to a PSTN, to an agent, or to a routing point).
5. The Site B premise T-Server notifies the Network T-Server about this request and releases the call leg that resides at the agent's phone (using `TReleaseCall`) or at the Routing Point (using `TRouteCall` with the parameter `RouteTypeCallDisconnect`).
6. The Network T-Server receives the notification and reroutes the call to the requested destination by sending `EventRouteRequest` and attaching the call's user data.

Notes: The transaction type `reroute` can only be used to return a call from a premise T-Server to the Network T-Server that serves the site from which the call was previously transferred.

To perform multi-site operations that are initiated with `TRouteCall` and for which the `reroute` transaction type is requested, the origination T-Server must support the `RouteTypeCallDisconnect` subtype of `TRouteCall`.

route

With the transaction type `route` (aliased as `route-notoken`), a call from the origination location reaches a dedicated External Routing Point, and from there, it is routed to a destination DN.

To control configured External Routing Points, T-Server must register these DNs with the switch. Failure to register implies that the External Routing Point is not available for ISCC purposes. Client applications can register External Routing Points via T-Server for monitoring purposes only.

Point-to-Point (One-to-One)

In the Point-to-Point access mode, only one trunk line is used to access an External Routing Point (for example, VDN, CDN) at the destination site. See [Figure 8](#).

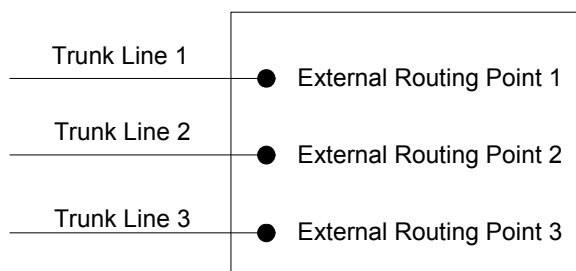


Figure 8: Point-to-Point Trunk Configuration

Note: Dedicated DNs of the External Routing Point type must be configured in a switch. See “Configuring Multi-Site Support” on [page 107](#).

Multiple-to-Point (Multiple-to-One)

In the Multiple-to-Point access mode, trunk lines are assigned to the destination switch’s trunk group, from which calls are routed to the final destination. See [Figure 9](#).

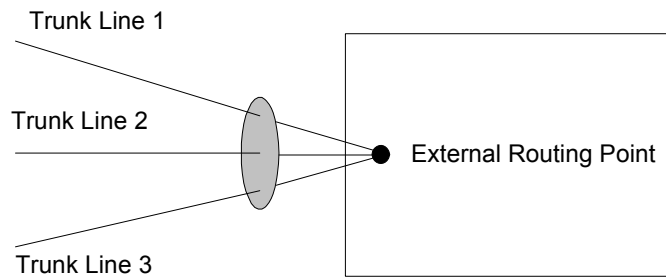


Figure 9: Multiple-to-Point Trunk Configuration

With this configuration, all calls reach the same External Routing Point. The DNIS attribute of a specific call differs from that of other calls and uniquely identifies the trunk from which the call arrived.

Note: To switch to this operating mode, you must configure the `route-dn` configuration option for T-Server.

route-uui

The `route-uui` transaction type employs the dedicated External Routing Point feature of the `route` transaction type (page 79) and the UUI matching feature of the `direct-uui` transaction type (page 75). This transaction type accommodates those switches that require a designated External Routing Point even though they use UUI for tracking.

Note: To support this transaction type, you must configure your switches to pass the UUI provided by your T-Server. You must also ensure that the trunks involved do not drop this data.

T-Server Transaction Type Support

Table 3 shows which transaction types are supported by a specific T-Server. Use this table to determine the transaction types that are available for use with your T-Server. This applies both to the `cast-type` you specify in the configuration options for your T-Server, and to any client-designated route-type requests specified for transfers of calls. A blank table cell indicates that T-Server does not support a certain transaction type.

Table 3: T-Server Support of Transaction Types

T-Server Type	Transaction Type										
	route		re-route	direct-callid	direct-uuui / route-uuui	direct-no-token	direct-ani	direct-digits	direct-network-callid	dnis-pool	pull-back
	one-to-one	multiple-to-one									
Alcatel A4200/OXO	Yes			Yes		Yes	Yes				
Alcatel A4400/OXE	Yes			Yes ^{a,b,c}	Yes ^d	Yes	Yes ^a		Yes ^e		
Aspect ACD	Yes	Yes		Yes		Yes ^f	Yes ^f				
Avaya Communication Manager	Yes				Yes	Yes	Yes				
Avaya INDeX	Yes					Yes	Yes ^b				
Avaya TSAPI	Yes				Yes	Yes	Yes				
Cisco Unified Communications Manager	Yes			Yes		Yes	Yes				
Cisco UCCE	Yes					Yes	Yes				
DataVoice Dharma	Yes			Yes		Yes	Yes				
Digitro AXS/20	Yes			Yes		Yes					
EADS Intecom M6880	Yes			Yes		Yes	Yes				
EADS Telecom M6500	Yes			Yes		Yes	Yes				
eOn eQueue	Yes			Yes		Yes					
Ericsson MD110	Yes			Yes ^a		Yes	Yes ^a				
Fujitsu F9600	Yes					Yes					

Table 3: T-Server Support of Transaction Types (Continued)

T-Server Type	Transaction Type										
	route		re-route	direct-callid	direct-uuui / route-uuui	direct-no-token	direct-ani	direct-digits	direct-network-callid	dnis-pool	pull-back
	one-to-one	multiple-to-one									
Huawei C&C08	Yes			Yes							
Huawei NGN	Yes					Yes	Yes				
Mitel SX-2000/MN3 300	Yes			Yes		Yes	Yes				
NEC NEAX/APEX	Yes			Yes		Yes	Yes				
Nortel Communication Server 2000/2100	Yes			Yes ^f		Yes ^f	Yes ^f				
Nortel Communication Server 1000 with SCCS/MLS	Yes			Yes		Yes	Yes		Yes		
Philips Sopho iS3000	Yes			Yes		Yes	Yes				
Radvision iContact	Yes		Yes								Yes
Rockwell Spectrum	Yes	Yes		Yes		Yes ^f	Yes ^f				
Samsung IP-PCX IAP	Yes			Yes		Yes					
Siemens Hicom 300/HiPath 4000 CSTA I	Yes			Yes	Yes ^d	Yes	Yes				
Siemens HiPath 3000	Yes			Yes		Yes					

Table 3: T-Server Support of Transaction Types (Continued)

T-Server Type	Transaction Type										
	route		re-route	direct-callid	direct-uuui / route-uuui	direct-no-token	direct-ani	direct-digits	direct-network-callid	dnis-pool	pull-back
	one-to-one	multiple-to-one									
Siemens HiPath 4000 CSTA III	Yes				Yes ^d	Yes	Yes				
Siemens HiPath DX	Yes				Yes ^g	Yes	Yes ^h				
SIP Server	Yes		Yes		Yes ⁱ	Yes					Yes
Tadiran Coral	Yes			Yes		Yes	Yes				
Teltronics 20-20	Yes			Yes		Yes	Yes				
Tenovis Integral 33/55	Yes			Yes		Yes	Yes				
Network T-Servers											
AT&T											
Concert											
CRSP											Yes
DTAG			Yes								
GenSpec	Yes	Yes	Yes							Yes	
IVR Server, using network configuration	Yes	Yes	Yes							Yes	Yes
KPN			Yes								
ISCP											
MCI											
NGSN	Yes										Yes
Network SIP Server	Yes					Yes	Yes			Yes	

Table 3: T-Server Support of Transaction Types (Continued)

T-Server Type	Transaction Type										
	route		re-route	direct-callid	direct-uuui / route-uuui	direct-no-token	direct-ani	direct-digits	direct-network-callid	dnis-pool	pull-back
	one-to-one	multiple-to-one									
Sprint	Yes										
SR-3511											
Stentor											

- Not supported in the case of function `TRequestRouteCall` on a virtual routing point: a routing point can be simulated using a Hunt Group with calls being deflected or transferred from the hunt-group member when routing. When a two-step (typically mute) transfer is used on such a hunt-group member, `CallID` and `ANI` usually change; thus, the `direct-callid` and `direct-ani` types do not work.
- Not supported in the case of function `TSingleStepTransfer` when the T-Server service is simulated using a two-step transfer to the switch. In this case, `CallID` and `ANI` change; thus, the `direct-callid` and `direct-ani` types do not work.
- Not supported if two T-Servers are connected to different nodes.
- There are some switch-specific limitations when assigning CSTA correlator data `UUUI` to a call.
- Supported only on ABCF trunks (Alcatel internal network).
- To use this transaction type, you must select the `Use Override` check box on the Advanced tab of the DN Properties dialog box.
- Not supported if a `TMakeCall` request is made.
- Not supported if a `TInitiateTransfer` or `TInitiateConference` request is made from an outgoing call on a device.
- SIP Server supports the `direct-uuui` type.

Transfer Connect Service Feature

The Transfer Connect Service (TCS) feature supports transfer connect services available on some telephony networks. When this feature is enabled, ISCC passes user data to remote locations to which calls are transferred or conferenced using transfer connect services.

Procedure: Activating Transfer Connect Service

Start of procedure

1. Open the T-Server Application's Properties dialog box.
2. Click the Options tab.
3. Set the `tcs-use` configuration option to always.
4. Set the `tcs-queue` configuration option to the number of a DN on the origination switch.

ISCC uses this DN as an intermediate step when sending calls to the remote location. The DN that is configured as `tcs-queue` receives attached data indicating the Feature Access Code (FAC) needed to reach the remote site. After a call is directed to the DN with data, a monitoring application takes the data and generates the required DTMF (dual-tone multifrequency) tones to redirect the call through the network to the remote location.

5. When you are finished, click Apply.
6. Click OK to save your changes and exit the Properties dialog box.

End of procedure

Note: With T-Server for Avaya Communication Manager, you can use `RequestRouteCall` with `RouteTypeOverwriteDNIS` to initiate the playing of DTMF tones. This is done through the use of another intermediate DN (typically, an announcement port configured to give the silent treatment), to which the call is routed. When the call is established on this DN, T-Server requests that the digits sent in the DNIS field of the `TRequestRouteCall` be played by using the `ASAI-send-DTMF-single` procedure.

ISCC/Call Overflow Feature

The Inter Server Call Control/Call Overflow (ISCC/COF) feature of T-Server, that supports *passive external routing*, is specifically designed to handle calls delivered between sites by means other than ISCC. Such scenarios include contact center overflows and manual call transfers.

An *overflow situation* occurs when a call comes into a contact center where all agents are currently busy. In this situation, the switch can transfer (overflow) the incoming call to another site where there is an available agent.

T-Server uses two methods to handle call overflow and manual transfer scenarios. The first method is based on `NetworkCallID` matching and the second method is based on `ANI/OtherDN` matching.

When connected to each other via switch-specific networks, switches of some types can pass additional information along with transferred calls. This information may contain the `NetworkCallID` of a call, which is a networkwide unique identifier of the call.

When connected via a regular PSTN, switches of all types can send the `ANI` and/or `OtherDN` attributes to the destination switch during any call transfer operation.

While all T-Servers support the ISCC/COF feature using the `ANI` and/or `OtherDN` attributes, only a few support this feature using the `NetworkCallID` attribute. [Table 4](#) shows the T-Server types that provide the `NetworkCallID` of a call.

Table 4: T-Server Support of NetworkCallID for ISCC/COF Feature

T-Server Type	Supported NetworkCallID Attribute
Alcatel A4400/OXE	Yes
Aspect ACD	Yes
Avaya Communication Manager	Yes
Avaya TSAPI	Yes
Cisco UCCE	Yes
Nortel Communication Server 2000/2100	Yes
Nortel Communication Server 1000 with SCCS/MLS	Yes
Rockwell Spectrum	Yes
SIP Server	Yes

The ISCC/COF feature can use any of the three attributes (`NetworkCallID`, `ANI`, or `OtherDN`) as criteria for matching the arriving call with an existing call at another location. Consequently, the attribute that is used determines what

ConnID, UserData, CallType, and CallHistory are received for the matched call from the call's previous location.

Warning! Depending on the switch platform, it may be possible to inherit the ANI attribute after routing a call to a remote destination, and after performing a single-step transfer and other telephone actions. However, ISCC/COF works properly only in scenarios where the ANI attribute on the destination T-Server is represented by exactly the same unique digit string as on the origination T-Server.

Typically, the ANI attribute represents the original call identifier (customer phone number), which guarantees that the attribute remains unique.

Note: When the ISCC/COF feature is in use, the Number Translation feature becomes active. For more information on feature configuration, see “Number Translation Feature” on [page 89](#).

ISCC/COF Call Flow

[Figure 10](#) shows the sequence of steps that occur in an ISCC/COF scenario when a call is made or transferred by an agent at Site A to a DN at Site B, or when a call is overflowed from Site A to Site B.

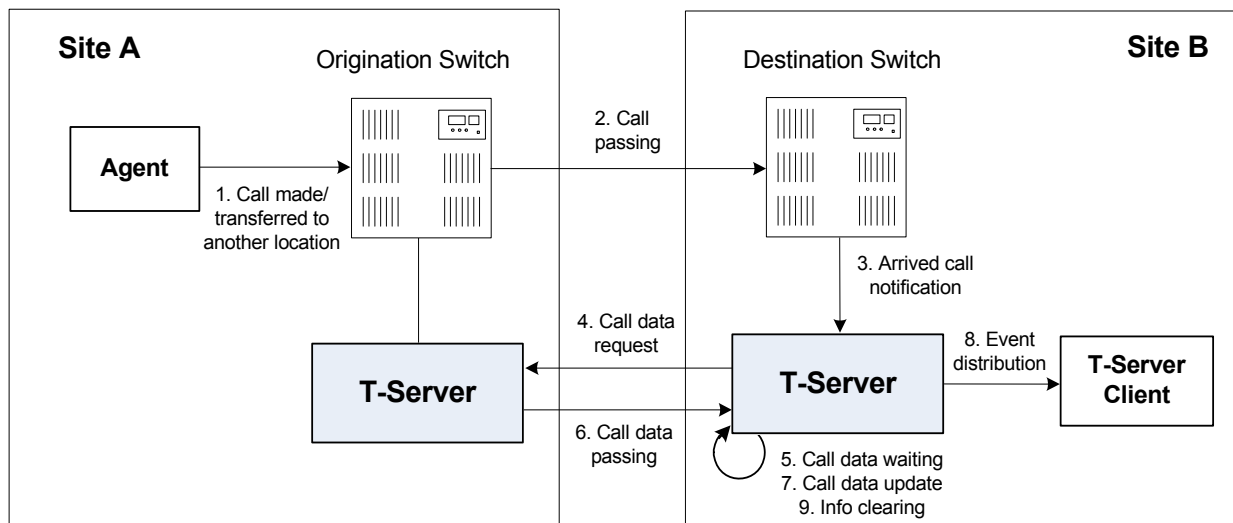


Figure 10: Steps in the ISCC/COF Process

Step 1

An agent makes or transfers a call manually to another location or a call is overflowed from Site A (origination location) to Site B (destination location).

Step 2

Switch A (the origination switch) passes the call to Switch B (the destination switch).

Step 3

The call reaches the destination switch, which notifies the destination T-Server about the arrived call.

Step 4

The destination T-Server verifies with remote locations whether the call was overflowed from any of them.

To determine which calls to check as possibly overflowed, T-Server relies on the Switch object configuration:

- If no COF DNs (that is, DNs of the Access Resources type with the Resource Type set to `cof-in` or `cof-not-in`) are configured for the destination switch, the ISCC/COF feature of the destination T-Server checks all arriving calls.
- If a number of COF DNs are configured for the destination switch, one of three scenarios occurs:
 - If the COF DNs with the `cof-in` setting for the Resource Type property are configured, the ISCC/COF checks for overflow only those calls that arrive to those `cof-in` DNs that are Enabled.
 - If no DNs with the `cof-in` setting for the Resource Type property are configured, but some DNs have the `cof-not-in` setting for the Resource Type property, the ISCC/COF checks for overflow only those calls that arrive to those `cof-not-in` DNs that are Disabled.
 - If no DNs with the `cof-in` setting for the Resource Type property are configured, some DNs have the `cof-not-in` setting for the Resource Type property, and some other DNs do not have any setting for the Resource Type property, the ISCC/COF checks for overflow only those calls that arrive to the DNs without any setting for the Resource Type property.
- In all other cases, no calls are checked for overflow.

To determine which location the call arrived from, T-Server checks the call type and checks whether the call has the `NetworkCallID`, `ANI`, or `OtherDN` attribute:

- If the call is not an inbound call, the request for call data is sent to all remote locations *except* those whose Switch Access Code has the ISCC Call Overflow Parameters property set to `inbound-only=true`.
- If the call of any type has the `NetworkCallID` attribute, the destination T-Server sends a request for call data to the remote locations of the same switch type as the destination location if their Switch Access Codes have the ISCC Call Overflow Parameters property set to `match-callid`.

- If the call of any type has the ANI or OtherDN attribute, the request for call data is sent to remote locations whose Switch Access Code has the ISCC Call Overflow Parameters property set to match-ani.

Step 5

The destination T-Server waits (suspending events related to that call) for the call data from the remote T-Server for the time interval specified in the `cof-ci-req-tout` configuration option. Within this interval, T-Server holds any events related to the call. In addition, the `cof-ci-defer-delete` option on the origination T-Server establishes the time interval only after which that T-Server deletes the call information. And the `cof-ci-wait-all`, if set to true, forces the origination T-Server to wait for responses related to possible call overflow situations before updating call data.

Step 6

The T-Server at the location from which the call was transferred or overflowed sends call data to the requesting T-Server.

Step 7

If a positive response to the call-data request is received, T-Server updates ConnID, UserData, CallType, and CallHistory, distributes all suspended events related to that call, and deletes all information regarding the transaction (Step 9).

Step 8

If the timeout set by `cof-ci-req-tout` expires, T-Server distributes all suspended events, and starts the timeout specified by the `cof-rci-tout` option. If a positive response is received within the timeout set by `cof-rci-tout`, T-Server updates the ConnID, UserData, CallType, and CallHistory, and notifies client applications by distributing EventPartyChanged.

Step 9

T-Server deletes all information regarding the transaction when one of these results occurs:

- The first positive response to the call-data request is received.
- Negative responses from all queried locations are received.
- The timeout specified by the `cof-rci-tout` option expires.

Number Translation Feature

The Number Translation feature of T-Server extends the ISCC/COF and direct-ani transaction type functions to provide more flexibility for handling

calls distributed across multiple sites. T-Server translates the input string (ANI string) into a number defined by the translation rules. This processing is called number translation. T-Servers participating in handling calls at multiple sites exchange the translated numbers in order to match the call instances.

The translation process involves two algorithms, one for rule selection and the other for the actual translation. Through the first algorithm, T-Server selects a rule that will be used for number translation. Through the second algorithm, T-Server translates the number according to the selected rule definition. See “Number Translation Rules” on [page 90](#) for more information on configuring rules for your environment.

Number translation occurs as follows:

1. The switch reports a number, typically via `AttributeANI`.
2. T-Server evaluates all configured inbound rules to determine which one is the best fit for the received number. The best fit is determined by comparing the length of, and the specific digits in, the input number with the inbound pattern of each configured rule. See “Rule Examples” on [page 95](#) for specific examples.
3. T-Server translates the number according to the selected rule.

To enable T-Server to translate numbers, you must perform specific configuration tasks that are associated with translation. See “Configuring Number Translation” on [page 97](#).

Number Translation Rules

T-Server uses the number translation rules that you define in the T-Server configuration object in two ways:

- Rule selection—To determine which rule should be used for number translation
- Number translation—To transform the number according to the selected rule

Using ABNF for Rules

The number translation rules must conform to the following syntax, represented using Augmented Backus-Naur Form (ABNF) notation. For more information about ABNF, see RFC 2234, “Augmented BNF for Syntax Specifications: ABNF.”

Note: The following notation explanations begin with the highest level notation. Each explanation includes the name of a component notation and a basic definition of each component that it contains. Some components require more detailed definitions, which are included later in this section.

Common Syntax Notations

Syntax notations common to many of these rules include:

- *****—Indicates that 0 to an infinite number of the item following this symbol are acceptable.
- **1***—Indicates that one repetition is required. For T-Server, only one instance is acceptable.
- **/**—Indicates that any of the items mentioned, or a combination of those items, is acceptable.

Component Notations

Component notations include:

- `dialing-plan = *dialing-plan-rule`

where:

- `dialing-plan-rule` represents the name of the rule. Each rule must have a unique name. There are no other naming restrictions, and you do not need to model your names according to the examples in this chapter.

The rules are represented as separate options in the configuration. Also, fields from a rule are represented as parameters in a single option string.

- `rule = [name] in-pattern [out-pattern]`

where:

- `[name]` is the name for the rule option, for example, `rule-01`. In ABNF notation, the brackets `[]` indicate that 0 or 1 instance of the component is required. However, for T-Server, a name is required.
- `in-pattern` is the part of the rule to which T-Server looks when attempting to match the input number.
- `[out-pattern]` is the part of the rule that instructs T-Server on how to translate the input number into the required format. The brackets indicate that either 0 or 1 instance is required. You must create an `out-pattern` for number translation rules.

- `name = *(ALPHA / DIGIT / "-")`

where:

- `ALPHA` indicates that letters can be used in the name for the rule option.
- `DIGIT` indicates that numbers can be used in the name for the rule option.
- `"-"` indicates that a dash (-) can also be used in the option name, for example, `rule-01`.

- `in-pattern = 1*(digit-part / abstract-group)`

where:

- `digit-part` represents numbers. T-Server uses this when selecting the most appropriate rule from the entire dialing plan.

- **abstract-group** represents one or more letters with each letter representing one or more numbers. T-Server uses this when transforming a dial string.

For example, [1-9] is the **digit-part** (representing a range of numbers) and ABBB is the **abstract-group** for **in-pattern**=[1-9]ABBB.

- **out-pattern** = 1*(**symbol-part** / **group-identifier**) ***param-part**
where:
 - **symbol-part** represents digits, symbols, or a combination. Symbols are rarely used. They are not used in the United States.
 - **group-identifier** are letters that represent groups of numbers. A letter in the **out-pattern** represents one or more digits, based on the number of times the letter is used in the **in-pattern**.
 - ***param-part** represents an additional parameter, such as **phone-context**. Reminder: an asterisk means that 0 to an infinite number of these are acceptable.

For example, in rule-04; **in-pattern**=1AAABBBCCC; **out-pattern**=91ABC, 91 is the **symbol-part**; A, B, and C are **group-identifiers** in the **out-pattern**, each representing three digits, since there are three instances of each in the **in-pattern**.

Note: Prefix an **out-pattern** value with a plus sign (+) for the inbound rule when the output must be in a global form (E.164 format).

- **digit-part** = **digits** / **range** / **sequence**
where:
 - **digits** are numbers 0 through 9.
 - **range** is a series of digits, for example, 1-3.
 - **sequence** is a set of digits.
- **symbol-part** = **digits** / **symbols**
where:
 - **digits** are numbers 0 through 9.
 - **symbols** include such characters as +, -, and so on.
- **range** = "[" **digits** "-" **digits** "]" **group-identifier**
where:
 - "[" **digits** "-" **digits** "]" represents the numeric range, for example, [1-2].
 - **group-identifier** represents the group to which the number range is applied.

For example, [1-2] applies to group identifier A for **in-pattern**=["1-2"]ABBB. When T-Server evaluates the rule to determine if it matches the number, it examines whether the first digit of the number, identified as **group-identifier** A, is 1 or 2.

- `sequence = "[" 1*(digits [" , "]) "]" group-identifier`

where:

- `"[" 1*(digits [" , "]) "]"` represents a sequence of digits, separated by commas, and bracketed. T-Server requires that each digit set have the same number of digits. For example, in `[415, 650]` the sets have three digits.
- `group-identifier` represents the group to which the number sequence is applied.

For example, in `in-pattern=1[415, 650]A*B`, `[415, 650]` applies to `group-identifier A`. When T-Server evaluates the rule to determine if it matches the number, it examines whether the three digits (`group-identifier A`) following the 1 in the number are 415 or 650.

- `abstract-group = fixed-length-group / flexible-length-group / entity`

where:

- `fixed-length-group` specifies a group composed of a specific number of digits and determined by how many times the group identifier is included in the `in-pattern`. For example, for `in-pattern=1AAABBBCCCC`, there are three digits in group A and B but four in group C.

When you create an `out-pattern`, you include the group identifier only once because the `in-pattern` tells T-Server how many digits belong in that group. For example, `rule-04` (see [page 95](#)) is `in-pattern=1AAABBBCCCC; out-pattern=91ABC`.

- `flexible-length-group` specifies a group composed of 0 or more digits in the group represented by the `group-identifier`. For example, in `in-pattern=1[415, 650]A*B`, `*B` represents the flexible length group containing the remaining digits in the number.
- `entity` represents digits defined for a specific purpose, for example, country code.

The component `abstract-group` is used only for the `in-pattern`.

- `fixed-length-group = 1*group-identifier`

See the earlier explanation under `abstract-group`.

- `flexible-length-group = "*" group-identifier`

See the earlier explanation under `abstract-group`.

- `entity = "#" entity-identifier group-identifier`

where:

- `"#"` indicates the start of a Country Code `entity-identifier`.
- `entity-identifier` must be the letter C which represents Country Code when preceded by a pound symbol (`#`). Any other letter following the `#` causes an error.
- `group-identifier` represents the Country Code group when preceded by `#C`.

The entity component is a special group that assumes some kind of predefined processing, such as the Country Code detection.

- `param-part = ";" param-name "=" param-value`
where:
 - `;"` is a required separator element.
 - `param-name` is the name of the parameter.
 - `"=` is the next required element.
- `param-value` represents the value for `param-name`.
- `param-name = "ext" / "phone-context" / "dn"`
where:
 - `"ext"` refers to extension.
 - `"phone-context"` represents the value of the `phone-context` option configured on the switch.
 - `"dn"` represents the directory number.
- `param-value = 1*ANYSYMBOL`
where:
 - `ANYSYMBOL` represents any number, letter, or symbol with no restrictions.
- `group-identifier = ALPHA`
- `entity-identifier = ALPHA`
- `digits = 1*DIGIT`
- `symbols = 1*("-" / "+" / ")" / "(" / ".")`

Recommendations for Rule Configuration

The configuration of rules for inbound numbers usually depends on the settings in the corresponding PBX. These settings often define the form in which the PBX notifies its client applications about the number from which an inbound call is coming.

As a general guideline, configure rules that define how to process calls from:

- Internal numbers.
- External numbers within the same local dialing area.
- External numbers within the same country.
- International numbers.

Rules for inbound numbers, typically for North American locations, might look like this:

1. Two rules to transform internal numbers (extensions):
`name=rule-01; in-pattern=[1-9]ABBB; out-pattern=AB`
`name=rule-02; in-pattern=[1-9]ABBBB; out-pattern=AB`

2. A rule to transform local area code numbers (in 333-1234 format in this example):
name=rule-03; in-pattern=[1-9]ABBBBBB; out-pattern=+1222AB
3. A rule to transform U.S. numbers (in +1(222)333-4444 format):
name=rule-04; in-pattern=1AAAAAAAAA; out-pattern=+1A
4. A rule to transform U.S. numbers without the +1 prefix (in (222)333-4444 format):
name=rule-05; in-pattern=[2-9]ABBBBBBBBB; out-pattern=+1AB
5. A rule to transform U.S. numbers with an outside prefix (in 9 +1(222)333-4444 format):
name=rule-06; in-pattern=91AAAAAAAAA; out-pattern=+1A
6. A rule to transform international numbers with an IDD (international dialing digits) prefix (in 011 +44(111)222-3333 format):
name=rule-07; in-pattern=011*A; out-pattern=+A
7. A rule to transform international numbers without an IDD prefix (in +44(111)222-3333 format):
name=rule-08; in-pattern=[2-9]A*B; out-pattern=+AB

Rule Examples

This section provides examples of six rules that are configured as options in the Genesys Configuration Database. It also provides examples of how T-Server applies rules to various input numbers.

Rules

- rule-01** in-pattern=[1-8]ABBB; out-pattern=AB
- rule-02** in-pattern=AAAA; out-pattern=A
- rule-03** in-pattern=1[415, 650]A*B; out-pattern=B
- rule-04** in-pattern=1AAABBBCCCC; out-pattern=91ABC
- rule-05** in-pattern=*A913BBBB; out-pattern=80407913B
- rule-06** in-pattern=011#CA*B; out-pattern=9011AB

Examples

Here are examples of how T-Server applies configured above rules to various input numbers.

Example 1 T-Server receives input number 2326.

As a result of the rule selection process, T-Server determines that the matching rule is rule-01:

```
name=rule-01; in-pattern=[1-8]ABBB; out-pattern=AB
```

The matching count for this rule is 1, because Group A matches the digit 2.

As a result of the parsing process, T-Server detects two groups: Group A = 2 and Group B = 326.

T-Server formats the output string as 2326.

Example 2 T-Server receives input number 9122.

As a result of the rule selection process, T-Server determines that the matching rule is rule-02:

```
name=rule-02; in-pattern=AAAA; out-pattern=A
```

The matching count for this rule is 0; however, the overall length of the input number matches that of the in-pattern configuration.

As a result of the parsing process, T-Server detects one group: Group A = 9122.

T-Server formats the output string as 9122.

Example 3 T-Server receives input number 16503222332.

As a result of the rule selection process, T-Server determines that the matching rule is rule-03:

```
name=rule-03; in-pattern=1[415, 650]A*B; out-pattern=B
```

The matching count for this rule is 4, because the first digit matches and all three digits in Group A match.

As a result of the parsing process, T-Server detects two groups: Group A = 650 and Group B = 3222332.

T-Server formats the output string as 3222332.

Example 4 T-Server receives input number 19253227676.

As a result of the rule selection process, T-Server determines that the matching rule is rule-04:

```
name=rule-04; in-pattern=1AAABBBCCCC; out-pattern=91ABC
```

The matching count for this rule is 1, because the first digit matches.

As a result of parsing process, T-Server detects three groups: Group A = 925, Group B = 322, and Group C = 7676.

T-Server formats the output string as 919253227676.

Example 5 T-Server receives input number 4089137676.

As a result of rule selection process, T-Server determines that the matching rule is rule-05:

```
name=rule-05; in-pattern=*A913BBBB; out-pattern=80407913B
```

The matching count for this rule is 3, because three digits match.

As a result of the parsing process, T-Server detects two groups: Group A = 408 and Group B = 7676.

T-Server formats the output string as 804079137676.

Example 6 T-Server receives input number 011441112223333.

As a result of the rule selection process, T-Server determines that the matching rule is rule-06:

name=rule-06; in-pattern=011#CA*B; out-pattern=9011AB

The matching count for this rule is 3, because three digits match.

As a result of the parsing process, T-Server detects two groups: Group A = 44 and Group B = 1112223333.

T-Server formats the output string as 9011441112223333.

Procedure: Configuring Number Translation

Purpose: To configure the Number Translation feature in T-Server to provide more flexibility for handling calls distributed across multiple sites.

Overview

- The Number Translation feature becomes active when the ISCC/COF feature and/or the direct-ani transaction type are used.
- This configuration procedure must be completed within the T-Server Application object corresponding to your T-Server.

Start of procedure

1. Open the T-Server Application's Properties dialog box.
2. Click the Options tab.
3. Create a new section called extrouter or open an existing section with this name.
4. Create a new option called `inbound-translator-<n>`. This option points to another section that describes the translation rules for inbound numbers.
5. In this section, create one configuration option for each rule. Specify the rule name as the option name. The values of these options are the rules for the number translation.

For the option description and its valid values, see Chapter 9, “T-Server Common Configuration Options,” on [page 219](#).

6. When you are finished, click Apply.
7. Click OK to save your changes and exit the Properties dialog box.

End of procedure

Network Attended Transfer/Conference Feature

The Network Attended Transfer/Conference (NAT/C) feature is designed to enable agents working in multi-site contact centers to consult with each other before making call transfers or conferences, regardless of whether both agents work at the same or different sites. It also enables the agent who requests a consultation to maintain his or her conversation with the customer while the system is looking for an available agent and setting up the consultation call.

The NAT/C feature does not rely on the call transfer capabilities of the local switch.

There are two modes in which the network attended transfer/conference can be performed: *direct* and *URS-controlled*. Figure 11 shows the sequence of steps that occur in *URS-controlled* mode, when Agent A, who is handling a customer call, requests a consultation with another agent, and URS (Universal Routing Server) selects Agent B, who is working at another site. The *direct* mode is similar to the *URS-controlled* mode, with the difference that URS is not involved in the process (Step 2 and Step 3 are omitted).

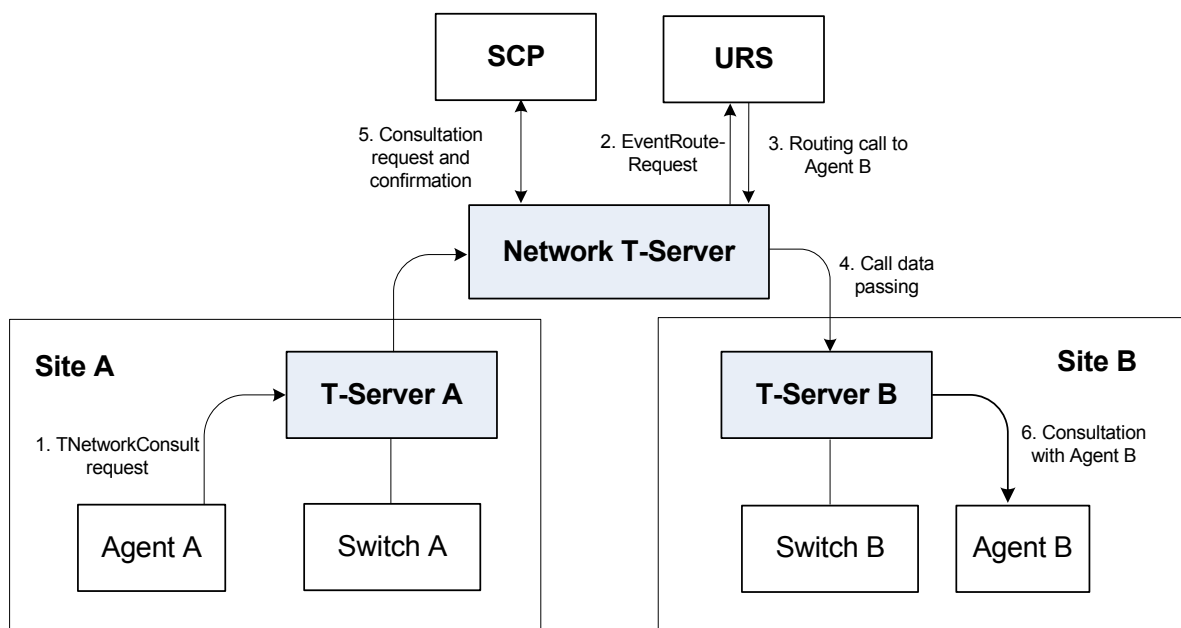


Figure 11: Steps in the NAT/C Process in URS-Controlled Mode

Step 1

Agent A makes a request for a consultation with another agent. A TNetworkConsult request is relayed to the Network T-Server. Depending on the parameter settings of the TNetworkConsult request, the NAT/C feature will

operate in either *direct* or *URS-controlled* mode. For more information, see the *Voice Platform SDK 8.0 .NET (or Java) API Reference*.

Step 2

(*URS-controlled* mode only.) The Network T-Server sends `EventRouteRequest` to URS.

Step 3

(*URS-controlled* mode only.) URS locates an available agent at Site B and instructs the Network T-Server to route the call to Agent B. The Network T-Server confirms the initiation of the network transfer by sending `EventNetworkCallStatus` to T-Server A, which then relays it to Agent A.

Step 4

The Network T-Server proceeds to obtain the access number from T-Server B, and passes the call data to T-Server B. (See “ISCC Call Data Transfer Service” on [page 65](#) for details.)

Step 5

The Network T-Server instructs the Service Control Point (SCP) to initiate a new voice path with Agent B. Once the connection is confirmed, the Network T-Server distributes `EventNetworkCallStatus` to both T-Server A and T-Server B, which then relay it to Agent A and Agent B respectively, to indicate that the consultation call is being established.

The Network T-Server also distributes `EventRouteUsed` to URS to confirm successful routing of the call to the selected agent.

Step 6

At this point, the customer is on hold, and Agent A is consulting with Agent B. Agent A can do one of the following:

- End the consultation and retrieve the original customer call
- Alternate between Agent B and the customer
- Set up a conference call with Agent B and the customer
- Transfer the customer call to Agent B

Note: All T-Servers support NAT/C requests with `AttributeHomeLocation` provided that this attribute identifies a network location that is capable of processing such requests. Refer to the *Network T-Server Deployment Guides* to determine whether a specific Network T-Server can process these requests.

Event Propagation Feature

The Event Propagation feature complements the ISCC and ISCC/COF features by distributing updated user data and party-related events to remote T-Servers. This feature is used when a call is being made, transferred, or conferenced to another location, and when, as a result, one or more instances of the call reside at one location while other call instances reside at another location. In this scenario, when a client at one location makes changes to user data, updated user data is passed (*propagated*) to T-Servers at other locations.

The Event Propagation feature consists of User Data update propagation and Party Events propagation.

User Data Propagation

User data propagation takes place when a client at one location makes changes to user data associated with a call that was made, transferred, conferenced, or routed to other locations. The remote clients involved with the call are notified about the changes with `EventAttachedDataChanged`.

When T-Server receives a local update to user data (that is, when a client of this T-Server has changed the call's user data), T-Server determines if parties at remote locations are involved with the call and, if so, sends (propagates) the updated user data to the T-Servers at remote locations.

When T-Server receives a remote update to user data (that is, when a client of a remote T-Server has changed the call's user data and the remote T-Server has used the Event Propagation feature to send the updated user data), T-Server:

1. Updates the user data of the corresponding local call.
2. Determines if parties at other remote locations are involved with the call and, if so, propagates the updated user data to T-Servers at other remote locations.

The locations to which user data is propagated are selected based on a call distribution topology. That is, the updated user data is passed directly to the location to which a call was sent and to the location from which the call was received, excluding the location from which the update was received.

For example, consider a call made from location A to location B, and then conferenced from location B to location C. The three instances of the call reside at different locations: the first instance is at location A, the second instance is at location B, and the third instance is at location C. The Event Propagation feature is employed in the following scenarios:

- When T-Server at location A receives a local update to user data, it notifies T-Server at location B (to which it sent the call) about changes to the call's user data. Thus, T-Server at location B receives a remote update to user data and, in turn, notifies T-Server at location C (to which it sent the call) about these changes.

Although T-Server at location C receives a remote update to user data, it does not pass the notification to any other T-Servers, because it did not send the call to any other locations. As mentioned earlier, T-Servers at locations B and C update the user data of the corresponding local calls and notify their clients about the changes with `EventAttachedDataChanged`.

- When T-Server at location B receives a local update to user data, it notifies T-Server at location C (to which it sent the call) and T-Server at location A (from which it received the call) about changes to the call's user data. Thus, T-Servers at locations C and A receive a remote update to user data.

Because T-Server at location C did not send the call to any other locations, and T-Server at location A originated the call, neither of these T-Servers passes the notification to any other T-Servers. T-Servers at locations C and A update the user data of the corresponding local calls and notify their clients about the changes with `EventAttachedDataChanged`.

- When T-Server at location C receives a local update to user data, it notifies T-Server at location B (from which it received the call) about changes to the call's user data. Thus, T-Server at location B receives a remote update to user data and, in turn, notifies T-Server at location A (from which it received the call) about these changes.

Although T-Server at location A receives a remote update to user data, it does not pass the notification to any other T-Servers, because it originated the call. T-Servers at locations B and A update the user data of the corresponding local calls and notify their clients about the changes with `EventAttachedDataChanged`.

When a call is distributed between location A and location C using location B, and is then deleted on location B, propagation between locations A and C still occurs through the transit node at location B.

Party Events Propagation

Party events propagation takes place when a transfer or a conference is completed for a call that was made to or from one or more remote locations, or when a conference party is removed from the conference.

In these cases, the Event Propagation feature distributes party events, such as `EventPartyChanged`, `EventPartyAdded`, and `EventPartyDeleted`, to remote locations involved with the call, according to appropriate call model scenarios.

For example, consider a call made from DN 1 to DN 2 on location A. A `TInitiateConference` request is then issued for DN 2 to transfer the call to external DN 3 on location B. That transfer is made by means of ISCC routing. When this conference is completed on location A, the Event Propagation feature sends `EventPartyChanged` to location B and distributes this event to involved client applications that are connected to location B and registered for DN 3. After that, if a party of the conference is removed from the conference (for example, a party on DN 2), the Event Propagation feature sends

EventPartyDeleted to location B and distributes this event to client applications registered for DN 3.

If a call involved in the propagation has no local parties but has two or more remote parties, the party events propagation is processed in the same manner as the propagation of user data updates.

For a complete event flow in such scenarios, refer to the *Genesys 7 Events and Models Reference Manual*.

Switch Partitioning

A multi-site environment with switch partitioning or intelligent trunks can be defined as a configuration of multiple virtual switches (or Switch objects) that are defined in Configuration Manager under a single Switching Office object representing a physical switch. Each Switch object has its own instance of a T-Server application. All T-Server applications connect to the switch via the same or different CTI link or a gateway. (See [Figure 12](#).)

When the Event Propagation feature is active, updated user data and party-related events—EventPartyChanged, EventPartyDeleted, and EventPartyAdded—are propagated to T-Servers that are involved in call transactions, such as transfer or conference. However, with switch partitioning, the call instances may reside at one partition or at different partitions.

Site A

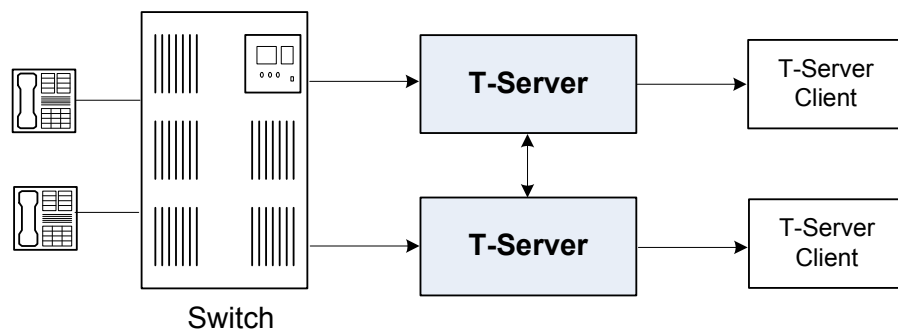


Figure 12: Switch Partitioning Architecture

Starting with version 8.0, in addition to ConnIDs and UserData, T-Server can now synchronize the CallType attribute. Each T-Server is required to register all DNs it monitors. In a multi-partitioned environment, when configured, calls between partitions are reported as internal (CallTypeInternal). In a non-partitioned environment, such calls are reported as inbound (CallTypeInbound) and/or outbound (CallTypeOutbound), depending on the direction of a call. In order for T-Servers to report calls between specified partitions as internal, registered DNs of these partitions must be assigned to a Switch (T-Server), Switching Office, or Tenant, using the [dn-scope](#)

configuration option. If DNs that are involved in calls are not in the T-Server scope, those DNs will be reported as inbound or outbound.

In addition, T-Server supports `LocalCallType` and `PropagatedCallType` attributes, which depend on the `propagated-call-type` configuration option setting for reporting. See the option description on [page 224](#).

To control race conditions that may occur in the switch-partitioned environment, use the `epp-tout` configuration option (see [page 239](#)).

Notes: Because of possible delays in TCP/IP connections, a sequence of events sent for the same call by two or more T-Servers to clients may appear in an unexpected order. For example, in a simple call scenario with two partitions, `EventRinging` and `EventEstablished` messages may both arrive before `EventDialing`.

Genesys switch partitioning does not apply to hardware partitioning functionality that is supported on some switches.

[Table 5](#) shows the T-Server types that support switch partitioning.

Table 5: T-Server Support for Switch Partitioning

T-Server Type	Supported
Alcatel A4400/OXE	Yes
Avaya Communication Manager	Yes
Avaya TSAPI	Yes
Cisco Unified Communications Manager	Yes

Event Propagation Configuration

The basic Event Propagation feature configuration includes a setting of specific configuration options at a T-Server Application level. The advanced feature configuration allows you to customize the feature at a Switch level.

When determining whether to notify other T-Servers of changes to user data, or to distribute party events, T-Server checks:

1. Call topology (what location a call came from and to what location the call was then transferred or conferenced).
2. Outbound parameters of the Switch this T-Server relates to (whether propagation parameters are configured for the access codes this switch uses to reach the switch at the location a call came from and the switch at the location to which the call was then transferred or conferenced).

Warning! The direction of user-data or party-events propagation does not necessarily match the direction of call distribution. Therefore, the access code used to deliver the call can differ from the access code used for the purpose of Event Propagation.

If one of the T-Servers along the call distribution path has the Event Propagation feature disabled, that T-Server does not distribute events to remote locations.

Procedure: Activating Event Propagation: basic configuration

Purpose: To activate the Event Propagation feature for User Data updates and call-party-associated events (Party Events) distribution.

Start of procedure

1. Open the T-Server Application's Properties dialog box.
2. Click the Options tab.
3. Open the extrouter section.
4. Set the [event-propagation](#) option to the List value.

This setting enables User Data propagation. If you need to enable Party Events propagation, perform Step 5.

5. Set the [use-data-from](#) option to the current value.

This setting enables Party Events propagation.

For the option description and its valid values, see Chapter 9, “T-Server Common Configuration Options,” on [page 219](#).

6. When you are finished, click **Apply**.
7. Click **OK** to save your changes and exit the **Properties** dialog box.

End of procedure

Next Steps

- For advanced feature configuration, do the following procedure:
[Procedure: Modifying Event Propagation: advanced configuration](#), on page 105

Procedure: Modifying Event Propagation: advanced configuration

Purpose: To modify access codes for advanced Event Propagation configuration.

Prerequisites

- [Procedure: Activating Event Propagation: basic configuration](#), on page 104

Overview

You can set Event Propagation parameters using:

- The **Default Access Code** properties of the **Switch** that receives an ISCC-routed call (the destination switch).
- The **Access Code** properties of the **Switch** that passes an ISCC-routed call (the origination switch).

If you do not set up Event Propagation parameters for a given **Access Code**, T-Server uses corresponding settings configured for the **Default Access Code** of the destination switch.

The procedures for modifying **Default Access Codes** and **Access Codes** are very similar to each other.

Start of procedure

1. Among configured Switches, select the Switch that the configured T-Server relates to.
2. Open the Switch's Properties dialog box and click either the Default Access Codes tab or the Access Codes tab.
3. Select a configured Default Access Code or configured Access Code and click Edit.

Note: If no Default Access Code is configured, see [page 110](#) for instructions. If no Access Codes are configured, see [page 111](#) for instructions.

4. In the Switch Access Code Properties dialog box that opens, specify a value for the ISCC Protocol Parameters field as follows:
 - To enable distribution of both user data associated with the call and call-party-associated events¹, type:
propagate=yes
which is the default value.
 - To enable distribution of user data associated with the call and disable distribution of call-party-associated events, type:
propagate=udata
 - To disable distribution of user data associated with the call and enable distribution of call-party-associated events, type:
propagate=party
 - To disable distribution of both user data associated with the call and call-party-associated events, type:
propagate=no
5. Click OK to save configuration updates and close the Switch Access Code Properties dialog box.
6. Click Apply and OK to save configuration updates and close the Switch Properties dialog box.

End of procedure

-
1. The following are call-party-associated events: EventPartyChanged, EventPartyDeleted, and EventPartyAdded.

ISCC Transaction Monitoring Feature

This feature allows T-Server clients to monitor ISCC transactions that occur during the call data transfer between T-Servers in a multi-site environment.

In order to be able to monitor ISCC messaging, a T-Server client must subscribe to the ISCC Transaction Monitoring. Once a subscription request is confirmed, a client will receive updates about all multi-site operations of this T-Server.

The `TTransactionMonitoring` request is used to instruct T-Server to start, stop, or modify a client's subscription to Transaction Monitoring feature notifications by setting the `TSubscriptionOperationType` parameter to `SubscriptionStart`, `SubscriptionStop`, or `SubscriptionModify` respectively. The transaction status is reported in `EventTransactionStatus` messages to the subscribed clients.

To determine whether the Transaction Monitoring feature is supported by a specific T-Server, a T-Server client may query T-Server's capabilities. For more information about support of this feature, see *Genesys 7 Events and Models Reference Manual* and *Voice Platform SDK 8.0 .NET (or Java) API Reference*.

Configuring Multi-Site Support

Prior to configuring T-Server to support multi-site operation, you must read the “Licensing Requirements” on [page 35](#), as well as previous sections of this chapter on multi-site deployment. In particular, Table 3 on [page 81](#) shows which transaction types are supported by a specific T-Server, while Table 4 on [page 86](#) shows whether your T-Server supports the `NetworkCallID` attribute for the ISCC/COF feature. Use this information as you follow the instructions in this chapter.

Note: Before attempting to configure a multi-site environment, Genesys recommends that you plan the changes you want to make to your existing contact centers. You should then gather the configuration information you will need (such as the name of each T-Server application, port assignments, and switch names), and use Configuration Manager to create and partially configure each T-Server object. Review multi-site option values in the “Multi-Site Support Section” on [page 229](#) and determine what these values need to be, based on your network topology.

For T-Server to support multi-site operation, you must create and configure three types of objects in the Configuration Layer:

1. Applications
2. Switches, including Access Codes
3. DNs

You must configure these objects for origination and destination locations. Multi-site support features activate automatically at T-Server startup. See “DNs” on [page 115](#) for details.

Applications

Ensure that T-Server Application objects, and their corresponding Host objects, exist and are configured for origination and destination locations.

Once you’ve done that, use Configuration Manager to add this configuration to a T-Server Application.

Procedure: Configuring T-Server Applications

Purpose: To configure T-Server Application objects for multi-site operation support.

Start of procedure

1. Open the T-Server Application's Properties dialog box.
2. Click the Connections tab and click Add to add a connection to the appropriate T-Server. The Connection Info Properties dialog box displays.
3. Use the Browse button to search for the T-Server you want to connect to, and fill in the following values:
 - Port ID
 - Connection Protocol
 - Local Timeout
 - Remote Timeout
 - Trace Mode
4. Click the Options tab. Create a new section called extrouter or open an existing section with this name.

Note: If you do not create the extrouter section, T-Server uses the default values of the corresponding configuration options.

5. Open the extrouter section. Configure the options used for multi-site support.

Note: For a list of options and valid values, see “Multi-Site Support Section” on [page 229](#), in the “T-Server Common Configuration Options” chapter in Part Two of this document.

6. When you are finished, click Apply.
7. Repeat this procedure for all T-Servers for origination and destination locations that are used for multi-site operations.

End of procedure

Next Steps

- See “[Switches and Access Codes.](#)”

Switches and Access Codes

Ensure that Switching Office and Switch objects are configured for both origination and destination locations.

You configure Access Codes to a destination switch in the origination Switch's Properties dialog box. The only exception is the Default Access Code, which is configured at the destination Switch's Properties dialog box.

You can configure two types of switch Access Codes in the Switch's Properties dialog box:

- A Default Access Code (for inbound calls)—Specifies the access code that other switches can use to access this switch when they originate a multi-site transaction.
- An Access Code (for outbound calls)—Specifies the access code that this switch can use when it originates a multi-site transaction to access another switch.

When the origination T-Server processes a multi-site transaction, it looks for an access code to the destination switch. First, T-Server checks the Access Code of the origination Switch:

- If an access code to the destination switch is configured with the target type Target ISCC and with any transaction type except Forbidden, T-Server uses this access code to dial the destination switch.
- If the access code to the destination switch is not configured on the Access Code tab of the origination switch, the origination T-Server checks the Default Access Code tab of the destination switch. If an access code is configured there with the target type Target ISCC and with any transaction type except Forbidden, T-Server uses this access code to dial the destination switch.

- If no access code with the required properties is found, T-Server rejects the transaction.

Note: When migrating from previous releases of T-Servers to 8.0, or when using T-Servers of different releases (including 8.0) in the same environment, see “Compatibility Notes” on [page 114](#).

Procedure: Configuring Default Access Codes

Purpose: To configure the Default Access Codes (one per Switch object) to be used by other switches to access this switch when they originate a multi-site transaction.

Prerequisites

- Ensure that Switching Office and Switch objects are configured for both origination and destination locations.

Start of procedure

1. Among configured Switches, select the Switch that the configured T-Server relates to.
2. Open the Switch Properties dialog box and click the Default Access Codes tab.
3. Click Add to open the Access Code Properties dialog box.
4. In the Code field, specify the access code used by remote switches to reach a DN at this switch. An access code is used as a prefix to the remote switch numbers.

Note: If no prefix is needed to dial to the configured switch, you can leave the Code field blank.

5. In the Target Type field, select Target ISCC.
6. In the Route Type field, select a value corresponding to the transaction type you want to use (given that it is supported for your switch type).
7. When you are finished, click Apply.

End of procedure

Next Steps

- See “[Configuring Access Codes.](#)”

Procedure: Configuring Access Codes

Purpose: To configure the Access Codes (one or more per Switch object) that this switch can use when it originates a multi-site transaction to access another switch.

Prerequisites

- Ensure that Switching Office and Switch objects are configured for both origination and destination locations.

Start of procedure

1. Among configured Switches, select the Switch that the configured T-Server relates to.
2. Open the Switch Properties dialog box and click the Access Codes tab.
3. Click Add to open the Access Code Properties dialog box.
4. In the Switch field, specify the switch that this switch can reach using this access code. Use the Browse button to locate the remote switch.
5. In the Code field, specify the access code used to reach a DN at the remote switch from this switch. An access code is used as a prefix to the remote switch numbers.

Note: If no prefix is needed to dial from one switch to another, you can leave the Code field blank.

6. In the Target Type field, select Target ISCC.
When you select Target ISCC as your target type, the Properties dialog box changes its lower pane to the Sources pane. It is here that you enter the extended parameters for your access codes, by specifying the ISCC Protocol and ISCC Call Overflow Parameters.
To set these parameters, locate the two drop-down boxes that appear below the Target Type field in the Sources pane of that Properties dialog box.
 - a. In the ISCC Protocol Parameters drop-down box, enter the appropriate ISCC Protocol parameter, as a comma-separated list of one or more of the following items shown in [Table 6](#):

Table 6: Target Type: ISCC Protocol Parameters

ISCC Protocol Parameters	Description
dnis-tail=<number-of-digits>	Where number-of-digits is the number of significant DNIS digits (last digits) used for call matching. 0 (zero) matches all digits.
propagate=<yes, udata, party, no>	Default is yes. For more information, see “Modifying Event Propagation: advanced configuration” on page 105 .
direct-network-callid=<>	For configuration information, see Part Two of this document. (Use Table 4 on page 86 to determine if your T-Server supports the direct-network-callid transaction type.)

- b. In the ISCC Call Overflow Parameters drop-down box, enter call overflow parameters, as a comma-separated list of one or more of the following items shown in [Table 7](#):

Table 7: Target Type: ISCC Call Overflow Parameters

ISCC Call Overflow Parameters	Description
match-callid	Matches calls using network CallID.
match-ani	Matches calls using ANI. Note: When using match-ani, the match-flexible parameter must be set to false.

Table 7: Target Type: ISCC Call Overflow Parameters (Continued)

ISCC Call Overflow Parameters	Description
match-flexible	Supports flexible call matching based on the following values: Default Value: true Valid Values: true, false, and [matching-context-type], where [matching-context-type] is the switch-specific value, which must be the same as the value of the default-network-call-id-matching configuration option of the corresponding T-Server.
inbound-only=<boolean>	Default is true. Setting inbound-only to true disables COF on consultation and outbound calls.

7. In the Route Type field, select a value corresponding to the transaction type you want to use (given that it is supported for your switch type). [Table 8](#) contains cross-reference information on transaction types that the Configuration Layer and T-Server use.

Table 8: Route Type and ISCC Transaction Type Cross-Reference

Route Type Field Value	ISCC Transaction Type
Default	The first value from the list of values specified in the cast-type option for the T-Server at the destination site
Direct	direct-callid
Direct ANI	direct-ani
Direct Digits	direct-digits
Direct DNIS and ANI	Reserved
Direct Network Call ID	direct-network-callid
Direct No Token	direct-notoken
Direct UII	direct-uui
DNIS Pooling	dnis-pooling

Table 8: Route Type and ISCC Transaction Type Cross-Reference (Continued)

Route Type Field Value	ISCC Transaction Type
Forbidden	External routing to this destination is not allowed
ISCC defined protocol	Reserved
PullBack	pullback
Re-Route	reroute
Route	route

8. When you are finished, click **Apply**.

End of procedure

Next Steps

- After configuring a switch for multi-site support, proceed with the configuration of DNs assigned to this switch.

Compatibility Notes

When migrating from previous releases of T-Servers to 8.0, or when using T-Servers of different releases (including 8.0) in the same environment, keep in mind the following compatibility issues:

- The Target External Routing Point value of the Target Type field is obsolete and provided only for backward compatibility with T-Servers of releases 5.1 and 6.0. When two access codes for the same switch are configured, one with the Target ISCC target type and the other with the Target External Routing Point target type, T-Servers of releases 8.x, 7.x, 6.5, and 6.1:
 - Use the Target ISCC access code for transactions with T-Servers of releases 8.x, 7.x, 6.5, and 6.1.
 - Use the Target External Routing Point access code for transactions with T-Servers of releases 5.1 and 6.0.

When the only access code configured for a switch has the Target External Routing Point target type, T-Server uses this access code for all transactions.

- When the Target External Routing Point value of the Target Type field is configured, you must set the Route Type field to one of the following:
 - Default to enable the route transaction type
 - Label to enable the direct-ani transaction type

- Direct to enable the direct transaction type

Note: The direct transaction type in releases 5.1 and 6.0 corresponds to the direct-callid transaction type in releases 6.1 and later.

- UseExtProtocol to enable the direct-uu1 transaction type
- PostFeature to enable the reroute transaction type

These values are fully compatible with the transaction types supported in T-Server release 5.1.

- For successful multi-site operations between any two locations served by release 5.1 T-Servers, identical Route Type values must be set in the Switch's Access Code Properties dialog boxes for both the origination and destination switches.

DNs

Use the procedures from this section to configure access resources for various transaction types.

Procedure: Configuring access resources for the route transaction type

Purpose: To configure dedicated DNs required for the route transaction type.

Prerequisites

- Ensure that Switching Office and Switch objects are configured for both origination and destination locations.

Start of procedure

1. Under a configured Switch, select the DNs folder. From the main menu, select File > New > DN to create a new DN object.
2. On the General tab of the DN's Properties dialog box, specify the number of the configured DN as the value of the Number field. This value must correspond to the Routing Point number on the switch.
3. Select External Routing Point as the value of the Type field.
4. If a dialable number for that Routing Point is different from its DN name, specify the number in the Association field.
5. Click the Access Numbers tab. Click Add and specify these access number parameters:
 - Origination switch.

- Access number that must be dialed to reach this DN from the origination switch.

In determining an access number for the Routing Point, T-Server composes it of the values of the following properties (in the order listed):

- Access number (if specified).
- Switch access code from the switch of the origination party to the switch to which the Routing Point belongs, concatenated with its `Association` (if the `Association` value is specified).
- Switch access code from the switch of the origination party to the switch to which the Routing Point belongs, concatenated with the number for the DN.
- Default access code of the switch to which the Routing Point belongs, concatenated with its `Association` (if the `Association` value is specified).
- Default access code of the switch to which the Routing Point belongs, concatenated with the number for the DN.

Note: If option `use-implicit-access-numbers` is set to `true`, the access number composed of switch access code and DN can be used for external transfers of calls originating at switches for which an access number is not specified.

6. When you are finished, click `Apply`.

End of procedure

Procedure: Configuring access resources for the `dnis-pool` transaction type

Purpose: To configure dedicated DNs required for the `dnis-pool` transaction type.

Start of procedure

1. Under a configured `Switch`, select the `DNs` folder. From the main menu, select `File > New > DN` to create a new DN object.
2. On the `General` tab of the DN's `Properties` dialog box, specify the number of the configured DN as the value of the `Number` field. This value must be a dialable number on the switch.
3. Select `Access Resource` as the `Type` field and type `dnis` as the value of the `Resource Type` field on the `Advanced` tab.

4. Click the Access Numbers tab. Click Add and specify these Access Number parameters:
 - Origination switch.
 - Access number that must be dialed to reach this DN from the origination switch.

An access number for the access resource is determined in the same manner as for the route access resource.

5. When you are finished, click Apply.

End of procedure

Procedure: Configuring access resources for direct-* transaction types

Overview

You can use any configured DN as an access resource for the direct-* transaction types. (The * symbol stands for any of the following: callid, uui, notoken, ani, or digits.)

You can select the Use Override check box on the Advanced tab to indicate whether the override value should be used instead of the number value to dial to the DN. You must specify this value if the DN has a different DN name and dialable number. In fact, this value is required for T-Servers for some switch types—such as Aspect ACD, Nortel Communication Server 2000/2100, and Spectrum.

Procedure: Configuring access resources for ISCC/COF

Purpose: To configure dedicated DNs required for the ISCC/COF feature.

Start of procedure

Note: Use Table 4 on [page 86](#) to determine if your T-Server supports the ISCC/COF feature.

1. Under a configured Switch, select the DNs folder. From the main menu, select **File > New > DN** to create a new DN object.

Note: The number of the access resource must match the name of a DN configured on the switch (usually, an ACD Queue) so that T-Server can determine whether the calls arriving to this DN are overflowed calls.

2. On the **General** tab of the **DN Properties** dialog box, specify the number of the configured DN as the value for the **Number** field.
3. Select **Access Resource** as the value for the **Type** field.
4. On the **Advanced** tab, type **cof-in** or **cof-not-in** as the value for the **Resource Type** field.

Note: Calls coming to DNs with the **cof-not-in** value for the **Resource Type** are never considered to be overflowed.

5. When you are finished, click **Apply**.

End of procedure

Procedure: **Configuring access resources for non-unique ANI**

Purpose: To configure dedicated DNs required for the non-unique-ani resource type.

The non-unique-ani resource type is used to block direct-ani and COF/ani from relaying on ANI when it matches configured/enabled resource digits. Using non-unique-ani, T-Server checks every ANI against a list of non-unique-ani resources.

Start of procedure

1. Under a configured Switch, select the DNs folder. From the main menu, select **File > New > DN** to create a new DN object.
2. On the **General** tab of the **DN Properties** dialog box, specify the ANI digits that need to be excluded from normal processing.

3. Select `Access Resource` as the value for the `Type` field.
4. On the `Advanced` tab, specify the `Resource Type` field as `non-unique-ani`.
5. When you are finished, click `Apply`.

End of procedure

Procedure: Modifying DNs for isolated switch partitioning

Purpose: To modify DNs that belong to a particular partition where switch partitioning is used.

This configuration instructs T-Server to select an External Routing Point that has the same partition as the requested destination DN.

Note: When a target DN is not configured or has no configured partition name, T-Server allocates a DN of the External Routing Point type that belongs to any partition.

Start of procedure

1. Under a `Switch` object, select the `DNs` folder.
2. Open the `Properties` dialog box of a particular DN.
3. Click the `Annex` tab.
4. Create a new section named `TServer`.
5. Within that section, create a new option named `epn`. Set the option value to the partition name to which the DN belongs.
6. Repeat Steps 1–5 for all DNs, including DNs of the `External Routing Point` type, that belong to the same switch partition.
7. When you are finished, click `Apply`.

End of procedure

Configuration Examples

This section provides two configuration examples and describes how the configuration settings affect T-Server's behavior.

Multiple Transaction Types

This example demonstrates the difference in how ISCC directs a call when you specify two different transaction types (`route` and `direct-ani`).

In this example, you configure an origination and a destination switch for as described in “Switches and Access Codes” on [page 109](#).

1. Among configured Switches, select the origination Switch.
2. Open the Switch Properties dialog box and click the Default Access Codes tab.
3. Click Add to open the Access Code Properties dialog box.
4. Set the Access Code field to 9.
5. When you are finished, click Apply.
6. Among configured Switches, select the destination Switch.
7. Under the destination Switch, configure a DN as described in “Configuring access resources for the route transaction type” on [page 115](#).
8. Set the DN Number field to 5001234567.
9. Click the Advanced tab of this DN’s Properties dialog box.
10. Select the Use Override check box and enter 1234567 in the Use Override field.
11. When you are finished, click Apply or Save.
12. Use a T-Server client application to register for this new DN with the destination T-Server and, therefore, with the switch.
13. Request to route a call from any DN at the origination switch to the destination DN you have just configured:
 - If you are using the route ISCC transaction type, the client requests that T-Server deliver a call to a destination location using the DN number 5001234567. ISCC requests that the switch dial one of the external routing points at the destination location, using the value either of the Access Number field or of the Access Code field, which is 9, concatenated with the external routing point at the destination location. The call is routed to the DN number 5001234567.
 - If you are using the direct-ani ISCC transaction type, the client requests that T-Server deliver a call to a destination location using the DN number 1234567, which is the Use Override value. ISCC requests that the switch dial 91234567, which is a combination of the Switch Access Code value and the Use Override value. The destination T-Server is waiting for the call to directly arrive at DN number 5001234567.

Call Overflow Methods

This section demonstrates how to indicate which overflow methods a switch supports.

In this example, for T-Server to use ANI/OtherDN matching in call overflow and manual transfer scenarios, set the ISCC Call Overflow Parameters to:

```
match-ani, inbound-only=true
```


when configuring Switch Access Codes as described on [page 111](#).

With this setting, the switch's location is queried for call data each time the destination T-Server receives an inbound call with the ANI or OtherDN attribute.

For T-Server to use NetworkCallID matching in call overflow and manual transfer scenarios, set the ISCC Call Overflow Parameters to (for example):

```
match-callid, inbound-only=false
```

when configuring Switch Access Codes as described on [page 111](#).

With this setting, the switch's location is queried for call data each time the destination T-Server receives a call of any type (including inbound) with the NetworkCallID attribute.

Next Steps

Continue with Chapter 5, “Start and Stop T-Server Components,” on [page 123](#) to test your configuration and installation.



Chapter

5

Start and Stop T-Server Components

This chapter describes methods for stopping and starting T-Server, focusing on manual startup for T-Server and HA Proxy for all switches. It includes these sections:

- [Command-Line Parameters, page 123](#)
- [Starting and Stopping with the Management Layer, page 125](#)
- [Starting with Startup Files, page 126](#)
- [Starting Manually, page 127](#)
- [Verifying Successful Startup, page 133](#)
- [Stopping Manually, page 133](#)
- [Starting and Stopping with Windows Services Manager, page 134](#)
- [Next Steps, page 134](#)

Command-Line Parameters

You can start and stop Framework components using the Management Layer, a startup file, a manual procedure, or the Windows Services Manager.

With all these methods, command-line parameters are usually required for a server application in addition to an executable file name.

Common command-line parameters are as follows:

-host	The name of the host on which Configuration Server is running.
-port	The communication port that client applications must use to connect to Configuration Server.
-app	The exact name of an Application object as configured in the Configuration Database.

-l	<p>The license address. Use for the server applications that check out technical licenses. Can be either of the following:</p> <ul style="list-style-type: none"> • The full path to, and the exact name of, the license file used by an application. For example, -l /opt/mlink/license/license.dat. • The host name and port of the license server, as specified in the SERVER line of the license file, in the port@host format. For example, -l 7260@ctiserver. <p>Note: Specifying the License Manager's host and port parameter eliminates the need to store a copy of a license file on all computers running licensed applications.</p>
-V	<p>The version of a Framework component. Note that specifying this parameter does not start an application, but returns its version number instead. You can use either uppercase or lowercase.</p>
-nco X/Y	<p>The Nonstop Operation feature is activated; X exceptions occurring within Y seconds do not cause an application to exit. If the specified number of exceptions is exceeded within the specified number of seconds, the application exits or, if so configured, the Management Layer restarts the application. If the -nco parameter is not specified, the default value of 6 exceptions handled in 10 seconds applies. To disable the Nonstop Operation feature, specify -nco 0 when starting the application.</p>
-lmspath	<p>The full path to log messages files (the common file named common.lms and the application-specific file with the extension *.lms) that an application uses to generate log events. This parameter is used when the common and application-specific log message files are located in a directory other than the application's working directory, such as when the application's working directory differs from the directory to which the application is originally installed.</p> <p>Note that if the full path to the executable file is specified in the startup command-line (for instance, c:\gcti\multiserver.exe), the path specified for the executable file is used for locating the *.lms files, and the value of the lmspath parameter is ignored.</p>
- transport-port <port number>	<p><port number> is the port number that a client will use for its TCP/IP connection to Configuration Server. See the Client-Side Port Definition section in the <i>Genesys 8.0 Security Deployment Guide</i> for more information.</p>
- transport-address <IP address>	<p><IP address> is the IP address that a client will use for its TCP/IP connection to Configuration Server. See the Client-Side Port Definition section in the <i>Genesys 8.0 Security Deployment Guide</i> for more information.</p>

Note: In the command-line examples in this document, angle brackets indicate variables that must be replaced with appropriate values.

Starting and Stopping with the Management Layer

Procedure: Configuring T-Server to start with the Management Layer

Start of procedure

1. Open the T-Server Application's Properties dialog box.
2. Click the Start Info tab.
3. Specify the directory where the application is installed and/or is to run as the Working Directory.
4. Specify the name of the executable file as the command-line.
5. Specify command-line parameters as the Command-Line Arguments.
The command-line parameters common to Framework server components are described on [page 123](#).
6. When you are finished, click Apply.
7. Click OK to save your changes and exit the Properties dialog box.

End of procedure

Note: Before starting an application with the Management Layer, make sure the startup parameters of the application are correctly specified in the application's Properties dialog box in Configuration Manager.

After its command-line parameters are correctly specified in the Properties dialog box, you can start and stop T-Server from Solution Control Interface (SCI), which is the graphical interface component of the Management Layer. (The starting procedure for SCI is described in the *Framework 8.0 Deployment Guide*.) *Framework 8.0 Solution Control Interface Help* provides complete instructions on starting and stopping applications.

You can also use the Management Layer to start a T-Server that has failed. To enable T-Server's autorestart functionality, select the corresponding check box in the Application's Properties dialog box.

Note that when you start (or restart) an application via the Management Layer, the application inherits environment variables from Local Control Agent (LCA), which executes the startup command. Therefore, you must also set the environment variables required by the application for the account that runs LCA.

Warning! *Stopping* an application via the Management Layer is not considered an application failure. Therefore, the Management Layer does not restart applications that it has stopped unless an appropriate alarm condition and alarm reaction are configured for these applications.

Starting with Startup Files

Startup files are files with the extension `run.sh` (on UNIX) or `startServer.bat` (on Windows), which installation scripts create and place into the applications' directories during the installations. These files are created for all Framework server applications except:

- Configuration Server (primary or backup) running on Windows.
- Backup Configuration Server running on UNIX.
- DB Server running on Windows.
- LCA running on either Windows or UNIX.

When using a startup file, verify that the startup parameters the installation script inserted in the startup file are correct. Use the following instructions for UNIX and Windows to start those application for which startup files are created. See the appropriate sections in “Starting Manually” on [page 127](#) to identify which applications should be running for a particular application to start.

Procedure: Starting T-Server on UNIX with a startup file

Start of procedure

1. Go to the directory where an application is installed.
2. Type the following command line:

```
sh run.sh
```

End of procedure

Procedure: Starting T-Server on Windows with a startup file

Start of procedure

To start T-Server on Windows with a startup file, use either of these methods:

- Go to the directory where an application is installed and double-click the `startServer.bat` icon.

Or

- From the MS-DOS window, go to the directory where the application is installed and type the following command-line:
`startServer.bat`

End of procedure

Starting Manually

When starting an application manually, you must specify the startup parameters at the command prompt, whether you are starting on UNIX or Windows. At the command prompt, command-line parameters must follow the name of the executable file. On the **Shortcut** tab of the **Program Properties** dialog box, command-line parameters must also follow the name of the executable file.

The command-line parameters common to Framework server components are described on [page 123](#).

If an **Application** object name, as configured in the Configuration Database, contains spaces (for example, **T-Server Nortel**), the **Application** name must be surrounded by quotation marks in the command-line:

`-app "T-Server Nortel"`

You must specify the rest of the command-line parameters as for any other application.

The following sections provide general instructions for starting HA Proxy and T-Server manually. Along with these instructions, refer to [Table 9](#), which lists T-Servers and HA Proxy executable file names for supported switches for Windows and UNIX operating systems.

Table 9: T-Server and HA Proxy Executable Names

Switch Type	T-Server Executable File Name		HA Proxy Executable File Name	
	UNIX	Windows	UNIX	Windows
Alcatel A4200/OXO	a4200_server	a4200_server.exe	Not Applicable	
Alcatel A4400/OXE	a4400_server	a4400_server.exe	Not Applicable	
Aspect ACD	aspect_server	aspect_server.exe	Not Applicable	
Avaya Communication Manager	avayacm_server	avayacm_server.exe	Not Applicable ^a	
Avaya INDeX	Not Applicable	index_server.exe	Not Applicable	
Avaya TSAPI	avayatsapi_server	avayatsapi_server.exe	Not Applicable	
Cisco Unified Communications Manager	ciscocm_server	ciscocm_server.exe	Not Applicable	
Cisco UCCE	CiscoUCCE_server	CiscoUCCE_server.exe	Not Applicable	
DataVoice Dharma	Dharma_server	Dharma_server.exe	Not Applicable	
Digitro AXS/20	digitro_server	digitro_server.exe	Not Applicable	
EADS Intecom M6880	intecom_server	intecom_server.exe	Not Applicable	
EADS Telecom M6500	m6500_server	m6500_server.exe	Not Applicable	
eOn eQueue	eon_server	eon_server.exe	Not Applicable	
Ericsson MD110	md110_server	md110_server.exe	Not Applicable	
Fujitsu F9600	Not Applicable	F9600_server.exe	Not Applicable	
Huawei C&C08	cc08_server	cc08_server.exe	Not Applicable	
Huawei NGN	huaweingn_server	huaweingn_server.exe	Not Applicable	
Mitel SX-2000/ MN 3300	SX2000_server	SX2000_server.exe	Not Applicable	
NEC NEAX/APEX	neax_server	neax_server.exe	Not Applicable	
Nortel Communication Server 2000/2100	ncs2000_server	ncs2000_server.exe	ha_proxy_dms	ha_proxy_dms.exe

Table 9: T-Server and HA Proxy Executable Names (Continued)

Switch Type	T-Server Executable File Name		HA Proxy Executable File Name	
	UNIX	Windows	UNIX	Windows
Nortel Communication Server 1000 with SCSS/MLS	succession_server	succession_server.exe	Not Applicable	
Philips Sopho iS3000	iS3000_server	iS3000_server.exe	ha_proxy_iS3000	ha_proxy_iS3000.exe
Radvision iContact	nts_server	nts_server.exe	Not Applicable	
Rockwell Spectrum	spectrum_server	spectrum_server.exe	Not Applicable	
Samsung IP-PCX IAP	samsung_server	samsung_server.exe	Not Applicable	
Siemens Hicom 300/HiPath 400 CSTA I	rolmcb4_server	rolmcb4_server.exe	Not Applicable	
Siemens HiPath 3000	HiPath3000_server	HiPath3000_server.exe	Not Applicable	
Siemens HiPath 4000 CSTA III	HiPath4000_server	HiPath4000_server.exe	Not Applicable	
Siemens HiPath DX iCCL	HiPathDX_server	HiPathDX_server.exe	Not Applicable	
SIP Server	sip_server	sip_server.exe	Not Applicable	
Tadiran Coral	Coral_server	Coral_server.exe	Not Applicable	
Teltronics 20-20	Teltronics2020_server	Teltronics2020_server.exe	ha_proxy_teltronics2020	ha_proxy_teltronics2020.exe
Tenovis Integral 33/55	Tenovis_server	Tenovis_server.exe	Not Applicable	
Network T-Servers				
AT&T	nts_server	nts_server.exe	Not Applicable	
Concert	nts_server	nts_server.exe	Not Applicable	
CRSP	nts_server	nts_server.exe	Not Applicable	
DTAG	dtag_server	dtag_server.exe	Not Applicable	
GenSpec	genspec_server	genspec_server.exe	Not Applicable	

Table 9: T-Server and HA Proxy Executable Names (Continued)

Switch Type	T-Server Executable File Name		HA Proxy Executable File Name	
	UNIX	Windows	UNIX	Windows
ISCP	nts_server	nts_server.exe	Not Applicable	
IVR Server, using network configuration	nts_server	nts_server.exe	Not Applicable	
KPN	kpn_server	kpn_server.exe	Not Applicable	
MCI	mci800_server	mci800_server.exe	Not Applicable	
NGSN	nts_server	nts_server.exe	Not Applicable	
Network SIP Server	tsip_server	tsip_server.exe	Not Applicable	
Sprint	sprint_server	sprint_server.exe	Not Applicable	
SR3511	sr3511_server	sr3511_server.exe	Not Applicable	
Stentor	stentor_server	stentor_server.exe	Not Applicable	

- a. For releases prior to 7.1, this T-Server has an HA Proxy available: `ha_proxy_g3tcp` (UNIX) or `ha_proxy_g3tcp.exe` (Windows).

HA Proxy

If you do not use HA Proxy in your Genesys implementation, proceed to “T-Server” on [page 131](#).

If one or more HA Proxy components are required for the T-Server connection, start HA Proxy before starting T-Server.

Before starting HA Proxy, be sure that the following components are running:

- DB Server that provides access to the Configuration Database
- Configuration Server

The command-line parameters common to Framework server components are described on [page 123](#).

Procedure: Starting HA Proxy on UNIX manually

Start of procedure

1. Go to the directory where HA Proxy is installed and type the following command-line:
`ha_proxy_<switch> -host <Configuration Server host>
 -port <Configuration Server port> -app <HA Proxy Application>`
2. Replace `ha_proxy_<switch>` with the correct HA Proxy executable name, which depends on the type of the switch used.
 Table 9 on [page 128](#) lists HA Proxy executable names for supported switches.

End of procedure

Procedure: Starting HA Proxy on Windows manually

Start of procedure

1. Start HA Proxy from either the Start menu or the MS-DOS window. If using the MS-DOS window, go to the directory where HA Proxy is installed and type the following command-line:
`ha_proxy_<switch>.exe -host <Configuration Server host> -port
 <Configuration Server port> -app <HA Proxy Application>`
2. Replace `ha_proxy_<switch>.exe` with the correct HA Proxy executable name, which depends on the type of the switch used.
 Table 9 on [page 128](#) lists HA Proxy executable names for supported switches.

End of procedure

T-Server

Before starting T-Server, be sure that the following components are running:

- DB Server that provides access to the Configuration Database
- Configuration Server
- License Manager

Note: If an HA Proxy component is required for the T-Server connection, HA Proxy must be started before T-Server.

The command-line parameters common to Framework server components are described on [page 123](#).

Procedure: Starting T-Server on UNIX manually

Start of procedure

1. Go to the directory where T-Server is installed and type the following command-line:

```
<switch>_server -host <Configuration Server host>  
-port <Configuration Server port> -app <T-Server Application>  
-l <license address> -nco [X]/[Y]
```

2. Replace <switch>_server with the correct T-Server executable name, which depends on the type of the switch used.

Table 9 on [page 128](#) lists T-Server executable names for supported switches.

End of procedure

Procedure: Starting T-Server on Windows manually

Start of procedure

1. Start T-Server from either the Start menu or the MS-DOS window. If using the MS-DOS window, go to the directory where T-Server is installed and type the following command-line:

```
<switch>_server.exe -host <Configuration Server host>  
-port <Configuration Server port> -app <T-Server Application>  
-l <license address> -nco [X]/[Y]
```

2. Replace <switch>_server.exe with the correct T-Server executable name, which depends on the type of the switch used.

Table 9 on [page 128](#) lists T-Server executable names for supported switches.

End of procedure

Verifying Successful Startup

After executing the startup command, you might want to check whether it was successful.

If you used the Management Layer to start either T-Server or HA Proxy, check whether Solution Control Interface displays `Started` or `Service Unavailable` status for the corresponding application. Refer to the “Troubleshooting” section of the *Framework 8.0 Management Layer User’s Guide* if the startup command does not result in either `Started` or `Service Unavailable` status for some period of time.

If you start your T-Server or HA Proxy with startup files or manually, and if you have configured logging to console or a log file, check the log for messages similar to the following:

- T-Server log file: `Link connected`
- HA Proxy log file: `Link connected`

Stopping Manually

The following stopping procedures apply to Genesys server applications, such as DB Server, Configuration Server, Message Server, Local Control Agent, Solution Control Server, HA Proxy, T-Server, and Stat Server.

Procedure: Stopping T-Server on UNIX manually

Start of procedure

To stop a server application from its console window on UNIX, use either of these commands:

- `Ctrl+C`
- `kill <process number>`

End of procedure

Procedure: Stopping T-Server on Windows manually

Start of procedure

To stop a server application on Windows, use either of these commands:

- To stop a server application from its console window on Windows, use the `Ctrl+C` command.
- To stop a server application on Windows, use the End Task button on the Windows Task Manager.

End of procedure

Starting and Stopping with Windows Services Manager

When starting an application installed as a Windows Service, make sure the startup parameters of the application are correctly specified in the ImagePath in the Application folder in the Registry Editor. The ImagePath must have the following value data:

```
<full path>\<executable file name> -service <Application Name as  
Service> -host <Configuration Server host>  
-port <Configuration Server port> -app <Application Name>  
-l <license address>
```

where the command-line parameters common to Framework server components are described on [page 123](#) and

`-service` The name of the Application running as a Windows Service; typically, it matches the Application name specified in the `-app` command-line parameter.

Framework components installed as Windows Services with the autostart capability are automatically started each time a computer on which they are installed is rebooted.

You can start Framework components installed as Windows Services with the manual start capability with the Start button in Services Manager .

Note: Use the Windows Services window to change the startup mode from Automatic to Manual and vice versa.

Regardless of a component's start capability, you can stop Framework components installed as Windows Services with the Stop button in Services Manager.

Next Steps

This chapter concludes Part One of this document—the set of general instructions for deploying any T-Server. Refer to subsequent chapters in this guide for detailed reference information and any special procedural instructions that pertain to your particular T-Server.



Part

2

Reference Information

Part Two of this *T-Server Deployment Guide* contains reference information specific to your T-Server. However, it also contains information on *all* T-Server options, both those specific to your T-Server and those common to all T-Servers. The information is divided among these chapters:

- Chapter 6, “HiPath DX Switch-Specific Configuration,” on [page 137](#), describes compatibility and configuration information specific to this T-Server, including how to set the DN properties and recommendations for the switch configuration.
- Chapter 7, “Supported Functionality in T-Server for HiPath DX,” on [page 151](#), describes which features this T-Server supports, including T-Library functionality, use of the `Extension` attribute, and error messages.
- Chapter 8, “Common Configuration Options,” on [page 197](#), describes log configuration options common to all Genesys server applications.
- Chapter 9, “T-Server Common Configuration Options,” on [page 219](#), describes configuration options that are common to all T-Server types, including options for multi-site configuration.
- Chapter 10, “Configuration Options in T-Server for HiPath DX,” on [page 247](#), describes configuration options specific to this T-Server, including the link-related options—those which address the interface between T-Server and the switch.

New in T-Server for Siemens HiPath DX

The following new features are now available in the initial 8.0 release of T-Server for HiPath DX:

- **Enhancements to business call processing:** T-Server now supports a new configuration option [agent-only-private-calls](#) to enable you to specify whether calls distributed from a device are considered as private or business calls. See “Business-Call Handling” on [page 152](#).
- **Enhancements to emulated agent functionality:** T-Server introduces a number of enhancement for the Emulated Agent feature, including:
 - Agent logout on client unregistering from a DN.
 - Changes to legal guard processing.
 - The addition of password functionality to [agent-strict-id](#).
 - Synchronization of emulated after call work (ACW) for emulated agents.

See “Emulated Agents” on [page 154](#).

- **Support for call type prediction:** T-Server now uses a call type prediction procedure to assign a call type on a “best possible guess” basis on occasions when the CTI information is either insufficient or arrives too late for T-Server to assign a definite call type. See “Call Type Prediction” on [page 169](#).
- **Support for call release tracking:** T-Server now provides information about which party initiated the release of a call. This can be valuable for different applications to provide historical and real-time call reporting. This can be configured using the new configuration option [releasing-party-report](#). See “Call Release Tracking” on [page 170](#).
- **Support for failed route notification:** T-Server now supports alarm messages for unsuccessful routing scenarios. See “Failed Route Notification” on [page 171](#).
- **Support for link bandwidth monitoring:** T-Server now provides bandwidth monitoring on a CTI link and can notify the Genesys Management Layer when Configuration Layer limits are exceeded. See “Link Bandwidth Monitoring” on [page 171](#).
- **Support for enhanced request handling:** T-Server introduces two major new enhancements to queue handling: request conflict resolution and a new device queue. See “Request Handling Enhancements” on [page 173](#).
- **Improvements to T-Server logging performance** have been implemented.

Note: Configuration option changes that apply to your T-Server are described in “Changes from 7.2 to 8.0” on [page 281](#).



Chapter

6

HiPath DX Switch-Specific Configuration

This chapter presents switch-specific reference information for configuring T-Server for the Siemens HiPath DX switch and includes these sections:

- [Known Limitations, page 137](#)
- [Support of Switch/CTI Environments, page 139](#)
- [Setting the DN Properties, page 140](#)
- [Switch Terminology, page 143](#)
- [Support for Emulated and Supervised Routing, page 144](#)
- [Support for Hot Desking, page 146](#)
- [Support for Trunk Monitoring, page 147](#)
- [Support for Account Codes, page 147](#)

Known Limitations

The list below describes the more static limitations in the way T-Server and the relevant switch interact. Please refer to the Release Note for this product for the most up-to-date list of known limitations and detailed scenarios in which they apply.

1. CallBridge 7.1 does not support the following common features: Call Forward, and Message Waiting. Do Not Disturb On and Do Not Disturb off cannot be set by Computer Telephony Integration (CTI); they can only be set by the telephone handset.
2. An ACD Queue can be configured in Configuration Manager either as a ACD Queue or as a Routing Point. If it is configured as a ACD Queue, the switch will use internal calls distribution mechanism; if it is configured as a Route Point and the option [use-native-routing](#) is enabled, then T-Server will register itself as a routing server for that queue, and will receive route requests from the switch.

3. The switch reporting sometimes does not allow distinguishing call diversion from normal clearing. The option `clear-call-delay` allows T-Server to postpone processing of `CallCleared` events and wait for any further events from the same originating device within the specified time (in milliseconds) so as to make sense of the whole scenario. This enables T-Server to keep track of the call data in such faulty scenarios. However, this mechanism does not work if the option `acw-retain-call` is enabled and there is an agent involved in the call who was granted wrap-up time. T-Server might lose track of the call in this case as if the option `clear-call-delay` was disabled.
4. If a callback is answered with a desktop application, or by any means other than the handset, it will not be reported correctly. To get a correct report on the following callback scenario example, the callback initiator must answer the call manually:
 - a. The agent (DN 4502) makes an internal call to DN 4504, which is in a busy state. In order to receive a call back, the Agent (DN 4502) must use the handset to initiate the call so that T-Server can issue the `TMakeCall`.
 - b. The agent initiates a request for a call back, and releases.
 - c. T-Server releases DN 4504.
 - d. The agent (DN 4502) receives the call back, and answers manually with the handset.
 - e. The agent (DN 4504) answers the call back through computer-telephony integration (CTI), for example, softphone or desktop application.

Note: If the agent who initiated the call back (DN 4502) answers the call back through CTI, and DN 4504 attempts to answer the call through CTI, T-Server will generate the following `EventError` message: `(166)='Autodialler resource error'`.

5. Reporting of Call Forward in the No-Answer feature can only be activated manually on the phone set on the HiPath DX PBX because T-Server is unable to report `callstate=Forwarded` on `EventReleased` and `EventRinging`. However, T-Server does report `callstate=Redirected` or `callstate=OK`.
6. Whenever a call (internal, inbound, outbound, or consultation) is routed to a queue, or whenever a call is routed to an external number, no `EventRouteUsed` is distributed. After the `TRouteCall`, the call is released between the calling DN and the Routing Point and also abandoned on the Routing Point. This means that a new call is generated against the queue/external number and no `RouteUsed` is distributed. It also means that any attached data is lost.
7. When making an outbound call to a busy extension in a loop-back configuration, T-Server does not distribute an `EventNetworkReached`.

8. Call tracking can be lost when a call without ANI is routed. The Connection IDs can change when routing occurs before the switch optimization of the call circuits takes place.
9. In some routing scenarios involving multiple failed URS attempts to route a call, switch reporting is unreliable and can compromise T-Server reporting.
10. Call Overflow (COF) with a single-step transfer is not supported on the HiPath DX PBX, because T-Server only supports emulated single-step transfers, not native single-step transfers.
11. If a native agent is logged in and in the NotReady state, it is not possible to send a call to that agent. This also includes the following scenarios:
 - Routing from a native or emulated routing point.
 - Transfers (single-step transfer, two-step transfer, blind transfer, and mute transfer).
 - Redirecting calls.
12. Conference calls are limited to three parties.
13. T-Server does not support the valid value `direct-network-callid` for the Inter Server Call Control (ISCC) Transaction Configuration Option `cast-type`.
14. When a device makes an outbound call that is established, and then initiates a consultation call using the ISCC Call Overflow Parameter `match-ani` and the ISCC/COF Configuration Option `cof-feature` set to `true`, the results will be incorrect as the ISCC matches the main outgoing call on the device rather than the consultation call.
15. T-Server cannot support linking calls via ISCC when a `TMakeCall` request with a location is made and a ISCC transaction type `direct-uui` is used. The PBX does not provide the means to specify the user-to-user information (UUI) data in the `TMakeCall` request.

Support of Switch/CTI Environments

T-Server support of customer switch/CTI environments is dependent on several factors, including:

- Number of DNs
- Number of concurrent agents
- Number of concurrent connections
- Number of concurrent calls
- Number of calls or messages per second

Information about T-Server connection limits is provided in the [Genesys Supported Operating Environment Reference Manual](#) document. Connection

limits are determined by the platforms on which T-Servers run—T-Server itself does not set these limits.

The remaining factors are not limited by T-Servers, but could be limited by the switch and/or CTI interface. Unless specific exceptions are documented, T-Server can meet the performance capability of the switches it supports in each of these areas. The T-Server host environment and the network environment influences should also be taken into account.

Setting the DN Properties

Table 10 shows how DN properties should be set for the HiPath DX switch.

Note: There are several ways to configure special devices like trunks and RCGs in Configuration Manager so that T-Server can monitor them. You should only use one such valid representation for each device; you should not configure several Configuration Manager devices that would amount to the same device ID on the switch.

Table 10: Setting the DN Properties

Switch Device Type	DN Type	Switch-Specific Type	Association	Comments
Agent Group	ACD Queue	Not applicable	Not applicable	Agent groups can be dialed, but cannot be monitored or controlled via CTI. Do not enable registering on these numbers when configured.
Agent Position	ACD Position	Not applicable	Agent Group	Must be a digital phone set.
Analogue Extension	Extension	Not applicable	Not applicable	

Table 10: Setting the DN Properties (Continued)

Switch Device Type	DN Type	Switch-Specific Type	Association	Comments
Analog Port	Extension	8	Not applicable	Provides special support for caller hang-up scenarios for analog IVR devices as well as analog dialing devices that CPD Server uses. Note: Always configure switch VTO ports as Voice Treatment Ports in the Configuration Layer. Note: When Configuration Layer devices of type Extension have switch-specific type 8, T-Server reports EventReleased upon release of the remote party.
VTO Port	Voice Treatment Port	Not applicable	Not applicable	
Digital Extension	Extension	Not applicable	Not applicable	
		2	Hunt-group number	Emulated supervised routing resource. Calls delivered to these devices are reported as delivered to the associated hunt-group. The routing is performed using two-step transfer to the destination number.
		4	Not applicable	Emulated predictive dialer resource. Emulated MakePredictiveCall service makes a call from one of these devices and transfers it to the requesting queue for further distribution as soon as the call is established.

Table 10: Setting the DN Properties (Continued)

Switch Device Type	DN Type	Switch-Specific Type	Association	Comments
Hunt Group used for emulated routing	Routing Point	1	Not applicable	Specifies a Hunt Group with virtual members that T-Server uses to emulate a Routing Point. Calls delivered to Hunt Group members are reported as delivered to the Hunt Group and can be routed using this single number.
	Routing Queue	1	Not applicable	
Queue	ACD Queue	Not applicable	Not applicable	When configured as an ACD Queue, the distribution mechanism of the switch is used. When configured as a Routing Point, the switch distribution mechanism is not active.
	Routing Point	Not applicable	Not applicable	
	Routing Queue	Not applicable	Not applicable	
Trunk	Extension Trunk	Not applicable	Not applicable	External trunk or trunk connecting to internal resource, like IVR. Calls coming or outgoing through such a monitored trunk are reported as internal. Only trunks connected to internal resources such as IVR units can be configured. Do not configure public or private trunks between PBXs.

Table 10: Setting the DN Properties (Continued)

Switch Device Type	DN Type	Switch-Specific Type	Association	Comments
Virtual DN	External routing point	Not applicable	Not applicable	A virtual number that can accommodate one physical call and be used for routing. Preferable choice for external Routing Points.
	Routing Point	Not applicable	Not applicable	
	Routing Queue	Not applicable	Not applicable	
Virtual Extension	Extension	2	Hunt Group number	Emulated supervised routing resource. Calls delivered to these devices are reported as delivered to the associated hunt-group. The routing is performed using two-step transfer to the destination number.

Switch Terminology

[Table 11](#) compares relevant Siemens HiPath DX switch terminology with Genesys terminology.

Table 11: Switch Terminology Comparison

Genesys Term	HiPath DX Term
ACD	ACD
ACD Position	Agent position
ACD Queue	Agent Group ACD Pilot
Agent ID used in CTI login request	Agent ID
Extension	Extension Analog port VTO port Trunk Digital extension (predictive dialer)
Position	Position

Table 11: Switch Terminology Comparison (Continued)

Genesys Term	HiPath DX Term
Voice Treatment Port	Analog port VTO Port
Trunk (unmonitored)	Trunk
Trunk (monitored)	Trunk
Routing Point	ACD Pilot
Group DN	Not applicable
Predictive dialing device	Digital extension
Emulated Routing Point	Hunt Group (emulated routing) (CTI routing)
Emulated Routing Point member	Digital extension Virtual extension
Logon	Logon
Logoff	Logoff
Ready	Ready
NotReady	NotReady
AfterCallWork	After Call Work
ReasonCode	Reason Code

Support for Emulated and Supervised Routing

T-Server can emulate Routing Points using Hunt Groups (HGs) as resources on the switch. The number of member devices in the HG defines the number of calls that can be queued simultaneously on a Routing Point. Therefore, the number of devices assigned to such an HG must be greater than the maximum number of calls expected to be queuing on the Routing Point at any time.

When you use emulated routing, T-Server can determine whether calls are answered at the destination to which it was routed. If calls are not answered within the specified timeout, you can configure T-Server to recall the calls to the Routing Point and initiate rerouting. The supervision of the call travels with the call, so if a supervised call is routed to from one Routing Point to

another and is ultimately unanswered, T-Server cancels the supervision on the first Routing Point and recalls the call back to second Routing Point for rerouting. See configuration option [supervised-route-timeout](#) and the Extension attribute [SUPERVISED_ROUTE](#) for more details.

Note: If your PBX does not allow a ringing call to be released, when a call is routed using route type reject on an emulated Routing Point (using either supervised or nonsupervised routing) extension [SUPERVISED_ROUTE](#) must be sent with value 1 in order for T-Server to drop the call.

Calls that arrive at an HG can never queue—they are immediately delivered to one of the HG members. If no members are available, the call is reported as busy. When HGs are used as Routing Points in this way, T-Server emulates routing events on the HG and hides all events for the HG members, even though the call is actually alerting on the member.

When a call is successfully routed, T-Server distributes an `EventRouteUsed` to its clients for the HG (Routing Point), and the call is redirected from the HG member.

Notes: T-Server generates an error each time that a CTI application tries to register.

If a HG is defined as a Routing Point, all members of that HG must be configured in Configuration Manager to ensure that all calls are processed correctly.

Configuring Hunt Groups as Routing Points

[Table 12](#) illustrates an example of configuration using Hunt Groups as Routing Points.

Table 12: Example Configuration

Switch Device Type/Value	Configuration Layer Device Type/Value	Switch-Specific Type	Association Field Value
Hunt Group/2500	Routing Point/2500	1	Not applicable
Hunt Group member/4000	Extension/4000	2	2500 (Routing Point)
Hunt Group member/4001	Extension/4001	2	2500 (Routing Point)

Support for Hot Desking

T-Server supports the Hot Desking features of the CallBridgeDX 7.1 link. The following configuration constraints apply:

1. PNs (personal numbers) must be configured as Extension in the Configuration Layer.
2. Clients registering a PN must query the device state before attempting to use it.
To do that a `TQueryAddressStatus(AddressInfoAddressStatus)` is sent to T-Server, which replies with `EventAddressInfo`. A status value of `AddressStatusMaintenance` means that the PN is currently not associated with any DN and thus cannot be used. If the PN is associated, the event contains the extension `GCTI_AssociatedVN` carrying the associated device ID.
3. When an association is created on the switch, event `EventDNBackInService` is sent to every client monitoring the PN. The message contains the extension `GCTI_AssociatedVN`.
4. Similarly, when a PN association is destroyed, an event `EventDNOutOfService` is propagated.

Creating/Destroying Hot Desking Sessions Through T-Server

Method 1

An association can be created or destroyed by a T-Server client through a private service request. The API `TPrivateService` is the interface to such services. The service ID to create an association is `0xcb01`. The request must also contain the extension `GCTI_VN`, the DN that will be associated to the PN. The service ID to destroy an association is `0xcb02`.

Method 2

For backward compatibility with pre-6.5 applications, T-Server supports an alternative interface to the new Hot Desking capabilities of Siemens HiPath DX: the requests `TAgentLogin` and `TAgentLogout` can be used in place of the private services. The special extension `GCTI_LogMode` is used to specify what type of login T-Server is requested to perform:

- The value `agent` means that a normal agent login/logout is performed.
- The value `pn` means that T-Server tries to create/destroy an association between a PN and a DN.
- The value `both` means that both login types (`agent` and `pn`) are performed.

To specify the DN to be used for a Hot Desking session, a new syntax for the attribute AgentID is defined: <AgentID><separator><DN> (for example, with AgentID 1001, separator @@, and DN 5000, the attribute AgentID would be 1001@@5000). The default value for the separator is @@, but it can be modified using the T-Server configuration option [hd-vn-separator](#) (in the CTI-Link section).

Two additional configuration options control how T-Server interprets requests TAgentLogin and TAgentLogout for which no GCTI_LogMode extension is specified. The options are [hd-login-mode](#) and [hd-logout-mode](#). These can take the following values:

- agent (default)
- pn
- both

Support for Trunk Monitoring

T-Server supports trunk monitoring with the following constraints:

1. The type Trunk must be used in the Configuration Layer to set up the individual entries.
2. The switch and T-Server are case sensitive with regard to device IDs. So Trunk objects must be named in the Configuration Layer in the same way the switch reports them (for example, I0007A, E0012E, and so on).
3. Because Trunk IDs are alphanumerical, the Add Range feature of the Configuration Layer cannot be used: each object must be entered manually.
4. A trunk is treated by T-Server as a special type of extension, so calls between a monitored extension and a monitored trunk, or calls between two monitored trunks, are reported as internal calls (neither inbound nor outbound). Therefore trunks should be monitored only when connected to local resources like IVR ports. Trunks used for inbound and outbound calls should never be monitored.

Support for Account Codes

This section describes how T-Server supports switch Account Codes.

Description

T-Server uses the switch Account Code feature for two purposes:

- Any account codes that are entered during calls are used to allocate individual calls to particular accounts for billing purposes.

- Account codes that are entered when an agent is in NotReady state are interpreted as Walk-Away codes. A Walk-Away code is a more specific type of Not Ready code on the switch.

Call-Related Account Codes

T-Server reports account codes entered during a call using attached user data with predefined keys. To enable this feature, set the value of the TServer configuration option `acccode-data` to true.

If account codes are entered manually on the phone set (or by some means other than CTI request from T-Server), T-Server attaches the user data key `[ACCOUNT_CODE]_N` to the call, where `[ACCOUNT_CODE]` is defined by the option `acccode-name` and `N` is an index indicating subsequent account codes. This user data appears in all subsequent call-related events on all devices involved in the call.

Note: The generic name for the keys used in `ACCOUNT_CODE` reporting are defined by the configuration option `acccode-name` (the default value is `AccountCode`). Any further reference to the `ACCOUNT_CODE` key implies that either the full key or part of the `ACCOUNT_CODE` key is replaced by the value set by the configuration option `acccode-name`. See `acccode-name` for more details.

T-Server also supports the attaching of account codes by CTI requests `AttachUserData` or `UpdateUserData`. The client application is responsible for setting the correct key `ACCOUNT_CODE_N`. T-Server does not check the key used to set the account code, so if the client attaches `ACCOUNT_CODE_1` more than once, T-Server does not reject it.

Using configuration option `acw-retain-call`, you can configure T-Server to retain the Connection ID of the previous call in cases where automatic After Call Work (ACW) is applied. In this case T-Server will be able to report account-code user data for the previous call during the ACW phase.

Warning! Do not set options `acw-retain-call` and `acccode-data` to true when desktop applications are used that have been developed using the Genesys ActiveX or Java Desktop Toolkits because these are not compatible with this feature. In addition, Genesys Statistics Server cannot report correctly when these T-Server options are set to true.

To enable Genesys Call Concentrator to capture such account codes and correctly associate them with the previous call, ensure that the Call Concentrator option `DeleteTime` is set to a higher value than:

- The automatic ACW time on the PBX.
- T-Server configuration option `wrap-up-time` in the case of emulated agents.

Walk-Away Codes

Account codes entered while an agent is idle and in the NotReady state can be reported by T-Server as Walk-Away codes using `EventAgentNotReady` with the predefined key `ReasonCode` in the `Attribute Extensions` field. To enable this feature, the value of T-Server option `accode-agent` must be set to `true`.

Table 13 describes T-Server behavior in various end-of-call scenarios involving account codes.

Table 13: End-of-Call Scenarios

Agent Status	Agent Action	T-Server Behavior
Idle and Ready	Account code entered manually on phone set	Ignores event from switch
	Sends <code>TAgentNotReady</code> with key <code>ReasonCode</code>	Sets agent Not Ready and sets account code on switch Acknowledges request with <code>EventAgentNotReady</code> with corresponding <code>Attribute Extension</code>
Idle and Not Ready	Account code entered manually on phone set	Resends <code>EventAgentNotReady</code> with <code>Attribute Extension</code> key <code>ReasonCode</code>
	Sends <code>TAgentNotReady</code> with <code>Attribute Extension</code> key <code>ReasonCode</code>	Sets account code on switch and reports <code>EventAgentNotReady</code> with corresponding <code>Attribute Extension</code> key. T-Server does not change the agent state on the switch in this case.

Key Name Indexing

Where multiple account codes are required, it is possible to turn on key name indexing. When indexing is enabled, T-Server attaches each subsequent account code and increments the index part of the key. The index is an incremental integer attached to the configured key name after an underscore, starting with 1 (for instance, `AccountCode_1`, `AccountCode_2`, and so on). T-Server only attaches unique codes that are not yet attached. T-Server keeps non-indexed key (for example, `AccountCode`) updated with the last received value irrespective of whether indexing is enabled or not.

In case multiple calls exist on the device, T-Server attaches the code to the last active call. For this reason, T-Server has to keep a historically ordered stack of

active calls on the device so that last active call can be easily and reliably identified.

See configuration option [accode-index](#).

Account Code Private Services

In addition to call-related account codes and Walk-Away codes, T-Server is able to report the Account Code feature using T-Server private services. To enable this feature, set the value of T-Server option [accode-privateservice](#) to `true`.

In this case there is no distinction between call-related and Walk-Away account codes, and any account code that is entered is reported immediately. For more information about this feature see “Private Services and Events” on [page 188](#).

Call Locking

T-Server uses the Call Locking feature as described in the documentation for the Genesys Call Concentrator product. It locks the call before the `EventReleased` if the call is to be retained, and unlocks it as soon as the released call is deleted—for instance, at the end of ACW or when the new call is initiated or received.

T-Server sends `EventUserEvent` immediately upon receipt of an Account Code from the PBX. It is possible to set the Account Code by CTI during this phase as described above using `TUpdateUserData` or `TPrivateService`.

See configuration option [acw-retain-lock](#).

Configuration Options

The following configuration options relate to T-Server support of the Account Code feature:

- [accode-agent](#)
- [accode-data](#)
- [accode-index](#)
- [accode-name](#)
- [accode-privateservice](#)
- [acw-retain-call](#)
- [acw-retain-lock](#)



Chapter

7

Supported Functionality in T-Server for HiPath DX

This chapter describes the telephony functionality supported by the T-Server for Siemens HiPath DX and includes these sections:

- [Business-Call Handling, page 152](#)
- [Emulated Agents, page 154](#)
- [Emulated Predictive Dialing, page 159](#)
- [No-Answer Supervision, page 161](#)
- [Smart OtherDN Handling, page 163](#)
- [Keep-Alive Feature Handling, page 164](#)
- [Call Type Prediction, page 169](#)
- [Call Release Tracking, page 170](#)
- [Failed Route Notification, page 171](#)
- [Link Bandwidth Monitoring, page 171](#)
- [Request Handling Enhancements, page 173](#)
- [T-Library Functionality, page 174](#)
- [Using the Extensions Attribute, page 183](#)
- [Private Services and Events, page 188](#)
- [User Data Keys, page 189](#)
- [Error Messages, page 190](#)
- [Hot-Standby HA Synchronization, page 193](#)
- [Support for Boss/Secretary Functionality, page 194](#)
- [Partitioned-Switch Configuration, page 195](#)
- [T-Server and PBX Licensing, page 195](#)

Business-Call Handling

This section describes how T-Server handles different types of calls.

T-Server Call Classification

T-Server automatically assigns every call to one of four categories:

- business
- work-related
- private
- unknown

Based on this assignment, T-Server applies the appropriate business-call handling after the call is released.

Business Call Type Configuration

T-Server uses the following options to determine the business call type of a call. The options are given in order of precedence, highest to lowest:

- T-Server supports a request extension to define the business call type upon call initiation or answer.
- T-Server uses the originator agent state to determine if the call is work related.
- T-Server supports the distribution device configuration option to define the business call type for calls that pass through the device. By default, T-Server considers all calls that pass a distribution device as business calls. Distribution devices include the following device types:
 - Routing Point
 - ACD Queue
 - Routing Queue
- T-Server supports options that are configured on the Application level to define whether specific call types (inbound, outbound, internal or unknown) are to be classified as business calls.

The extension `BusinessCallType` can be attached to `TMakeCall`, `TInitiateTransfer`, `TMuteTransfer`, `TInitiateConference` and `TMakePredictiveCall` to specify the business call type for the new call. This extension will take precedence over all other Configuration Manager business call type configuration options. The extension can also be attached to `TAnswerCall` to specify the business call type for the answering party and call.

The DN-level option `callback-dn` specifies the business call type for calls that pass through or arrive at a distribution device (Routing Point, Route Queue or ACD Queue). If the call passes through a distribution device and there is no Annex tab option present, the call will be classified as a business call. If the call

passes through more than one distribution device, then the usual rules for assigning a business call type are followed. Once set, the business call type cannot be overridden unless it is changed to be a business call.

When the configuration options `inbound-bsns-calls`, `internal-bsns-calls` and `outbound-bsns-calls` are set at the Application level, they control whether the call type of the associated calls are to be classified as business calls. T-Server will not classify the business type of the call using these options until the destination is known. Also these options are not be used to set the originating party's business type as business until after the `Dialing` event has been reported. (This is to ensure that Genesys reporting is consistent regardless of the switch reported order of events).

The private request, `TSetBusinessCall` allows T-Server clients to set the business call type of an existing call to be "business". T-Server responds to a successful request by distributing the private event `EventBusinessCallSet`.

Business Calls

T-Server automatically categorizes as a *business call* any call distributed to an agent either from a Queue or from a Routing Point. Use the following configuration options to define what additional calls to or from an agent are classified as business calls:

- `inbound-bsns-calls`
- `outbound-bsns-calls`
- `inherit-bsns-type`
- `internal-bsns-calls`
- `unknown-bsns-calls`
- `agent-only-private-calls`
- `callback-dn`

Work-Related Calls

T-Server categorizes as a *work-related* call any non-business call that an agent makes while in ACW. T-Server does not apply any automatic business-call handling after a work-related call.

Because emulated agents can make or receive a direct work-related call while in wrap-up time, T-Server pauses the emulated wrap-up timer for the duration of such a call.

If an agent receives a direct work-related call during legal-guard time, T-Server cancels the legal-guard timer and reapplies it at the end of the work-related call.

Private Calls

T-Server categorizes as a *private call* any call that does not fall into the business or work-related categories. T-Server does not apply any automatic business-call handling after a private call. If emulated agents receive a direct private call while in wrap-up or legal-guard time, the emulated wrap-up or legal-guard timer is not interrupted.

Unknown Calls

Any call that does not fall into any of the above categories is classified as an unknown call.

Emulated Agents

T-Server provides a fully functional emulated-agent model that you can use either in addition to agent features available on the PBX or in place of them where they are not available on the PBX.

When this feature is used, T-Server emulates the following functionality:

- Login and logout
- Agent set ready
- Agent set not ready (using various work modes)
- Automatic after call work (ACW)
- After call work in idle
- Automatic legal-guard time to provide a minimum break between business related calls

Emulated Agent Login/Logout

You can configure T-Server to perform emulated login either always, never, or on a per-request basis. Use the following T-Server configuration options to configure emulated agent login:

- `emulate-login`
- `emulated-login-state`
- `agent-strict-id`
- `sync-emu-acw`

Agent Logout on Client Unregistering from DN

In some scenarios (such as a power failure/disconnection or when a desktop stops responding), agents may still receive calls but be unable to handle them.

To prevent this problem, T-Server can be configured to automatically logout the agent in such circumstances.

When a client desktop or application disconnects from T-Server while an agent is still logged in, T-Server receives a notification that the application is unregistering from the agent's DN. Also, T-Server is able to uniquely identify the client application which sends a T-Library request, including `TAgentLogin` and `TRegisterAddress`.

T-Server can associate the client application (the one that sends the initial `TAgentLogin` request) with the agent and automatically log that agent out when the client application unregisters the agent DN while the agent is still logged in. (The initial `TAgentLogin` request is the one which first logs the agent in).

This feature is enabled/disabled by the following configuration options:

- `agent-logout-on-unreg`
- `agent-logout-reassoc`
- `agent-emu-login-on-call`

HA Considerations

If T-Server is running in HA mode, a client connecting to one T-Server will be connected to both with the same session ID. Therefore the client's session ID must be used as part of the association data to ensure consistency across the primary and backup T-Servers. The primary T-Server will send an HA synchronization message to the backup when there is a change in client associations.

Emulated Agent Ready/NotReady

Emulated agents can perform an emulated `Ready` or `NotReady` request regardless of whether they are on a call, subject to the rules governing work modes.

T-Server also reports any change in agent mode requested by the agent while remaining in a `NotReady` state (*self-transition*).

Note: The *Genesys Events and Models Reference Manual* and the *Voice Platform SDK 8 .NET (or Java) API Reference* define which agent state/agent mode transitions are permissible.

Emulated After-Call Work (ACW)

T-Server can apply emulated wrap-up (after-call work or ACW) for agents after a business call is released, unless the agent is still involved in another business call (see “Business Calls” on [page 153](#)).

Timed and Untimed ACW

T-Server applies emulated ACW for an agent after any business call is released from an established state. T-Server automatically returns the agent to the `Ready`

Events and Extensions

state at the end of a *timed* ACW period. The agent must return to the Ready state manually when the ACW period is *untimed*.

T-Server indicates the expected amount of ACW for an agent in `EventEstablished` using the extension `WrapUpTime`. It is not indicated in `EventRinging` because the value may change between call ringing and call answer. Untimed ACW is indicated by the string value `untimed`, otherwise the value indicates the expected ACW period in seconds.

T-Server reports ACW using `EventAgentNotReady` with `workmode = 3` (`AgentAfterCallWork`) and indicates the amount of ACW it will apply using the extension `WrapUpTime`.

T-Server sends the `EventNotReady` (ACW) before the `EventReleased` at the end of the business call.

Emulated ACW Period

The amount of emulated ACW that T-Server applies (when required) after a business call is determined by the value in configuration option `wrap-up-time`.

The configuration option `untimed-wrap-up-value` determines which specific integer value of wrap-up-time indicates *untimed* ACW. To specify untimed ACW in request extensions or user data, you should use the string `untimed` instead. All positive integer values are treated as indicating timed ACW (in seconds). For backwards compatibility, the default value of `untimed-wrap-up-value` is `1000`.

Note: Changing the value of untimed ACW should be done with care, because may affect the interpretation of all integer values of the option `wrap-up-time` in Configuration Manager. If lowered, it may change timed ACW to untimed, or disable ACW altogether. If raised it may change untimed or disabled ACW to timed ACW. The use of the new option (string) value `untimed` is encouraged where possible to minimize the impact of any future changes to the value of option `untimed-wrap-up-value`.

See the following related options for more details:

- `wrap-up-time`
- `untimed-wrap-up-value`
- `wrap-up-threshold`

Pending ACW

An agent can request emulated ACW, or override the period of (emulated) ACW to be applied to themselves, while on an established call. T-Server will apply the emulated ACW when the call is released. The agent sends `TAgentSetReady` with `workmode = 3` to request pending ACW while on an

established call. The extension `WrapUpTime` indicates the amount of ACW that T-Server will apply, using the following parameters and rules:

- Extension missing—untimed ACW
- Value = 0—ACW is disabled
- Value greater than 0—period of timed ACW in seconds
- Value = `untimed`—untimed ACW
- Invalid value—request is rejected

If the request is successful, T-Server sends `EventAgentReady` with `workmode = 3` (ACW). T-Server will also indicate that the agent is in a pending ACW state by adding the extension `ReasonCode` with the new value `PendingACW`. It will also indicate the period of ACW to be applied using the extension `WrapUpTime`.

An agent may alter the period of pending ACW by sending a new `TAgentSetReady` with `workmode = 3`, using a different value for the extension `WrapUpTime`. If the request is successful, T-Server sends another `EventAgentReady` event, indicating the new value in the extension `WrapUpTime`.

Note: To enable this feature the agent desktop the extension `WrapUpTime` must be enabled on the agent desktop.

Emulated ACW In Idle

An agent can activate wrap-up time on request when idle, by issuing a `TAgentSetNotReady` with `workmode = 3` (`AgentAfterCallWork`) to request emulated ACW while idle.

You can configure this feature in T-Server using the following options:

- `timed-acw-in-idle`
- `acw-in-idle-force-ready`

Extending ACW

An agent can request an extension to the amount of emulated ACW for a call while in emulated ACW or in the legal-guard state.

The agent requests an extension to ACW by sending `TAgentSetNotReady` with `workmode = 3` (`AgentAfterCallWork`). T-Server determines the period of the extended ACW from the extension `WrapUpTime`, as follows:

- Value = 0—No change to ACW period, but T-Server reports how much ACW time remains.
- Value greater than 0—T-Server adds the given number of seconds to the timed ACW period. Untimed ACW remains unaffected.
- Value = `untimed`—T-Server applies untimed ACW.

T-Server sends `EventAgentNotReady` with `workmode = 3` (`AgentAfterCallWork`), reporting the newly extended amount of ACW using the extension `WrapUpTime`. If the agent was in the emulated legal-guard state, T-Server places the agent back into emulated ACW state.

The agent may extend the period of ACW as many times as desired. At the end of the extended timed ACW period, T-Server applies legal guard if any is configured. No legal guard is applied if the emulated ACW was untimed.

Note: To enable this feature the agent desktop the extension `WrapUpTime` must be enabled on the agent desktop.

Emulated Legal-Guard Time

T-Server applies emulated legal-guard time for agents before they are about to be automatically set ready after any period of timed ACW or after the last business call is released where there is no ACW to be applied. It is a regulatory requirement in many countries to guarantee that agents have a break of a few seconds before the next call can arrive. No legal-guard time is applied if the ACW period was not timed or if the agent is not being placed into the Ready state.

T-Server reports legal guard using `EventAgentNotReady` with `workmode = 2` (`LegalGuard`). If an agent requests to be logged out during emulated legal-guard time, T-Server immediately logs the agent out.

If the agent requests to go to a `Not Ready` or `Ready` state during legal-guard time, T-Server terminates legal guard and transitions the agent to the requested state. If the agent requests to return to the ACW state, T-Server re-applies legal guard at the end of ACW, provided that the agent still requires it according to the above criteria.

The period of legal guard is determined by the configuration option `legal-guard-time`.

Calls While in Emulated ACW

T-Server's handling of an agent making or receiving a call while in emulated ACW is governed by the configuration option `backwds-compat-acw-behavior`.

HA Synchronization

On startup and link re-establishment, the Hot Standby backup T-Server requests the primary T-Server to send details of all agents. The primary T-Server replies with all the information required for switchover, including all emulated and switch-based data.

From this point on, the primary T-Server also sends a similar synchronization message whenever an emulated agent's state changes.

This means that a higher level of synchronization between the two T-Servers is maintained at all times.

Emulated Predictive Dialing

This feature enables Genesys Outbound Contact Server (OCS) to initiate calls without the use of the Call Progress Detection (CPD) Server and Dialogic hardware.

Note: This feature is not related to the predictive dialing algorithm OCS uses to determine when to make the next call. This feature only concerns the outbound-call mechanism. You cannot use Emulated Predictive Dialing with Dialogic hardware.

To enable the Predictive Dialing feature in T-Server, you must configure (in the Configuration Layer) a number of devices corresponding to the number of calls that can be made simultaneously. These devices are available as a pool for T-Server to use for predictive dialing. They are not associated with any specific dialing device (Queue or Routing Point). They are configured in the Configuration Layer with switch-specific type 4.

Because of a small discrepancy in the way the availability of dialing devices is calculated in T-Server and in OCS, Genesys recommends configuring extra dialing devices. For example, if you plan to use five dialing devices in a campaign, configure six dialing devices in T-Server.

Limiting Distribution Time

Many countries forbid, by law, the queuing of more calls than there are available agents. The law in these countries states that such calls must be immediately dropped. T-Server does not handle this requirement for the duration of call distribution. The distribution mechanism must handle it.

If you use Universal Routing Server (URS) to distribute outbound calls to agents, set the Timeout option in the Strategy Target-Selection object to an appropriate value: for example, 1 second or 2 seconds.

Note: Your routing strategy is likely to fail if you set the value of `Timeout` to 0 (zero).

Once outbound calls have been successfully distributed to an agent, use the value of configuration option `nas-indication` to limit the time that a call rings on an agent desktop without being answered.

If T-Server has no dialing devices available at the time of a `TMakePredictiveCall` request, it attempts to queue the request for the duration specified in option `max-pred-req-delay`. If a dialing device becomes available, T-Server makes the call. If not, T-Server rejects the request.

Call Progress Detection

T-Server's Emulated Predictive Dialing feature does not support call progress detection (CPD) to the same extent as Dialogic hardware. CPD is limited to normal switch signaling. In-band CPD is not supported. The following dialing results are supported:

- Abandoned
- Answer
- Busy
- Dropped
- Error
- No Answer
- Remote release
- Wrong number (reported as Sit Tone by the PBX)

Unsolicited Calls on Predictive Dialing Devices

An *unsolicited call* on a predictive dialing device is defined as:

- Any call delivered to a predictive dialing device.
- Any call originated without `TMakePredictiveCall`.
- Any call that is found on a device at T-Server start-up.

Note: It depends on the capabilities of the PBX if it is possible for T-Server to request this information or not.

T-Server attempts to clear such unsolicited calls, in order to keep the predictive dialing device available. For delivered calls, T-Server answers and releases the call. For originated or established calls, T-Server releases the call.

No-Answer Supervision

This section describes T-Server's No-Answer Supervision feature.

Agent No-Answer Supervision

This feature provides the following functionality:

- If an agent does not answer a call within a specified timeout, T-Server can divert the call to a sequence of overflow destinations. Alternatively, you can configure T-Server to return calls automatically to the last distribution device.
- If an agent fails to answer a call within a specified timeout, you can configure T-Server to either log out the agent or set the agent to NotReady to prevent further calls from arriving.

Configuration Options

T-Server provides three configuration options for defining the behavior of the Agent No-Answer Supervision feature:

- `agent-no-answer-action`
- `agent-no-answer-overflow`
- `agent-no-answer-timeout`

Extension No-Answer Supervision

The No-Answer Supervision feature includes devices of type `Extension`. If a call is not answered on an extension within a specified timeout, T-Server can divert the call to a sequence of overflow destinations. Alternatively, you can configure T-Server to return calls automatically to the last distribution device.

T-Server provides two configuration options for defining the behavior of No-Answer Supervision with devices of type `Extension`:

- `extn-no-answer-timeout`
- `extn-no-answer-timeout`

ACD Position No-Answer Supervision

The No-Answer Supervision feature includes devices of type `ACD Position`. If a call is not answered on a `ACD Position` within a specified timeout, T-Server can divert the call to a sequence of overflow destinations. Alternatively, you can configure T-Server to return calls automatically to the last distribution device.

T-Server provides two configuration options for defining the behavior of No-Answer Supervision with devices of type `ACD Position`:

- `posn-no-answer-overflow`
- `posn-no-answer-timeout`

Configuration Options for Device-Specific Overrides

T-Server provides three configuration options with which you can configure device-specific overrides for individual devices. You set the values for these options on the `Annex` tab of the `TServer` section of the individual device in the Framework Configuration Layer. These are the options:

- `no-answer-action`
- `no-answer-overflow`
- `no-answer-timeout`

Extension Attributes for Overrides for Individual Calls

For all of the No-Answer Supervision options, you can specify the corresponding `Extension` attribute in `TRequestRouteCall`, to override the configured value for individual calls. This method allows the no-answer behavior to be determined in a routing strategy. These are the three `Extension` attributes:

- `NO_ANSWER_ACTION`
- `NO_ANSWER_OVERFLOW`
- `NO_ANSWER_TIMEOUT`

Private Calls

You can also apply No-Answer Supervision to private calls, using the configuration option `no-answer-action`.

Recall Scenarios

The configuration option `recall-no-answer-timeout` allows you to configure No-Answer Supervision for recall scenarios.

Reporting

The configuration option `nas-indication` allows you to configure reporting of extensions related to No-Answer Supervision for reporting scenarios.

Smart OtherDN Handling

For T-Server clients that provide the Agent ID value as the OtherDN in requests to T-Server, T-Server can convert this OtherDN value using its knowledge of the association between the Agent ID and the DN to ensure the correct execution of the request by the switch. For switches expecting an Agent ID in the place of a DN for a particular operation, T-Server can convert the OtherDN value supplied by client to the Agent ID that the switch expects.

The following configuration options are provided to enable and disable this feature:

- `convert-otherdn`
- `dn-for-undesired-calls`

A new extension key `ConvertOtherDN` is also provided to enable this feature to be applied on a call-by-call basis.

Supported Requests

Table 14 shows the requests that assume the use of the OtherDN value as a switch directory number, and can therefore support Smart OtherDN Handling.

Table 14: Requests That Support Smart OtherDN Handling

TRequest	Meaning of OtherDN Attribute	AgentID-to-DN Conversion	Reserved DN Conversion
TMakeCall	Call destination	Yes	Yes
TMakePredictiveCall ^a	Call destination	Yes	Yes
TRedirectCall	New destination for call	Yes	Yes
TInitiateTransfer	Call destination	Yes	Yes
TMuteTransfer	Call destination	Yes	Yes
TSingleStepTransfer	New destination for call	Yes	Yes
TInitiateConference	Call destination	Yes	Yes
TSingleStepConference	New destination for call	No	No

Table 14: Requests That Support Smart OtherDN Handling (Continued)

TRequest	Meaning of OtherDN Attribute	AgentID-to-DN Conversion	Reserved DN Conversion
TDeleteFromConference	Conference member to be deleted	Yes	Yes
TGetAccessNumber ^b	DN for which Access Number is requested	No	No
TSetCallAttributes ^c	Not specified	No	No
TReserveAgentAndGetAccessNumber ^c	DN for which Access Number is requested	No	No
TMonitorNextCall	Agent DN to be monitored	No	Not applicable
TCancelMonitoring	Agent DN that was monitored	No	Not applicable
TRouteCall ^c	New destination for call		
• RouteTypeUnknown		Yes	Yes
• RouteTypeDefault		Yes	Yes
• RouteTypeOverwriteDNIS		Yes	Yes
• RouteTypeAgentID		No	No

- a. TMakePredictiveCall assumes that the directory number should be outside the switch; however, this request could also support Smart OtherDN Handling.
- b. T-Server cannot intercept these requests.
- c. Only the listed route types are applicable for OtherDN conversion.

Keep-Alive Feature Handling

T-Server may not always receive timely notification when the CTI link stops functioning. In order for T-Server to detect link failure and initialize alarm and recovery procedures, T-Server usually needs to actively check the link's integrity. This is referred to as Keep-Alive or "KPL" functionality.

Keep-alive functionality involves sending a *KPL request* which elicits either a positive or negative response from the CTI link. The responses are counted in four cumulative counters. If the relevant counter reaches the maximum configured limit, T-Server either:

- Decrements the relevant warning/failure KPL tolerance counter

- Attempts to reconnect to the link
- Sends a warning message to Message Server

Three configuration options are available in the Link-Control section of T-Server:

- `kpl-interval` sets the interval timer for KPL requests.
- `kpl-loss-rate` settings control how the four internal counters tracking both negative and positive KPL responses are incremented and decremented.
- `kpl-tolerance` sets the threshold at which T-Server either attempts to reconnect to the link or issues a warning message.

Examples

Tables 15 through 20 in this section illustrate the cumulative effect of KPL responses on the tolerance and loss-rate counters, and what how T-Server reacts when thresholds are reached.

Tables 15 through 20 use the following configuration option values:

- `kpl-tolerance=3`
- `kpl-loss-rate=5, 15` where value 5 is the failure counter and value 15 is the warning counter

Table 15 shows how the KPL tolerance failure counter is decremented when the KPL loss-rate threshold is reached.

Table 15: Failure Counter—KPL Loss-Rate Threshold Reached

	Failure Counter		Warning Counter	
KPL Response (X/✓)	kpl-tolerance =3 8	kpl-loss-rate = 5, (15) 4	kpl-tolerance =3 8	kpl-loss-rate = (5), 15 4
Current values	0	0	0	0
8	1	0	1	0
4	1	1	1	1
2 x ✓	1	3	1	3
8	2	3	2	3
2 x ✓	2	5	2	5
	kpl-loss-rate threshold (5) reached			

Table 15: Failure Counter—KPL Loss-Rate Threshold Reached (Continued)

	Failure Counter		Warning Counter	
KPL Response (X/✓)	kpl-tolerance =3 8	kpl-loss-rate = 5, (15) 4	kpl-tolerance =3 8	kpl-loss-rate = (5), 15 4
	Decrement KPL tolerance counter by 1	Reset KPL loss-rate counter to zero		
New values	1	0	2	5

Table 16 shows what happens when the KPL tolerance threshold is reached on the failure counter.

Table 16: Failure Counter—KPL Tolerance Threshold Reached

	Failure Counter		Warning Counter	
KPL Response Result (X/✓)	kpl-tolerance =3 8	kpl-loss-rate = 5, (15) 4	kpl-tolerance =3 8	kpl-loss-rate = (5), 15 4
Current values	1	1	0	10
8	2	1	1	10
8	3	1	2	10
	kpl-tolerance threshold reached.			
	T-Server initiates reconnection to CTI link and all counters are reset to 0.			
New values	0	0	0	0

Table 17 shows what how the KPL tolerance warning counter is decremented on when the KPL loss-rate threshold is reached.

Table 17: Warning Counter—KPL Loss-RateThreshold Reached—Tolerance Counter Decremented

KPL Response Result (X/✓)	Failure Counter		Warning Counter	
	kpl-tolerance =3 8	kpl-loss-rate = 5, (15) 4	kpl-tolerance =3 8	kpl-loss-rate = (5), 15 4
Current values	0	3	1	13
8	1	3	2	13
4	1	4	2	14
4	1	5	2	15
	KPL loss-rate threshold reached.KPL tolerance counter decremented by 1 and loss-rate counter reset.		KPL loss-rate threshold reached.KPL tolerance counter decremented by 1 and loss-rate counter reset.	
New values	0	0	1	0

Table 18 shows what happens when the KPL tolerance threshold is reached on the warning counter.

Table 18: Warning Counter—KPL Tolerance Threshold Reached—T-Server Sends Warning Message to Message Server

KPL Response Result (X/✓)	Failure Counter		Warning Counter	
	kpl-tolerance =3 8	kpl-loss-rate = 5, (15) 4	kpl-tolerance =3 8	kpl-loss-rate = (5), 15 4
Current values	0	0	2	10
8	1	0	3	10
			kpl-tolerance threshold (3) reached	
			Reset kpl-tolerance counter to 0	

Table 18: Warning Counter—KPL Tolerance Threshold Reached—T-Server Sends Warning Message to Message Server (Continued)

	Failure Counter		Warning Counter	
KPL Response Result (X/✓)	kpl-tolerance =3 8	kpl-loss-rate = 5, (15) 4	kpl-tolerance =3 8	kpl-loss-rate = (5), 15 4
			T-Server sends warning message to Message Server	
New values	1	0	0	See table 19 and 20.

Tables 19 and 20 show how the warning counters will behave depending on whether the next KPL response is positive or negative.

Table 19: Warning Counters- KPL Loss-Rate Value After Positive KPL Response

	Failure Counter		Warning Counter	
KPL Response Result (X/✓)	kpl-tolerance =3 8	kpl-loss-rate = 5, (15) 4	kpl-tolerance =3 8	kpl-loss-rate = (5), 15 4
Current values	1	0	0	10
4	1	1	0	0
				Note: The positive KPL response, after the warning message was sent, results in the counter being reset to 0, instead of incrementing to 11.

Table 20: Warning Counters—KPL Loss-Rate Value After Negative KPL Response

KPL Response Result (X/✓)	Failure Counter		Warning Counter	
	kpl-tolerance =3 8	kpl-loss-rate = 5, (15) 4	kpl-tolerance =3 8	kpl-loss-rate = (5), 15 4
Current values	1	0	0	10
8	2	0	1	11
				Note: The negative KPL response, after the warning message was sent, results is the counter incrementing to 11.

Call Type Prediction

T-Servers use CTI-provided information to assign a call type to a call. On occasions when the CTI information is either insufficient or arrives too late for T-Server to assign a definite call type, T-Server can now use a call type prediction procedure to assign a call type on a “best possible guess” basis.

Table 21 shows how T-Server assigns call types in different scenarios.

Table 21: Call Type Prediction

Call Direction/ OtherDN	External	Internal	Unknown
Incoming	CallTypeInbound	CallTypeInternal	CallTypeUnknown
Outgoing	CallTypeOutbound	CallTypeInternal	CallTypeUnknown

The feature is enabled/disabled by the configuration option [call-type-by-dn](#). You can configure this feature in T-Server using the following options:

- [call-type-by-dn](#)
- [call-type-rules](#)

- `dn-scope`
- `rule-<n>`, where $n=1-N$

Call Release Tracking

T-Server now provides information about which party initiated the release of a call. This can be valuable for different applications to provide historical and real-time call reporting.

The following T-Library SDK call models can now be reported in this way:

- Normal call release.
- Abnormal call release.
- Call release from a conference.
- Rejection of an alerting call.
- Release for a failed or blocked call to a busy destination.

DN-Based Reporting

In DN-based reporting, information about the call release initiator will be reported in the `AttributeExtension` using extension key `ReleasingParty` in `EventReleased` and `EventAbandoned` events, when those events are distributed.

One of the following values will be reported in the `ReleasingParty` key:

- 1 Local—The call is released because the `ThisDN` value in the `EventReleased` was requesting the release.
- 2 Remote—The call is released because the other party (which is remote to `ThisDN`) in the `EventReleased` or `EventAbandoned` events was requesting release operation.
- 3 Unknown—The call is released, but T-Server cannot determine the release initiator.

Call-Based Reporting

Independently of DN-based reporting, T-server provides the call release initiator in `AttributeCtrlParty` for `EventCallPartyDeleted` and `EventCallDeleted` events. For scenarios where T-Server cannot provide the release initiator, `AttributeCtrlParty` will not appear in event reporting.

T-Server will provide `AttributeCtrlParty` reporting (for the party that initiated the call release) either:

- When the call is released using a GCTI request and T-Server is aware of the result of the requested operation, or;
- The PBX CTI protocol provides reliable information about the identity of party that released.

Failed Route Notification

T-Server supports alarm messages for unsuccessful routing scenarios.

When this feature is enabled, a failed route timer is set using the interval defined in configuration option `route-failure-alarm-period`. Each routing failure reported during this period is added to a counter. If this counter exceeds a “high water mark” threshold value defined by the option `route-failure-alarm-high-wm`, T-Server sets a route failure alarm condition, and resets the counter.

The alarm condition is cleared when fewer route failures than configured in option `route-failure-alarm-low-wm` are recorded and there is also no more than the number of route failures configured in `route-failure-alarm-high-wm` in one complete period (configured in `route-failure-alarm-period`).

Setting the value of configuration option `route-failure-alarm-period` to 0 (zero) disables the feature.

This feature is controlled by the following configuration options:

- `route-failure-alarm-high-wm`
- `route-failure-alarm-low-wm`
- `route-failure-alarm-period`

HA Considerations

Only the primary T-Server maintains the failed routing counter. The backup T-Server will not run the `route-failure-alarm-period` timer, and so keeps the routing failure alarm in the canceled state.

On switchover from primary role to backup role, T-Server stops the `route-failure-alarm-period` timer and clears any alarm internally, without sending any LMS message.

On switchover from backup role to primary role, T-Server starts the `route-failure-alarm-period` timer and starts counting route requests and routing failures.

Link Bandwidth Monitoring

T-Server provides bandwidth monitoring on a CTI link and can notify the Genesys Management Layer when the Configuration Layer limits are exceeded.

When configured high or low thresholds are reached, T-Server sends alarm messages `LINK_ALARM_HIGH LMS` or `LINK_ALARM_LOW LMS`, as appropriate.

High and Low Watermarks

Configuration option `link-alarm-high`, specified as a percentage of the `max-bandwidth` value, defines an upper threshold bandwidth value which when breached raises a `LINK_ALARM_HIGH` LMS message.

Configuration option `link-alarm-low`, specified as a percentage of the `max-bandwidth` value, defines a lower threshold bandwidth value which when breached raises a `LINK_ALARM_LOW` LMS message.

Alarm Set Algorithm

T-Server measures requests sent to the CTI link and whenever there is a 99.7% probability that a high or low watermark threshold has been crossed, an appropriate LMS message is generated.

If `link-alarm-high` is set to 0 (zero), no high alarm will be generated.

Notes: A high or low watermark LMS message will only be generated when there is at least a 99.7% probability that the requisite threshold has been crossed. Therefore, if the `link-alarm-low` is set to 0 (zero), it cannot be crossed and no low alarm can be generated. Since a subsequent high alarm LMS message will only be generated after a low watermark message, no further alarms can be raised.

Configuration Options

The following configuration options are used to set bandwidth monitoring on a CTI link:

- `link-alarm-high`
- `link-alarm-low`
- `use-link-bandwidth`

LMS Messages

High alarm

STANDARD Link bandwidth: %d1 requests per second exceeds alarm threshold %d2 requests per second on CTI Link ID %d3

Attributes:

%d1 represents estimated requests rate

%d2 represents $\text{link-alarm-high} * \text{max_bandwidth} / 100$

%d3 represents the CTI Link ID

Low alarm

STANDARD Link bandwidth: %d1 requests per second dropped below alarm threshold %d2 requests per second on CTI Link ID %d3

Attributes:

%d1 represents estimated requests rate

%d2 represents $\text{link-alarm-low} * \text{max_bandwidth} / 100$

%d3 represents the CTI Link ID

-
- Notes:**
- Setting the link-alarm-low option to a value of 0 (zero) will not create a link alarm low LMS message. The link bandwidth must drop below the set low alarm level in order to create the low watermark message. For a high watermark, the bandwidth recorded must exceed the set high alarm watermark to create the high watermark LMS message. The consequence of setting the low alarm watermark to 0 (zero) is that T-Server will only generate one high watermark LMS message since a low watermark LMS message is never created. Therefore, T-Server will remain in high watermark alarm state indefinitely and never generate a subsequent LMS high watermark message.
 - If the link-alarm-low option is set to a value higher than the value of the link-alarm-high option, then the two values are swapped. However, the values are not swapped if either value is set to 0 (zero).
-

The LinkLoad extension attribute has been introduced for the link bandwidth feature. See the description of the extension on [page 187](#).

HA Considerations

If the primary T-Server is at the high watermark prior to a switchover, its state is not transferred to the backup T-Server.

Request Handling Enhancements

T-Server introduces two major new enhancements to queue handling: request conflict resolution and a new device queue.

Requests submitted by different clients are treated no differently to requests submitted by the same client. For this reason, having multiple clients controlling the same device can result in unexpected behavior.

-
- Note:** While this configuration is supported, it should be recognised that there is no special handling for multiple clients.
-

Use the following T-Server configuration options to configure this feature:

- `device-rq-gap`
- `rq-conflict-check`

T-Library Functionality

Table 22 presents T-Library functionality supported in the T-Server for Siemens HiPath DX. The table entries use these notations:

N—Not supported

Y—Supported

I—Supported, but reserved for Genesys Engineering

E—Event only supported

In Table 22, when a set of events is sent in response to a single request, the events are listed in an arbitrary order. An asterisk (*) indicates the event that contains the same Reference ID as the request. For more information, refer to the *Genesys 7 Events and Models Reference Manual* and the *Voice Platform SDK 8 .NET (or Java) API Reference*.

Table 22 reflects only that switch functionality used by Genesys software and might not include the complete set of events offered by the switch.

Certain requests in Table 22 are reserved for Genesys Engineering and are listed here merely for completeness of information.

Notes describing specific functionalities appear at the end of the table.

Table 22: Supported Functionality

Feature Request	Request Subtype	Corresponding Event(s)	Supported
General Requests			
TOpenServer		EventServerConnected	Y
TOpenServerEx		EventServerConnected	Y
TCloseServer		EventServerDisconnected	Y
TSetInputMask		EventACK	Y
TDispatch		Not Applicable	Y
TScanServer		Not Applicable	Y
TScanServerEx		Not Applicable	Y

Table 22: Supported Functionality (Continued)

Feature Request	Request Subtype	Corresponding Event(s)	Supported
Registration Requests			
TRegisterAddress ^a		EventRegistered	Y
TUnregisterAddress		EventUnregistered	Y
Call-Handling Requests			
TMakeCall ^b	Regular	EventDialing	Y
	DirectAgent		N
	SupervisorAssist		N
	Priority		N
	DirectPriority		N
TAnswerCall ^c		EventEstablished	Y
TReleaseCall		EventReleased	Y
TClearCall		EventReleased	Y
THoldCall		EventHeld	Y
TRetrieveCall		EventRetrieved	Y
TRedirectCall		EventReleased	Y
TMakePredictiveCall		EventDialing*, EventQueued	Y
Transfer/Conference Requests			
TInitiateTransfer		EventHeld, EventDialing*	Y
TCompleteTransfer		EventReleased*, EventReleased	Y
TInitiateConference		EventHeld, EventDialing*	Y
TCompleteConference ^d		EventReleased*, EventRetrieved, EventPartyAdded	Y
TDeleteFromConference		EventPartyDeleted*, EventReleased	Y
TReconnectCall		EventReleased, EventRetrieved*	Y

Table 22: Supported Functionality (Continued)

Feature Request	Request Subtype	Corresponding Event(s)	Supported
TAlternateCall		EventHeld*, EventRetrieved	Y
TMergeCalls	ForTransfer	EventReleased*, EventPartyChanged	N
	ForConference	EventReleased*, EventRetrieved, EventPartyChanged, EventPartyAdded	N
TMuteTransfer		EventHeld, EventDialing*, EventReleased, EventReleased	Y
TSingleStepTransfer		EventReleased*, EventPartyChanged	Y
TSingleStepConference		EventRinging*, EventEstablished	N
Call-Routing Requests			
TRouteCall	Unknown	EventRouteUsed	Y
	Default		Y
	Label		N
	OverwriteDNIS		Y
	DDD		Y
	IDDD		Y
	Direct		N
	Reject		N
	Announcement		N
	PostFeature		N
	DirectAgent		N
	Priority		N
	DirectPriority		N
	AgentID		N

Table 22: Supported Functionality (Continued)

Feature Request	Request Subtype	Corresponding Event(s)	Supported
Call-Treatment Request			
TApplyTreatment	Unknown	(EventTreatmentApplied + EventTreatmentEnd)/EventTreatmentNotApplied	N
	IVR		N
	Music		N
	RingBack		N
	Silence		N
	Busy		N
	CollectDigits		N
	PlayAnnouncement		N
	PlayAnnouncementAndDigits		N
	VerifyDigits		N
	RecordUserAnnouncement		N
	DeleteUserAnnouncement		N
	CancelCall		N
	PlayApplication		N
	SetDefaultRoute		N
	TextToSpeech		N
	TextToSpeechAndDigits		N
	FastBusy		N
	RAN		N
TGiveMusicTreatment		EventTreatmentApplied	N
TGiveRingBackTreatment		EventTreatmentApplied	N
TGiveSilenceTreatment		EventTreatmentApplied	N

Table 22: Supported Functionality (Continued)

Feature Request	Request Subtype	Corresponding Event(s)	Supported
DTMF (Dual-Tone Multifrequency) Requests			
TCollectDigits		EventDigitsCollected	N
TSendDTMF		EventDTMFSent	N
Voice-Mail Requests			
TOpenVoiceFile		EventVoiceFileOpened	N
TCloseVoiceFile		EventVoiceFileClosed	N
TLoginMailBox		EventMailBoxLogin	N
TLogoutMailBox		EventMailBoxLogout	N
TPlayVoice		EventVoiceFileEndPlay	N
Agent & DN Feature Requests			
TAgentLogin	WorkModeUnknown	EventAgentLogin	Y
	ManualIn ^c		Y
	AutoIn ^f		Y
	AfterCallWork ^g		Y
	Aux Work		Y
	WalkAway		Y
	ReturnBack		Y
	NoCallDisconnect		Y
TAgentLogout		EventAgentLogout	Y
TAgentSetIdleReason		EventAgentIdleReasonSet	N
TAgentSetReady ^h		EventAgentReady	Y

Table 22: Supported Functionality (Continued)

Feature Request	Request Subtype	Corresponding Event(s)	Supported
TAgentSetNotReady ^h	WorkModeUnknown	EventAgentNotReady	Y
	ManualIn		Y
	AutoIn		Y
	AfterCallWork		Y
	AuxWork		Y
	WalkAway		Y
	ReturnBack		Y
	NoCallDisconnect		Y
TMonitorNextCall	OneCall	EventMonitoringNextCall	Y
	AllCalls		Y
TCancelMonitoring		EventMonitoringCanceled	Y
TCallSetForward	None	EventForwardSet	N
	Unconditional		N
	OnBusy		N
	OnNoAnswer		N
	OnBusyAndNoAnswer		N
	SendAllCalls		N
TCallCancelForward	None	EventForwardCancel	N
	Unconditional		N
	OnBusy		N
	OnNoAnswer		N
	OnBusyAndNoAnswer		N
	SendAllCalls		N
TSetMuteOff		EventMuteOff	N
TSetMuteOn		EventMuteOn	N

Table 22: Supported Functionality (Continued)

Feature Request	Request Subtype	Corresponding Event(s)	Supported
TListenDisconnect		EventListenDisconnected	N
TListenReconnect		EventListenReconnected	N
TSetDNDOn		EventDNDOn	N
TSetDNDOff		EventDNDOff	N
TSetMessageWaitingOn		EventMessageWaitingOn	N
TSetMessageWaitingOff		EventMessageWaitingOff	N
Query Requests			
TQuerySwitch	DateTime	EventSwitchInfo	N
	ClassifierStat		N
TQueryCall	PartiesQuery	EventPartyInfo	Y
	StatusQuery		N
TQueryAddress	AddressStatus	EventAddressInfo	Y
	MessageWaitingStatus		N
	AssociationStatus		N
	CallForwardingStatus		N
	AgentStatus		Y
	NumberOfAgentsInQueue ⁱ		Y
	NumberOfAvailableAgents InQueue ^j		Y
	NumberOfCallsInQueue ^k		Y
	AddressType		Y
	CallsQuery		Y
	SendAllCallsStatus		N
	QueueLoginAudit		Y
	NumberOfIdleTrunks		N
	NumberOfTrunksInUse		N

Table 22: Supported Functionality (Continued)

Feature Request	Request Subtype	Corresponding Event(s)	Supported
TQueryAddress (Continued)	DatabaseValue	EventAddressInfo (Continued)	N
	DNStatus		Y
	QueueStatus		Y
TQueryLocation	AllLocations	EventLocationInfo	I
	LocationData		I
	MonitorLocation		I
	CancelMonitorLocation		I
	MonitorAllLocations		I
	CancelMonitorAllLocations		I
	LocationMonitorCanceled		I
	AllLocationsMonitor-Canceled		I
TQueryServer		EventServerInfo	Y
User-Data Requests			
TAttachUserData		EventAttachedDataChanged	Y
TUpdateUserData		EventAttachedDataChanged	Y
TDeleteUserData		EventAttachedDataChanged	Y
TDeleteAllUserData		EventAttachedDataChanged	Y
ISCC (Inter Server Call Control) Requests			
TGetAccessNumber		EventAnswerAccessNumber	Y
TCancelReqGetAccess- Number		EventReqGetAccessNumber Canceled	Y

Table 22: Supported Functionality (Continued)

Feature Request	Request Subtype	Corresponding Event(s)	Supported
Special Requests			
TReserveAgent		EventAgentReserved	I
TSendEvent		EventACK	I
TSendEventEx		EventACK	I
TSetCallAttributes		EventCallInfoChanged	Y
TSendUserEvent		EventACK	Y
TPrivateService		EventPrivateInfo	Y
Network Requests			
TNetworkConsult		EventNetworkCallStatus	N
TNetworkAlternate		EventNetworkCallStatus	N
TNetworkTransfer		EventNetworkCallStatus	N
TNetworkMerge		EventNetworkCallStatus	N
TNetworkReconnect		EventNetworkCallStatus	N
TNetworkSingleStep Transfer		EventNetworkCallStatus	N
TNetworkPrivateService		EventNetworkPrivateInfo	N

- Every configured device is monitored as soon as the connection with the switch is established. Extensions are monitored using `MonitorDeviceCalls` (telephony events) and `MonitorACDFeatures` (agent states) functionality. Routing Points are monitored using `MonitorDevice` and ACD Queues using `MonitorQueue`.
- Functions on digital phones without human intervention.
- This function is not available for analog phones (extension type 2).
- Only three-party conferences are supported.
- If a queue is configured with the parameter `WK` (Work mode), the agent state is `NotReady` after login.
- If a queue is configured with the parameter `WK` (Work mode) the agent state is `Ready` after login. However, you can set the agent state to `NotReady`.
- After an ACD call, an agent is automatically put into the `AfterCallWork` state.
- Functions only if the queue is configured with the `WK` (Work mode) parameter.
- Only on Agent Group, not queue.
- Only on Agent Group, not queue. `Ready/Not Ready` only.

- k. Only on queue, not Agent Group.

Using the Extensions Attribute

T-Server for the Siemens HiPath DX switch supports the use of the `Extensions` attribute as documented in the *Genesys 7 Events and Models Reference Manual* and the *Voice Platform SDK 8 .NET (or Java) API Reference*.

Additionally, the extensions described in Table 23 on [page 183](#) are also supported.

Table 23: Use of the Extensions Attribute

Extension		Used In	Description
Key	Type		
GCTI_LogMode	string	TAgentLogin TAgentLogout	Controls Hot Desking functionality.
GCTI_VN	string	TAgentLogin TPrivateService	This extension provides the Visited (physical) Number (VN) with which the Personal Number (PN) is to be associated.
GCTI_AssociatedVN	string	EventAddressInfo EventBackInService EventRegistered	If device is a PN, the extension shows the associated VN.
ACCOUNT_CODE	string integer	TPrivateService EventPrivateInfo	The requested or reported account code. The key name of this extension is defined by the configuration option acccode-name .
ReasonCode	string integer	TAgentNotReady EventAgentNotReady	When an account code is used as a Walk-Away code (when the configuration option acccode-agent is enabled) this extension specifies the requested or reported account code while the agent is in NotReady state. The default method of reporting Not Ready activation information.

Table 23: Use of the Extensions Attribute (Continued)

Extension		Used In	Description
Key	Type		
HeadOfQueue	string integer	TRouteCall	If the routing destination is an ACD pilot, value 0 (the default) places the call at the end of the destination queue, or value 1 places the call at the head of the destination queue.
RAD1Override	string integer	TRouteCall	If the destination is an ACD pilot, and the call is to be placed at the end of the queue, value 0 (the default) specifies that the call is not to be given RAD1; value 1 specifies that RAD1 is to be given.
NO_ANSWER_TIMEOUT	string	TRouteCall	If set, the value of this Extension overrides any value set in any of the following configuration options for the current call: <ul style="list-style-type: none"> no-answer-timeout agent-no-answer-timeout extn-no-answer-timeout posn-no-answer-timeout
NO_ANSWER_ACTION	string	TRouteCall	If set, the value of this Extension overrides any value set in any of the following configuration options for the current call: <ul style="list-style-type: none"> no-answer-action agent-no-answer-action
NO_ANSWER_OVERFLOW	comma-separated list	TRouteCall	If set, the value of this Extension overrides any value set in any of the following configuration options for the current call: <ul style="list-style-type: none"> no-answer-overflow agent-no-answer-overflow extn-no-answer-overflow posn-no-answer-overflow

Table 23: Use of the Extensions Attribute (Continued)

Extension		Used In	Description
Key	Type		
SUPERVISED_ROUTE	string	TRouteCall	Overrides the value in configuration option supervised-route-timeout for individual calls.
ConvertOtherDN	string, integer	See “Smart OtherDN Handling” on page 163 .	A value of 0 disables all conversions for the call. A value of 1 forces the relevant conversion for the call.
EmulateLogin	string	TAgentLogin	With a value of yes, T-Server performs an emulated login. With a value of no, T-Server attempt a real login.
	string	EventAgentLogin EventAddressInfo EventRegistered	A value of yes indicates that the T-Server has performed an emulated login.
WrapUpTime	integer	TAgentLogin	Specifies the amount of emulated wrap-up time (in seconds) allocated to this agent at the end of a business call. This value is effective for the duration of this login’s agent session. It can be overridden by the value in the WrapUpTime extension in TAgentNotReady.
	integer	TAgentNotReady	Specifies the amount of emulated wrap-up time (in seconds) allocated to this agent at the end of a business call. This value is effective only for the lifespan of this request.
BusinessCall	integer	Call-related events	Specifies the business type of a call. Valid values are: 0/private—Private call 1/business—Business call 2/work—Work-related call

Table 23: Use of the Extensions Attribute (Continued)

Extension		Used In	Description
Key	Type		
BusinessCallType	string or integer	TMakeCall TInitiateTransfer TMuteTransfer TInitiateConference TMakePredictiveCall TAnswerCall	Specifies the call business type to be used by TServer for the new call or the answering party. Valid values are: 0/private—Private call 1/business—Business call 2/work—Work-related call
AgentLogoutOnUnregister	string	TAgentLogin TRegisterAddress	Specifies whether T-Server performs an automatic logout of an agent whenever their client application unregisters its DN from T-Server. Valid values are: true—T-Server will logout emulated and native agents on unregister false—T-Server will not logout emulated or native agents on unregister emu-only—T-Server will logout emulated agents only on unregister.
AssociateClientWithLogin	boolean	TAgentLogin TRegisterAddress	Specifies whether the client should be associated with the agent session.
	boolean	EventAgentLogin EventRegistered EventPrivateInfo	Specifies that the client has been associated with the agent session.
AgentEmuLoginOnCall	boolean	TAgentLogin TAgentLogout	Specifies whether T-Server allows an emulated agent login or logout from a device where there is a call in progress.
LegalGuardTime	integer	TAgentLogin	Specifies the amount of emulated legal guard time allocated to an agent at the end of a business call.

Table 23: Use of the Extensions Attribute (Continued)

Extension		Used In	Description
Key	Type		
SyncEmuACW	integer	TAgentLogin	Specifies whether T-Server synchronizes emulated ACW and/or legal guard with the switch for native agents.
ReleasingParty	string	EventReleased EventAbandoned	Identifies which party was the initiator of the call release. Possible values are: 1 Local 2 Remote 3 Unknown
LinkLoad	string	EventRouteRequest	A value of 1—High indicates that T-Server is in a high watermark condition. The feature is disabled if the use-link-bandwidth option is set to 0 (zero). Possible values are: 0 OK 1 High
Association	string	TRegisterAddress	Defines the association of a DN that is not configured in Configuration Manager. T-Server uses the value none (empty string) when the extension is not provided
SwitchSpecificType	string or integer	TRegisterAddress	Defines the switch-specific type of a DN that is not configured in Configuration Manager.
T-Server Common Part Extensions			
sdn-licenses-in-use	integer	EventServerInfo	Specifies how many SDN licenses are currently in use.
sdn-licenses-available	integer		Specifies how many SDN licenses are currently available.

Private Services and Events

Table 24 describes private services and events.

Table 24: Private Services and Events

Function	Switch Function	Synopsis	Description
RequestSet BusinessCall	Service Number (700)		Sets the business call type of the associated call to <code>business</code> .
	ThisDN = Agent DN		DN of agent connected to call—the agent is also set to type <code>business</code> (but there is no change to current NAS or ACW settings).
	Extension key = AttributeConnID		Connection ID of the call.
EventSet BusinessCall	Event Number (510)		Sent in response to successful <code>TSetBusinessCall</code> .
	ThisDN = Agent DN		DN of agent connected to call
	Attribute = AttributeConnID		Connection ID of the call.
0xCB01 ₁₆ (51969 ₁₀)	Activate Hot Desking	Activate Hot Desking session	<p>Associates a Personal Number (PN) with a Visited Number (VN). VN is specified in extension <code>GCTI_VN</code>. T-Server sends <code>EventBackInService</code> when association is performed. Association can be made as part of <code>TAgentLogin</code>. See also <code>GCTI_LogMode</code> (page 183) and configuration option <code>hd-login-mode</code> (page 262).</p> <p>Note: This service does not use ConnID.</p>
0xCB02 ₁₆ (51970 ₁₀)	Deactivate Hot Desking	Deactivate Hot Desking session	<p>Detaches a Personal Number (PN) from a Visited Number (VN). T-Server sends <code>EventOutOfService</code> when session is deactivated. Detachment can be made as part of <code>TAgentLogout</code>. See also <code>GCTI_LogMode</code> (page 183) and configuration option <code>hd-logout-mode</code> (page 262).</p> <p>Note: This service does not use ConnID.</p>

Table 24: Private Services and Events (Continued)

Function	Switch Function	Synopsis	Description
0xCB03 ₁₆ (51971 ₁₀) (Request)	Set Account Code	Invoke ACD feature/Set Account Code	Sets Account Code. The account code should be specified in the extensions key ACCOUNT_CODE.
0xCB03 ₁₆ (51971 ₁₀) (Event)	Account Code Set	ACD Feature Event/ Account Code set	Indicates that iCCL ACD Feature Event AccountCodeSet has been received. Extension ACCOUNT_CODE contains the account code.

User Data Keys

T-Server for the Siemens HiPath DX switch supports the use of the user data keys in [Table 25](#).

Table 25: User Data Keys

Extension		Used In	Description
Key	Type		
ACCOUNT_CODE_<N> (where N = 0, 1, 2...9)	string	TAttachUserData TUpdateUserData EventUserDataChanged	If configuration option accode-data is enabled, these keys are used to request or report the account code. The name of this extension is defined by the configuration option accode-name and is used as <name>_<N>.
ACCOUNT_CODE	string integer	TAttachUserData TUpdateUserData	Alternative to key ACCOUNT_CODE_<N>. The name of this extension is defined by the configuration option accode-name .
LegalGuardTime	integer	Call-related requests	Specifies the amount of emulated Legal Guard time allocated to the agent at the end of a business call.

Table 25: User Data Keys (Continued)

Extension		Used In	Description
Key	Type		
WrapUpTime	integer	Call-related requests	Specifies the amount of emulated wrap-up time allocated to all agents at the end of the business call. This value is effective for the duration of this agent's login session.
UU_DATA	string integer binary	TInitiateTransfer TInitiateConference TMuteTransfer TSingleStepTransfer TRouteCall TRedirectCall	<p>If this key is present in the request, or in the user data attached to the call, T-Server will pass the attached data on to the CallBridge with a corresponding function request so that the switch can pass this data to the remote switch using trunk signalling. The remote T-Server will attach the data to the incoming call.</p> <p>Note: Data size is limited to 32-bytes. The receiving side will always present the data as a binary 32-bytes long buffer. Data type information is not propagated. Integer values are propagated as decimal ASCII strings.</p>

Error Messages

The following tables present the complete set of error messages T-Server distributes with EventError.

Table 26: T-Server-Defined Errors

Code	Description
50	Unknown error
51	Unsupported operation for the switch
52	Internal error

Table 26: T-Server-Defined Errors (Continued)

Code	Description
53	Invalid attribute
54	Switch not connected
98	Cannot complete transfer
119	Invalid password
177	Target DN invalid
714	Invalid Call_ID

Table 27: ISCC (Inter Server Call Control) Errors

Code	Description
1000	Invalid or missing server location name
1001	Remote server disconnected
1002	Remote server has not processed request
1003	Wrong protocol version
1004	Remote link disconnected
1005	External routing feature not initiated
1006	No free CDNs
1007	No access number
1008	TCS feature is not initiated
1009	Invalid route type
1010	Invalid request
1011	No primary server was found on location
1012	Location is invalid or missing
1013	Timeout performing requested transaction
1014	No configured access resources are found
1015	No registered access resources are found

Table 27: ISCC (Inter Server Call Control) Errors (Continued)

Code	Description
1016	Client is not authorized
1017	Invalid transaction type
1018	Invalid or missing transaction data
1019	Invalid location query request
1020	Invalid origin location

Table 28: Switch-Specific Errors

Code	Description
109	Link down or bad link specified
231	DN is busy
232	No answer at DN
233	Call rejected
1102	Badly structured APDU
1110	Duplicate invocation (packet missed)
1131	Unexpected error response
1132	Unrecognized error
1141	Request incompatible with object
1143	Object not known
1147	Request caused privilege violation on device
1153	Invalid call destination
1154	Invalid feature requested
1156	Invalid cross-reference identifier
1161	Invalid object state
1162	Invalid Connection ID
1173	Resource is out of service


Table 28: Switch-Specific Errors (Continued)

Code	Description
1181	Object monitor limit exceeded
1190	Unspecified security error

Hot-Standby HA Synchronization

This section describes how T-Server supports hot-standby HA synchronization.

Figure 13 shows the process of successful detection of T-Server synchronization. The primary T-Server is assumed to have successfully completed switch synchronization.

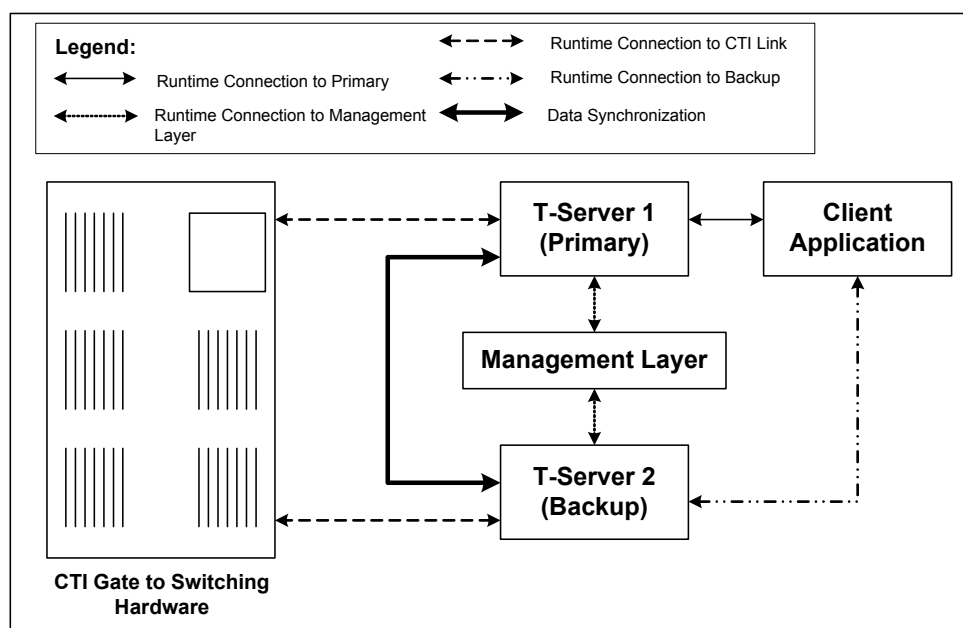**Figure 13: Successful Hot-Standby HA T-Server Synchronization**

Primary T-Server Still in Start-up Phase

If the primary T-Server is still in the process of switch synchronization when it receives a Backup Ready message from the backup T-Server, the primary T-Server sends the Full Sync Done message immediately. This allows the backup T-Server to send EventLinkConnected and become available. The Management Layer then sets the backup T-Server as the new primary, and vice versa. Once the old primary T-Server finishes switch synchronization, it initiates T-Server synchronization with the new primary T-Server as shown in Figure 13.

Primary T-Server's Link with the Switch is Down

If the primary T-Server has lost communication with the switch when it receives a `Backup Ready` message from the other T-Server, it sends the `Full Sync Done` message immediately. It can be assumed to have lost synchronization with the switch itself and there is no guarantee that it will recover communication with the link, which the backup T-Server currently has.

Backup T-Server Fails During Synchronization

If the backup T-Server fails while waiting for synchronization, the primary T-Server stops the synchronization process.

Primary T-Server Fails During Synchronization

If the primary T-Server fails while waiting for synchronization, then the backup T-Server sends an `EventLinkConnected` message immediately.

Call Synchronization Between T-Servers

An integral part of T-Server synchronization is the synchronization of the Connection IDs of the calls between T-Servers. It is the Connection IDs of calls created by the backup T-Server during the switch synchronization phase that differ from those in the primary T-Server—those created afterwards are synchronized by the normal HA mechanism. When the primary T-Server receives the `Backup Ready` message from the backup T-Server, it tags all current calls. Once all tagged calls have been released, the primary T-Server can be certain that the Connection IDs for all current calls have been synchronized with the backup T-Server because they were created after the backup T-Server completed its startup phase. If no further T-Server synchronization is required, the primary T-Server sends the `Full Sync Done` message to the backup T-Server.

Configuration Option

The configuration option `ha-sync-dly-lnk-conn` enables control of this feature.

Support for Boss/Secretary Functionality

Boss/Secretary functionality on the PBX is not supported by T-Server.

Partitioned-Switch Configuration

There are no special configuration requirements to support partitioned-switch configuration on the HiPath DX T-Server.

You can partition the switch by using one set of DNs in the first T-Server and a different set in the second. You can also connect different T-Servers to different CallBridge links on the same PBX.

T-Server and PBX Licensing

There are no special requirements for licensing for T-Server and the HiPath DX PBX.



Chapter

8

Common Configuration Options

Unless otherwise noted, the common configuration options that this chapter describes are common to all Genesys server applications and applicable to any Framework server component. This chapter includes the following sections:

- [Setting Configuration Options, page 198](#)
- [Mandatory Options, page 198](#)
- [Log Section, page 198](#)
- [Log-Extended Section, page 212](#)
- [Log-Filter Section, page 214](#)
- [Log-Filter-Data Section, page 215](#)
- [SML Section, page 215](#)
- [Common Section, page 216](#)
- [Changes from 7.6 to 8.0, page 216](#)

Note: Some server applications also support log options that are unique to them. For descriptions of a particular application's unique log options, refer to the chapter/document about that application.

Setting Configuration Options

Unless specified otherwise, set common configuration options in the `Application` object, using the following navigation path:

- In Configuration Manager—`Application` object > Properties dialog box > Options tab

Warning! Configuration section names, configuration option names, and predefined option values are case-sensitive. Type them in Configuration Manager exactly as they are documented in this chapter.

Mandatory Options

You do not have to configure any common options to start Server applications.

Log Section

This section must be called `log`.

verbose

Default Value: `all`

Valid Values:

<code>all</code>	All log events (that is, log events of the Standard, Trace, Interaction, and Debug levels) are generated.
<code>debug</code>	The same as <code>all</code> .
<code>trace</code>	Log events of the Trace level and higher (that is, log events of the Standard, Interaction, and Trace levels) are generated, but log events of the Debug level are not generated.
<code>interaction</code>	Log events of the Interaction level and higher (that is, log events of the Standard and Interaction levels) are generated, but log events of the Trace and Debug levels are not generated.
<code>standard</code>	Log events of the Standard level are generated, but log events of the Interaction, Trace, and Debug levels are not generated.
<code>none</code>	No output is produced.

Changes Take Effect: Immediately

Determines whether a log output is created. If it is, specifies the minimum level of log events generated. The log events levels, starting with the highest

priority level, are Standard, Interaction, Trace, and Debug. See also “Log Output Options” on [page 204](#).

Note: For definitions of the Standard, Interaction, Trace, and Debug log levels, refer to the *Framework 8.0 Management Layer User’s Guide* or to *Framework 8.0 Solution Control Interface Help*.

buffering

Default Value: true

Valid Values:

true	Enables buffering.
false	Disables buffering.

Changes Take Effect: Immediately

Turns on/off operating system file buffering. The option is applicable only to the stderr and stdout output (see [page 204](#)). Setting this option to true increases the output performance.

Note: When buffering is enabled, there might be a delay before log messages appear at the console.

segment

Default Value: false

Valid Values:

false	No segmentation is allowed.
<number> KB or <number>	Sets the maximum segment size, in kilobytes. The minimum segment size is 100 KB.
<number> MB	Sets the maximum segment size, in megabytes.
<number> hr	Sets the number of hours for the segment to stay open. The minimum number is 1 hour.

Changes Take Effect: Immediately

Specifies whether there is a segmentation limit for a log file. If there is, sets the mode of measurement, along with the maximum size. If the current log segment exceeds the size set by this option, the file is closed and a new one is created. This option is ignored if log output is not configured to be sent to a log file.

expireDefault Value: `false`

Valid Values:

<code>false</code>	No expiration; all generated segments are stored.
<code><number> file</code> or <code><number></code>	Sets the maximum number of log files to store. Specify a number from 1–100.
<code><number> day</code>	Sets the maximum number of days before log files are deleted. Specify a number from 1–100.

Changes Take Effect: Immediately

Determines whether log files expire. If they do, sets the measurement for determining when they expire, along with the maximum number of files (segments) or days before the files are removed. This option is ignored if log output is not configured to be sent to a log file.

Note: If an option's value is set incorrectly—out of the range of valid values—it will be automatically reset to 10.

keep-startup-fileDefault Value: `false`

Valid Values:

<code>false</code>	No startup segment of the log is kept.
<code>true</code>	A startup segment of the log is kept. The size of the segment equals the value of the <code>segment</code> option.
<code><number> KB</code>	Sets the maximum size, in kilobytes, for a startup segment of the log.
<code><number> MB</code>	Sets the maximum size, in megabytes, for a startup segment of the log.

Changes Take Effect: After restart

Specifies whether a startup segment of the log, containing the initial T-Server configuration, is to be kept. If it is, this option can be set to `true` or to a specific size. If set to `true`, the size of the initial segment will be equal to the size of the regular log segment defined by the `segment` option. The value of this option will be ignored if segmentation is turned off (that is, if the `segment` option set to `false`).

Note: This option applies only to T-Servers.

messagefile

Default Value: As specified by a particular application

Valid Values: `<string>.lms` (message file name)

Changes Take Effect: Immediately, if an application cannot find its `*.lms` file at startup

Specifies the file name for application-specific log events. The name must be valid for the operating system on which the application is running. The option value can also contain the absolute path to the application-specific *.lms file. Otherwise, an application looks for the file in its working directory.

Warning! An application that does not find its *.lms file at startup cannot generate application-specific log events and send them to Message Server.

message_format

Default Value: short

Valid Values:

short	An application uses compressed headers when writing log records in its log file.
full	An application uses complete headers when writing log records in its log file.

Changes Take Effect: Immediately

Specifies the format of log record headers that an application uses when writing logs in the log file. Using compressed log record headers improves application performance and reduces the log file's size.

With the value set to short:

- A header of the log file or the log file segment contains information about the application (such as the application name, application type, host type, and time zone), whereas single log records within the file or segment omit this information.
- A log message priority is abbreviated to Std, Int, Trc, or Dbg, for Standard, Interaction, Trace, or Debug messages, respectively.
- The message ID does not contain the prefix GCTI or the application type ID.

A log record in the full format looks like this:

```
2002-05-07T18:11:38.196 Standard localhost cfg_dbserver GCTI-00-05060
Application started
```

A log record in the short format looks like this:

```
2002-05-07T18:15:33.952 Std 05060 Application started
```

Note: Whether the full or short format is used, time is printed in the format specified by the [time_format](#) option.

time_convertDefault Value: `local`

Valid Values:

- `local` The time of log record generation is expressed as a local time, based on the time zone and any seasonal adjustments. Time zone information of the application's host computer is used.
- `utc` The time of log record generation is expressed as Coordinated Universal Time (UTC).

Changes Take Effect: Immediately

Specifies the system in which an application calculates the log record time when generating a log file. The time is converted from the time in seconds since the Epoch (00:00:00 UTC, January 1, 1970).

time_formatDefault Value: `time`

Valid Values:

- `time` The time string is formatted according to the HH:MM:SS.sss (hours, minutes, seconds, and milliseconds) format.
- `locale` The time string is formatted according to the system's locale.
- `ISO8601` The date in the time string is formatted according to the ISO 8601 format. Fractional seconds are given in milliseconds.

Changes Take Effect: Immediately

Specifies how to represent, in a log file, the time when an application generates log records.

A log record's time field in the ISO 8601 format looks like this:

```
2001-07-24T04:58:10.123
```

print-attributesDefault Value: `false`

Valid Values:

- `true` Attaches extended attributes, if any exist, to a log event sent to log output.
- `false` Does not attach extended attributes to a log event sent to log output.

Changes Take Effect: Immediately

Specifies whether the application attaches extended attributes, if any exist, to a log event that it sends to log output. Typically, log events of the Interaction log level and Audit-related log events contain extended attributes. Setting this option to `true` enables audit capabilities, but negatively affects performance. Genesys recommends enabling this option for Solution Control Server and Configuration Server when using audit tracking. For other applications, refer to *Genesys 8.0 Combined Log Events Help* to find out whether an application generates Interaction-level and Audit-related log events; if it does, enable the option only when testing new interaction scenarios.

check-point

Default Value: 1

Valid Values: 0–24

Changes Take Effect: Immediately

Specifies, in hours, how often the application generates a check point log event, to divide the log into sections of equal time. By default, the application generates this log event every hour. Setting the option to 0 prevents the generation of check-point events.

memory

Default Value: No default value

Valid Values: <string> (memory file name)

Changes Take Effect: Immediately

Specifies the name of the file to which the application regularly prints a snapshot of the memory output, if it is configured to do this (see “Log Output Options” on [page 204](#)). The new snapshot overwrites the previously written data. If the application terminates abnormally, this file will contain the latest log messages. Memory output is not recommended for processors with a CPU frequency lower than 600 MHz.

Note: If the file specified as the memory file is located on a network drive, an application does not create a snapshot file (with the extension *.memory.log).

memory-storage-size

Default Value: 2 MB

Valid Values:

<number> KB or <number> The size of the memory output, in kilobytes.
The minimum value is 128 KB.

<number> MB The size of the memory output, in megabytes.
The maximum value is 64 MB.

Changes Take Effect: When memory output is created

Specifies the buffer size for log output to the memory, if configured. See also “Log Output Options” on [page 204](#).

spool

Default Value: The application’s working directory

Valid Values: <path> (the folder, with the full path to it)

Changes Take Effect: Immediately

Specifies the folder, including full path to it, in which an application creates temporary files related to network log output. If you change the option value while the application is running, the change does not affect the currently open network output.

compatible-output-priorityDefault Value: `false`

Valid Values:

- `true` The log of the level specified by “[Log Output Options](#)” is sent to the specified output.
- `false` The log of the level specified by “[Log Output Options](#)” and higher levels is sent to the specified output.

Changes Take Effect: Immediately

Specifies whether the application uses 6.x output logic. For example, you configure the following options in the `log` section for a 6.x application and for a 7.x application:

```
[log]
verbose = all
debug = file1
standard = file2
```

The log file content of a 6.x application is as follows:

- `file1` contains Debug messages only.
- `file2` contains Standard messages only.

The log file content of a 7.x application is as follows:

- `file1` contains Debug, Trace, Interaction, and Standard messages.
- `file2` contains Standard messages only.

If you set `compatible-output-priority` to `true` in the 7.x application, its log file content will be the same as for the 6.x application.

Warning! Genesys does not recommend changing the default value of the this option unless you have specific reasons to use the 6.x log output logic—that is, to mimic the output priority as implemented in releases 6.x. Setting this option to `true` affects log consistency.

Log Output Options

To configure log outputs, set log level options (`all`, `alarm`, `standard`, `interaction`, `trace`, and/or `debug`) to the desired types of log output (`stdout`, `stderr`, `network`, `memory`, and/or `[filename]`, for log file output).

You can use:

- One log level option to specify different log outputs.
- One log output type for different log levels.
- Several log output types simultaneously, to log events of the same or different log levels.

You must separate the log output types by a comma when you are configuring more than one output for the same log level. See “Examples” on [page 209](#).

Note: The log output options are activated according to the setting of the [verbose](#) configuration option.

Warnings!

- If you direct log output to a file on the network drive, an application does not create a snapshot log file (with the extension *.snapshot.log) in case it terminates abnormally.
- Directing log output to the console (by using the `stdout` or `stderr` settings) can affect application performance. Avoid using these log output settings in a production environment.

all

Default Value: No default value

Valid Values (log output types):

<code>stdout</code>	Log events are sent to the Standard output (<code>stdout</code>).
<code>stderr</code>	Log events are sent to the Standard error output (<code>stderr</code>).
<code>network</code>	Log events are sent to Message Server, which can reside anywhere on the network. Message Server stores the log events in the Log Database. Setting the <code>all</code> log level option to the network output enables an application to send log events of the Standard, Interaction, and Trace levels to Message Server. Debug-level log events are neither sent to Message Server nor stored in the Log Database.
<code>memory</code>	Log events are sent to the memory output on the local disk. This is the safest output in terms of the application performance.
<code>[filename]</code>	Log events are stored in a file with the specified name. If a path is not specified, the file is created in the application’s working directory.

Changes Take Effect: Immediately

Specifies the outputs to which an application sends all log events. The log output types must be separated by a comma when more than one output is configured. For example:

```
all = stdout, logfile
```

Note: To ease the troubleshooting process, consider using unique names for log files that different applications generate.

alarm

Default Value: No default value

Valid Values (log output types):

<code>stdout</code>	Log events are sent to the Standard output (stdout).
<code>stderr</code>	Log events are sent to the Standard error output (stderr).
<code>network</code>	Log events are sent to Message Server, which resides anywhere on the network, and Message Server stores the log events in the Log Database.
<code>memory</code>	Log events are sent to the memory output on the local disk. This is the safest output in terms of the application performance.
<code>[filename]</code>	Log events are stored in a file with the specified name. If a path is not specified, the file is created in the application's working directory.

Changes Take Effect: Immediately

Specifies the outputs to which an application sends the log events of the Alarm level. The log output types must be separated by a comma when more than one output is configured. For example:

```
standard = stderr, network
```

standard

Default Value: No default value

Valid Values (log output types):

<code>stdout</code>	Log events are sent to the Standard output (stdout).
<code>stderr</code>	Log events are sent to the Standard error output (stderr).
<code>network</code>	Log events are sent to Message Server, which can reside anywhere on the network. Message Server stores the log events in the Log Database.
<code>memory</code>	Log events are sent to the memory output on the local disk. This is the safest output in terms of the application performance.
<code>[filename]</code>	Log events are stored in a file with the specified name. If a path is not specified, the file is created in the application's working directory.

Changes Take Effect: Immediately

Specifies the outputs to which an application sends the log events of the Standard level. The log output types must be separated by a comma when more than one output is configured. For example:

```
standard = stderr, network
```

interaction

Default Value: No default value

Valid Values (log output types):

<code>stdout</code>	Log events are sent to the Standard output (stdout).
<code>stderr</code>	Log events are sent to the Standard error output (stderr).

<code>network</code>	Log events are sent to Message Server, which can reside anywhere on the network. Message Server stores the log events in the Log Database.
<code>memory</code>	Log events are sent to the memory output on the local disk. This is the safest output in terms of the application performance.
<code>[filename]</code>	Log events are stored in a file with the specified name. If a path is not specified, the file is created in the application's working directory.

Changes Take Effect: Immediately

Specifies the outputs to which an application sends the log events of the `Interaction` level and higher (that is, log events of the `Standard` and `Interaction` levels). The log outputs must be separated by a comma when more than one output is configured. For example:

```
interaction = stderr, network
```

trace

Default Value: No default value

Valid Values (log output types):

<code>stdout</code>	Log events are sent to the Standard output (<code>stdout</code>).
<code>stderr</code>	Log events are sent to the Standard error output (<code>stderr</code>).
<code>network</code>	Log events are sent to Message Server, which can reside anywhere on the network. Message Server stores the log events in the Log Database.
<code>memory</code>	Log events are sent to the memory output on the local disk. This is the safest output in terms of the application performance.
<code>[filename]</code>	Log events are stored in a file with the specified name. If a path is not specified, the file is created in the application's working directory.

Changes Take Effect: Immediately

Specifies the outputs to which an application sends the log events of the `Trace` level and higher (that is, log events of the `Standard`, `Interaction`, and `Trace` levels). The log outputs must be separated by a comma when more than one output is configured. For example:

```
trace = stderr, network
```

debug

Default Value: No default value

Valid Values (log output types):

<code>stdout</code>	Log events are sent to the Standard output (<code>stdout</code>).
<code>stderr</code>	Log events are sent to the Standard error output (<code>stderr</code>).
<code>memory</code>	Log events are sent to the memory output on the local disk. This is the safest output in terms of the application performance.

[filename] Log events are stored in a file with the specified name. If a path is not specified, the file is created in the application's working directory.

Changes Take Effect: Immediately

Specifies the outputs to which an application sends the log events of the Debug level and higher (that is, log events of the Standard, Interaction, Trace, and Debug levels). The log output types must be separated by a comma when more than one output is configured—for example:

```
debug = stderr, /usr/local/genesys/logfile
```

Note: Debug-level log events are never sent to Message Server or stored in the Log Database.

Log File Extensions

You can use the following file extensions to identify log files that an application creates for various types of output:

- *.log—Assigned to log files when you configure output to a log file. For example, if you set `standard = confservlog` for Configuration Server, it prints log messages into a text file called `confservlog.<time_stamp>.log`.
- *.qsp—Assigned to temporary (spool) files when you configure output to the network but the network is temporarily unavailable. For example, if you set `standard = network` for Configuration Server, it prints log messages into a file called `confserv.<time_stamp>.qsp` during the time the network is not available.
- *.snapshot.log—Assigned to files that contain the output snapshot when you configure output to a log file. The file contains the last log messages that an application generates before it terminates abnormally. For example, if you set `standard = confservlog` for Configuration Server, it prints the last log message into a file called `confserv.<time_stamp>.snapshot.log` in case of failure.

Note: Provide *.snapshot.log files to Genesys Technical Support when reporting a problem.

- *.memory.log—Assigned to log files that contain the memory output snapshot when you configure output to memory and redirect the most recent memory output to a file. For example, if you set `standard = memory` and `memory = confserv` for Configuration Server, it prints the latest memory output to a file called `confserv.<time_stamp>.memory.log`.

Examples

This section presents examples of a log section that you might configure for an application when that application is operating in production mode and in two lab modes, debugging and troubleshooting.

Production Mode Log Section

```
[log]
verbose = standard
standard = network, logfile
```

With this configuration, an application only generates the log events of the Standard level and sends them to Message Server, and to a file named `logfile`, which the application creates in its working directory. Genesys recommends that you use this or a similar configuration in a production environment.

Warning! Directing log output to the console (by using the `stdout` or `stderr` settings) can affect application performance. Avoid using these log output settings in a production environment.

Lab Mode Log Section

```
[log]
verbose = all
all = stdout, /usr/local/genesys/logfile
trace = network
```

With this configuration, an application generates log events of the Standard, Interaction, Trace, and Debug levels, and sends them to the standard output and to a file named `logfile`, which the application creates in the `/usr/local/genesys/` directory. In addition, the application sends log events of the Standard, Interaction, and Trace levels to Message Server. Use this configuration to test new interaction scenarios in a lab environment.

Failure-Troubleshooting Log Section

```
[log]
verbose = all
standard = network
all = memory
memory = logfile
memory-storage-size = 32 MB
```

With this configuration, an application generates log events of the Standard level and sends them to Message Server. It also generates log events of the Standard, Interaction, Trace, and Debug levels, and sends them to the memory output. The most current log is stored to a file named `logfile`, which the

application creates in its working directory. Increased memory storage allows an application to save more of the log information generated before a failure. Use this configuration when trying to reproduce an application's failure. The memory log file will contain a snapshot of the application's log at the moment of failure; this should help you and Genesys Technical Support identify the reason for the failure.

Note: If you are running an application on UNIX, and you do not specify any files in which to store the memory output snapshot, a core file that the application produces before terminating contains the most current application log. Provide the application's core file to Genesys Technical Support when reporting a problem.

Debug Log Options

The following options enable you to generate Debug logs containing information about specific operations of an application.

x-conn-debug-open

Default Value: 0

Valid Values:

- 0 Log records are not generated.
- 1 Log records are generated.

Changes Take Effect: After restart

Generates Debug log records about “open connection” operations of the application.

Warning! Use this option only when requested by Genesys Technical Support.

x-conn-debug-select

Default Value: 0

Valid Values:

- 0 Log records are not generated.
- 1 Log records are generated.

Changes Take Effect: After restart

Generates Debug log records about “socket select” operations of the application.

Warning! Use this option only when requested by Genesys Technical Support.

x-conn-debug-timers

Default Value: 0

Valid Values:

- 0 Log records are not generated.
- 1 Log records are generated.

Changes Take Effect: After restart

Generates Debug log records about the timer creation and deletion operations of the application.

Warning! Use this option only when requested by Genesys Technical Support.

x-conn-debug-write

Default Value: 0

Valid Values:

- 0 Log records are not generated.
- 1 Log records are generated.

Changes Take Effect: After restart

Generates Debug log records about “write” operations of the application.

Warning! Use this option only when requested by Genesys Technical Support.

x-conn-debug-security

Default Value: 0

Valid Values:

- 0 Log records are not generated.
- 1 Log records are generated.

Changes Take Effect: After restart

Generates Debug log records about security-related operations, such as Transport Layer Security and security certificates.

Warning! Use this option only when requested by Genesys Technical Support.

x-conn-debug-api

Default Value: 0

Valid Values:

- 0 Log records are not generated.
- 1 Log records are generated.

Changes Take Effect: After restart

Generates Debug log records about connection library function calls.

Warning! Use this option only when requested by Genesys Technical Support.

x-conn-debug-dns

Default Value: 0

Valid Values:

- 0 Log records are not generated.
- 1 Log records are generated.

Changes Take Effect: After restart

Generates Debug log records about DNS operations.

Warning! Use this option only when requested by Genesys Technical Support.

x-conn-debug-all

Default Value: 0

Valid Values:

- 0 Log records are not generated.
- 1 Log records are generated.

Changes Take Effect: After restart

Generates Debug log records about open connection, socket select, timer creation and deletion, write, security-related, and DNS operations, and connection library function calls. This option is the same as enabling or disabling all of the previous x-conn-debug-`<op type>` options.

Warning! Use this option only when requested by Genesys Technical Support.

Log-Extended Section

This section must be called log-extended.

level-reassign-`<eventID>`

Default Value: Default value of log event `<eventID>`

Valid Values:

- alarm The log level of log event `<eventID>` is set to Alarm.
- standard The log level of log event `<eventID>` is set to Standard.
- interaction The log level of log event `<eventID>` is set to Interaction.

trace	The log level of log event <eventID> is set to Trace.
debug	The log level of log event <eventID> is set to Debug.
none	Log event <eventID> is not recorded in a log.

Changes Take Effect: Immediately

Specifies a log level for log event <eventID> that is different than its default level, or disables log event <eventID> completely. If no value is specified, the log event retains its default level. This option is useful when you want to customize the log level for selected log events.

These options can be deactivated with the option [level-reassign-disable](#).

Warning! Use caution when making these changes in a production environment.

Depending on the log configuration, changing the log level to a higher priority may cause the log event to be logged more often or to a greater number of outputs. This could affect system performance.

Likewise, changing the log level to a lower priority may cause the log event to be not logged at all, or to be not logged to specific outputs, thereby losing important information. The same applies to any alarms associated with that log event.

In addition to the preceding warning, take note of the following:

- Logs can be customized only by release 7.6 or later applications.
- When the log level of a log event is changed to any level except none, it is subject to the other settings in the [log] section at its new level. If set to none, it is not logged and is therefore not subject to any log configuration.
- Using this feature to change the log level of a log changes only its priority; it does not change how that log is treated by the system. For example, increasing the priority of a log to Alarm level does not mean that an alarm will be associated with it.
- Each application in a High Availability (HA) pair can define its own unique set of log customizations, but the two sets are not synchronized with each other. This can result in different log behavior depending on which application is currently in primary mode.
- This feature is not the same as a similar feature in Universal Routing Server (URS) release 7.2 or later. In this Framework feature, the priority of log events are customized. In the URS feature, the priority of debug messages only are customized. Refer to the *Universal Routing Reference Manual* for more information about the URS feature.
- You cannot customize any log event that is not in the unified log record format. Log events of the Alarm, Standard, Interaction, and Trace levels feature the same unified log record format.

Example

This is an example of using customized log level settings, subject to the following log configuration:

```
[log]
verbose=interaction
all=stderr
interaction=log_file
standard=network
```

Before the log levels of the log are changed:

- Log event 1020, with default level standard, is output to stderr and log_file, and sent to Message Server.
- Log event 2020, with default level standard, is output to stderr and log_file, and sent to Message Server.
- Log event 3020, with default level trace, is output to stderr.
- Log event 4020, with default level debug, is output to stderr.

Extended log configuration section:

```
[log-extended]
level-reassign-1020=none
level-reassign-2020=interaction
level-reassign-3020=interaction
level-reassign-4020=standard
```

After the log levels are changed:

- Log event 1020 is disabled and not logged.
- Log event 2020 is output to stderr and log_file.
- Log event 3020 is output to stderr and log_file.
- Log event 4020 is output to stderr and log_file, and sent to Message Server.

level-reassign-disable

Default Value: false

Valid Values: true, false

Changes Take Effect: Immediately

When this option is set to true, the original (default) log level of all log events in the [log-extended] section are restored. This option is useful when you want to use the default levels, but not delete the customization statements.

Log-Filter Section

The log-filter section contains configuration options used to define the default treatment of filtering data in logs. This section contains one configuration option, default-filter-type. Refer to the chapter “Hide

Selected Data in Logs” in the *Genesys 8.0 Security Deployment Guide* for complete information about this option.

Log-Filter-Data Section

The `log-filter-data` section contains configuration options used to define the treatment of filtering data in logs on a key-by-key basis. This section contains one configuration option in the form of `<key name>`. Refer to the chapter “Hide Selected Data in Logs” in the *Genesys 8.0 Security Deployment Guide* for complete information about this option.

SML Section

This section must be called `sml`.

suspending-wait-timeout

Default Value: 10

Valid Values: 5-600

Changes Take Effect: Immediately

Specifies a timeout (in seconds) after the `Stop Graceful` command is issued to an application during which the status of the application should change to `Suspending` if the application supports graceful shutdown. If the status of the application does not change to `Suspending` before the timeout expires, it is assumed that the application does not support graceful shutdown, and it is stopped ungracefully.

Use this option if you are unsure whether the Application supports graceful shutdown.

Note: This option is defined in the `Application` object, as follows:

- in Configuration Manager— `Application` object > `Properties` dialog box > `Annex` tab
-

Common Section

This section must be called `common`.

enable-async-dns

Default Value: `off`

Valid Values:

`off` Disables asynchronous processing of DNS requests.
`on` Enables asynchronous processing of DNS requests.

Changes Take Effect: Immediately

Enables the asynchronous processing of DNS requests such as, for example, host-name resolution.

Warnings!

- Use this option only when requested by Genesys Technical Support.
- Use this option only with T-Servers.

rebind-delay

Default Value: `10`

Valid Values: `0–600`

Changes Take Effect: After restart

Specifies the delay, in seconds, between socket-bind operations that are being executed by the server. Use this option if the server has not been able to successfully occupy a configured port.

Warning! Use this option only when requested by Genesys Technical Support.

Changes from 7.6 to 8.0

Table 29 on [page 216](#) provides all the changes to common configuration options between release 7.6 and the latest 8.0 release.

Table 29: Common Configuration Option Changes from 7.6 to 8.0

Option Name	Option Values	Type of Change	Details
log-filter Section			
<code>default-filter-type</code>	Additional option values	Modified	See description on page 214 .

Table 29: Common Configuration Option Changes from 7.6 to 8.0 (Continued)

Option Name	Option Values	Type of Change	Details
log-filter-data Section			
<key-name>	Additional option values	Modified	See description on page 215 .
sml Section			
suspending-wait-timeout	5-600	New	See description on page 215 .



Chapter

9

T-Server Common Configuration Options

This chapter describes the configuration options that are generally common to all T-Server types, with some exceptions noted. It contains the following sections:

- [Setting Configuration Options, page 219](#)
- [Mandatory Options, page 220](#)
- [T-Server Section, page 220](#)
- [License Section, page 225](#)
- [Agent-Reservation Section, page 228](#)
- [Multi-Site Support Section, page 229](#)
- [Translation Rules Section, page 239](#)
- [Backup-Synchronization Section, page 240](#)
- [Call-Cleanup Section, page 241](#)
- [Security Section, page 243](#)
- [Timeout Value Format, page 243](#)
- [Changes from Release 7.6 to 8.0, page 244](#)

T-Server also supports common log options described in Chapter 8, “Common Configuration Options,” on [page 197](#).

Setting Configuration Options

Unless it is specified otherwise, you set configuration options in Configuration Manager in the corresponding sections on the `options` tab for the T-Server `Application` object.

Mandatory Options

Except as noted for certain environments, the configuration of common options is not required for basic T-Server operation.

T-Server Section

The `T-Server` section contains the configuration options that are used to support the core features common to all T-Servers.

TServer This section must be called `TServer`.

ani-distribution

Default Value: `inbound-calls-only`

Valid Values: `inbound-calls-only`, `all-calls`, `suppressed`

Changes Take Effect: Immediately

Controls the distribution of the ANI information in `TEvent` messages. When this option is set to `all-calls`, the ANI attribute will be reported for all calls for which it is available. When this option is set to `suppressed`, the ANI attribute will not be reported for any calls. When this option is set to `inbound-calls-only`, the ANI attribute will be reported for inbound calls only.

background-processing

Default Value: `false`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

When set to `true`, T-Server processes all client requests in the background, giving higher priority to the rest of the messages. This ensures that it processes these messages without any significant delay.

With Background Processing functionality enabled, T-Server processes all switch messages immediately and waits until there are no switch messages before processing the message queue associated with T-Server client requests. T-Server reads all connection sockets immediately and places client requests in the input buffer, which prevents T-Server clients from disconnecting because of configured timeouts.

When T-Server processes client requests from the message queue, requests are processed in the order in which T-Server received them.

When set to `false`, T-Server processes multiple requests from one T-Server client before proceeding to the requests from another T-Server client, and so on.

Note: Use of this option can negatively impact T-Server processing speed.

background-timeout

Default Value: 60 msec

Valid Values: See “Timeout Value Format” on [page 243](#).

Changes Take Effect: Immediately

Specifies the time interval that T-Server waits before processing client requests in background mode. You must set the `background-processing` option to `true` in order for this option to take effect.

check-tenant-profile

Default Value: `false`

Valid Values: `true`, `false`

Changes Take Effect: For the next connected client

When set to `true`, T-Server checks whether a client provides the correct name and password of a tenant. If it does, T-Server allows that client to register DNs that are included in the switch configuration in the Configuration Database, but it does not allow the client to register DNs that are *not* included in the switch configuration.

consult-user-data

Default Value: `separate`

Valid Values:

<code>separate</code>	Stores user data for original and consultation calls in separate structures. The data attached to the original call is available for review or changes only to the parties of that call. The data attached to the consultation call is available only to the parties of the consultation call.
<code>inherited</code>	Copies user data from an original call to a consultation call when the consultation call is created; thereafter, stores user data separately for the original and the consultation call. Changes to the original call’s user data are not available to the parties of the consultation call, and vice versa.
<code>joint</code>	Stores user data for an original call and a consultation call in one structure. The user data structure is associated with the original call, but the parties of both the original and consultation calls can see and make changes to the common user data.

Changes Take Effect: For the next consultation call created

Specifies the method for handling user data in a consultation call.

Note: A T-Server client can also specify the `consult-user-data` mode in the `Extensions` attribute `ConsultUserData` key for a conference or transfer request. If it is specified, the method of handling user data is based on the value of the `ConsultUserData` key-value pair of the request and takes precedence over the T-Server `consult-user-data` option. If it is not specified in the client request, the value specified in the `consult-user-data` option applies.

customer-id

Default Value: No default value. (A value must be specified for a multi-tenant environment.)

Valid Values: Any character string

Changes Take Effect: Immediately

Identifies the T-Server customer. You must set this option to the name of the tenant that is using this T-Server. You must specify a value for this option if you are working in a multi-tenant environment.

Note: Do not configure the `customer-id` option for single-tenant environments.

dn-scope

Default Value: `undefined`

Valid Values: `undefined`, `switch`, `office`, `tenant`

Specifies whether DNs associated with the `Switch`, `Switching Office`, or `Tenant` objects will be considered in the T-Server monitoring scope, enabling T-Server to report calls to or from those DNs as internal.

With a value of `tenant`, all DNs associated with the switches that are within the `Tenant` will be in the T-Server monitoring scope. With a value of `office`, all DNs associated with the switches that are within the `Switching Office` will be in the T-Server monitoring scope. With a value of `switch`, all DNs associated with the `Switch` will be in the T-Server monitoring scope.

With a value of `undefined` (the default), pre-8.0 T-Server behavior applies.

Note: Setting the option to a value of `office` or `tenant`, which requires T-Server to monitor a large set of configuration data, may negatively affect T-Server performance.

log-trace-flags

Default Value: `+iscc, +cfg$dn, -cfgserv, +passwd, +udata, -devlink, -sw, -req, -callops, -conn, -client`

Valid Values (in any combination):

<code>+/-iscc</code>	Turns on/off the writing of information about Inter Server Call Control (ISCC) transactions.
<code>+/-cfg\$dn</code>	Turns on/off the writing of information about DN configuration.
<code>+/-cfgserv</code>	Turns on/off the writing of messages from Configuration Server.
<code>+/-passwd</code>	Turns on/off the writing of <code>AttributePassword</code> in <code>TEvents</code> .
<code>+/-udata</code>	Turns on/off the writing of attached data.
<code>+/-devlink</code>	Turns on/off the writing of information about the link used to send CTI messages to the switch (for multilink environments).
<code>+/-sw</code>	Reserved by Genesys Engineering.
<code>+/-req</code>	Reserved by Genesys Engineering.
<code>+/-callops</code>	Reserved by Genesys Engineering.
<code>+/-conn</code>	Reserved by Genesys Engineering.
<code>+/-client</code>	Turns on/off the writing of additional information about the client's connection.

Changes Take Effect: Immediately

Specifies—using a space-, comma- or semicolon-separated list—the types of information that are written to the log files.

management-port

Default Value: `0`

Valid Values: `0` or any valid TCP/IP port

Changes Take Effect: After T-Server is restarted

Specifies the TCP/IP port that management agents use to communicate with T-Server. If set to `0` (zero), this port is not used.

merged-user-data

Default Value: `main-only`

Valid Values:

<code>main-only</code>	T-Server attaches user data from the remaining call only.
<code>merged-only</code>	T-Server attaches user data from the merging call.
<code>merged-over-main</code>	T-Server attaches user data from the remaining and the merging call. In the event of equal keys, T-Server uses data from the merging call.
<code>main-over-merged</code>	T-Server attaches data from the remaining and the merging call. In the event of equal keys, T-Server uses data from the remaining call.

Changes Take Effect: Immediately

Specifies the data that is attached to the resulting call after a call transfer, conference, or merge completion.

Note: The option setting does not affect the resulting data for merging calls if the `consult-user-data` option is set to `joint`. (See “consult-user-data” on [page 221](#).)

propagated-call-type

Default Value: `false`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

When set to `false`, T-Server reports a value in the `CallType` attribute as it did in pre-8.0 releases and extends distribution of call-related TEvents that contain the `PropagatedCallType` attribute (if known). This provides backward compatibility with existing T-Server clients.

When set to `true`, T-Server extends distribution of call-related TEvents that contain a call type value in the `LocalCallType` attribute (as in a single-site T-Server deployment) and replaces the value of the regular `CallType` attribute with the `PropagatedCallType` value.

server-id

Default Value: An integer equal to the value `ApplicationDBID` as reported by Configuration Server

Valid Values: Any integer from 0–16383

Changes Take Effect: Immediately

Specifies the Server ID that T-Server uses to generate Connection IDs and other unique identifiers. In a multi-site environment, you must assign each T-Server a unique Server ID, in order to avoid confusion in reporting applications and T-Server behavior.

Configuration of this option is necessary for Framework environments in which there are two or more instances of the Configuration Database.

Note: If you do not specify a value for this option, T-Server populates it with the `ApplicationDBID` as reported by Configuration Server. Each data object in the Configuration Database is assigned a separate DBID that maintains a unique Server ID for each T-Server configured in the database.

Warning! Genesys does not recommend using multiple instances of the Configuration Database.

user-data-limit

Default Value: 16000

Valid Values: 0–65535

Changes Take Effect: Immediately

Specifies the maximum size (in bytes) of user data in a packed format.

Note: When T-Server works in mixed 8.x/7.x/6.x environment, the value of this option must not exceed the default value of 16000 bytes; otherwise, 6.x T-Server clients might fail.

License Section

The License section contains the configuration options that are used to configure T-Server licenses. They set the upper limit of the seat-related DN licenses (`tserver_sdn`) that T-Server tries to check out from a license file. See “License Checkout” on [page 226](#).

license This section must be called `license`.

Notes: T-Server also supports the `license-file` option described in the *Genesys Licensing Guide*.

The `license` section is not applicable to Network T-Server for DTAG.

If you use two or more T-Servers, and they share licenses, you must configure the following options in the `license` section of the T-Servers.

num-of-licensesDefault Value: 0 or `max` (all available licenses)Valid Values: 0 or string `max`

Changes Take Effect: Immediately

Specifies how many DN licenses T-Server checks out. T-Server treats a value of 0 (zero) the same as it treats `max`—that is, it checks out all available licenses.

The sum of all `num-of-licenses` values for all concurrently deployed T-Servers must not exceed the number of seat-related DN licenses (`tserver_sdn`) in the corresponding license file. The primary and backup T-Servers share the same licenses, and therefore they need to be counted only once. T-Server checks out the number of licenses indicated by the value for this option, regardless of the number actually in use.

num-sdn-licenses

Default Value: 0 or max (All DN licenses are seat-related)

Valid Values: String max (equal to the value of num-of-licenses), or any integer from 0–9999

Changes Take Effect: Immediately

Specifies how many seat-related licenses T-Server checks out. A value of 0 (zero) means that T-Server does not grant control of seat-related DNs to any client, and it does not look for seat-related DN licenses at all.

The sum of all num-sdn-licenses values for all concurrently deployed T-Servers must not exceed the number of seat-related DN licenses (tserver_sdn) in the corresponding license file. The primary and backup T-Servers share the same licenses, and therefore they need to be counted only once. T-Server checks out the number of licenses indicated by the value for this option, regardless of the number actually in use.

Notes: For Network T-Servers, Genesys recommends setting this option to 0.

Be sure to configure in the Configuration Database all the DNs that agents use (Extensions and ACD Positions) and that T-Server should control. For further information, see Chapter 7, “DNs and Agent Logins,” [page 43](#).

License Checkout

[Table 30](#) shows how to determine the number of seat-related DN licenses that T-Server attempts to check out. See the examples on [page 227](#).

Table 30: License Checkout Rules

Options Settings ^a		License Checkout ^b
num-of-licenses	num-sdn-licenses	Seat-related DN licenses
max (or 0)	max	all available
max (or 0)	x	x
max (or 0)	0	0
x	max	x
x	y	min (y, x)
x	0	0

- a. In this table, the following conventions are used: x and y - are positive integers; \max is the maximum number of licenses that T-Server can check out; $\min(y, x)$ is the lesser of the two values defined by y and x , respectively.
- b. The License Checkout column shows the number of licenses that T-Server attempts to check out. The actual number of licenses will depend on the licenses' availability at the time of checkout, and it is limited to 9999.

Examples

This section presents examples of option settings in the `License` section.

Example 1

If...		Then...
Options Settings	License File Settings	License Checkout
num-of-licenses = \max	tserver_sdn = 500	500 seat-related DNs
num-sdn-licenses = \max		

Example 2

If...		Then...
Options Settings	License File Settings	License Checkout
num-of-licenses = 1000	tserver_sdn = 500	500 seat-related DNs
num-sdn-licenses = \max		

Example 3

If...		Then...
Options Settings	License File Settings	License Checkout
num-of-licenses = 1000	tserver_sdn = 600	400 seat-related DNs
num-sdn-licenses = 400		

Example 4

If...		Then...
Options Settings	License File Settings	License Checkout
num-of-licenses = max	tserver_sdn = 5000	1000 seat-related DNs
num-sdn-licenses = 1000		

Agent-Reservation Section

The Agent-Reservation section contains the configuration options that are used to customize the T-Server Agent Reservation feature. See “Agent Reservation” on [page 30](#) section for details on this feature.

agent-reservation This section must be called `agent-reservation`.

Note: The Agent Reservation functionality is currently a software-only feature that is used to coordinate multiple client applications. This feature does not apply to multiple direct or ACD-distributed calls.

collect-lower-priority-requests

Default Value: `true`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

Specifies whether an agent reservation request is collected, depending on its priority during the time interval specified by the `request-collection-time` configuration option. When set to `false`, during the `request-collection-time` interval T-Server collects reservation requests of the highest priority only, rejecting newly submitted requests that have a lower priority or rejecting all previously submitted requests if a request with a higher priority arrives. When set to `true` (the default), agent reservation requests are collected as they were in pre-8.0 releases.

reject-subsequent-request

Default Value: `true`

Valid Values:

`true` T-Server rejects subsequent requests.

`false` A subsequent request prolongs the current reservation made by the same client application for the same agent.

Changes Take Effect: Immediately

Specifies whether T-Server rejects subsequent requests from the same client application, for an agent reservation for the same Agent object that is currently reserved.

Note: Genesys does not recommend setting this option to `false` in a multi-site environment in which remote locations use the Agent-Reservation feature.

request-collection-time

Default Value: 100 msec

Valid Values: See “Timeout Value Format” on [page 243](#).

Changes Take Effect: Immediately

Specifies the interval that agent reservation requests are collected before a reservation is granted. During this interval, agent reservation requests are delayed, in order to balance successful reservations between client applications (for example, Universal Routing Servers).

reservation-time

Default Value: 10000 msec

Valid Values: See “Timeout Value Format” on [page 243](#).

Changes Take Effect: Immediately

Specifies the default interval for which an Agent DN is reserved. During this interval, the agent cannot be reserved again.

Multi-Site Support Section

The Multi-Site Support section contains the configuration options that are used to support multi-site environments with the Inter Server Call Control (ISCC) feature. The configuration options in this section of the document are grouped with related options that support the same functionality, as follows:

- [ISCC Transaction Options, page 231](#)
- [Transfer Connect Service Options, page 235](#)
- [ISCC/COF Options, page 236](#)
- [Event Propagation Options, page 238](#)
- [Number Translation Option, page 239](#)

extrouter This configuration section must be called `extrouter`.

For a description of the ways in which T-Server supports multi-site configurations and for an explanation of the configuration possibilities for a multi-site operation, see the “[Multi-Site Support](#)” chapter.

Note: In a multi-site environment, you must configure the `timeout`, `cast-type`, and `default-dn` options with the same value for both the primary and backup T-Servers. If you do not do this, the value specified for the backup T-Server overrides the value specified for the primary T-Server.

match-call-once

Default Value: `true`

Valid Values:

<code>true</code>	ISCC does not process (match) an inbound call that has already been processed (matched).
<code>false</code>	ISCC processes (attempts to match) a call as many times as it arrives at an ISCC resource or multi-site-transfer target.

Changes Take Effect: Immediately

Specifies how many times ISCC processes an inbound call when it arrives at an ISCC resource. When set to `false`, ISCC processes (attempts to match) the call even if it has already been processed.

Note: Genesys does not recommend changing the default value of the `match-call-once` option to `false` unless you have specific reasons. Setting this option to `false` may lead to excessive or inconsistent call data updates.

reconnect-tout

Default Value: `5 sec`

Valid Values: See “Timeout Value Format” on [page 243](#).

Changes Take Effect: At the next reconnection attempt

Specifies the time interval after which a remote T-Server attempts to connect to this T-Server after an unsuccessful attempt or a lost connection. The number of attempts is unlimited. At startup, T-Server immediately attempts the first connection, without this timeout.

report-connid-changes

Default Value: `false`

Valid Values:

<code>true</code>	<code>EventPartyChanged</code> is generated.
<code>false</code>	<code>EventPartyChanged</code> is not generated.

Changes Take Effect: Immediately

Specifies whether the destination T-Server generates `EventPartyChanged` for the incoming call when the resulting `ConnID` attribute is different from the `ConnID` attribute of an instance of the same call at the origination location.

use-data-from

Default Value: `current`

Valid Values:

<code>active</code>	The values of <code>UserData</code> and <code>ConnID</code> attributes are taken from the consultation call.
<code>original</code>	The values of <code>UserData</code> and <code>ConnID</code> attributes are taken from the original call.
<code>active-data-original-call</code>	The value of the <code>UserData</code> attribute is taken from the consultation call and the value of <code>ConnID</code> attribute is taken from the original call.
<code>current</code>	<p>If the value of <code>current</code> is specified, the following occurs:</p> <ul style="list-style-type: none"> • Before the transfer or conference is completed, the <code>UserData</code> and <code>ConnID</code> attributes are taken from the consultation call. • After the transfer or conference is completed, <code>EventPartyChanged</code> is generated, and the <code>UserData</code> and <code>ConnID</code> are taken from the original call.

Changes Take Effect: Immediately

Specifies the call from which the values for the `UserData` and `ConnID` attributes are taken for a consultation call that is routed or transferred to a remote location.

Note: For compatibility with the previous T-Server releases, you can use the values `consult`, `main`, and `consult-user-data` for this option. These are aliases for `active`, `original`, and `current`, respectively.

ISCC Transaction Options

cast-type

Default Value: `route`, `route-uu`, `reroute`, `direct-callid`, `direct-uu`, `direct-network-callid`, `direct-notoken`, `direct-digits`, `direct-ani`, `dnis-pool`, `pullback`

Valid Values: `route`, `route-uu`, `reroute`, `direct-callid`, `direct-uu`, `direct-network-callid`, `direct-notoken`, `direct-digits`, `direct-ani`, `dnis-pool`, `pullback`

Changes Take Effect: For the next request for the remote service

Specifies—using a space-, comma- or semicolon-separated list—the routing types that can be performed for this T-Server.

The valid values provide for a range of mechanisms that the ISCC feature can support with various T-Servers, in order to pass call data along with calls between locations.

Because switches of different types provide calls with different sets of information parameters, some values might not work with your T-Server. See Table 3 on [page 81](#) for information about supported transaction types by a specific T-Server. The “[Multi-Site Support](#)” chapter also provides detailed descriptions of all transaction types.

Notes: For compatibility with the previous T-Server releases, you can use the `direct` value for this option. This is an alias for `direct-callid`.

An alias, `route-notoken`, has been added to the `route` value.

default-dn

Default Value: No default value

Valid Values: Any DN

Changes Take Effect: For the next request for the remote service

Specifies the DN to which a call is routed when a Destination DN (`AttributeOtherDN`) is not specified in the client’s request for routing. If neither this option nor the client’s request contains the destination DN, the client receives `EventError`.

Note: This option is used only for requests with route types `route`, `route-uui`, `direct-callid`, `direct-network-callid`, `direct-uui`, `direct-notoken`, `direct-digits`, and `direct-ani`.

direct-digits-key

Default Value: `CDT_Track_Num`

Valid Values: Any valid key name of a key-value pair from the `UserData` attribute

Changes Take Effect: For the next request for the remote service

Specifies the name of a key from the `UserData` attribute that contains a string of digits that are used as matching criteria for remote service requests with the `direct-digits` routing type.

Note: For compatibility with the previous T-Server releases, this configuration option has an alias value of `cdt-udata-key`.

dn-for-unexpected-calls

Default Value: No default value

Valid Values: Any DN

Changes Take Effect: Immediately

Specifies a default DN for unexpected calls arriving on an External Routing Point.

network-request-timeout

Default Value: 20 sec

Valid Values: See “Timeout Value Format” on [page 243](#).

Changes Take Effect: For the next network request

For a premise T-Server, this option specifies the time interval that the premise T-Server waits for a response, after relaying a TNetwork<...> request to the Network T-Server. For a Network T-Server, this option specifies the time interval that the Network T-Server waits for a response from an SCP (Service Control Point), after initiating the processing of the request by the SCP.

When the allowed time expires, T-Server cancels further processing of the request and generates EventError.

register-attempts

Default Value: 5

Valid Values: Any positive integer

Changes Take Effect: For the next registration

Specifies the number of attempts that T-Server makes to register a dedicated External Routing Point.

register-tout

Default Value: 2 sec

Valid Values: See “Timeout Value Format” on [page 243](#).

Changes Take Effect: For the next registration

Specifies the time interval after which T-Server attempts to register a dedicated External Routing Point. Counting starts when the attempt to register a Routing Point fails.

request-tout

Default Value: 20 sec

Valid Values: See “Timeout Value Format” on [page 243](#).

Changes Take Effect: For the next request for remote service

Specifies the time interval that a T-Server at the origination location waits for a notification of routing service availability from the destination location. Counting starts when the T-Server sends a request for remote service to the destination site.

resource-allocation-modeDefault Value: `circular`

Valid Values:

- `home` T-Server takes an alphabetized (or numerically sequential) list of configured DNs and reserves the first available DN from the top of the list for each new request. For example, if the first DN is not available, the second DN is allocated for a new request. If the first DN is freed by the time the next request comes, the first DN is allocated for this next request.
- `circular` T-Server takes the same list of configured DNs, but reserves a subsequent DN for each subsequent request. For example, when the first request comes, T-Server allocates the first DN; when the second request comes, T-Server allocates the second DN; and so on. T-Server does not reuse the first DN until reaching the end of the DN list.

Changes Take Effect: Immediately

Specifies the manner in which T-Server allocates resources (that is, DNs of the External Routing Point type and Access Resources with Resource Type `dnis`) for multi-site transaction requests.

resource-load-maximumDefault Value: `0`

Valid Values: Any positive integer

Changes Take Effect: Immediately

Specifies the maximum number of ISCC routing transactions that can be concurrently processed at a single DN of the External Routing Point route type. After a number of outstanding transactions at a particular DN of the External Routing Point type reaches the specified number, T-Server considers the DN not available. Any subsequent request for this DN is queued until the number of outstanding transactions decreases. A value of `0` (zero) means that no limitation is set to the number of concurrent transactions at a single External Routing Point. In addition, the `0` value enables T-Server to perform load balancing of all incoming requests among all available External Routing Points, in order to minimize the load on each DN.

route-dn

Default Value: No default value

Valid Values: Any DN

Changes Take Effect: Immediately

Specifies the DN that serves as a Routing Point for the `route` transaction type in the multiple-to-one access mode.

timeoutDefault Value: `60 sec`Valid Values: See “Timeout Value Format” on [page 243](#).

Changes Take Effect: For the next request for remote service

Specifies the time interval that the destination T-Server waits for a call routed from the origination location. Counting starts when this T-Server notifies the requesting T-Server about routing service availability. The timeout must be long enough to account for possible network delays in call arrival.

use-implicit-access-numbers

Default Value: `false`

Valid Values: `true`, `false`

Changes Take Effect: After T-Server is restarted

Determines whether an External Routing Point in which at least one access number is specified is eligible for use as a resource for calls coming from switches for which an access number is not specified in the External Routing Point. If this option is set to `false`, the External Routing Point is not eligible for use as a resource for calls coming from such switches. If this option is set to `true`, an implicit access number for the External Routing Point, composed of the switch access code and the DN number of the External Routing Point, will be used.

Note: If an External Routing Point does not have an access number specified, this option will not affect its use.

Transfer Connect Service Options

tcs-queue

Default Value: No default value

Valid Values: Any valid DN number

Changes Take Effect: For the next request for the remote service

Specifies the TCS DN number to which a call, processed by the TCS feature, is dialed after the originating external router obtains an access number. This option applies only if the `tcs-use` option is activated.

tcs-use

Default Value: `never`

Valid Values:

<code>never</code>	The TCS feature is not used.
<code>always</code>	The TCS feature is used for every call.
<code>app-defined</code>	In order to use the TCS feature for a multi-site call transfer request, a client application must add a key-value pair with a TC-type key and a nonempty string value to the <code>UserData</code> attribute of the request.

Changes Take Effect: Immediately

Specifies whether the Transfer Connect Service (TCS) feature is used.

Note: For compatibility with the previous T-Server releases, you can use the value `up-app-depended` for this option. This is an alias for `app-defined`.

ISCC/COF Options

cof-ci-defer-create

Default Value: 0

Valid Values: See “Timeout Value Format” on [page 243](#).

Changes Take Effect: Immediately

Specifies the time interval that T-Server waits for call data from the switch before generating a negative response for a call data request from a remote T-Server. If T-Server detects the matching call before this timeout expires, it sends the requested data. This option applies only if the `cof-feature` option is set to `true`.

cof-ci-defer-delete

Default Value: 0

Valid Values: See “Timeout Value Format” on [page 243](#).

Changes Take Effect: Immediately

Specifies the time interval that T-Server waits before deleting call data that might be overflowed. If set to 0, deletion deferring is disabled. This option applies only if the `cof-feature` option is set to `true`.

cof-ci-req-tout

Default Value: 500 msec

Valid Values: See “Timeout Value Format” on [page 243](#).

Changes Take Effect: For the next COF operation

Specifies the time interval during which T-Server will wait for call data requested with respect to a call originated at another site. After T-Server sends the call data request to remote T-Servers, all events related to this call will be suspended until either the requested call data is received or the specified timeout expires. This option applies only if the `cof-feature` option is set to `true`.

cof-ci-wait-all

Default Value: `false`

Valid Values:

- | | |
|--------------------|--|
| <code>true</code> | T-Server waits for responses from all T-Servers that might have the requested call data before updating the call data with the latest information. |
| <code>false</code> | T-Server updates the call data with the information received from the first positive response. |

Changes Take Effect: Immediately

Specifies whether T-Server, after sending a request for matching call data, waits for responses from other T-Servers before updating the call data (such as `CallHistory`, `ConnID`, and `UserData`) for a potentially overflowed call. The waiting period is specified by the `cof-ci-req-tout` and `cof-rci-tout` options. This option applies only if the `cof-feature` option is set to `true`.

cof-feature

Default Value: `false`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

Enables or disables the Inter Server Call Control/Call Overflow (ISCC/COF) feature.

cof-rci-tout

Default Value: `10 sec`

Valid Values: See “Timeout Value Format” on [page 243](#).

Changes Take Effect: For the next COF operation

Specifies the time interval that T-Server waits for call data from other T-Servers’ transactions. Counting starts when `cof-ci-req-tout` expires. This option applies only if the `cof-feature` option is set to `true`.

local-node-id

Default Value: `0`

Valid Values: `0` or any positive integer

Changes Take Effect: Immediately

This option, if enabled, checks all networked calls against the specified `NetworkNodeID` (the identity of the switch to which the call initially arrived). If the `NetworkNodeID` is the same as the value of this option, the request for call information is *not* sent. The default value of `0` disables the functionality of this option. To establish an appropriate `NetworkNodeID`, specify a value other than the default. This option applies only if the `cof-feature` option is set to `true`.

Note: This option applies only to T-Server for Nortel Communication Server 2000/2100.

default-network-call-id-matching

Default Value: No default value

Valid Values: See the “T-Server-Specific Configuration Options” chapter for an option description for your T-Server

Changes Take Effect: Immediately

When a value for this option is specified, T-Server uses the `NetworkCallID` attribute for the ISCC/COF call matching.

To activate this feature, the `cof-feature` option must be set to `true`.

Note: SIP Server and several T-Servers support the `NetworkCallID` attribute for the ISCC/COF call matching in a way that requires setting this option to a specific value. For information about the option value that is specific for your T-Server, see the “T-Server-Specific Configuration Options” chapter of your *T-Server Deployment Guide*.

Event Propagation Options

compound-dn-representation

Default Value: `true`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

Specifies which format T-Server uses to represent a DN when reporting an `OtherDN` or `ThirdPartyDN` attribute in event propagation messages.

When set to `true`, the `<switch>::DN` (compound) format is used. This option value supports backward compatibility for pre-8.0 T-Server ISCC/EPP functionality and is provided for multi-site deployments where the same DNs are configured under several switches.

When set to `false`, the `DN` (non-compound) format is used. This option value ensures more transparent reporting of `OtherDN` or `ThirdPartyDN` attributes and is recommended for all single-site deployments, as well as for multi-site deployments that do not have the same DNs configured under several switches. This option applies only if the `event-propagation` option is set to `list`.

Note: Local DNs are always represented in the non-compound (DN) form.

epp-tout

Default Value: 0

Valid Values: See “Timeout Value Format” on [page 243](#).

Changes Take Effect: Immediately

Specifies the time interval during which T-Server attempts to resolve race conditions that may occur in deployments that use switch partitioning or intelligent trunks. This option applies only if the [event-propagation](#) option is set to `list`.

Note: If the time interval is not long enough to account for possible network switching delays, T-Server may produce duplicated events, such as events that are propagated by the ISCC and generated locally.

event-propagation

Default Value: `list`

Valid Values:

- `list` Changes in user data and party events are propagated to remote locations through call distribution topology.
- `off` The feature is disabled. Changes in user data and party events are not propagated to remote locations.

Changes Take Effect: Immediately

Specifies whether the Event Propagation feature is enabled.

Number Translation Option

inbound-translator-<n>

Default Value: No default value.

Valid Value: Any valid name

Changes Take Effect: Immediately

Specifies the name of another configuration section as the value for the `inbound-translator` option. For example,

`inbound-translator-1 = ani-translator`

where `ani-translator` is the name of the configuration that describes the translation rules for inbound numbers.

Translation Rules Section

The section name is specified by the `inbound-translator-<n>` option. It contains options that define translation rules for inbound numbers.

You can choose any name for this section, provided that it matches the value of the section. Every option in this section corresponds to a rule and must

conform to the format described below. You can configure as many rules as necessary to accommodate your business needs.

rule-<n>

Default Value: No default value

Valid Value: Any valid string in the following format:

in-pattern=<input pattern value>;out-pattern=<output pattern value>

Changes Take Effect: Immediately

Defines a rule to be applied to an inbound number. The two parts of the option value describe the input and output patterns in the rule. When configuring the pattern values, follow the syntax defined in “Using ABNF for Rules” on [page 90](#). See “Configuring Number Translation” on [page 97](#) for examples of these rules as well as detailed instructions for creating rules for your installation. For example, a value for this configuration option might look like this:

```
rule-01 = in-pattern=0111#CABBB*ccD;out-pattern=ABD
```

Backup-Synchronization Section

The Backup-Synchronization section contains the configuration options that are used to support a high-availability (hot standby redundancy type) configuration.

backup-sync This section must be called backup-sync.

Note: These options apply only to T-Servers that support the hot standby redundancy type.

addp-remote-timeout

Default Value: 0

Valid Values: Any integer from 0–3600

Changes Take Effect: Immediately

Specifies the time interval that the redundant T-Server waits for a response from this T-Server after sending a polling signal. The default value of 0 (zero) disables the functionality of this option. To establish an appropriate timeout, specify a value other than the default. This option applies only if the [protocol](#) option is set to addp.

addp-timeout

Default Value: 0

Valid Values: Any integer from 0–3600

Changes Take Effect: Immediately

Specifies the time interval that this T-Server waits for a response from another T-Server after sending a polling signal. The default value of 0 (zero) disables

the functionality of this option. To establish an appropriate timeout, specify a value other than the default. This option applies only if the `protocol` option is set to `addp`.

addp-trace

Default Value: `off`

Valid Values:

<code>off, false, no</code>	No trace (default).
<code>local, on, true, yes</code>	Trace on this T-Server side only.
<code>remote</code>	Trace on the redundant T-Server side only.
<code>full, both</code>	Full trace (on both sides).

Changes Take Effect: Immediately

Specifies whether `addp` messages are traced in a log file, to what level the trace is performed, and in which direction. This option applies only if the `protocol` option is set to `addp`.

protocol

Default Value: `default`

Valid Values:

<code>default</code>	The feature is not active.
<code>addp</code>	Activates the Advanced Disconnect Detection Protocol.

Changes Take Effect: When the next connection is established

Specifies the name of the method used to detect connection failures. If you specify the `addp` value, you must also specify a value for the `addp-timeout`, `addp-remote-timeout`, and `addp-trace` options.

sync-reconnect-tout

Default Value: `20 sec`

Valid Values: See “Timeout Value Format” on [page 243](#).

Changes Take Effect: Immediately

Specifies the time interval after which the backup T-Server attempts to reconnect to the primary server (for a synchronized link).

Call-Cleanup Section

The Call-Cleanup section contains the configuration options that are used to control detection and cleanup of stuck calls in T-Server. For more information on stuck call handling, refer to the “Stuck Call Management” chapter in the *Framework 8.0 Management Layer User’s Guide*.

call-cleanup This section must be called `call-cleanup`.

cleanup-idle-tout

Default Value: 0

Valid Values: See “Timeout Value Format” on [page 243](#).

Changes Take Effect: Immediately

Specifies the time interval that T-Server waits for a call to be updated from its last update. After this time elapses, if no new events about the call are received, T-Server clears this call as a stuck call, either by querying the switch (if a CTI link provides such capabilities) or by deleting the call information from memory unconditionally. The default value of 0 disables the stuck calls cleanup.

Note: If the call-cleanup functionality is enabled in T-Server for Avaya Communication Manager, the UCID (Universal Call ID) feature must be enabled on the switch as well. This allows the UCID to be generated and passed to T-Server.

notify-idle-tout

Default Value: 0

Valid Values: See “Timeout Value Format” on [page 243](#).

Changes Take Effect: Immediately

Specifies the time interval that T-Server waits for a call to be updated from its last update. After this time elapses, if no new events about the call are received, T-Server reports this call as a stuck call. The default value of 0 disables the stuck calls notification.

periodic-check-tout

Default Value: 10 min

Valid Values: See “Timeout Value Format” on [page 243](#).

Changes Take Effect: Immediately

Specifies the time interval for periodic checks for stuck calls. These checks affect both notification and cleanup functionality, and are made by checking T-Server’s own call information with call information available in the switch. For performance reasons, T-Server does not verify whether the `notify-idle-tout` or `cleanup-idle-tout` option has expired before performing this check.

Note: Setting this option to a value of less than a few seconds can affect T-Server performance.

Examples

This section presents examples of option settings in the `call-cleanup` section.

Example 1 `cleanup-idle-tout = 0`

```
notify-idle-tout = 0
periodic-check-tout = 10
```

With these settings, T-Server will not perform any checks for stuck calls.

Example 2

```
cleanup-idle-tout = 0
notify-idle-tout = 5 min
periodic-check-tout = 10 min
```

With these settings, T-Server performs checks every 10 minutes and sends notifications about all calls that have been idle for at least 5 minutes.

Example 3

```
cleanup-idle-tout = 20 min
notify-idle-tout = 5 min
periodic-check-tout = 10 min
```

With these settings, T-Server performs checks every 10 minutes, sends notifications about all calls that have been idle for at least 5 minutes, and attempts to clean up all calls that have been idle for more than 20 minutes.

Security Section

The **Security** section contains the configuration options that are used to configure secure data exchange between T-Servers and other Genesys components. Refer to the *Genesys 8.0 Security Deployment Guide* for complete information on the security configuration.

Timeout Value Format

This section of the document describes the values to use for those T-Server common options that set various timeouts. The current format allows you to use fractional values and various time units for timeout settings.

For timeout-related options, you can specify any value that represents a time interval, provided that it is specified in one of the following formats:

```
[[[hours:]minutes:]seconds][milliseconds]
```

or

```
[hours hr][minutes min][seconds sec][milliseconds msec]
```

Where a time unit name in *italic* (such as *hours*) is to be replaced by an integer value for this time unit.

Integer values with no measuring units are still supported, for compatibility with previous releases of T-Server. When you do not specify any measuring units, the units of the default value apply. For example, if the default value equals `60 sec`, specifying the value of `30` sets the option to 30 seconds.

Example 1

The following settings result in a value of 1 second, 250 milliseconds:

```
sync-reconnect-tout = 1.25
```

```
sync-reconnect-tout = 1 sec 250 msec
```

Example 2

The following settings result in a value of 1 minute, 30 seconds:

```
timeout = 1:30
```

```
timeout = 1 min 30 sec
```

Changes from Release 7.6 to 8.0

[Table 31](#) lists the configuration options that:

- Are new or changed in the 8.0 release of T-Server
- Have been added or changed since the most recent 7.6 release of this document

If a configuration option has been replaced with another that enables the same functionality, the new option name and its location in this chapter are noted.

Table 31: Option Changes from Release 7.6 to 8.0

Option Name	Option Values	Type of Change	Details
TServer Section			
dn-scope	switch, office, tenant	New in 8.0	See the option description on page 222 .
propagated-call-type	true, false	New in 8.0	See the option description on page 224 .
extrouter Section			
compound-dn-representation	true, false	New in 8.0	See the option description on page 238 .
default-network-call-id-matching	No default value	See Details	This option is undocumented in previous versions. See the option description on page 238 .
epp-tout	Timeout value format	New in 8.0	See the option description on page 239 .

Table 31: Option Changes from Release 7.6 to 8.0 (Continued)

Option Name	Option Values	Type of Change	Details
use-data-from	active, original, current, active-data-original-call	New default value	New default value: current. Old default value: active. See the option description on page 231 .
agent-reservation Section			
collect-lower-priority-requests	true, false	New in 8.0	See the option description on page 228 .



Chapter

10

Configuration Options in T-Server for HiPath DX

This chapter describes configuration options unique to the T-Server for HiPath DX and includes these sections:

- [Application-Level Options, page 247](#)
- [Agent Login-Level and DN-Level Options, page 278](#)
- [Changes from 7.2 to 8.0, page 281](#)

To establish a link connection, configure the link options that are applicable to the connection protocol used in your environment (TCP/IP).

Application-Level Options

Configuration options specific to T-Server functionality are set in Configuration Manager, in the corresponding sections on the `Options` tab of the T-Server `Application` object.

For ease of reference, the options have been arranged in alphabetical order within their corresponding sections:

- [Mandatory Options, page 247](#)
- [T-Server Section, page 248](#)
- [Call-Type-Rules Section, page 272](#)
- [Link-Control Section, page 272](#)

Mandatory Options

[Table 32 on page 248](#) lists the options that you must configure for basic T-Server operation. All other options in this chapter are configured to enable T-Server to support various features.

To establish a link connection, simply configure the link options (TCP/IP) that are applicable to the connection protocol used in your environment.

[Table 32](#) lists the options that you must configure for basic T-Server operation. All other options in this chapter are configured to enable T-Server to support various features.

Table 32: Mandatory Options

Option Name	Default Value	Details
Link-Control Section		
hostname	No default value.	Specifies the section where the CTI-link options are specified. See description on page 273 .
port	No default value.	Specifies the TCP/IP port of the link according to the switch configuration. See the description on page 275 .

T-Server Section

This section must be called TServer.

accept-dn-type

Default Value: +extension +position +acdqueue +routedn +trunk
+routequeue

Valid Values: +/-extension +/-position +/- acdqueue +/-routedn +/-trunk
+/-routequeue

- +/-extension Accepts or rejects registration on DN of type Extension (AddressTypeDN)
- +/-position Accepts or rejects registration on DN of type ACD Position (AddressTypePosition)
- +/-acdqueue Accepts or rejects registration on DN of type ACD Queue (AddressTypeQueue)
- +/-routedn Accepts or rejects registration on DN of type Routing Point (AddressTypeRouteDN)
- +/-trunk Accepts or rejects registration on DN of type Trunk or Tie Line (AddressTypeTrunk)
- +/-routequeue Accepts or rejects registration on DN of type Route Queue (AddressTypeRouteQueue)

Changes Take Effect: Immediately

Defines the supported set of device types that are not configured in the Configuration Layer but that T-Server can register.

accode-agent

Default Value: `false`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

Specifies whether T-Server uses account codes as agent Walk-Away codes. If this option is set to `true` and the agent is in `NotReady` state, when the switch reports an account code T-Server sends another `EventAgentNotReady` with an extension `ReasonCode` set to the value of the reported account code.

accode-data

Default Value: `none`

Valid Values:

<code>none</code>	T-Server does not map the switch account codes to the call user data.
<code>udata</code>	T-Server attaches reported account codes as user data, using configured keys such as <code><name defined by 'accode-name'>_<N></code> . T-Server then sends requests to set account codes to the switch, when such user data keys are used in client requests <code>AttachUserData</code> or <code>UpdateUserData</code> .
<code>ext</code>	T-Server attaches user data as extensions to all call events and does not intercept user data update requests with the reserved keys.

Changes Take Effect: Immediately

Specifies whether T-Server has to map the switch account codes to call user data (value `udata`), to extensions (value `ext`) or will not map switch account codes (value `none`).

Note: T-Server uses the reserved keys sent in any call-related client-request `Extensions` attribute, regardless of the value of this option. The only exception is when the configuration option is set to `udata` and the user data in the request contains the account code.

accode-index

Default Value: `false`

Valid Values: `false`, `true`

Changes Take Effect: Immediately

Allows T-Server to attach multiple account codes to the call. Each new unique account code is attached to the call, as extensions or user data, with the key as configured by the option `accode-name` with an appended underscore and an incremental integer index, starting from 1 (such as `AccountCode_1`). T-Server

keeps the nonindexed key updated with the latest received value, irrespective of the value of this option.

accode-name

Default Value: AccountCode

Valid Values: Any valid key name

Changes Take Effect: Immediately

Specifies the data key name under which T-Server attaches the account code to the call, as either user data or extensions.

accode-privateservice

Default Value: false

Valid Values: true, false

Changes Take Effect: Immediately

Enables or disables the use of RequestPrivateService and EventPrivateInfo for handling the account code feature.

acw-retain-call

Default Value: false

Valid Values: true, false

Changes Take Effect: Immediately

Specifies whether T-Server retains the last agent business call while the agent is in after-call work for user data updates after the call is released. Used in conjunction with [accode-data](#), this allows any subsequent account code to be attached to the previous call.

When this option is enabled, T-Server uses a Call Locking mechanism (see *Call Concentrator 7 Deployment Guide*) so that the account code can be added to the Global Call Details Records (GCDR) table after the call has been released. T-Server sends the account code in EventUserEvent rather than EventUserDataChanged, so as not to confuse existing desktop applications.

Warning! Use this option with caution. Unsolicited call events on behalf of a released call may cause problems with other applications.

acw-retain-lock

Default Value: 0

Valid Values: Any positive integer

Changes Take Effect: Immediately

Specifies the time (in seconds) that T-Server locks the call for Call Concentrator using EventUserEvent. When this option is enabled, T-Server uses a Call Locking mechanism, (see *Call Concentrator 7 Deployment Guide*) so that the account code can be added to the GCDR table after it has been released. T-Server sends EventUserEvent with a reserved extension key

LockCall and the value provided. Typically, this value should be greater than that of ACW. A value of 0 signifies no locking.

acw-in-idle-force-ready

Default Value: true

Valid Values: true, false

Changes Take Effect: Immediately

Related Feature: “Emulated Agents” on [page 154](#)

Specifies whether, after timed manual wrap-up (when you have set option [timed-acw-in-idle](#) to true), T-Server forces the agent to the Ready state. If this value is set to false, T-Server returns the agent to the agent’s previous state prior to requesting manual wrap-up.

Note: For compatability with the previous T-Server releases, you can use the name `cwk-in-idle-force-ready` for this option as an alias.

agent-emu-login-on-call

Default Value: false

Valid Values: true, false

Changes Take Effect: Immediately

Related Feature: “Emulated Agents” on [page 154](#)

Specifies whether T-Server allows an emulated agent login or logout on a device where there is a call in progress.

The option can be set in the Configuration Layer in the following places in order of precedence (highest to lowest):

1. The TServer section of the Annex tab of the Agent Login object.
2. The TServer section of the Annex tab of a device.
3. The TServer section of the application.

The value can also be set by using the extension `AgentEmuLoginOnCall` in the `TAgentLogin` or `TAgentLogout` requests. The value specified by the extension, where present, takes precedence over the settings configured in the Configuration Layer.

agent-group

Default Value: none

Valid Value: Any agent group value

Changes Take Effect: At the next agent login session

Specifies a value for a virtual group to be used for T-Server reporting.

T-Server obtains the value for this option in the following order of precedence:

1. In the TServer section of the Annex tab of the Agent Login object
2. In the TServer section of the Annex tab of the DN object
3. In the main TServer section.

agent-logout-on-unregDefault Value: `false`

Valid Values:

- | | |
|-----------------------|--|
| <code>true</code> | T-Server will log out emulated and native agents on unregister. |
| <code>false</code> | T-Server will not log out emulated or native agents on unregister. |
| <code>emu-only</code> | T-Server will log out only emulated agents on unregister. |

Changes Take Effect: At the next agent login session

Related Feature: “Emulated Agents” on [page 154](#)

Specifies whether T-Server performs an automatic logout of an agent whenever their client application unregisters the DN from T-Server. This happens whenever a client application disconnects from T-Server.

The option can be set in the Configuration Layer in the following places in order of precedence (highest to lowest):

1. The TServer section in the Annex tab of the device representing the agent’s group (such as an ACD queue).
2. The TServer section of the Annex tab of the Agent Login object.
3. The TServer section of the Annex tab of a device.
4. The TServer section of the application.

The Configuration Layer configuration setting may be overridden by adding the extension `AgentLogoutOnUnregister` to the `TAgentLogin` request.

Any subsequent self-transition `TAgentLogin` request can override the current agent association by adding the extension `AgentLogoutOnUnregister` with a value of `true`.

Similarly a `TRegisterAddress` request can override the current agent association by adding the extension `AgentLogoutOnUnregister` with a value of `true`.

agent-logout-reassocDefault Value: `false`Valid Values: `true`, `false`

- | | |
|--------------------|--|
| <code>true</code> | T-Server automatically associates a new client application with the agent. |
| <code>false</code> | T-Server does not automatically associate a new client application with the agent. |

Changes Take Effect: Immediately

Related Feature: “Emulated Agents” on [page 154](#)

Specifies whether T-Server automatically associates as a new client application with the agent, when the application either:

- Registers on the agent DN, or;

- Sends a login request while T-Server is currently waiting to log the agent out due to the previously associated client disconnecting.

Note: The new client application must have the same application name as the previously disconnected client.

The option can be set in the Configuration Layer in the TServer section of the application.

agent-no-answer-action

Default Value: none

Valid Values:

none	T-Server takes no action on agents when calls are not answered.
notready	T-Server sets agents NotReady when calls are not answered.
logout	T-Server automatically logs out agents when calls are not answered.

Changes Take Effect: Immediately

Related Feature: “No-Answer Supervision” on [page 161](#)

Defines T-Server’s default action if a logged-in agent (real or emulated) fails to answer a call within the time defined in [agent-no-answer-timeout](#). See also extension NO_ANSWER_ACTION in section “Using the Extensions Attribute” on [page 183](#) for more information about how this option is used.

Note: When you set a value for option [no-answer-action](#) on the Annex tab of an Agent Login object in the Configuration Layer, that value overrides, for that agent, the value of agent-no-answer-action in the TServer section.

agent-no-answer-overflow

Default Value: No default value

Valid Values:

none	T-Server does not attempt to overflow a call on an agent desktop when agent-no-answer-timeout expires. T-Server treats this value as the end of a list. Subsequent values are not executed.
recall	T-Server returns the call to the last distribution device (the device reported in the ThisQueue attribute of the call) when agent-no-answer-timeout expires.
release	T-Server releases the call.

<number> T-Server sends the call to the specified destination number..

Any valid overflow destination T-Server returns the call to the specified destination when `agent-no-answer-timeout` expires.

Changes Take Effect: Immediately

Related Feature: “No-Answer Supervision” on [page 161](#)

Specifies a sequence of overflow destinations that T-Server attempts to overflow to when the time specified in option `agent-no-answer-timeout` expires. T-Server attempts to overflow in the order specified in the list. If all overflow attempts fail, T-Server abandons overflow. See also extension `NO_ANSWER_OVERFLOW` in section “Using the Extensions Attribute” on [page 183](#) for more information about how this option is used.

If the list of overflow destinations contains the value `recall` and the call was not distributed, T-Server skips to the next destination in the list.

Note: When you set a value for option `no-answer-overflow` on the Annex tab of an Agent Login object in the Configuration Layer, that value overrides, for that agent, the value of `agent-no-answer-overflow` in the TServer section.

agent-no-answer-timeout

Default Value: 15

Valid Value: Any integer from 0-600

Changes Take Effect: Immediately

Related Feature: “No-Answer Supervision” on [page 161](#)

Defines the default time (in seconds) that T-Server allows for a logged-in agent (real or emulated) to answer a call before executing the actions defined in options `agent-no-answer-overflow` and `agent-no-answer-action`. A value of 0 (zero) disables the Agent No-Answer Supervision feature. See also extension `NO_ANSWER_TIMEOUT` in section “Using the Extensions Attribute” on [page 183](#) for more information about how this option is used.

Note: When you set a value for this option on the Annex tab of an Agent Login object in the Configuration Layer, that value overrides, for that agent, the value of this option set in the TServer section.

Because this T-Server supports supervised routing, the value defined for option `supervised-route-timeout` overrides the value defined for `agent-no-answer-timeout` for supervised routed calls. If a call is delivered to a device using supervised routing, and the routing timeout expires, T-Server does not apply the specified no-answer overflow. If the call is routed to an agent, T-Server does apply the specified no-answer action after the supervised-routing timeout expires.

agent-only-private-calls

Default Value: `false`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

Related Feature: “Business-Call Handling” on [page 152](#)

Specifies whether T-Server blocks the classification of a call’s business type as `private` when there is no agent on the call. When set to `false`, calls with no agents present are classified with business type `private`, enabling No-Answer Supervision (NAS) to be applied for private calls.

When set to `true`, calls remain classified with business type `unknown`.

agent-strict-id

Default Value: `false`

Valid Values: `true`, `false`, `passwd`

Changes Take Effect: Immediately

Related Feature: “Emulated Agents” on [page 154](#)

Specifies whether T-Server allows:

- Any Agent ID to be used during login (value `false`)
- Only Agent IDs configured in the Configuration Layer to be used during login (value `true`)
- Only Agent IDs that match an Agent ID configured in the Configuration Layer and that also have a matching password (value `passwd`)

backwds-compat-acw-behavior

Default Value: `false`

Valid Value: `true`, `false`

Changes Take Effect: Immediately

Related Feature: “Emulated Agents” on [page 154](#)

Specifies whether pre-7.5 behavior after-call work is enabled (value = `true`) or disabled (value = `false`), for backward compatibility.

With value `true`, if an agent receives or makes a business call while in emulated ACW, T-Server does the following:

1. Stops the ACW timer.
2. Forces the agent to the Ready state.
3. Restarts ACW (and the legal-guard timer) after the new business call is released.

If an agent makes or receives a work-related call while in ACW, T-Server does the following:

1. Suspends the ACW, but leaves the agent in the ACW state.
2. Resumes the ACW timer once the work-related call is released.

T-Server categorizes as a *work-related call* any call that an agent makes while in the NotReady state with a workmode est to AfterCallWork or AuxWork.

After the ACW and any configured legal-guard time have been completed, the agent is forced to the Ready state. If an agent makes or receives a private call during ACW, no action is taken and the ACW timer keeps running.

With value `false`, if an agent receives or makes a business call while in emulated ACW, T-Server does the following:

1. Stops the ACW timer and adds the remaining amount of ACW to the ACW period for the new call. If either of the ACW periods is untimed, the resulting ACW will also be untimed.
2. Forces the agent to the NotReady (ManualIn) state.
3. Restarts ACW after the business call is released.

If an agent makes or receives a work-related or private call while in ACW, T-Server does the following:

1. Suspends the ACW timer.
2. Forced the agent to the NotReady (ManualIn) state.
3. Returns the agent to the ACW state, and resumes the ACW timer once the call is released.

After the ACW and any configured legal-guard time have been completed, the agent is forced to the Ready state.

callback-dn

Default Value: `CallbackDN`

Valid Value: Any string that does not correspond to an existing internal device

Changes Take Effect: Immediately

Defines the value of the third-party DN used in reporting a callback scenario as a simulated single-step transfer.

Note: The value for this option should not be included in any PBX dialing plan. Any DN with this value name should not be configured in the Configuration Layer.

call-type-by-dn

Default Value: `false`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

Related Feature: “Call Type Prediction” on [page 169](#)

Enables or disables the setting of call type based on dialing plan analysis (when configured) and on the DN configuration in the Configuration Layer.

See [call-type-rules](#) for dialling plan analysis configuration.

call-type-rules

Default Value: none

Valid Values: Name for the configuration section where the digit analysis rules are defined.

Changes Take Effect: Immediately

Related Feature: “Call Type Prediction” on [page 169](#)

Specifies name for configuration section where digit analysis rules are defined.

Note: This configuration option is required if the configuration section named `call-type-rules` is absent.

clear-call-delay

Default Value: 1000

Valid Values: Any integer between 0-10000

Changes Take Effect: Immediately

Specifies the time interval, in milliseconds, that T-Server waits to clear a call after receiving a `Connection Cleared` event from the switch.

consult-supervised-rt

Default Value: false

Valid Values: true, false

Changes Take Effect: Immediately

Specifies whether T-Server allows supervised routing of consultation calls. With value `false`, T-Server forces nonsupervised routing for consultation calls, regardless of configuration option or call-by-call settings.

Note: When set at the Application level, this option defines the default value for all Routing Points. However, this option can also be specified on the Annex tab of Routing Point DNs, in which case it overrides the option set at the Application level.

convert-otherdn

Default Value: `+agentid +reserveddn`

Valid Values:

`+/-agentid` Turns on/off either the conversion of the Agent ID value provided in the `OtherDN` attribute to the DN associated with this Agent, or the DN value to Agent ID value (where appropriate).

`+/-reserveddn` Turns on/off the conversion of `OtherDN` for reserved DNs.

Changes Take Effect: Immediately

Related Feature: “Smart OtherDN Handling” on [page 163](#)

Defines whether T-Server has to convert (if applicable) the value provided in request's `AttributeOtherDN`.

correct-connidDefault Value: `true`Valid Value: `true`, `false`

Changes Take Effect: Immediately

If the option is set to `true`, T-Server corrects the wrong `ConnectionID` provided by the application in CTI requests. If the option is set to `false`, this feature is disabled.

correct-rqidDefault Value: `true`Valid Value: `true`, `false`

Changes Take Effect: Immediately

If the option is set to `true`, T-Server corrects the wrong CTI client request. If the option is set to `false`, this feature is disabled.

default-dn-typeDefault Value: `none`

Valid Values:

<code>none</code>	T-Server assigns DN type using PBX-provided information
<code>extension</code>	T-Server uses value <code>AddressTypeDN</code>
<code>position</code>	T-Server uses value <code>AddressTypePosition</code>
<code>acdqueue</code>	T-Server uses value <code>AddressTypeQueue</code>
<code>routedn</code>	T-Server uses value <code>AddressTypeRouteDN</code>
<code>trunk</code>	T-Server uses value <code>AddressTypeTrunk</code>
<code>routequeue</code>	T-Server uses value <code>AddressTypeRouteQueue</code>

Changes Take Effect: Immediately

Defines the value that T-Server applies for `AttributeAddressType` when the client does not provide that attribute or provides value `AddressTypeUnknown`.

dn-del-modeDefault Value: `idle`Valid Values: `never`, `idle`, `force`See “Timeout Value Format” on [page 243](#)

<code>never</code>	T-Server does not unregister the DN with the PBX and device related information is never deleted from T-Server memory.
<code>idle</code>	T-Server unregisters the DN with the PBX and device-related information is deleted from T-Server memory as soon as there are no more calls on this device.

force	T-Server unregisters DN with the PBX and device-related information is deleted from T-Server memory regardless of the calls existed on that DN.
-------	---

Notes: For compatibility with the previous T-Server releases, you can use the alias `dev-del-mode`.

Changes Take Effect: Immediately

Defines how T-Server handles device and device-related information when the DN is not configured in the Configuration Layer and there are no clients registered on that DN.

dn-for-undesired-calls

Default Value: No default value

Valid Values: Any valid switch DN

Changes Take Effect: Immediately

Related Feature: “Smart OtherDN Handling” on [page 163](#)

Specifies the DN that T-Server uses as the request destination if the client provides a reserved DN in the request.

Note: You can set a value for this option in the appropriate DN Annex tab in the TServer section. When set there, this value overrides the default value for the DN.

emulate-login

Default Value: on-RP

Valid Values:

true	T-Server performs an emulated login.
false	T-Server passes a login request to the PBX.
on-RP	T-Server checks the Agent Group associated with the login request. If the Agent Group is a standard Routing Point the emulated login request succeeds. This value can only be set at the Application level, and is available for backwards compatibility.

Changes Take Effect: Immediately

Related Feature: “Emulated Agents” on [page 154](#)

Specifies whether T-Server performs emulated agent login when the login device is configured in the Configuration Layer as a device of type extension. This value can be set in a number of places, and T-Server processes it in the order of precedence shown below, highest first. If the value is not present at the higher level, T-Server checks the next highest level, and so on.

1. In RequestAgentLogin, using attribute extension EmulateLogin.
2. In the Agent Login object on the Annex tab.

3. In the login device object on the Annex tab.
4. In the device representing an Agent Group object, on the Annex tab.
5. In the T-Server Application object, in the Tserver section.
6. Using an Agent Group corresponding to an object which is configured in the Configuration Layer as a device of type Routing Point.

emulated-login-state

Default Value: ready

Valid Values:

not-ready T-Server distributes EventAgentNotReady after EventAgentLogin.

ready T-Server distributes EventAgentReady after EventAgentLogin.

Changes Take Effect: Immediately

Related Feature: “Emulated Agents” on [page 154](#)

When T-Server performs an emulated agent login and the client specifies an agent work mode other than ManualIn or AutoIn, T-Server uses this option to determine which event to distribute.

This option can be set in a number of places, and T-Server processes it in the order of precedence shown below, highest first. If the value is not present at the higher level, T-Server checks the next level, and so on.

1. In the Agent Login object on the Annex tab.
2. In the agent login device on the Annex tab.
3. In the login device representing an Agent Group during login, on the Annex tab.
4. In the T-Server Application object in the Tserver section.

extn-no-answer-overflow

Default Value: No default value

Valid Values:

none T-Server does not attempt to overflow a call on an extension when [extn-no-answer-timeout](#) expires. T-Server treats this value as the end of a list. Subsequent values are not executed.

recall T-Server returns the call to the last distribution device (the device reported in the ThisQueue attribute of the call) when [extn-no-answer-timeout](#) expires.

release T-Server releases the call.

Any valid
overflow
destination
in a comma
seperated list

T-Server returns the call to the specified destination when [extn-no-answer-timeout](#) expires.

Changes Take Effect: Immediately

Related Feature: “No-Answer Supervision” on [page 161](#)

Specifies a sequence of overflow destinations that T-Server attempts to overflow to when the time specified in option `extn-no-answer-timeout` has expired.

T-Server attempts to overflow in the order specified in the list. If all overflow attempts fail, T-Server abandons overflow. See also extension `NO_ANSWER_OVERFLOW` in section “Using the Extensions Attribute” on [page 183](#) for more information about how this option is used.

If the list of overflow destinations contains the value `recall` and the call was not distributed, T-Server skips to the next destination in the list.

Note: If you set a value for option `no-answer-overflow` on the Annex tab of any Extension object in the Configuration Layer, that value overrides, for that Extension, the value of `extn-no-answer-overflow` in the TServer section.

extn-no-answer-timeout

Default Value: 15

Valid Value: Any integer from 0-600

Changes Take Effect: Immediately

Related Feature: “No-Answer Supervision” on [page 161](#)

Defines the default no-answer timeout (in seconds) that T-Server applies to any device of type Extension. When the timeout ends, T-Server executes the actions defined in option `extn-no-answer-timeout`.

A value of 0 (zero) deactivates no-answer supervision for devices of type Extension. See also extension `NO_ANSWER_TIMEOUT` in section “Using the Extensions Attribute” on [page 183](#) for more information about how this option is used.

Note: When you set a value for option `no-answer-overflow` on the Annex tab of an Extension object in the Configuration Layer, that value overrides, for that Extension, the value of `extn-no-answer-overflow` in the TServer section.

hd-login-mode

Default Value: agent

Valid Values:

<code>agent</code>	A normal agent login is performed.
<code>pn</code>	T-Server tries to create an association between a PN (personal number) and a DN.
<code>both</code>	Both login types (pn, then agent) are performed.

Changes Take Effect: Immediately

Specifies the agent Login mode.

Note: Values `pn` and `both` are replacements of Private Service `0xCB0116` for applications that do not support private T-Library services.

hd-logout-mode

Default Value: `agent`

Valid Values:

<code>agent</code>	A normal agent logout is performed.
<code>pn</code>	T-Server tries to destroy an association between a PN (personal number) and a DN.
<code>both</code>	Both logout types (<code>agent</code> , then <code>pn</code>) are performed.

Changes Take Effect: Immediately

Specifies the agent Logout mode.

Note: Values `pn` and `both` are replacements of Private Service `0xCB0116` for applications that do not support private T-Library services.

hd-vn-separator

Default Value: `@@`

Valid Value: Any string

Changes Take Effect: Immediately

Specifies the value of the separator between the AgentID and DN in the attribute AgentID for a Hot Desking session. For example, with AgentID `1001`, separator `@@`, and DN `5000`, the attribute AgentID would be `1001@@5000`. You must specify a value for this option.

inbound-bsns-calls

Default Value: `false`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

Related Feature: “Business-Call Handling” on [page 152](#)

Specifies whether T-Server should consider all established inbound calls on an emulated agent as business calls.

inherit-bsns-type

Default Value: `false`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

Related Feature: “Business-Call Handling” on [page 152](#)

Determines whether a consult call that is made from a business primary call should inherit the `business call` attribute.

internal-bsns-calls

Default Value: `false`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

Related Feature: “Business-Call Handling” on [page 152](#)

Determines whether T-Server considers internal calls made from or to any agent as business calls.

legal-guard-time

Default Value: `0`

Valid Value: Any integer from `0-30`

`0` The default value of `0` (zero) disables the functionality of this option.

There is an exception to this; in an agent Annex tab it means that the option is to be ignored. This is due to the way that the option is automatically added for all agents.

`0 < Value <= 30` Period of Legal Guard in seconds.

Changes Take Effect: Immediately

Related Feature: “Emulated Agents” on [page 154](#)

Specifies the emulated Legal Guard time (in seconds) for agents to postpone the transition to the Ready state after the completion of business related call or timed emulated After Call Work.

The option can be set in Configuration Manager in the following places in order of precedence (highest to lowest):

1. In the TServer section in the Annex tab of an ACD Queue.
2. In the TServer section in the Annex tab of a device representing an agent group (such as an ACD Queue).
3. In the TServer section in the Annex tab of an Agent Login object.
4. In the TServer section in the Annex tab of a device.
5. In the TServer section of the application.

Setting `LegalGuardTime` as either a user data key or as extension `RequestAgentLogin` will override this option.

link-control

Default Value: None. Required if the [Link-Control Section](#) is absent.

Valid Values: Any valid section name

Changes Take Effect: Immediately

Specifies the section where CTI-link options are specified. You must specify a value for this option.

max-pred-req-delay

Default Value: 3

Valid Value: Any integer from 0-10

Changes Take Effect: Immediately

Defines the maximum time (in seconds) that T-Server waits for a free dialing resource to become available before rejecting a `TMakePredictiveCall` request.

nas-indication

Default Value: none

Valid Values:

none	No reason code or extension is provided in <code>EventReleased</code> .
ext	The extension <code>NO_ANSWER_TIMEOUT</code> is supplied in <code>EventReleased</code> .
rsn	The reason code <code>NO_ANSWER_TIMEOUT</code> is supplied in <code>EventReleased</code> .

Changes Take Effect: Immediately

Related Feature: “No-Answer Supervision” on [page 161](#)

Specifies the reporting action in `EventReleased` when No-Answer Supervision overflows a call.

nas-private

Default Value: false

Valid Values: true, false

Changes Take Effect: Immediately

Related Feature: “No-Answer Supervision” on [page 161](#)

Specifies whether No-Answer Supervision should be applied to private calls.

Note: When set in the `TServer` section, this option defines the default value for all private calls. However, you can also set a value for this option on the `Annex` tab of DNs of type `Extension` or `Agent Login` in a section called `TServer`. When set there, this value overrides the default value for the specific DN.

outbound-bsns-calls

Default Value: false

Valid Values: true, false

Changes Take Effect: Immediately

Related Feature: “Business-Call Handling” on [page 152](#)

Specifies whether T-Server should consider all established outbound calls on a emulated agent as business calls after being established.

override-switch-acw

Default Value: false

Valid Value: true, false

true T-Server will override the switch ACW.

false ACW will override emulated ACW.

Changes Take Effect: Immediately

Specifies whether T-Server emulated ACW will override the switch ACW for calls distributed via a Route Point.

The option can be set in Configuration Manager in the following places in order of precedence (highest to lowest):

1. In the TServer section in the Annex tab of DNs of type Routing Point.
2. In the TServer section of the application

pend-state-sync-tout

Default Value: 0

Valid Values: Any integer from 0-10

Changes Take Effect: Immediately

Sets the timeout period (in seconds) for the PBX to send a synchronizing agent-state event after the call is released. A value of 0 indicates that the PBX does not send such events.

posn-no-answer-overflow

Default Value: No default value.

Valid Values:

none T-Server does not attempt to overflow a call on a ACD Position when `posn-no-answer-timeout` expires. T-Server treats this value as the end of a list. Subsequent values are not executed.

recall T-Server returns the call to the last distribution device (the device reported in the `ThisQueue` attribute of the call) when `posn-no-answer-timeout` expires.

release T-Server releases the call.

Any valid overflow destination T-Server returns the call to the specified destination when `posn-no-answer-timeout` expires.

Changes Take Effect: Immediately

Related Feature: “No-Answer Supervision” on [page 161](#)

Specifies a sequence of overflow destinations that T-Server attempts to overflow to when the time specified in option `posn-no-answer-timeout` expires. T-Server attempts to overflow in the order specified in the list. If all overflow attempts fail, T-Server abandons overflow. See also extension `NO_ANSWER_OVERFLOW` in section “Using the Extensions Attribute” on [page 183](#) for more information about how this option is used.

If the list of overflow destinations contains the value `recall` and the call was not distributed, T-Server skips to the next destination in the list.

Note: If you set a value for option `no-answer-overflow` on the Annex tab of any ACD Position object in the Configuration Layer, that value overrides, for that ACD Position, the value of `posn-no-answer-overflow` in the TServer section.

posn-no-answer-timeout

Default Value: 15

Valid Value: Any integer from 0-600

Changes Take Effect: Immediately

Related Feature: “No-Answer Supervision” on [page 161](#)

Defines the default no-answer timeout (in seconds) that T-Server applies to any device of type ACD Position. When the timeout ends, T-Server executes the actions defined in option `posn-no-answer-overflow`.

A value of 0 (zero) deactivates no-answer supervision for devices of type ACD Position. See also extension `NO_ANSWER_TIMEOUT` in section “Using the Extensions Attribute” on [page 183](#) for more information about how this option is used.

Note: When you set a value for option `no-answer-timeout` on the Annex tab of a ACD Position object in the Configuration Layer, that value overrides, for that ACD Position, the value of `posn-no-answer-timeout` in the TServer section.

prd-dist-call-ans-time

Default Value: 0

Valid Value: Any integer from 0-10

Changes Take Effect: Immediately

Specifies the interval (in seconds) during which an agent can answer a predictive call before T-Server abandons it. With a value of 0 (zero), T-Server does not automatically abandon the call, which then rings on the agent desktop until it is answered.

When an emulated predictive dial is made from an emulated Routing Point, and options `nas-indication` and `supervised-route-timeout` are set, the value in `prd-dist-call-ans-time` takes precedence. For predictive dialing to work, you must set values greater than 0 (zero) for both options

This option can be defined in two places:

1. In the T-Server Application object. This defines the default value to be applied for the predictive calls initiated from all distribution devices

2. In the TServer section in the Annex tab of any ACD Queue or Routing Point that is to be used as the origination device for a predictive call. When set there, this value overrides the value of the T-Server option set at the Application level for all calls that originate from that ACD Queue or Routing Point.

Note: When using T-Server 8.0 with Outbound Contact Server (OCS) 7.6 or lower, this option must be set to 0 (zero).

recall-no-answer-timeout

Default Value: 15

Valid Values: Any integer from 0-600

Changes Take Effect: Immediately

Related Feature: “No-Answer Supervision” on [page 161](#)

Defines the time that T-Server waits for a call to re-appear on a device as a result of a recall (for example, a ringback waiting to be answered). When the timer expires, T-Server executes the actions defined by the relevant overflow option, as well as the action option for cases where an agent is logged in.

There is no No-Answer Supervision for such calls if the value is set to 0.

This option can be defined either in the main Tserver section or in a section called TServer on the Annex tab of any of the following configuration object types in Configuration Manager:

- Extension
- ACD Position
- Voice Treatment Port
- Agent Login

releasing-party-report

Default Value: false

Valid Values: true, false

Changes Take Effect: Immediately

Related Feature: “Call Release Tracking” on [page 170](#)

Specifies whether T-Server reports Attribute Extension ReleasingParty in events EventReleased and EventAbandoned to indicate which party initiated the call release.

retain-call-tout

Default Value: 15

Valid Value: Any integer from 0-3600

Changes Take Effect: Immediately

Specifies the interval (in seconds) that T-Server waits before deleting information about calls that are completed, but for which it has received no notification from the switch.

route-failure-alarm-high-wm

Default Value: 10

Valid Values: Positive integer for absolute value or floating point number followed by % (percent) symbol. For example; 10%, 2.25%, 5E-2%.

Changes Take Effect: Immediately

Related Feature: “Failed Route Notification” on [page 171](#)

Defines the high water mark which must be reached in order for a route failure alarm to be triggered, within the period configured in option [route-failure-alarm-period](#).

route-failure-alarm-low-wm

Default Value: 1

Valid Values: Positive integer for absolute value or floating point number followed by % (percent) symbol. For example; 10%, 2.25%, 5E-2%.

Changes Take Effect: Immediately

Related Feature: “Failed Route Notification” on [page 171](#)

Defines the low water mark which must be reached, while under the route failure alarm condition, within the period configured in [route-failure-alarm-period](#).

route-failure-alarm-period

Default Value: 0

Valid Values: Positive integer

Changes Take Effect: Immediately

Related Feature: “Failed Route Notification” on [page 171](#)

Defines the interval (in seconds) in which the number of failed route requests is totalled, in order to determine either a possible route failure alarm or the cancelation of an alarm, based on the failed route counter reaching the relevant high or low water mark.

Note: This option also specifies the minimum time between alarm setting and alarm clearing.

strict-routing

Default Value: `true`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

If the value is `true`, T-Server closes the routing dialog with the router when the switch closes the routing dialog (`RouteEnd` event is received). If the configuration option value is `false`, T-Server does not close the routing dialog, and attempts to use the `DivertFromQueue` service for subsequent `RouteCall` requests. This provides backward compatibility behavior. However, Genesys strongly recommends setting this value to `true`.

Note: From release 6.5.303.00, T-Server uses `AttributeRouteType` and rejects those it cannot execute. In the routing dialog, `RouteTypeReject` causes T-Server to issue an `ApplicationRouteEnd` request, which delegates the routing decision to the switch strategy. T-Server now accepts only route types `Unknown`, `Default`, `OverwriteDNIS`, `DDD`, and `IDDD`; previously route type was ignored.

supervised-route-timeout

Default Value: 5

Valid Value: Any integer from 0-600

Changes Take Effect: Immediately

Related Feature: “Support for Emulated and Supervised Routing” on [page 144](#)

Specifies the interval (in seconds) that T-Server waits for a call routed from an emulated Routing Point using supervised routing to be answered. If the call is not answered within the period specified, T-Server recalls the call to the Routing Point and initiates rerouting. A value of 0 (zero) deactivates this feature. See also [agent-no-answer-timeout](#). For predictive dialing to work, you must set values greater than 0 (zero) for both this option and [nas-indication](#).

This timeout should be set to a value higher than the system latency.

Note: You can use the `Extension` attribute `SUPERVISED_ROUTE` in section “Using the Extensions Attribute” on [page 183](#) for more information about how this option is used. to override the value of this configuration option on a call-by-call basis.

When set in the `TServer` section, this option defines the default value for all Routing Points. However, you can also set a value for this option on the `Annex` tab of DN of type `Routing Point` in a section called `TServer`. When set there, this value overrides the default value for the specific Routing Point. You can also use `Extension` attribute `SUPERVISED_ROUTE` to override the value of this configuration option on a call-by-call basis.

sync-emu-acwDefault Value: `false`Valid Values: `true`, `false`

Changes Take Effect: Immediately

Specifies whether T-Server synchronizes emulated ACW for native agents.

The option can be set in Configuration Manager in the following places in order of precedence (highest to lowest):

1. In the `TServer` section in the Annex tab of an Agent Login object.
2. In the `TServer` section in the Annex tab of a device.
3. In the `TServer` section of the application.

The `TAgentLogin` extension `SyncEmuACW` overrides the value configured for this option.**timed-acw-in-idle**Default Value: `true`Valid Values: `true`, `false`

Changes Take Effect: Immediately

Related Feature: “Emulated Agents” on [page 154](#)Specifies whether T-Server applies the automatic wrap-up timer (using the `wrap-up-time` parameter) when an agent sends `RequestAgentNotReady`.If the value is `false`, T-Server does not automatically end manual wrap-up—the agent must return manually from ACW.

Note: For compatibility with the previous T-Server release, you can use the name `timed-cwk-in-idle` for this option as an alias.

unknown-bsns-callsDefault Value: `false`Valid Values: `true`, `false`

Changes Take Effect: Immediately

Related Feature: “Business-Call Handling” on [page 152](#)

Determines whether T-Server considers calls of unknown call type made from or to any agent as business calls.

unknown-xfer-merge-udataDefault Value: `false`Valid Values: `true`, `false`

Changes Take Place: Immediately

If the configuration option value is `true`, T-Server copies the user data from the current monitored call to the call transferred from an unmonitored destination. Because the primary call was hitherto unknown, normal user data inheritance mechanisms cannot be used.

untimed-wrap-up-value

Default Value: 1000

Valid Value: Any positive integer

Changes Take Effect: Immediately

Related Feature: “Emulated Agents” on [page 154](#)

Specifies the threshold at which the timing of ACW stops and manual intervention is required (*untimed ACW*).

wrap-up-threshold

Default Value: 0

Valid Values: Any positive integer

Changes Take Effect: Immediately

Related Feature: “Emulated Agents” on [page 154](#)

Specifies the minimum period (in seconds) that a business call must last before emulated ACW is applied at the end of the call.

wrap-up-time

Default Value: 0

Valid Value: Any positive integer, *untimed*

0	ACW is disabled Exception: When set in the Annex tab of the Agent Login object, value 0 (zero) means T-Server will process from Step 4 in the processing order of precedence below.
$0 < \text{Value} < \text{untimed-wrap-up-value}$	The number of seconds of timed ACW, after which T-Server returns the agent automatically to the Ready state.
$\text{Value} = \text{untimed-wrap-up-value}$	ACW is untimed and the agent must manually return to the Ready state.
$\text{untimed-wrap-up-value} < \text{Value}$	Disables ACW.
<i>untimed</i>	ACW is untimed and the agent must manually return to the Ready state. Note: This value cannot be set on the Annex tab of an Agent Login object.

Changes Take Effect: Immediately

Related Feature: “Emulated Agents” on [page 154](#)

Specifies the amount of wrap-up time (ACW) allocated to emulated agents at the end of a business call.

This option can be set in a number of places, and T-Server processes it in the order of precedence shown below, highest first. If the value is not present at the higher level, T-Server checks the next level, and so on.

1. In RequestAgentPendingACW, in attribute extension WrapUpTime (applies to this agent only).
2. In RequestACWInIdle, in attribute extension WrapUpTime (applies to this agent only).
3. In the call, in user data WrapUpTime (limited to ISCC scenarios).
4. In a DN configuration object of type ACD Queue or Routing Point, on the Annex tab in the TServer section.
5. In the TAgentLogin request, in attribute extension WrapUpTime (applies to this agent only).
6. In the Agent Login configuration object, on the Annex tab in the TServer section (but **not** value untimed).
7. Using an Agent Group corresponding to an object configured in the Configuration Layer as a device of type ACD Queue.
8. In the T-Server Application object, on the Options tab in the TServer section.

Call-Type-Rules Section

rule-<n>, where n=1-N

Default Value: none

Valid Values: Any valid string in the following format :
pattern=<input pattern>; value=<internal|external|unknown>

Changes Take Effect: Immediately

Related Feature: “Call Type Prediction” on [page 169](#)

Defines a rule to be applied to an inbound number. Multiple rules can be created and number will be matched against all patterns for those rules. As soon as first match is found then result specified in the value part of the option will be used for call type assignment.

Link-Control Section

The section name is specified in option link-control.

application-name

Default Value: GCTI T-Server

Valid Value: Any string

Changes Take Effect: After T-Server is restarted

Specifies the application name that appears in the CallBridge log.

call-rq-gap

Default Value: 250

Valid Value: Any integer from 0-1000

Changes Take Effect: Immediately

Specifies (in milliseconds) the length of delay applied to a request issued against a busy call (a call that has another request working on it already). This prevents race conditions on the different call legs.

Set the value of this option to a time longer than the usual response time for a request from the switch.

device-rq-gap

Default Value: 0

Valid Value: Any integer from 0-1000

Changes Take Effect: Immediately

Related Feature: “Request Handling Enhancements” on [page 173](#)

Specifies (in milliseconds) the length of delay applied to a request issued against a busy call (a call that has another request working on it already). This prevents race conditions on the different call legs.

Set the value of this option to a time longer than the usual response time for a request from the switch.

ha-sync-dly-lnk-conn

Default Value: false

Valid Values: true, false

Changes Take Effect: At T-Server start/restart

Related Feature: “Hot-Standby HA Synchronization” on [page 193](#)

Determines whether the backup T-Server delays sending of `EventLinkConnected` until it has been notified that T-Server synchronization has completed. With value `true`, the backup T-Server sends `EventLinkConnected` once it has completed switch synchronization (that is, after all calls are cleared in the primary T-Server). With value `false`, there is no delay in sending `EventLinkConnected` and synchronization takes place as for pre-7.1 T-Servers.

hostname

Default Value: Mandatory field. No default value.

Valid Value: Any valid IP address or host name

Changes Take Effect: After CTI link starts/restarts

Specifies the host name of the CallBridge Server. You must specify a value for this option.

kpl-interval

Default Value: 10

Valid Value: Any integer from 0-600

Changes Take Effect: Immediately

Related Feature: “Keep-Alive Feature Handling” on [page 164](#)

Specifies a “keep-alive” interval (in seconds). To check network connectivity, T-Server issues a dummy CTI request at the interval specified when there is no other activity on the link. A value of 0 (zero) disables this feature. See also the option [kpl-tolerance](#).

kpl-loss-rate

Default Value: 10, 100

Valid Values: Single integer or comma-separated pair of integers.

Changes Take Effect: Immediately

Related Feature: “Keep-Alive Feature Handling” on [page 164](#)

Specifies how many KPL positive responses are needed to decrement either the failure or warning tolerance counter.

A value of 0 (zero) disables this option.

Two comma-separated values means T-Server will calculate both the failure counter and the warning counter.

A single value means T-Server will calculate only the failure counter.

Note: This option has no effect if option [kpl-tolerance](#) has a value of 0. In that case, a single KPL failure will trigger a link restart.

kpl-tolerance

Default Value: 3

Valid Value: Any integer from 0-10

Changes Take Effect: Immediately

Related Feature: “Keep-Alive Feature Handling” on [page 164](#)

Specifies the number of failed keep-alive requests that T-Server permits before considering the CTI link to be interrupted. See also option [kpl-interval](#).

link-alarm-high

Default Value: 0

Valid Values: 0-100

Changes Take Effect: Immediately

Related Feature: “Link Bandwidth Monitoring” on [page 171](#)

Specifies percentage of [use-link-bandwidth](#) option when LMS message LINK_ALARM_HIGH will be triggered.

A value of 0 (zero) disables the feature.

link-alarm-low

Default Value: 0

Valid Values: 0-100

Changes Take Effect: Immediately

Related Feature: “Link Bandwidth Monitoring” on [page 171](#)

Specifies percentage of [use-link-bandwidth](#) option when LMS message LINK_ALARM_LOW will be triggered.

max-outstanding

Default Value: 100

Valid Values: 1-255

Changes Take Effect: Immediately

Specifies the maximum number of outstanding sent requests awaiting the response from the link.

Note: The PBX will not allow more than 255 outstanding requests across all CTI links. This means that if a backup T-Server is running, this value should be set to a maximum of 127 in each T-Server.

port

Default Value: 18544

Valid Value: Any valid TCP port address

Changes Take Effect: After CTI link starts/restarts

Specifies the TCP port address of the CallBridge Server. You must specify a value for this option.

quiet-cleanup

Default Value: false

Valid Values: true, false

Changes Take Effect: Immediately

Disables the events that T-Server would otherwise send to clients during clean-up to notify them about the deleted calls. With value true, T-Server clients are supposed to drop all the calls upon `EventLinkDisconnected` without waiting for T-Server notification. See also the option [restart-cleanup-limit](#).

quiet-startup

Default Value: false

Valid Values: true, false

Changes Take Effect: Immediately

Disables the events that T-Server would otherwise send to clients during link startup to notify clients about the changes that occurred during the link outage. With value true, clients should query T-Server after the `EventLinkConnected`.

reg-delay

Default Value: 1000

Valid Values: 0-5000

Changes Take Effect: Immediately

Defines the time (in milliseconds) that T-Server waits for the `DN Created` notification from Configuration Server before it starts processing the registration request from the client as a request for a DN not configured in the Configuration Layer.

reg-interval

Default Value: 60

Valid Values: Any integer from 0-600

Changes Take Effect: Immediately

Specifies the time interval (in seconds) for the `Start Monitor` request to be re-sent to the switch if the initial request fails. Value 0 (zero) switches this feature off.

reg-silent

Default Value: true

Valid Values: true, false

Changes Take Effect: Immediately

With value `true`, T-Server reports `EventRegistered` for “on-demand” registration with the PBX when the procedure is completed.

With value `false`, T-Server reports `EventRegistered` as early as possible during the PBX registration procedure.

restart-cleanup-dly

Default Value: 0

Valid Values: Any integer

Changes Take Effect: Immediately

Specifies the delay, in seconds, for T-Server to keep “unreliable” calls after link startup. This delay allows T-Server to salvage calls that existed before the link failure (for which any events were received) if T-Server was unable to verify their existence using snapshot. A value of 0 (zero) means any nonverified calls are cleared up immediately after completion of link startup.

restart-cleanup-limit

Default Value: 0

Valid Values: Any integer

Changes Take Effect: Immediately

Defines the maximum number of reconnect attempts for calls (and possibly agent logins) in T-Server during link outage. A value of 0 zero means all the calls are deleted immediately after the link failure. See also the option [restart-period](#).

restart-period

Default Value: 20

Valid Values: 0-600

Changes Take Effect: Immediately

Specifies the interval (in seconds) that T-Server waits between attempts to reconnect to the switch when the link fails. A value of 0 (zero) means T-Server does not try to reconnect unless the link configuration is changed.

rq-conflict-check

Default Value: true

Valid Value: true, false

Changes Take Effect: Immediately

Related Feature: “Request Handling Enhancements” on [page 173](#)

Specifies whether request conflict resolution is enabled. Request conflict resolution intelligently resolves conflicting client requests.

rq-expire-tout

Default Value: 10000

Valid Value: Any integer from 0-30000

Changes Take Effect: Immediately

Specifies the interval (in milliseconds) that T-Server waits before deleting pending requests (requests for which it has received no notification from the switch) from clients.

This timeout should be set to a value higher than the system latency.

rq-gap

Default Value: 0

Valid Value: Any integer from 0-1000

Changes Take Effect: Immediately

Specifies the minimum interval (in milliseconds) between succeeding CTI requests sent over the link. You can adjust the value to meet CTI-link load and performance requirements.

You can set this option in the TServer section in the Annex tab of a device.

trunk-map-mode

Default Value: standard

Valid Values: standard, old

Changes Take Effect: Immediately

Specifies the Trunk-Mapping mode that T-Server uses. In T-Server release 6.1.013.01, the way that T-Server generates Trunk ID information in call events was changed. Using this option, it is possible to enable the Backward-Compatibility mode for the reporting of Trunk IDs in T-Server events. When this option is set to old, T-Server reports Trunk ID information in the same way as before release 6.1.013.01.

use-link-bandwidth

Default Value: auto

Valid Values: 0-999, auto

Changes Take Effect: Immediately

Related Feature: “Link Bandwidth Monitoring” on [page 171](#)

Specifies the maximum number of requests per second throughput to be used by T-Server to calculate link alarm messages. A value of 0 (zero) disables the feature.

use-native-routing

Default Value: true

Valid Values: true, false

Changes Take Effect: Immediately

With value true, T-Server uses Native Routing services for call routing. This means that in the case of a primary T-Server or link failure, all waiting calls are handed over to the ACD for distribution. Any of these calls that cannot be distributed by the ACD are routed by the backup T-Server using the `Diver t` service. Any new calls arriving after the switchover will again be routed by the Native Routing service.

When the value of this option is set to false, T-Server uses the `Diver t` service to route calls from pilots. The pilots used for routing must be configured **not** to distribute calls—this means there must be **no** agents available for the switch to distribute the calls to. In the case of primary T-Server failure, the backup T-Server takes over without handing any calls over to the ACD. In the case of link failure, however, calls remain on the pilot without being distributed.

Agent Login-Level and DN-Level Options

You can only set the configuration options described in this section in the `TServer` section of the `Annex` tab of the relevant configuration object in the Configuration Layer. You cannot define them in the main `TServer` configuration section.

bsns-call-type

Default Value: none

Valid Values:

<code>business</code>	The call is classified as a business call.
<code>private</code>	The call is classified as a private call.
<code>ignore</code>	The distribution point has no effect on business call classification.

Changes Take Effect: Immediately

Related Feature: “Business-Call Handling” on [page 152](#)

Specifies the business call type for calls that pass through or arrive at the associated device.

This option takes precedence over the following options that are set at the Application level: `inbound-bsns-calls`, `inherit-bsns-type` and `outbound-bsns-calls`. This option may be over-ridden by the extension `BusinessCallType`.

no-answer-action

Default Value: none

Valid Values:

none	T-Server takes no action on agents when business calls are not answered.
notready	T-Server sets agents NotReady when business calls are not answered.
logout	T-Server automatically logs out agents when business calls are not answered.

Changes Take Effect: Immediately

Related Feature: “No-Answer Supervision” on [page 161](#)

The value of the option `no-answer-action` overrides any value of the option `agent-no-answer-action` set at the Application level.

This option is defined in a section called `TServer` on the Annex tab of any Agent Login object in the Configuration Layer. If an emulated or real PBX agent receives a T-Server business call and the agent fails to answer the call within the time defined in option `agent-no-answer-timeout`, the `no-answer-action` option determines the action T-Server performs on this agent.

Note: If a call is abandoned before either `agent-no-answer-timeout` or `no-answer-timeout` or `supervised-route-timeout` expires (depending on which timer is applicable), T-Server performs no action on this agent.

no-answer-overflow

Default Value: No default value

Valid Values:

none	T-Server does not attempt to overflow a call on an agent desktop when <code>agent-no-answer-timeout</code> expires. T-Server treats this value as the end of a list. Subsequent values are not executed.
recall	T-Server returns the call to the last distribution device (the device reported in the <code>ThisQueue</code> attribute of the call) when <code>agent-no-answer-timeout</code> expires.
release	T-Server releases the call.

default T-Server stops execution of the current overflow sequence and continues with the T-Server default overflow sequence defined by the relevant overflow option in the main TServer section.

Any valid overflow destination T-Server returns the call to the specified destination when `agent-no-answer-timeout` expires.

Changes Take Effect: Immediately

Related Feature: “No-Answer Supervision” on [page 161](#)

The value of the option overrides any of the following T-Server configuration options set at the Application level for the object where it has been set (depending on the type of configuration object):

- `agent-no-answer-overflow` if defined for an Agent Login object.
- `extn-no-answer-timeout` if defined for an Extension object.
- `posn-no-answer-overflow` if defined for a ACD Position object.

T-Server attempts to apply the overflow in the order that is listed. If the first overflow destination fails, then T-Server attempts the next one in the list. If all overflow destinations in the list fail, then T-Server abandons overflow. If the list of overflow destinations contains the value recall and the call was not distributed, T-Server skips to the next destination in the list.

no-answer-timeout

Default Value: Same as value in the corresponding option set at the Application level

Valid Value: Any integer from 0-600

Changes Take Effect: Immediately

Related Feature: “No-Answer Supervision” on [page 161](#)

Defines the time (in seconds) that T-Server waits for a call that is ringing on the device in question to be answered. When the timer expires, T-Server applies the appropriate overflow, and, in the case of agents, the appropriate logout or NotReady action.

A value of 0 (zero) deactivates no-answer supervision for this device.

When set, this option overrides any of the following T-Server configuration options set at the Application level for the object where it has been set (depending on type of configuration object):

- `agent-no-answer-timeout` if defined for an Agent Login object.
- `extn-no-answer-timeout` if defined for an Extension object.
- `posn-no-answer-timeout` if defined for a ACD Position object.

Changes from 7.2 to 8.0

For reference, [Table 20](#) lists configuration options that changed between the last 7.2 release and the 8.0 release of this T-Server. If a configuration option has been replaced with another that enables the same functionality, the new option name and location in this chapter are noted.

Table 33: Changes from 7.2 to 8.0

Option Name	Type of Change	Details
T-Server Section		
acw-in-idle-force-ready	Renamed	See description on page 251 .
agent-emu-login-on-call	New	See description on page 251 .
agent-group	New	See description on page 251 .
agent-logout-on-unreg	New	See description on page 252 .
agent-logout-reassoc	New	See description on page 252 .
agent-only-private-calls	New	See description on page 255 .
backwds-compat-acw-behavior	New	See description on page 255 .
callback-dn	New	See description on page 256 .
call-type-by-dn	New	See description on page 256 .
clear-call-delay	New	See description on page 257 .
emulate-login	New	See description on page 259 .
emulated-login-state	New	See description on page 260 .
nas-indication	New	See description on page 264 .
nas-private	New	See description on page 264 .
override-switch-acw	New	See description on page 264 .
pend-state-sync-tout	New	See description on page 269 .
recall-no-answer-timeout	New	See description on page 267 .
releasing-party-report	New	See description on page 267 .
retain-call-tout	New	See description on page 267 .
route-failure-alarm-high-wm	New	See description on page 268 .

Table 33: Changes from 7.2 to 8.0 (Continued)

Option Name	Type of Change	Details
route-failure-alarm-low-wm	New	See description on page 268 .
route-failure-alarm-period	New	See description on page 268 .
strict-routing	New	See description on page 269 .
sync-emu-acw	New	See description on page 270 .
sync-emu-agent	Removed	
timed-acw-in-idle	New	See description on page 270 .
untimed-wrap-up-value	New	See description on page 271 .
wrap-up-threshold	New	See description on page 271 .
Call-Type-Rules Section		
rule-<n>, where n=1-N	New	See description on page 272 .
Link-Control Section		
device-rq-gap	New	See description on page 273 .
kpl-loss-rate	New	See description on page 274 .
link-alarm-high	New	See description on page 274 .
link-alarm-low	New	See description on page 274 .
port	New in 7.0.100.00	See description on page 275 .
rq-conflict-check	New	See description on page 277 .
use-link-bandwidth	New	See description on page 277 .
Agent Login-Level and DN-Level Options		
bsns-call-type	New	See description on page 278 .



Supplements

Related Documentation Resources

The following resources provide additional information that is relevant to this software. Consult these additional resources as necessary.

T-Server for Siemens HiPath DX

- The *Framework 8.0 Deployment Guide*, which will help you configure, install, start, and stop Framework components.
- The *Framework 8.0 Configuration Options Reference Manual*, which will provide you with descriptions of configuration options for other Framework components.
- The *Framework 8.0 Configuration Manager Help*, which will help you use Configuration Manager.

Genesys

- *Genesys Technical Publications Glossary*, which ships on the Genesys Documentation Library DVD and which provides a comprehensive list of the Genesys and computer-telephony integration (CTI) terminology and acronyms used in this document.
- *Genesys Migration Guide*, which ships on the Genesys Documentation Library DVD, and which provides documented migration strategies for Genesys product releases. Contact Genesys Technical Support for more information.
- The *Genesys 7 Events and Models Reference Manual*, which contains an extensive collection of events and call models describing core interaction processing in Genesys environments.
- The *Voice Platform SDK 8.0 .NET (or Java) API Reference*, which contains technical details of T-Library functions.

- The *Genesys Technical Publications Glossary*, which ships on the Genesys Documentation Library DVD and which provides a comprehensive list of the Genesys and CTI terminology and acronyms used in this document.
- Release Notes and Product Advisories for this product, which are available on the Genesys Technical Support website at <http://genesyslab.com/support>.

Information about supported hardware and third-party software is available on the Genesys Technical Support website in the following documents:

- *Genesys Supported Operating Environment Reference Manual*
- *Genesys Supported Media Interfaces Reference Manual*

For additional system-wide planning tools and information, see the release-specific listings of System Level Documents on the Genesys Technical Support website, accessible from the [system level documents by release](#) tab in the Knowledge Base Browse Documents Section.

Genesys product documentation is available on the:

- Genesys Technical Support website at <http://genesyslab.com/support>.
- Genesys Documentation Library DVD, which you can order by e-mail from Genesys Order Management at orderman@genesyslab.com.

Document Conventions

This document uses certain stylistic and typographical conventions—introduced here—that serve as shorthands for particular kinds of information.

Document Version Number

A version number appears at the bottom of the inside front cover of this document. Version numbers change as new information is added to this document. Here is a sample version number:

80fr_ref_06-2008_v8.0.001.00

You will need this number when you are talking with Genesys Technical Support about this product.

Screen Captures Used in This Document

Screen captures from the product graphical user interface (GUI), as used in this document, may sometimes contain minor spelling, capitalization, or grammatical errors. The text accompanying and explaining the screen captures corrects such errors *except* when such a correction would prevent you from installing, configuring, or successfully using the product. For example, if the name of an option contains a usage error, the name would be presented exactly as it appears in the product GUI; the error would not be corrected in any accompanying text.

Type Styles

[Table 34](#) describes and illustrates the type conventions that are used in this document.

Table 34: Type Styles

Type Style	Used For	Examples
Italic	<ul style="list-style-type: none"> Document titles Emphasis Definitions of (or first references to) unfamiliar terms Mathematical variables <p>Also used to indicate placeholder text within code samples or commands, in the special case where angle brackets are a required part of the syntax (see the note about angle brackets on page 286).</p>	<p>Please consult the <i>Genesys Migration Guide</i> for more information.</p> <p>Do <i>not</i> use this value for this option.</p> <p>A <i>customary and usual</i> practice is one that is widely accepted and used within a particular industry or profession.</p> <p>The formula, $x + 1 = 7$ where x stands for . . .</p>

Table 34: Type Styles (Continued)

Type Style	Used For	Examples
Monospace font (Looks like teletype or typewriter text)	<p>All programming identifiers and GUI elements. This convention includes:</p> <ul style="list-style-type: none"> The <i>names</i> of directories, files, folders, configuration objects, paths, scripts, dialog boxes, options, fields, text and list boxes, operational modes, all buttons (including radio buttons), check boxes, commands, tabs, CTI events, and error messages. The values of options. Logical arguments and command syntax. Code samples. <p>Also used for any text that users must manually enter during a configuration or installation procedure, or on a command line.</p>	<p>Select the Show variables on screen check box.</p> <p>In the Operand text box, enter your formula.</p> <p>Click OK to exit the Properties dialog box.</p> <p>T-Server distributes the error messages in EventError events.</p> <p>If you select true for the inbound-bsns-calls option, all established inbound calls on a local agent are considered business calls.</p> <p>Enter exit on the command line.</p>
Square brackets ([])	A particular parameter or value that is optional within a logical argument, a command, or some programming syntax. That is, the presence of the parameter or value is not required to resolve the argument, command, or block of code. The user decides whether to include this optional information.	smcp_server -host [/flags]
Angle brackets (< >)	<p>A placeholder for a value that the user must specify. This might be a DN or a port number specific to your enterprise.</p> <p>Note: In some cases, angle brackets are required characters in code syntax (for example, in XML schemas). In these cases, italic text is used for placeholder values.</p>	smcp_server -host <confighost>



Index

Symbols

[] (square brackets)	286
< > (angle brackets)	286
<key name>	
common log option	215

A

accept-dn-type	
configuration options	248
Access Code	
configuration	111
defined	42, 109
accode-data	
configuration options	249
accode-index	
configuration options	249
accode-name	
configuration options	250
accode-privateservice	
configuration options	250
Account Codes	
end-of-call scenarios	149
entered at end of call	149
entered during call	148
Support for Account Codes	147
ACCOUNT_CODE	
user data keys	189
acw-in-idle-force-ready	
configuration options	157, 251
emulated agents	157
acw-retain-lock	
configuration options	250
ADDP	60
addp-remote-timeout	
configuration option	240
addp-timeout	
configuration option	240
addp-trace	
configuration option	241

Advanced Disconnect Detection Protocol	25
agent answer supervision	184, 254
Agent Login objects	43
agent no-answer supervision	161
agent reservation	
defined	30
agent-emu-login-on-call	
configuration options	251
agent-group	
configuration options	251
emulated agent options	251
agent-logout-on-unreg	
configuration options	252
agent-logout-reassoc	
configuration options	252
agent-no-answer-action	
configuration options	161, 261
emulated agents	161
agent-no-answer-overflow	
configuration options	161
emulated agents	161
agent-no-answer-timeout	
configuration options	161, 254
emulated agents	161
agent-only-private-calls	
configuration options	153, 255
Agent-Reservation section	
configuration options	228–229
agent-strict-id	
configuration options	154, 271
alarm	
common log option	206
all	
common log option	205
angle brackets	286
ANI	73
ani-distribution	
configuration option	220
annex tab	
configuration options	162
annex tab options	

- no-answer-action 279
- no-answer-overflow 279
- no-answer-timeout 280
- app
 - command line parameter 123
- Application objects
 - multi-site operation 108
- application-name
 - configuration options 272, 276
- audience, for document 12

B

- background-processing
 - configuration option 220
- background-timeout
 - configuration option 221
- backup servers 51
- backup-sync
 - configuration section 60
- Backup-Synchronization section
 - configuration option 240–241
- backwds-compat-acw-behavior
 - configuration options 255
- brackets
 - angle 286
 - square 286
- bsns-call-type
 - configuration options 153, 278
- buffering
 - common log option 199
- business call handling 152

C

- call
 - business 152
 - private 154
 - unknown 154
 - work related 153
- callback-dn
 - configuration options 256
- Call-Cleanup section
 - configuration option 241–243
- call-clear-delay
 - configuration options 269
- call-rq-gap
 - configuration options 272
- call-type-by-dn
 - configuration options 169, 256
- call-type-rules
 - configuration options 257
- Call-Type-Rules section 272
- cast-type
 - configuration option 72, 231

- CDN 79
- changes from 7.1 to 7.2
 - configuration options 281
- changes from 7.6 to 8.0
 - common configuration options 216
 - configuration options 244
- check-point
 - common log option 203
- check-tenant-profile
 - configuration option 221
- cleanup-idle-tout
 - configuration option 242
- clear-call-delay
 - configuration options 257
- Code property 110, 111
- cof-ci-defer-create
 - configuration option 236
- cof-ci-defer-delete
 - configuration option 236
- cof-ci-req-tout
 - configuration option 89, 236
- cof-ci-wait-all
 - configuration option 237
- cof-feature
 - configuration option 237
- cof-rci-tout
 - configuration option 237
- collect-lower-priority-requests
 - configuration option 228
- command line parameters 123
 - app 123
 - host 123
 - I 124
 - lmspath 124
 - nco X/Y 124
 - port 123
 - V 124
- commenting on this document 14
- common configuration options 198–217
 - changes from 7.6 to 8.0 216
 - common section 216
 - enable-async-dns 216
 - log section 198–212
 - log-extended section 212–214
 - log-filter section 214–215
 - log-filter-data section 215
 - mandatory 198
 - rebind-delay 216
 - setting 198
 - sml section 215
 - suspending-wait-timeout 215, 217
- common log options 198–215
 - <key name> 215
 - alarm 206
 - all 205
 - buffering 199

check-point	203
compatible-output-priority	204
debug	207
default-filter-type	214
expire	200
interaction	206
keep-startup-file	200
level-reassign-<eventID>	212
level-reassign-disable	214
log section	198–212
log-extended section	212–214
log-filter section	214–215
log-filter-data section	215
mandatory options	198
memory	203
memory-storage-size	203
message_format	201
messagefile	200
print-attributes	202
segment	199
setting	198
spool	203
standard	206
time_convert	202
time_format	202
trace	207
verbose	198
x-conn-debug-all	212
x-conn-debug-api	211
x-conn-debug-dns	212
x-conn-debug-open	210
x-conn-debug-security	211
x-conn-debug-select	210
x-conn-debug-timers	211
x-conn-debug-write	211
common options	
common log options	198–215
common section	216
mandatory options	198
sml section	215
common section	
common options	216
compatible-output-priority	
common log option	204
compound-dn-representation	
configuration option	238
Configuration Manager	
configuring T-Server	44
multiple ports	45
configuration options	
accept-dn-type	248
accode-data	249
accode-index	249
accode-name	250
accode-privateservice	250
acw-in-idle-force-ready	157, 251
acw-retain-lock	250
addp-remote-timeout	240
addp-timeout	240
addp-trace	241
agent answer supervision	254
agent-emu-login-on-call	251
agent-group	251
agent-logout-on-unreg	252
agent-logout-reassoc	252
agent-no-answer-action	161, 261
agent-no-answer-actionw	161
agent-no-answer-overflow	161
agent-no-answer-timeout	161, 254
agent-only-private-calls	153, 255
Agent-Reservation section	228–229
agent-strict-id	154, 271
ani-distribution	220
application-name	272, 276
background-processing	220
background-timeout	221
Backup-Synchronization section	240–241
backwds-compat-acw-behavior	255
bsns-call-type	153, 278
callback-dn	256
Call-Cleanup section	241–243
call-clear-delay	269
call-rq-gap	272
call-type-by-dn	169, 256
call-type-rules	257
cast-type	231
changes from 7.1 to 7.2	281
changes from 7.6 to 8.0	244
check-tenant-profile	221
cleanup-idle-tout	242
clear-call-delay	257
cof-ci-defer-create	236
cof-ci-defer-delete	236
cof-ci-req-tout	236
cof-ci-wait-all	237
cof-feature	237
cof-rci-tout	237
collect-lower-priority-requests	228
common log options	198–215
common options	198–217
compound-dn-representation	238
consult-supervised-rt	257
consult-user-data	221
convert-otherdn	257
correct-connid	258
correct-rqid	258
customer-id	222
cwk-in-idle-force-ready	251
default-dn	232
default-dn-type	258
default-network-call-id-matching	238
device-rq-gap	273

- direct-digits-key 232
- dn-del-mode 258
- dn-for-undesired-calls 258
- dn-for-unexpected-calls 233
- dn-scope 102, 222
- emulated-login-state 154, 260
- emulate-login 154, 259
- epp-tout 103, 239
- event-propagation 239
- expire-call-tout 269
- extn-no-answer-overflow 161, 260
- extn-no-answer-timeout 161, 261
- ha-sync-dly-lnk-conn 273
- hd-login-mode 261
- hd-logout-mode 262
- hd-vn-separator 262
- inbound-bsns-calls 153, 262
- inbound-translator-<n> 239
- inherit-bsns-type 153, 262
- internal-bsns-calls 153, 263
- kpl-interval 273
- kpl-loss-rate 274
- kpl-tolerance 274
- legal-guard-time 158, 263
- License section 225–228
- link-alarm-high 172, 274
- link-alarm-low 274
- link-control 263
- local-node-id 237
- log-trace-flags 223
- management-port 223
- mandatory options 198
- match-call-once 230
- max-outstanding 275, 277
- max-pred-req-delay 264
- merged-user-data 223
- Multi-Site Support section 229–239
- nas-indication 264
- nas-private 162, 264
- network-request-timeout 233
- no-answer supervision 260, 261, 265, 266, 280
- notify-idle-tout 242
- num-of-licenses 225
- num-sdn-licenses 226
- outbound-bsns-calls 153, 264
- override-switch-acw 264
- pend-state-sync-tout 265
- periodic-check-tout 242
- posn-no-answer-overflow 162, 265
- posn-no-answer-timeout 162, 266, 280
- prd-dist-call-ans-time 266
- propagated-call-type 103, 224
- protocol 241
- quiet-cleanup 275
- quiet-startup 275
- recall-no-answer-timeout 267
- reconnect-tout 230
- reg-delay 275
- reg-interval 276
- register-attempts 233
- register-tout 233
- reg-silent 276
- reject-subsequent-request 228
- releasing-party-report 267
- report-connid-changes 230
- request-collection-time 229
- request-tout 233
- reservation-time 229
- resource-allocation-mode 234
- resource-load-maximum 234
- restart-cleanup-dly 276
- restart-cleanup-limit 276
- restart-period 276
- retain-call-tout 269
- route-dn 234
- route-failure-alarm-high-wm 268
- route-failure-alarm-low-wm 268
- route-failure-alarm-period 171, 268
- rq-conflict-check 277
- rq-expire-tout 277
- rq-gap 277
- rule-, where n=1-N 272
- rule-<n> 240
- Security section 243
- server-id 224
- setting 219
 - common 198
- supervised-route-timeout 269
- sync-emu-acw 154, 270
- sync-reconnect-tout 241
- tcs-queue 235
- tcs-use 235
- timed-acw-in-idle 157, 270
- timeout 234
- timeout value format 243–244
- Translation Rules section 239
- trunk-map-mode 277
- T-Server section 220–225
- unknown-bsns-calls 153, 270
- unknown-xfer-merge-udata 270
- untimed-wrap-up-value 271
- use-data-from 231
- use-implicit-access-numbers 235
- use-link-bandwidth 277
- use-native-routing 278
- user-data-limit 225
- wrap-up-threshold 271
- wrap-up-time 156, 271, 272
- configuring
 - high availability
 - T-Server 59–61
 - multi-site operation 107–121

steps	107
T-Server	44
multiple ports	45
consult-supervised-rt	
configuration options	257
consult-user-data	
configuration option	221
conventions	
in document	285
type styles	285
convert-otherdn	
configuration options	257
correct-connid	
configuration options	258
correct-rqid	
configuration options	258
customer-id	
configuration option	222
cwk-in-idle-force-ready	
configuration options	251

D

debug	
common log option	207
Default Access Code	
configuration	110
defined	109
default-dn	
configuration option	232
default-dn-type	
configuration options	258
default-filter-type	
common log option	214
default-network-call-id-matching	
configuration option	238
destination location	66
destination T-Server	72
device-rq-gap	
configuration options	273
direct-ani	
ISCC transaction type	73, 81
direct-callid	
ISCC transaction type	74, 81
direct-digits	
transaction type	81
direct-digits-key	
configuration option	232
direct-network-callid	
ISCC transaction type	74, 81
direct-notoken	
ISCC transaction type	75, 81
direct-uui	
ISCC transaction type	75, 81
DN objects	43

dn-del-mode	
configuration options	258
dn-for-undesired-calls	
configuration options	258
dn-for-unexpected-calls	
configuration option	233
dnis-pool	
in load-balancing mode	77
ISCC transaction type	68, 76, 81
DNs	
configuring for multi-sites	115
dn-scope	
configuration option	102, 222
document	
audience	12
conventions	285
errors, commenting on	14
version number	285

E

emulated agent options	
agent-group	251
sync-emu-acw	154, 270
untimed-wrap-up-value	271
emulated agents	154–159
acw-in-idle-force-ready	157
agent-no-answer-action	161
agent-no-answer-overflow	161
agent-no-answer-timeout	161
agent-strict-id	154, 271
extn-no-answer-overflow	161
extn-no-answer-timeout	161
inbound-bsns-calls	153, 262
legal-guard-time	158, 263
outbound-bsns-calls	153, 264
posn-no-answer-overflow	162
posn-no-answer-timeout	162
timed-acw-in-idle	157
wrap-up-time	156, 271, 272
emulated predictive dialing	159
emulated routing	144
emulated supervised routing	144
consult-supervised-rt	257
supervised-route-timeout	269
emulated-login-state	
configuration options	154, 260
emulate-login	
configuration options	154, 259
enable-async-dns	
common configuration option	216
epp-tout	
configuration option	103, 239
Error Messages	190
Event Propagation	
defined	100

EventAttachedDataChanged 100
 event-propagation
 configuration option 239
 expire
 common log option 200
 expire-call-tout
 configuration options 269
 extension no-answer supervision 161
 extensions 162
 extn-no-answer-overflow 161
 configuration options 161, 260
 emulated agents 161
 extn-no-answer-timeout 261
 configuration options 161, 261
 emulated agents 161
 extrouter
 configuration section 97, 104, 109

F

feature
 keep alive 164
 figures
 hot standby redundancy 54
 Multiple-to-Point mode 80
 Point-to-Point mode 79
 steps in ISCC/Call Overflow 87
 font styles
 italic 285
 monospace 286

H

HA
 See also high availability
 See hot standby
 HA configuration 51–61
 HA Proxy
 starting 130, 131
 ha-sync-dly-lnk-conn
 configuration options 273
 hd-login-mode
 configuration options 261
 hd-logout-mode
 configuration options 262
 hd-vn-separator
 configuration options 262
 high-availability configuration 51–61
 host
 command line parameter 123
 Hot Desking
 T-Server for HiPath DX 146
 hot standby 26, 51
 defined 27
 figure 54

T-Server configuration 58
 hot standby HA synchronization 193
 Hunt Groups 144

I

inbound-bsns-calls
 configuration options 153, 262
 emulated agents 153, 262
 inbound-translator-<n>
 configuration option 239
 inherit-bsns-type
 configuration options 153, 262
 intended audience 12
 Inter Server Call Control 66–85
 Inter Server Call Control/Call Overflow 85–89
 interaction
 common log option 206
 internal-bsns-calls
 configuration options 153, 263
 ISCC
 destination T-Server 72
 origination T-Server 72
 ISCC transaction types 67, 72
 direct-ani 73, 81
 direct-callid 74, 81
 direct-digits 81
 direct-network-callid 74, 81
 direct-notoken 75, 81
 direct-uui 75, 81
 dnis-pool 76, 81
 in load-balancing mode 77
 pullback 77, 81
 reroute 78, 81
 route 79, 81
 route-uui 80
 supported 81
 ISCC/COF
 supported 86
 iscc-xaction-type 67
 italics 285

K

keep-startup-file
 common log option 200
 Known limitations 137
 kpl-interval
 configuration options 273
 kpl-loss-rate
 configuration options 274
 kpl-tolerance
 configuration options 274

L**I**

- command line parameter 124
- legal-guard-time
 - configuration options 158, 263
 - emulated agents 158, 263
- level-reassign-<eventID>
 - common log option 212
- level-reassign-disable
 - common log option 214
- License section
 - configuration options 225–228
- limitations 137
- link-alarm-high
 - configuration options 172, 274
- link-alarm-low
 - configuration options 274
- link-control
 - configuration options 263
- Link-Control section 272
- LMS messages
 - messages, LMS 172
- lmspath
 - command line parameter 124
- local-node-id
 - configuration option 237
- location parameter 66
- log configuration options 198–204
- log section
 - common log options 198–212
- log-extended section
 - common log options 212–214
- log-filter section
 - common log options 214–215
- log-filter-data section
 - common log options 215
- log-trace-flags
 - configuration option 223

M

- Management Layer 38
- management-port
 - configuration option 223
- Mandatory Options
 - configuration options 247
- mandatory options
 - configuration options 220
- match-call-once
 - configuration option 230
- max-outstanding
 - configuration options 275, 277
- max-pred-req-delay
 - configuration options 264
- memory
 - common log option 203

- memory-storage-size
 - common log option 203
- merged-user-data
 - configuration option 223
- message_format
 - common log option 201
- messagefile
 - common log option 200
- monospace font 286
- Multiple-to-One mode 79
- Multiple-to-Point mode 79, 80
- Multi-Site Support section
 - configuration options 229–239

N

- nas-indication
 - configuration options 264
- nas-private
 - configuration options 162, 264
- NAT/C feature 98
- nco X/Y
 - command line parameter 124
- network attended transfer/conference 98
- network objects 38
- network-request-timeout
 - configuration option 233
- no-answer supervision . . 161, 260, 261, 265, 266, 280
 - agents 161
 - device-specific overrides 162
 - extensions 161
 - overrides for individual calls 162
 - positions 162
- no-answer-action
 - annex tab options 279
- no-answer-overflow
 - annex tab options 279
- no-answer-timeout
 - annex tab options 280
- notify-idle-tout
 - configuration option 242
- Number Translation feature 89–97
- number translation rules 90
- num-of-licenses
 - configuration option 225
- num-sdn-licenses
 - configuration option 226

O

- objects
 - Agent Logins 43
 - DNs 43

network	38
Switches	42
Switching Offices	42
One-to-One mode	79
origination location	66
origination T-Server	72
outbound-bsns-calls	
configuration options	153, 264
emulated agents	153, 264
override-switch-acw	
configuration options	264

P

pend-state-sync-tout	
configuration options	265
periodic-check-tout	
configuration option	242
Point-to-Point mode	79
port	
command line parameter	123
position no-answer supervision	162
posn-no-answer-overflow	
configuration options	162, 265
emulated agents	162
posn-no-answer-timeout	
configuration options	162, 266, 280
emulated agents	162
prd-dist-call-ans-time	
configuration options	266
predictive dialing	159
primary servers	51
print-attributes	
common log option	202
private services and events	188
propagated-call-type	
configuration option	103, 224
protocol	
configuration option	241
pullback	
ISCC transaction type	77, 81

Q

quiet-cleanup	
configuration options	275
quiet-startup	
configuration options	275

R

rebind-delay	
common configuration option	216
recall-no-answer-timeout	

configuration options	267
reconnect-tout	
configuration option	230
redundancy	
hot standby	26, 51
warm standby	26, 51
redundancy types	55, 56, 58
hot standby	27
reg-delay	
configuration options	275
reg-interval	
configuration options	276
register-attempts	
configuration option	233
register-tout	
configuration option	233
reg-silent	
configuration options	276
reject-subsequent-request	
configuration option	228
releasing-party-report	
configuration options	267
report-connid-changes	
configuration option	230
request-collection-time	
configuration option	229
request-tout	
configuration option	68, 233
reroute	
ISCC transaction type	78, 81
reservation-time	
configuration option	229
resource-allocation-mode	
configuration option	234
resource-load-maximum	
configuration option	234
restart-cleanup-dly	
configuration options	276
restart-cleanup-limit	
configuration options	276
restart-period	
configuration options	276
restrictions	137
retain-call-tout	
configuration options	269
route	
ISCC transaction type	68, 79, 81, 115
route-dn	
configuration option	234
route-failure-alarm-high-wm	
configuration options	268
route-failure-alarm-low-wm	
configuration options	268
route-failure-alarm-period	
configuration options	171, 268
route-uui	

ISCC transaction type 80
 routing
 Inter Server Call Control 72–85
 rq-conflict-check
 configuration options 277
 rq-expire-tout
 configuration options 277
 rq-gap
 configuration options 277
 rule-, where n=1-N
 configuration options 272
 rule-<n>
 configuration option 240
 run.bat 127
 run.sh 126

S

Security section
 configuration option 243
 segment
 common log option 199
 server-id
 configuration option 224
 setting
 configuration options 219
 setting configuration options
 common 198
 Setting DN Properties 140
 sml section
 common options 215
 spool
 common log option 203
 square brackets 286
 standard
 common log option 206
 starting
 HA Proxy 130
 T-Server 131
 supervised routing (emulated) 144
 supervised-route-timeout
 configuration options 269
 Supported Functionality 151
 Supported Platforms 140
 suspending-wait-timeout
 common configuration option 215, 217
 Switch objects 42
 multi-site operation 108
 switch partitioning
 defined 102
 T-Server support 103
 switch/CTI environments 139
 Switching Office objects 42
 multi-site operation 109, 110, 111, 115
 Switch-Specific Configuration 137
 sync-emu-acw

configuration options 154, 270
 emulated agent options 154, 270
 sync-reconnect-tout
 configuration option 241

T

Target ISCC
 Access Code configuration 111
 Default Access Code configuration 110
 tcs-queue
 configuration option 235
 tcs-use
 configuration option 235
 time_convert
 common log option 202
 time_format
 common log option 202
 timed-acw-in-idle
 configuration options 157, 270
 emulated agents 157
 timeout
 configuration option 68, 234
 timeout value format
 configuration option 243–244
 TInitiateConference 66
 TInitiateTransfer 66
 TMakeCall 66
 TMuteTransfer 66
 trace
 common log option 207
 transaction types (ISCC). 67, 72
 supported 81
 transfer connect service 84
 Translation Rules section
 configuration option 239
 TRouteCall 66
 trunk lines 79
 Trunk Monitoring
 T-Server for HiPath DX 147
 trunk-map-mode
 configuration options 277
 T-Server
 configuring Application objects 44
 for multi-sites 108
 configuring redundancy 56
 HA 58
 high availability 58
 hot standby 58
 multi-site operation 107–121
 redundancy 55, 56, 58
 starting 131, 132
 using Configuration Manager 44
 multiple ports 45
 warm standby 56

- T-Server for HiPath DX
 - Hot Desking 146
 - Mandatory Options
 - configuration options 247
- T-Server for HiPathDX
 - Trunk Monitoring 147
- T-Server section
 - configuration options 220–225
- TSingleStepTransfer 66
- TXRouteType 67
- type styles
 - conventions 285
 - italic 285
 - monospace 286
- typographical styles 285

U

- UNIX
 - installing T-Server 40, 46
 - starting applications 127
 - starting HA Proxy 131
 - starting T-Server 132
 - starting with run.sh 126
- unknown-bsns-calls
 - configuration options 153, 270
- unknown-xfer-merge-udata
 - configuration options 270
- untimed-wrap-up-value
 - configuration options 271
 - emulated agent options 271
- use-data-from
 - configuration option 231
- use-implicit-access-numbers
 - configuration option 235
- use-link-bandwidth
 - configuration options 277
- use-native-routing
 - configuration options 278
- user data keys
 - ACCOUNT_CODE 189
 - UU_DATA 190
- user data propagation 100
- user-data-limit
 - configuration option 225
- UU_DATA
 - user data keys 190

V

- V
 - command line parameters 124
- VDN 79
- verbose
 - common log option 198

- version numbering, document 285

W

- Walk-Away codes 148
- warm standby 26, 51
 - figure 52
 - T-Server configuration 56
- Windows
 - installing T-Server 41, 47
 - starting applications 127
 - starting HA Proxy 131
 - starting T-Server 132
 - starting with run.bat 127
- wrap-up-threshold
 - configuration options 271
- wrap-up-time
 - configuration options 156, 271, 272
 - emulated agents 156, 271, 272

X

- x-conn-debug-all
 - common log option 212
- x-conn-debug-api
 - common log option 211
- x-conn-debug-dns
 - common log option 212
- x-conn-debug-open
 - common log option 210
- x-conn-debug-security
 - common log option 211
- x-conn-debug-select
 - common log option 210
- x-conn-debug-timers
 - common log option 211
- x-conn-debug-write
 - common log option 211