



Framework 8.1

# **T-Server for Avaya TSAPI**

## **Deployment Guide**

**The information contained herein is proprietary and confidential and cannot be disclosed or duplicated without the prior written consent of Genesys Telecommunications Laboratories, Inc.**

Copyright © 2001–2012 Genesys Telecommunications Laboratories, Inc. All rights reserved.

## **About Genesys**

Genesys is the world's leading provider of customer service and contact software - with more than 4,000 customers in 80 countries. Drawing on its more than 20 years of customer service innovation and experience, Genesys is uniquely positioned to help companies bring their people, insights and customer channels together to effectively drive today's customer conversation. Genesys software directs more than 100 million interactions every day, maximizing the value of customer engagement and differentiating the experience by driving personalization and multi-channel customer service - and extending customer service across the enterprise to optimize processes and the performance of customer-facing employees. Go to [www.genesyslab.com](http://www.genesyslab.com) for more information.

Each product has its own documentation for online viewing at the Genesys Technical Support website or on the Documentation Library DVD, which is available from Genesys upon request. For more information, contact your sales representative.

## **Notice**

Although reasonable effort is made to ensure that the information in this document is complete and accurate at the time of release, Genesys Telecommunications Laboratories, Inc., cannot assume responsibility for any existing errors. Changes and/or corrections to the information contained in this document may be incorporated in future versions.

## **Your Responsibility for Your System's Security**

You are responsible for the security of your system. Product administration to prevent unauthorized use is your responsibility. Your system administrator should read all documents provided with this product to fully understand the features available that reduce your risk of incurring charges for unlicensed use of Genesys products.

## **Trademarks**

Genesys, the Genesys logo, and T-Server are registered trademarks of Genesys Telecommunications Laboratories, Inc. All other company names and logos may be trademarks or registered trademarks of their respective holders. © 2012 Genesys Telecommunications Laboratories, Inc. All rights reserved.

The Crystal monospace font is used by permission of Software Renovation Corporation, [www.SoftwareRenovation.com](http://www.SoftwareRenovation.com).

## **Technical Support from VARs**

If you have purchased support from a value-added reseller (VAR), please contact the VAR for technical support.

## **Technical Support from Genesys**

If you have purchased support directly from Genesys, please contact Genesys Technical Support at the regional numbers provided on [page 13](#). For complete contact information and procedures, refer to the [Genesys Technical Support Guide](#).

## **Ordering and Licensing Information**

Complete information on ordering and licensing Genesys products can be found in the [Genesys Licensing Guide](#).

## **Released by**

Genesys Telecommunications Laboratories, Inc. [www.genesyslab.com](http://www.genesyslab.com)

**Document Version:** 81fr\_dep-ts\_avaya\_tsapi\_03-2012\_v8.1.001.02



# Table of Contents

<b>List of Procedures</b>	.....	<b>9</b>
<b>Preface</b>	.....	<b>11</b>
	About T-Server for Avaya TSAPI.....	11
	Intended Audience.....	12
	Making Comments on This Document .....	12
	Contacting Genesys Technical Support.....	13
	Document Change History .....	13
<b>Part 1</b>	<b>T-Server Deployment .....</b>	<b>15</b>
	New for All T-Servers in 8.1 .....	15
<b>Chapter 1</b>	<b>T-Server Fundamentals.....</b>	<b>17</b>
	Learning About T-Server .....	18
	Framework and Media Layer Architecture .....	18
	T-Server Requests and Events .....	20
	Advanced Disconnect Detection Protocol .....	23
	Redundant T-Servers .....	24
	Multi-Site Support .....	28
	Agent Reservation .....	28
	Client Connections .....	29
	Next Steps .....	29
<b>Chapter 2</b>	<b>T-Server General Deployment.....</b>	<b>31</b>
	Prerequisites.....	31
	Software Requirements .....	31
	Hardware and Network Environment Requirements .....	33
	Licensing Requirements .....	33
	About Configuration Options.....	35
	Deployment Sequence .....	36
	Deployment of T-Server.....	36

Configuration of Telephony Objects .....	36
Configuration of T-Server .....	39
Installation of T-Server .....	40
Next Steps .....	43

## Chapter 3

<b>High-Availability Deployment.....</b>	<b>45</b>
Warm Standby Redundancy Type .....	46
Hot Standby Redundancy Type .....	47
Prerequisites.....	49
Requirements.....	49
Synchronization Between Redundant T-Servers .....	49
Warm Standby Deployment.....	50
General Order of Deployment.....	50
Modification of T-Servers for Warm Standby .....	51
Warm Standby Installation of Redundant T-Servers .....	52
Hot Standby Deployment.....	52
General Order of Deployment.....	52
Modification of T-Servers for Hot Standby .....	53
Hot Standby Installation of Redundant T-Servers .....	56
Next Steps .....	56

## Chapter 4

<b>Multi-Site Support.....</b>	<b>57</b>
Multi-Site Fundamentals .....	58
ISCC Call Data Transfer Service .....	59
ISCC Call Flows.....	60
ISCC Transaction Types .....	66
T-Server Transaction Type Support.....	74
Transfer Connect Service Feature .....	78
ISCC/Call Overflow Feature .....	79
Number Translation Feature.....	83
Number Translation Rules .....	84
Network Attended Transfer/Conference Feature.....	91
Event Propagation Feature.....	93
User Data Propagation .....	94
Party Events Propagation .....	95
Switch Partitioning .....	96
Event Propagation Configuration .....	97
ISCC Transaction Monitoring Feature .....	100
Configuring Multi-Site Support.....	100
Applications .....	101
Switches and Access Codes .....	102
DNs.....	108

	Configuration Examples.....	113
	Next Steps .....	114
<b>Chapter 5</b>	<b>Starting and Stopping T-Server Components .....</b>	<b>115</b>
	Command-Line Parameters .....	115
	Starting and Stopping with the Management Layer .....	117
	Starting with Startup Files .....	118
	Starting Manually .....	119
	HA Proxy.....	122
	T-Server .....	123
	Verifying Successful Startup .....	125
	Stopping Manually .....	125
	Starting and Stopping with Windows Services Manager .....	126
	Next Steps .....	126
<b>Part 2</b>	<b>T-Server Configuration .....</b>	<b>127</b>
	New in T-Server for Avaya TSAPI .....	128
<b>Chapter 6</b>	<b>Switch-Specific Configuration .....</b>	<b>129</b>
	Known Limitations .....	129
	Setting DN Properties .....	131
	Configuring Links and Switches .....	132
	Configuring the CTI Link .....	132
	Configuring the TimedAfterCallWork (TACW) Option .....	135
	Configuring AES connections.....	137
	Configuring the TSAPI Client.....	138
	Avaya TSAPI Requirements .....	139
	Configuring an TSAPI Split .....	140
	Genesys Requirements for Avaya TSAPI.....	141
<b>Chapter 7</b>	<b>Supported T-Server Features .....</b>	<b>143</b>
	T-Library Functionality .....	143
	Support for Agent Work Modes .....	152
	Support for Agent Work Mode Synchronization.....	153
	Support for Replacing Calling Party Number.....	154
	Support for Real-Time Agent State Using Device, Media and Call Control API .....	155
	Feature Configuration .....	156
	Support for Notification of Failed Routing Attempts.....	156
	Feature Configuration .....	156

Support for the Call Release Tracking.....	157
DN-Based Reporting.....	157
Call-Based Reporting.....	157
Feature Configuration .....	158
Support for Cause Codes .....	158
Feature Configuration .....	158
Default Mapping of the CSTA Cause Code .....	158
Support for ISDN Network Redirection.....	159
Feature Configuration .....	159
Support for Emulated Agents .....	159
Feature Configuration .....	160
Support for Agent No Answer Supervision .....	160
Feature Configuration .....	160
Support for Switch Partitioning .....	161
Feature Configuration .....	161
Support for Avaya Enterprise Survivable Server (ESS) .....	161
Bandwidth Considerations .....	161
Avaya ESS Architecture.....	161
Typical ESS Failure Support Scenarios.....	162
Use of the Extensions Attribute .....	167
Use of the UserData Attribute.....	178
T-Server Error Messages .....	179

<b>Chapter 8</b>	<b>Supported High-Availability Configurations.....</b>	<b>185</b>
	HA Default Configuration.....	185
	Examples of Warm Standby Configurations .....	186

<b>Chapter 9</b>	<b>Common Configuration Options.....</b>	<b>187</b>
	Setting Configuration Options.....	187
	Mandatory Options .....	188
	log Section.....	188
	Log Output Options.....	194
	Examples .....	198
	Debug Log Options .....	199
	log-extended Section.....	202
	log-filter Section.....	204
	log-filter-data Section.....	204
	security Section .....	205
	sml Section.....	205
	common Section.....	207
	Changes from 8.0 to 8.1 .....	207

<b>Chapter 10</b>	<b>T-Server Common Configuration Options .....</b>	<b>209</b>
	Setting Configuration Options.....	209
	Mandatory Options .....	210
	TServer Section .....	210
	license Section .....	215
	agent-reservation Section.....	218
	extrouter Section .....	219
	ISCC Transaction Options .....	221
	Transfer Connect Service Options.....	225
	ISCC/COF Options .....	226
	Event Propagation Options .....	228
	Number Translation Option.....	229
	GVP Integration Option.....	230
	backup-sync Section .....	230
	call-cleanup Section .....	232
	Translation Rules Section.....	233
	security Section .....	234
	Timeout Value Format .....	234
	Changes from Release 8.0 to 8.1 .....	235
<b>Chapter 11</b>	<b>T-Server-Specific Configuration Options.....</b>	<b>237</b>
	Application-Level Options.....	237
	Mandatory Options .....	238
	TServer Section .....	238
	cause-to-callstate-map Section.....	254
	query-agent-state Section.....	255
	tsapi-configuration Section.....	258
	extrouter Section.....	259
	CTI-Link Section for DMCC .....	259
	DN-Level Options .....	260
	TServer Section .....	261
	Changes from Release 8.0 to 8.1 .....	262
<b>Supplements</b>	<b>Related Documentation Resources .....</b>	<b>263</b>
	<b>Document Conventions .....</b>	<b>265</b>
<b>Index</b>	<b>.....</b>	<b>267</b>







# List of Procedures

Configuring T-Server .....	39
Configuring multiple ports .....	40
Installing T-Server on UNIX .....	41
Installing T-Server on Windows .....	42
Verifying the installation of T-Server. ....	43
Modifying the primary T-Server configuration for warm standby .....	51
Modifying the backup T-Server configuration for warm standby .....	52
Modifying the primary T-Server configuration for hot standby .....	53
Modifying the backup T-Server configuration for hot standby .....	55
Activating Transfer Connect Service .....	79
Configuring Number Translation. ....	91
Activating Event Propagation: basic configuration .....	98
Modifying Event Propagation: advanced configuration .....	98
Configuring T-Server Applications .....	101
Configuring Default Access Codes. ....	103
Configuring Access Codes .....	104
Configuring access resources for the route transaction type .....	108
Configuring access resources for the dnis-pool transaction type .....	110
Configuring access resources for direct-* transaction types .....	110
Configuring access resources for ISCC/COF .....	111
Configuring access resources for non-unique ANI .....	111
Modifying DNs for isolated switch partitioning .....	112
Configuring T-Server to start with the Management Layer .....	117
Starting T-Server on UNIX with a startup file .....	118
Starting T-Server on Windows with a startup file .....	119
Starting HA Proxy on UNIX manually .....	123
Starting HA Proxy on Windows manually .....	123
Starting T-Server on UNIX manually .....	124
Starting T-Server on Windows manually .....	124

Stopping T-Server on UNIX manually . . . . .	125
Stopping T-Server on Windows manually . . . . .	125
Configuring a CTI Link between T-Server and Avaya TSAPI. . . . .	132
Configuring a TSAPI station . . . . .	134



## Preface

Welcome to the *Framework 8.1 T-Server for Avaya TSAPI Deployment Guide*. This document introduces you to the concepts, terminology, and procedures that are relevant to T-Servers® in general and provides detailed reference information about T-Server for Avaya TSAPI (Telephony Service Application Programming Interface). The reference information includes, but is not limited to, configuration options, limitations, and switch-specific functionality. You must configure the configuration objects and options that are described in this document in the Framework Configuration Layer.

Use this document only after you have read through the *Framework 8.1 Deployment Guide*, as well as the Release Note for your T-Server.

This document is valid only for the 8.1 release of this product.

---

**Note:** For versions of this document created for other releases of this product, visit the Genesys Technical Support website, or request the Documentation Library DVD, which you can order by e-mail from Genesys Order Management at [orderman@genesyslab.com](mailto:orderman@genesyslab.com).

---

This preface contains the following sections:

- [About T-Server for Avaya TSAPI, page 11](#)
- [Intended Audience, page 12](#)
- [Making Comments on This Document, page 12](#)
- [Contacting Genesys Technical Support, page 13](#)
- [Document Change History, page 13](#)

For information about related resources and about the conventions that are used in this document, see the supplementary material starting on [page 263](#).

---

## About T-Server for Avaya TSAPI

T-Server is the Genesys software component that provides an interface between your telephony hardware and the rest of the Genesys software components in your enterprise. It translates and keeps track of events and requests that come from, and are sent to, the CTI (computer-telephony

integration) link in the telephony device. T-Server is a TCP/IP-based server that can also act as a messaging interface between T-Server clients. It is the critical point in allowing your Genesys solution to facilitate and track the contacts that flow through your enterprise.

---

## Intended Audience

This guide is intended primarily for system administrators, both those who are new to T-Server and those who are familiar with it.

- If you are new to T-Server, read the *Framework 8.1 Deployment Guide* and the Release Note, and then read all of the sections of this document that apply to your software and its accompanying components. Refer back to the *Framework 8.1 Deployment Guide* as needed.
- If you are an experienced T-Server user—someone with computer expertise, who is used to installing, configuring, testing, or maintaining Genesys software—you may find it more time efficient to go to the Index to see what is new or different in T-Server release 8.1. If you take that approach, please also read Release Notes and refer to other related resources, such as the *Genesys Events and Models Reference Manual* and *Voice Platform SDK 8.x .NET (or Java) API Reference* for complete information on the T-Server events, call models, and requests.

In general, this document assumes that you have a basic understanding of, and familiarity with:

- Computer-telephony integration concepts, processes, terminology, and applications.
- Network design and operation.
- Your own network configurations.
- Your telephony hardware and software.
- Genesys Framework architecture and functions.
- Configuration Manager interface and object-managing operations.

Based on your specific contact center environment and your responsibilities in it, you may need to be familiar with a much wider range of issues as you deploy T-Server.

---

## Making Comments on This Document

If you especially like or dislike anything about this document, feel free to e-mail your comments to [Techpubs.webadmin@genesyslab.com](mailto:Techpubs.webadmin@genesyslab.com).

You can comment on what you regard as specific errors or omissions, and on the accuracy, organization, subject matter, or completeness of this document. Please limit your comments to the scope of this document only and to the way

in which the information is presented. Contact your Genesys Account Representative or Genesys Technical Support if you have suggestions about the product itself.

When you send us comments, you grant Genesys a nonexclusive right to use or distribute your comments in any way it believes appropriate, without incurring any obligation to you.

---

## Contacting Genesys Technical Support

If you have purchased support directly from Genesys, contact Genesys Technical Support at the regional numbers below.

---

**Note:** The following contact information was correct at time of publication. For the most up-to-date contact information, see the [Contact Information](#) on the Tech Support website. Before contacting technical support, refer to the *Genesys Technical Support Guide* for complete contact information and procedures.

---

### Genesys Technical Support Contact Information

Region	Telephone	E-Mail
North America and Latin America	+888-369-5555 (toll-free) +506-674-6767	<a href="mailto:support@genesyslab.com">support@genesyslab.com</a>
Europe, Middle East, and Africa	+44-(0)-1276-45-7002	<a href="mailto:support@genesyslab.co.uk">support@genesyslab.co.uk</a>
Asia Pacific	+61-7-3368-6868	<a href="mailto:support@genesyslab.com.au">support@genesyslab.com.au</a>
Japan	+81-3-6361-8950	<a href="mailto:support@genesyslab.co.jp">support@genesyslab.co.jp</a>
India	000-800-100-7136 (toll-free) +61-7-3368-6868	<a href="mailto:support@genesyslab.com.au">support@genesyslab.com.au</a>
Malaysia	1-800-814-472 (toll-free) +61-7-3368-6868	<a href="mailto:support@genesyslab.com.au">support@genesyslab.com.au</a>

---

## Document Change History

This version of the *Framework 8.1 T-Server for Avaya TSAPI Deployment Guide* has been updated with the following:

- The propagated-call-type configuration option is correctly documented in the TServer section.





Part

# 1

## T-Server Deployment

Part One of this *T-Server Deployment Guide* familiarizes the reader with T-Server in general. It addresses architectural, functional, and procedural information common to all T-Servers.

The information in Part One is divided into the following chapters:

- Chapter 1, “T-Server Fundamentals,” on [page 17](#), describes T-Server, its place in the Framework 8 architecture, T-Server redundancy, and multi-site issues. It stops short of providing configuration and installation information.
- Chapter 2, “T-Server General Deployment,” on [page 31](#), presents configuration and installation procedures for all T-Servers.
- Chapter 3, “High-Availability Deployment,” on [page 45](#), addresses high availability (HA).
- Chapter 4, “Multi-Site Support,” on [page 57](#), details the variations available for T-Server implementations across geographical locations.
- Chapter 5, “Starting and Stopping T-Server Components,” on [page 115](#), describes how, and in what order, to start up T-Server among other Framework components. It also provides possible stopping commands.

---

## New for All T-Servers in 8.1

Before looking at T-Server’s place in Genesys solutions and in the architecture of the Genesys Framework, note the following general changes that have been implemented in the 8.1 release of T-Server:

- T-Server no longer connects to applications that have disabled status in the configuration environment.
- The default value of the background-processing configuration option has been changed to true. See “background-processing” on [page 210](#) for details.

- T-Server now supports the Unresponsive Process Detection feature. The following configuration options enable this feature:
  - “heartbeat-period” on [page 205](#)
  - “hangup-restart” on [page 206](#)

For more information, refer to the *Framework 8.0 Management Layer User’s Guide*.

- T-Server now supports IPv6. For more information, refer to the *Framework 8.1 Deployment Guide*.
- T-Server now supports vSphere 4 Hypervisor.
- T-Server now supports Acrezzo FLEXNet Publisher v11.9 license manager.

---

**Notes:** • Configuration option changes common to all T-Servers are described in “Changes from Release 8.0 to 8.1” on [page 235](#).

- For information about the new features that are available in your T-Server in the initial 8.1 release, see Part Two of this document.

---





## Chapter

# 1

## T-Server Fundamentals

This chapter provides general information about T-Server features and functionality and about its configuration and installation. For reference information about your specific T-Server and about options for all T-Servers, see “Part Two: Reference Information.”

This chapter has various levels of information, some of it intended for people who have configured, installed, and used previous releases of T-Server, and some of it aimed at those less familiar with such T-Server operations. That means some sections will not necessarily be relevant for you.

- If you are an experienced user of T-Server, start with “New for All T-Servers in 8.1” on [page 15](#), and then move to the chapters comprising Part Two of this document, where specific information about your T-Server is available.
- If you are new to T-Server, begin with “[Learning About T-Server.](#)” Once you have read through that and subsequent sections, you are ready for the other chapters in Part One that go into detail about T-Server configuration and installation.

Generally, this chapter presents overview information that applies to all T-Servers (and Network T-Servers) and their deployment. This chapter is divided into the following sections:


- [Learning About T-Server, page 18](#)
- [Advanced Disconnect Detection Protocol, page 23](#)
- [Redundant T-Servers, page 24](#)
- [Multi-Site Support, page 28](#)
- [Agent Reservation, page 28](#)
- [Client Connections, page 29](#)
- [Next Steps, page 29](#)

# Learning About T-Server

The *Framework 8.1 Deployment Guide* provides you with a high-level introduction to the role that T-Server plays in the Genesys Framework. If you have already looked through that guide, you may recall that T-Server is the most important component of the Framework Media Layer (the other two components are Load Distribution Server (LDS) and HA Proxy). The Media Layer enables Genesys solutions to communicate with various media, including traditional telephony systems, voice over IP (VoIP), e-mail, and the Web. This layer also provides the mechanism for distributing interaction-related business data, also referred to as *attached data*, within and across solutions.


## Framework and Media Layer Architecture

Figure 1 illustrates the position Framework holds in a Genesys solution.

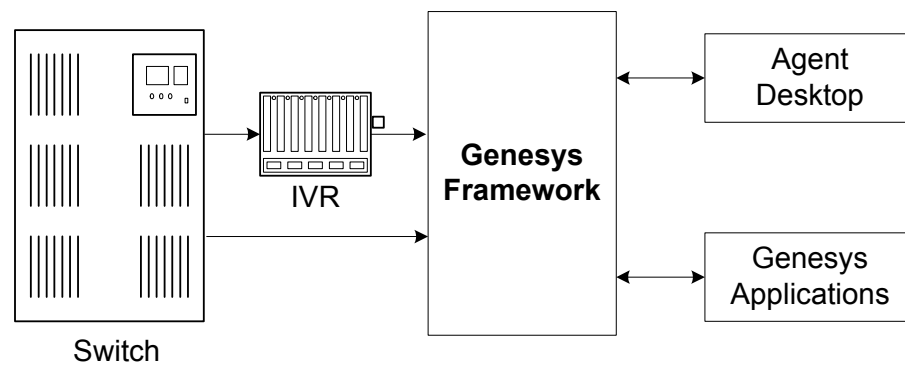

**Figure 1: Framework in a Genesys Solution**


Moving a bit deeper, Figure 2 presents the various layers of the Framework architecture.

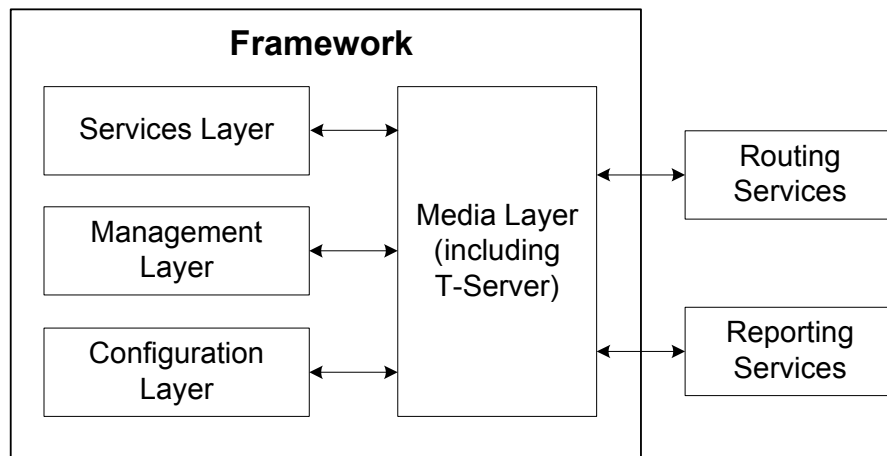

**Figure 2: The Media Layer in the Framework Architecture**

T-Server is the heart of the Media Layer—translating the information of the media-device realm into information that Genesys solutions can use. It enables your contact center to handle the computer-based form of the interactions that arrive and it translates the information surrounding a customer contact into reportable and actionable data.

[Figure 3](#) presents the generalized architecture of the Media Layer.

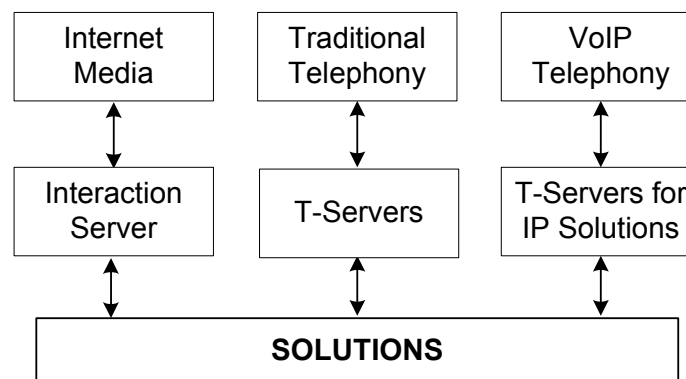

**Figure 3: Media Layer Architecture**

In addition to being the most important component of the Media Layer, T-Server plays the most significant role in making information about telephony traffic and its data available to Framework as a whole.

One or more components in practically every solution are T-Server clients. Solutions comprise a number of different Genesys software packages, from collections of components for various types of routing to those that allow for

outbound dialing to still others. Framework in general, and T-Server in particular, enable these solutions to function in your enterprise.

T-Server has several typical clients: Stat Server, Interaction Concentrator, Universal Routing Server, and agent desktop applications. T-Server gets the information it needs about the enterprise from Configuration Server. Additionally, if you use the Management Layer, T-Server provides its ongoing status and various other log messages to server components of the Management Layer (for instance, allowing you to set alarms).

## T-Server Requests and Events

This section outlines the roles that T-Server plays in a contact center. While it is possible to describe roles for all T-Servers, at a detailed level, T-Server's functionality depends on the hardware to which it is connected. (For example, when connected to a traditional switch, it performs CTI functions, but when connected to a VOIP-based telephony device, it controls IP traffic.) The CTI connection is only for the switch.

### Details of T-Server Functionality

T-Server is a TCP/IP server that enables intelligent communication between media-specific protocols (such as the various CTI protocols, including CSTA and ASAI) and TCP/IP-based clients of T-Server. Applications that are clients to T-Server use the T-Library format to transmit requests to T-Server through a TCP/IP socket. T-Server can then either translate those requests to CTI protocol for switch use or relay them directly to other TCP/IP clients.

T-Server performs three general functions in the contact center: Bridging, Messaging, and Interaction Tracking.

#### Bridging

T-Server acts as a platform-independent interface between media devices and business applications. In the case of a telephony device, for instance, it receives messages from and sends commands to the telephony equipment using either CTI links provided by the switch manufacturer or interface protocols provided by telephony network vendors.

On the client-application end, T-Server offers three models (call model, agent model, and device model) unified for all switches. The core functionality (such as processing an inbound call, an agent login, or a call-forwarding request) translates into a unified application programming interface (API) called T-Library, so that applications do not need to know what specific switch model they are dealing with. On the other hand, T-Library accommodates many functions that are unique to a specific switch, so that client applications are able to derive the maximum functionality offered by a particular switch.

Refer to the *Genesys Events and Models Reference Manual* for complete information on all T-Server events and call models and to the

TServer.Requests portion of the *Voice Platform SDK 8.x .NET (or Java) API Reference* for technical details of T-Library functions.

## Messaging

In addition to translating requests and events for the client application involved in an interaction, T-Server:

- Provides a subscription mechanism that applications can use to receive notifications about interaction-related and non-interaction-related events within the contact center.
- Broadcasts messages of major importance (such as a notification that the link is down) to all clients.
- Broadcasts messages originated by a T-Server client to other T-Server clients.

The subscription mechanism consists of two parts, the DN subscription and event-type masking. Applications must register for a DN or a set of DNs to receive notifications about all events that occur in association with each registered DN. For example, when two softphone applications are registered for the same DN, and the first application initiates a call from the DN, T-Server notifies both applications that the call is initiated from the DN.

Client applications can also specify one or more types of events, and T-Server will filter out events of the non-specified types and only send events of the requested types. For example, if agent supervisors are interested in receiving agent-related events, such as AgentLogin and AgentLogout, they have to mask EventAgentLogin and EventAgentLogout, provided that a particular T-Server supports these events.

The combination of each client's subscription for DNs and masking of event types defines what messages T-Server distributes to what client.

## Interaction Tracking

T-Server maintains call information for the life of the call (or other T-Server-supported media type) and enables client applications to attach user data to the call. Call information includes:

- A unique identifier, connection ID, that T-Server assigns when creating the call.
- Automatic Number Identification (ANI) and Dialed Number Identification Service (DNIS), if reported by the CTI link.
- User data that a client application (such as an Interactive Voice Response unit or Genesys Universal Routing Server) provides.

## Difference and Likeness Across T-Servers

Although Figure 3 on [page 19](#) (and other figures) depicts T-Server that works with telephony systems as a single product, this is a simplification. Because

almost every traditional telephony device has its own characteristics and communication protocols, Genesys makes different T-Servers for different telephony systems. (That means your T-Server will not work with another switch.) Thus, all T-Servers play a common role in the architecture, but their specific features differ from implementation to implementation, based on the media device in use.

Despite their switch-based differences, T-Servers for telephony systems are similar to one another in at least one important respect: they are all built with a certain amount of shared software code. This shared code is rolled into a single unit and is called T-Server Common Part (TSCP). TSCP is the central, common component for all T-Servers and has its own Release Note, which is accessible via a hyperlink from your T-Server's Release Note.


---

**Note:** This document separates common-code features based on TSCP into separate sections and chapters, such as the “T-Server Common Configuration Options” chapter. These are the options for all T-Servers that TSCP makes available for configuration.

---

## T-Server Functional Steps During a Sample Call

The following example, [Figure 4](#), outlines some basic steps that T-Server might take when a call arrives from outside the contact center. In this scenario, T-Server starts tracking the call even before it is delivered to the agent. T-Server then informs the selected agent that a call has arrived. When the switch delivers the call to the agent's extension, T-Server presents account information, collected at an Interactive Voice Response (IVR) unit, to the agent at the agent desktop application.

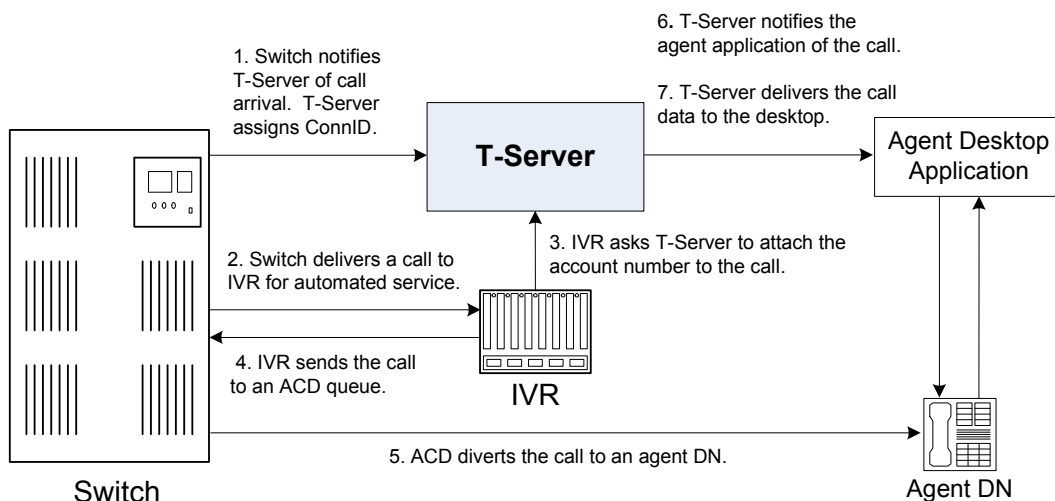

**Figure 4: Functional T-Server Steps**

**Step 1**

When the call arrives at the switch, T-Server creates a call in its internal structure. T-Server assigns the call a unique identifier, connection ID.

**Step 2**

The switch delivers the call to an Interactive Voice Response (IVR) unit, which begins automated interactions with the caller.

**Step 3**

IVR acquires user information from the caller through prompts and requests T-Server to attach that information to the call. T-Server updates the call with the user information.

**Step 4**

IVR sends the call to an ACD (Automated Call Distribution) queue.

**Step 5**

The ACD unit distributes the call to an available agent logged in to a particular DN (directory number).

**Step 6**

T-Server notifies the agent desktop application that the call is ringing on the agent DN. The notification event contains call data including ANI, DNIS, and account information that the IVR has collected.

**Step 7**

The agent desktop application presents the account information, including the name of the person whose account this is, on the agent's screen, so that the agent answering the call has all the relevant information.

These seven steps illustrate just a small part of T-Server's bridging, messaging, and interaction-processing capabilities.

---

## **Advanced Disconnect Detection Protocol**

Since the 6.0 release of T-Server, the Advanced Disconnect Detection Protocol (ADDP) has replaced the Keep-Alive Protocol (KPL) as the method to detect

failures for certain T-Server connections, including connections between two T-Servers and between a T-Server and its clients.

---

**Notes:** Starting with release 7.5, the KPL backward-compatibility feature is no longer supported.

ADDP applies only to connections between Genesys software components.

---

With ADDP, protocol activation and initialization is made on the client's side and you can change these parameters. No additional messages are sent when there is existing activity over the connection. T-Server client applications and the remote T-Server (if any) must be listening to the socket and respond promptly to the polling signal for the connection to be preserved.

If you are going to enable ADDP, you must do it using the [protocol](#), [addp-timeout](#), [addp-remote-timeout](#), and [addp-trace](#) configuration options. When configuring a timeout, consider the following issues:

- The configured timeout must be at least twice as long as the maximum network latency.
- There may be an interval when T-Server does not check for network activity.
- If the link connection fails but the client is not notified (for example, because the host is turned off, or because a network cable is unplugged), the maximum reaction time to a link-connection failure is equal to double the configured timeout plus the established network latency.

Also keep in mind that the T-Server receiving the polling signal may not respond immediately, and that a delay occurs after the polling signal, while the response travels from one T-Server to another. If you do not account for these contingencies when configuring a timeout, the connection that ADDP is monitoring will be dropped periodically.

---

## Redundant T-Servers

T-Servers can operate in a high-availability (HA) configuration, providing you with redundant systems. The basics of each T-Server's redundant capabilities differ from T-Server to T-Server. One basic principle of redundant T-Servers is the standby redundancy type, which dictates how quickly a backup T-Server steps in when the primary T-Server goes down.

The Framework Management Layer currently supports two types of redundant configurations: warm standby and hot standby. All T-Servers offer the warm standby redundancy type and, starting with release 7.1, the hot standby redundancy type is implemented in T-Servers for most types of switches. (See [Table 1](#).)



Instructions for configuring T-Server redundancy are available in Chapter 3, “High-Availability Configuration and Installation.” Specifics on your T-Server’s HA capabilities are outlined in Part Two of this document.

---

**Note:** IVR Server and some Network T-Servers can be configured for load sharing or warm or hot standby; however, they do not support any combination of these redundancy types. Details of your component’s HA capabilities are discussed in Part Two of this document.

---

## Support for Hot Standby Redundancy in Various T-Servers

Use [Table 1](#) to determine whether your T-Server supports the hot standby redundancy type. The table also indicates whether HA Proxy components are required for this support, and, if so, how many are required per pair of redundant T-Servers (or per link if so noted).

[Table 1](#) only summarizes hot standby redundancy support in various T-Servers. For detailed, up-to-date information on the subject, see the *Genesys Supported Media Interfaces Reference Manual* located on the Technical Support website at

<http://genesyslab.com/support/dl/retrieve/default.asp?item=A9CB309AF4DEB8127C5640A3C32445A7&view=item>.

**Table 1: T-Server Support of the Hot Standby Redundancy Type**

T-Server Type	Hot Standby Supported	HA Proxy Required	Number of HA Proxy Components
Aastra MXONE CSTA I	Yes	No	—
Alcatel A4200/OXO	Yes	No	—
Alcatel A4400/OXE	Yes	No	—
Aspect ACD	Yes	No	—
Avaya Communication Manager	Yes	No <sup>a</sup>	—
Avaya INDeX	Yes	No	—
Avaya TSAPI	Yes	No	—
Cisco UCCE	Yes	No	—
Cisco Unified Communications Manager	Yes	No	—
DataVoice Dharma	Yes	No	—
Digitro AXS/20	Yes	No	—

**Table 1: T-Server Support of the Hot Standby Redundancy Type (Continued)**

<b>T-Server Type</b>	<b>Hot Standby Supported</b>	<b>HA Proxy Required</b>	<b>Number of HA Proxy Components</b>
EADS Intecom M6880	Yes	No	—
EADS Telecom M6500	Yes	No	—
eOn eQueue	Yes	No	—
Fujitsu F9600	Yes	No	—
Huawei C&C08	Yes	No	—
Huawei NGN	Yes	No	—
Mitel MiTAI	Yes	No	—
NEC NEAX/APEX	Yes	No	—
Nortel Communication Server 2000/2100	Yes	Yes <sup>b</sup> , No <sup>c</sup>	1 per link
Nortel Communication Server 1000 with SCCS/MLS	Yes	No	—
Philips Sopho iS3000	Yes	No <sup>d</sup>	1
Radvision iContact	No	—	—
Samsung IP-PCX IAP	Yes	No	—
Siemens Hicom 300/HiPath 4000 CSTA I	Yes	No	—
Siemens HiPath 3000	Yes	No	—
Siemens HiPath 4000 CSTA III	Yes	No	—
Siemens HiPath DX	Yes	No	—
SIP Server	Yes	No	—
Spectrum	Yes	No	—
Tadiran Coral	Yes	No	—
Teltronics 20-20	Yes	Yes	1
Tenovis Integral 33/55	Yes	No	—
<b>Network T-Servers<sup>e</sup></b>			
AT&T	No	—	—

**Table 1: T-Server Support of the Hot Standby Redundancy Type (Continued)**

T-Server Type	Hot Standby Supported	HA Proxy Required	Number of HA Proxy Components
Concert	No	—	—
CRSP	No	—	—
DTAG	No	—	—
GenSpec	No	—	—
ISCP	No	—	—
IVR Server, using network configuration	Yes	—	—
KPN	No	—	—
MCI	No	—	—
NGSN	No	—	—
Network SIP Server	No	—	—
Sprint	No	—	—
SR3511	No	—	—
Stentor	No	—	—

- With release 7.1, T-Server for Avaya Communication Manager no longer uses HA Proxy for its support of hot standby. Earlier releases of this T-Server require two HA Proxies to support hot standby.
- For T-Server for Nortel Communication Server 2000/2100 in high-availability (hot standby) configuration, Genesys recommends that you use link version SCA114 or above with call-progress and noncontroller-released messages enabled. See the switch-specific information in Part 2 of this *Deployment Guide* for additional information on HA configurations.
- Starting with release 7.5, T-Server for Nortel Communication Server 2000/2100 supports HA without HA Proxy when operating in Dual CTI Links mode. See the switch-specific information in Part 2 of this *Deployment Guide* for additional information on HA configurations.
- Starting with release 6.5.3, T-Server for Philips Sopho iS3000 supports HA both with and without HA Proxy.
- Although they do not support high availability per se, Network T-Servers do support a load-sharing schema.

---

## Multi-Site Support

Multi-site configuration implies the existence of two or more switches that belong to the same enterprise or service provider, and that share the Genesys Configuration Database. (In some cases this may include isolated partitions on a given switch served by different T-Servers.) The main goal of T-Server support for multi-site operations is to maintain critical information about a call as it travels from one switch to another.

For instructions on installing and configuring a multi-site environment, including information on the Inter Server Call Control (ISCC) features, please see Chapter 4, “Multi-Site Support,” on [page 57](#).

---

## Agent Reservation

T-Server provides support for clients to invoke the agent reservation function, `TReserveAgent()`. This function allows a server application that is a client of T-Server to reserve a DN along with an agent, a `Place`, or both, so that no other T-Server client can route calls to it during a specified reservation interval. Alternatively, when clients use the ISCC feature (see “ISCC Call Data Transfer Service” on [page 59](#)), they can use an agent reservation embedded in an ISCC request. (To do so, clients have to specify a certain `Extensions` attribute in an ISCC request when initiating an ISCC transaction. See [page 66](#) for the list of ISCC requests.)

The reservation does not currently prevent the reserved objects from receiving direct calls or calls distributed from ACD Queues; agent reservation is intended as a way of synchronizing the operation of several clients. See `RequestReserveAgent` in the *Voice Platform SDK 8.x .NET (or Java) API Reference* for more details on this function from the client’s point of view.

In addition to invoking the `TReserveAgent` function, you can customize the Agent Reservation feature by configuring options in the `T-Server Application` object. See “agent-reservation Section” on [page 218](#) in the “T-Server Common Configuration Options” chapter in Part Two for more details.

Starting with version 8.1, T-Server supports Agent Reservation failure optimization, to ensure that only agent reservation requests of the highest priority are collected. T-Server responds immediately with the `EventError` message to existing or new reservation requests of a lower priority while collecting the agent reservation requests of the highest priority only. This functionality is controlled with the `collect-lower-priority-requests` configuration option (see [page 218](#)).

## Client Connections

The number of connections T-Server can accept from its clients depend on the operating system that T-Server runs. [Table 2](#) illustrates the number of client connections that T-Server support.

**Table 2: Number of T-Server's Client Connections**

Operating System	Number of Connections
AIX 32-bit mode (versions 5.3)	32767
AIX 64-bit mode (versions 5.3, 6.1, 7.1)	32767
HP-UX 32-bit mode (versions 11.11)	2048
HP-UX 64-bit mode (versions 11.11, 11i v2, 11i v3)	2048
HP-UX Itanium (version 11i v3)	2048
Linux 32-bit mode (versions RHEL 4.0, RHEL 5.0)	32768
Linux 64-bit mode (version RHEL 5.0)	32768
Solaris 32-bit mode (version 9)	4096
Solaris 64-bit mode (versions 9, 10)	65536
Windows Server 2003, 2008	4096

## Next Steps

Now that you have gained a general understanding of the roles and features available with T-Servers, you are ready to learn how T-Servers are installed and configured. That information is presented in the next few chapters of this *Deployment Guide*. So unless you are already familiar with T-Server deployment and operation procedures, continue with Chapter 2, “T-Server General Deployment,” on [page 31](#). Otherwise, you may want to jump to Part Two of this *Deployment Guide*, where you will find information about your specific T-Server.





## Chapter

# 2

## T-Server General Deployment

This chapter contains general information for the deployment, configuration, and installation of your T-Server. You may have to complete additional configuration and installation steps specific to your T-Server and switch. You will find these steps in Part Two of this document.

This chapter contains these sections:

- [Prerequisites, page 31](#)
- [Deployment Sequence, page 36](#)
- [Deployment of T-Server, page 36](#)
- [Next Steps, page 43](#)

---

**Note:** You *must* read the *Framework 8.1 Deployment Guide* before proceeding with this T-Server guide. That book contains information about the Genesys software you must deploy before deploying T-Server.

---

---

## Prerequisites

T-Server has a number of prerequisites for deployment. Read through this section before deploying your T-Server.

## Software Requirements

### Framework Components

You can only configure T-Server after you have deployed the Configuration Layer of Genesys Framework. This layer contains DB Server, Configuration

Server, and Configuration Manager. If you intend to monitor or control T-Server through the Management Layer, you must also install and configure components of this Framework layer, such as Local Control Agent (LCA), Message Server, Solution Control Server (SCS), and Solution Control Interface (SCI), before deploying T-Server.

Refer to the *Framework 8.1 Deployment Guide* for information about, and deployment instructions for, these Framework components.

## Media Layer and LCA

To monitor the status of components in the Media Layer through the Management Layer, you must load an instance of LCA on every host running Media Layer components. Without LCA, Management Layer cannot monitor the status of any of these components. If you do not use the Management Layer, LCA is not required.

## Supported Platforms

Refer to the *Genesys Supported Operating Environment Reference Manual* for the list of operating systems and database systems supported in Genesys releases 6.x, 7.x, and 8.x. You can find this document on the Genesys Technical Support website at

<http://genesyslab.com/support/dl/retrieve/default.asp?item=B6C52FB62DB42BB229B02755A3D92054&view=item>.

For UNIX-based (UNIX) operating systems, also review the list of patches Genesys uses for software product builds, and upgrade your patch configuration if necessary. A description of patch configuration is linked to installation `read_me.html` files for the Genesys applications that operate on UNIX, and is available within the installation packages.

## Security

Starting with release 7.5, T-Server supports the Genesys Transport Layer Security (TLS) and can be configured for secure data exchange with the other Genesys components that support this functionality.

The Genesys TLS is not supported on all operating systems that T-Server itself supports. For information about the supported operating systems, see the *Genesys 8.x Security Deployment Guide*.



## Hardware and Network Environment Requirements

### Hosting

Genesys recommends that you or your IT specialist assign host computers to Genesys software before you start Genesys installation. Remember the following restrictions:

- Do not install all the Genesys server applications on the same host computer.
- When installing a few server applications on the same host computer, prevent them (except for Configuration Server) from using the swap area.

### Installation Privileges

During deployment, be sure to log in with an account that will permit you to perform administrative functions—that is, one that has root privileges.

### Server Locations

Refer to the “Network Locations for Framework Components” chapter of the *Framework 8.1 Deployment Guide* for recommendations on server locations.

### Supported Platforms

Refer to the *Genesys Supported Media Interfaces Reference Manual* for the list of supported switch and PBX versions. You can find this document on the Genesys Technical Support website at

<http://genesyslab.com/support/dl/retrieve/default.asp?item=A9CB309AF4DEB8127C5640A3C32445A7&view=item>.

## Licensing Requirements

All Genesys software is licensed—that is, it is not shareware. Genesys products are protected through legal license conditions as part of your purchase contract. However, the level of technical license-control enforcement varies across different solutions and components.

Before you begin to install T-Server, remember that, although you may not have had to use technical licenses for your software when you deployed the Configuration and Management Layers in their basic configurations, this is not the case with the Media Layer.

T-Server requires seat-related DN technical licenses to operate even in its most basic configuration. Without appropriate licenses, you cannot install and start T-Server. If you have not already done so, Genesys recommends that you install License Manager and configure a license file at this point. For complete

information on which products require what types of licenses, and on the installation procedure for License Manager, refer to the *Genesys Licensing Guide* available on the Genesys Documentation Library DVD.

The sections that follow briefly describe the T-Server license types.

---

**Note:** Starting with release 7.2, the licensing requirements for T-Server have changed from previous releases. Please read this section carefully and refer to the *Genesys Licensing Guide* for complete licensing information.

---

## Licensing Basic Implementations

A stand-alone T-Server serving a single site requires licenses to register all DNs it monitors. DNs that agents use in day-to-day contact center operations, such as Extensions and ACD Positions, have to be registered using licenses that control agent seats.

---

**Note:** Configure all seat DNs that agents use (Extensions and ACD Positions) in the Configuration Layer. This enables detailed call monitoring through Genesys reporting, and generally allows you to control access to individual DNs.

---

## Licensing HA Implementations

T-Servers operating with the hot standby redundancy type require a special CTI HA technical license, which allows for high-availability implementations, in addition to regular T-Server licenses. Neither T-Server in a redundant pair configured for hot standby starts if this license is unavailable. Moreover, the primary and backup T-Servers must use the same licenses to control the same pool of DNs. If your T-Servers are configured with the hot standby redundancy type, order licenses for CTI HA support.

## Licensing Multi-Site Implementations

T-Servers performing multi-site operations require licenses that allow for such operations, in addition to regular T-Server licenses. If some of your T-Servers are configured for multi-site routing while others are not, either order licenses for multi-site support for all T-Servers or install an additional License Manager to handle the T-Servers involved in multi-site routing.

---

**Note:** You do not need licenses for multi-site support if some T-Server clients include the local location as the `location` attribute value in their requests for routing within the same site.

---

## Configuring License Files

You need a license to configure and install Media Layer components. Genesys recommends that, if you have not already done so, at this point you:

1. Install License Manager.
2. Configure license files.

---

**Note:** If you use the `<port>@<server>` format when entering the name of the license server during installation, remember that some operating systems use `@` as a special character. In this case, the installation routine is unable to write license information for T-Server to the Configuration Layer or the `run.sh` file. Therefore, when you use the `<port>@<server>` format, you must manually modify the command-line license parameter after installing T-Server.

---

For information about which products require what types of licenses and for the installation procedure for License Manager, refer to the *Genesys Licensing Guide* available on the Genesys Documentation Library DVD.

## About Configuration Options

Configuring T-Server is not a onetime operation. It is something you do at the time of installation and then in an ongoing way to ensure the continued optimal performance of your software. You must enter values for T-Server configuration options on the `Options` tab of your T-Server `Application` object in Configuration Manager. The instructions for configuring and installing T-Server that you see here are only the most rudimentary parts of the process. You must refer extensively to the configuration options chapters located in Part Two of this book. Pay particular attention to the configuration options specific to your own T-Server.

Configuration options common to all T-Servers, independent of switch type, are described in Chapter 10, “T-Server Common Configuration Options,” on [page 209](#). *T-Server-specific* configuration options are described in a separate chapter. T-Server also supports unified Genesys log options, as described in the “Common Configuration Options” chapter.

Options that configure values for the TSCP software in your T-Server are common to all T-Servers. Options based on the custom features of your switch apply to your T-Server only. Familiarize yourself with both types of options. You will want to adjust them to accommodate your production environment and the business rules that you want implemented there.

## Deployment Sequence

This is the recommended sequence to follow when deploying T-Server.

### Task Summary: T-Server Deployment Sequence

Objective	Related Procedures and Actions
1. Deploy Configuration Layer objects and ensure Configuration Manager is running.	See the <i>Framework 8.1 Deployment Guide</i> for details.
2. Deploy Network objects (such as Host objects).	See the <i>Framework 8.1 Deployment Guide</i> for details.
3. Deploy the Management Layer.	See the <i>Framework 8.1 Deployment Guide</i> for details.
4. Test your configuration and installation.	See Chapter 5, “Starting and Stopping T-Server Components,” on <a href="#">page 115</a> .

**Note:** If, during the installation procedure for any of the Genesys applications, the script warns you that Configuration Server is unavailable and that the configuration cannot be updated, continue with the installation. Following the installation, you must complete the information on the Start Info tab to ensure that T-Server will run.

## Deployment of T-Server

Deploying T-Server manually requires that you configure a number of different objects in the Configuration Layer prior to setting up your T-Server objects and then install T-Server. This section describes the manual deployment process.

### Configuration of Telephony Objects

This section describes how to manually configure T-Server telephony objects if you are using Configuration Manager. For information about configuring T-Server telephony objects using Genesys Administrator, refer to the *Framework 8.1 Genesys Administrator Help*.

### Recommendations

Genesys recommends registering (configuring) only those entities you plan to use in the current configuration. The more data there is in the Configuration

Database, the longer it takes for the CTI setup to start, and the longer it will take to process configuration data. Remember that adding configuration objects to the Genesys Configuration Database does not cause any interruption in contact center operation.

Depending on how much work is required to manually configure all applications and objects, consider registering more Person objects first, with a set of privileges that lets them perform configuration tasks.

## Switching Offices

Your telephony network may contain many switching offices, but you should only configure those that are involved with customer interactions.

Using Configuration Manager, be sure to register a `Switching Office` object that accommodates your `Switch` object under `Environment`. Until you have done this, you cannot register a `Switch` object under `Resources` (single-tenant environment) or a `Tenant` (multi-tenant environment).

---

**Note:** The value for the switching office name must not have spaces in it.

---

## Switches

1. Configure a `Switch` object for each switch on your telephony network. Assign each `Switch` object to the appropriate `T-Server Application` object.
2. If implementing the multi-site configuration, specify access codes for all switches on the network so that the call-processing applications can route and transfer calls between switches.

Two types of access codes exist in a Genesys configuration:

- Default access codes that specify how to reach this switch from any other switch in the Genesys environment.
- Switch-to-switch access codes that specify how to reach a particular switch from any other switch. Use this type when either a nondefault dial number or routing type is required between any two locations. When a switch-to-switch access code is configured, its value has a higher priority than that of a default access code.

See Chapter 4, “Multi-Site Support,” on [page 57](#), for step-by-step instructions.

---

**Note:** When the numbering plan uses unique directory number (DN) assignment across sites and multi-site routing is not used, you do not have to configure access codes.

---

## DNs and Agent Logins

---

**Note:** Starting with release 7.2, the requirements for configuring DNs in the Configuration Layer have changed. Refer to Part Two of this guide for information about the requirements on configuring specific DN types for your T-Server.

---

For each T-Server for which you are configuring DNs, you must configure all DNs that agents and their supervisors use in day-to-day contact center operation—so-called *seat-related DNs*—such as Extensions and ACD Positions. Otherwise, T-Server does not register such DNs.

1. To configure Telephony objects within each switch, consult the switch documentation. Information specific to your T-Server in Part Two of this document contains tables that indicate how to set DN types in the Genesys Configuration Database depending on the switch DN types and configuration.
2. Check the numbering plan for different types of DNs, to see if you can save time by registering Ranges of DNs. Usually, DNs of the same type have consecutive numbers, which will make an otherwise tedious configuration task easy. Agent Login objects almost always have consecutive numbers, which means you can register them through the Range of Agent Logins feature as well.
3. If you plan to use Virtual Queues and Virtual Routing Points in the contact center operation, Genesys recommends registering them after you have outlined the call-processing algorithms and identified your reporting needs.

---

**Note:** Remember that CTI applications, not the switch, generate telephony events for DNs of these types.

---

---

**Warning!** When setting the Register flag for a DN, make sure you select the value according to your T-Server. The Register flag values are as follows:

- **False**—T-Server processes this DN locally, and never registers it on the switch.
  - **True**—T-Server always registers this DN on the switch during T-Server startup or CTI link reconnect.
  - **On Demand**—T-Server registers this DN on the switch only if a T-Server client requests that it be registered.
- 

### Multi-Site Operations

See the section, “Configuring Multi-Site Support” on [page 100](#), for information on setting up DNs for multi-site operations.

## Configuration of T-Server

Use the *Framework 8.1 Deployment Guide* to prepare accurate configuration information. You may also want to consult *Configuration Manager Help* and/or *Genesys Administrator Help*, which contains detailed information about configuring objects.

### Recommendations

Genesys recommends using an Application Template when you are configuring your T-Server application. The Application Template for your particular T-Server contains the most important configuration options set to the values recommended for the majority of environments. When modifying configuration options for your T-Server application later in the process, you can change the values inherited from the template rather than create all the options by yourself.

---

### Procedure: Configuring T-Server

#### Start of procedure

1. Follow the standard procedure for configuring all Application objects to begin configuring your T-Server Application object. Refer to the *Framework 8.1 Deployment Guide* for instructions.
2. In a Multi-Tenant environment, specify the Tenant to which this T-Server belongs on the General tab of the Properties dialog box.
3. On the Connections tab:
  - Add all Genesys applications to which T-Server must connect.

---

**Note:** For multi-site deployments you should also specify T-Server connections on the Connections tab for any T-Servers that may transfer calls directly to each other.

---

4. On the Options tab, specify values for configuration options as appropriate for your environment.

---

**Note:** For T-Server option descriptions, see Part Two of this document.

---

5. In a multi-site environment, you must complete additional T-Server configuration steps to support multi-site operations; see Chapter 4, “Multi-Site Support,” on [page 57](#).

#### End of procedure

#### Next Steps

- See “Installation of T-Server” on [page 40](#).

---

## Procedure: Configuring multiple ports

**Purpose:** To configure multiple ports in T-Server for its client connections.

#### Start of procedure

1. Open the T-Server Application Properties dialog box.
2. Click the Server Info tab.
3. In the Ports section, click Add Port.
4. In the Port Properties dialog box, on the Port Info tab:
  - a. In the Port ID text box, enter the port ID.
  - b. In the Communication Port text box, enter the number of the new port.
  - c. In the Connection Protocol box, select the connection protocol, if necessary.
  - d. Select the Listening Mode option.

---

**Note:** For more information on configuring secure connections between Framework components, see *Genesys 8.x Security Deployment Guide*.

---

- e. Click OK.
5. Click OK to save the new configuration.

#### End of procedure

## Installation of T-Server

The following directories on the Genesys 8.1 Media product DVD contain T-Server installation packages:

- `media_layer/<switch>/<platform>` for UNIX installations, where `<switch>` is your switch name and `<platform>` is your operating system.



- `media_layer\<switch>\windows` for Windows installations, where `<switch>` is your switch name.

---

## Procedure: Installing T-Server on UNIX

---

**Note:** During installation on UNIX, all files are copied into the directory you specify. No additional directories are created within this directory. Therefore, do not install different products into the same directory.

---

### Start of procedure

1. In the directory to which the T-Server installation package was copied, locate a shell script called `install.sh`.
2. Run this script from the command prompt by typing `sh` and the file name. For example: `sh install.sh`.
3. When prompted, confirm the host name of the computer on which T-Server is to be installed.
4. When prompted, specify the host and port of Configuration Server.
5. When prompted, enter the user name and password to access Configuration Server.
6. When prompted, select the T-Server application you configured in “Configuring T-Server” on [page 39](#) from the list of applications.
7. Specify the destination directory into which T-Server is to be installed, with the full path to it.
8. If the target installation directory has files in it, do one of the following:
  - Type 1 to back up all the files in the directory (recommended).
  - Type 2 to overwrite only the files in this installation package. Use this option only if the installation being upgraded operates properly.
  - Type 3 to erase all files in this directory before continuing with the installation.

The list of file names will appear on the screen as the files are copied to the destination directory.
9. If asked which version of the product to install, the 32-bit or the 64-bit, choose the one appropriate to your environment.
10. If asked about the license information that T-Server is to use: specify either the full path to, and the name of, the license file, or the license server parameters.

11. As soon as the installation process is finished, a message appears announcing that installation was successful. The process places T-Server in the directory with the name specified during the installation.

### End of procedure

### Next Steps

- To verify manual installation, go to “Verifying the installation of T-Server” on [page 43](#).
- To test your configuration and installation, go to Chapter 5, “Starting and Stopping T-Server Components,” on [page 115](#), and try it out.
- To configure and install redundant T-Servers, see Chapter 3, “High-Availability Deployment,” on [page 45](#).
- To install T-Servers for a multi-site environment, proceed to Chapter 4, “Multi-Site Support,” on [page 57](#).

---

## Procedure: Installing T-Server on Windows

### Start of procedure

1. In the directory to which the T-Server installation package was copied, locate and double-click `Setup.exe` to start the installation.
2. When prompted, specify the connection parameters to the Configuration Server associated with this T-Server.
3. When prompted, select the T-Server Application you configured in “Configuring T-Server” on [page 39](#) from the list of applications.
4. Specify the license information that T-Server is to use: either the full path to, and the name of, the license file, or the license server parameters.
5. Specify the destination directory into which T-Server is to be installed.
6. Click `Install` to begin the installation.
7. Click `Finish` to complete the installation.

By default, T-Server is installed as a Genesys service (Windows Services) with `Automatic` startup type.

### End of procedure

### Next Steps

- To verify manual installation, go to “Verifying the installation of T-Server” on [page 43](#).

- To test your configuration and installation, go to Chapter 5, “Starting and Stopping T-Server Components,” on [page 115](#), and try it out.
- To configure and install redundant T-Servers, see Chapter 3, “High-Availability Deployment,” on [page 45](#).
- To install T-Servers for a multi-site environment, proceed to Chapter 4, “Multi-Site Support,” on [page 57](#).

---

## Procedure:

### Verifying the installation of T-Server

**Purpose:** To verify the completeness of the manual installation of T-Server to ensure that T-Server will run.

#### Prerequisites

- [Procedure: Installing T-Server on UNIX, on page 41](#)
- [Procedure: Installing T-Server on Windows, on page 42](#)

#### Start of procedure

1. Open the Properties dialog box for a corresponding Application object in Configuration Manager.
2. Verify that the State Enabled check box on the General tab is selected.
3. Verify that the Working Directory, command-line, and Command-Line Arguments are specified correctly on the Start Info tab.
4. Click Apply and OK to save any configuration updates.

#### End of procedure

---

## Next Steps

At this point, you have configured and installed T-Server using Configuration Manager. If you want to test your configuration and installation, go to Chapter 5, “Starting and Stopping T-Server Components,” on [page 115](#), and try it out. Otherwise, if you want to configure and install redundant T-Servers, see Chapter 3, “High-Availability Deployment,” on [page 45](#). If you want to install T-Servers for a multi-site environment, proceed to Chapter 4, “Multi-Site Support,” on [page 57](#).



# 3

## High-Availability Deployment

This chapter describes the general steps for setting up a high-availability (HA) environment for your T-Server. The high-availability architecture implies the existence of redundant applications, a primary and a backup. These are monitored by a management application so that, if one application fails, the other can take over its operations without any significant loss of contact center data.

Every switch/T-Server combination offers different high-availability options. The Framework Management Layer currently supports two types of redundant configurations: warm standby and hot standby. All T-Servers offer the warm standby redundancy type and, starting with release 7.1, the hot standby redundancy type is implemented in T-Servers for most types of switches. Some T-Servers support a switch's ability to provide two CTI links to two T-Servers or even one CTI link to two T-Servers. Other T-Servers require Genesys's HA Proxy in order to support the hot standby redundancy type. See Table 1 on [page 25](#) and the T-Server-specific information later in this document for details on your T-Server.

This chapter describes the redundant architecture and how to configure T-Server so that it operates with either type. Information in this chapter is divided into the following sections:

- [Warm Standby Redundancy Type, page 46](#)
- [Hot Standby Redundancy Type, page 47](#)
- [Prerequisites, page 49](#)
- [Warm Standby Deployment, page 50](#)
- [Hot Standby Deployment, page 52](#)
- [Next Steps, page 56](#)

## Warm Standby Redundancy Type

Genesys uses the expression *warm standby* to describe the redundancy type in which a backup server application remains initialized and ready to take over the operations of the primary server. The warm standby redundancy type reduces to a minimum the inability to process interactions that may have originated during the time it took to detect the failure. It also eliminates the need to bring a standby server online, thereby increasing solution availability.

### Warm Standby Redundancy Architecture

Figure 5 illustrates the warm standby architecture. The standby server recognizes its role as a backup and does not process client requests until the Management Layer changes its role to primary. When a connection is broken between the primary server and the Local Control Agent (LCA, not shown in the diagram) running on the same host, a failure of the primary process is reported, and the switchover occurs; or, if the host on which the T-Server is running fails, the switchover also occurs. (See the *Framework 8.1 Deployment Guide* for information on LCA.) As a result:

1. The Management Layer instructs the standby process to change its role from backup to primary.
2. A client application reconnects to the new primary.
3. The new primary (former backup) starts processing all new requests for service.

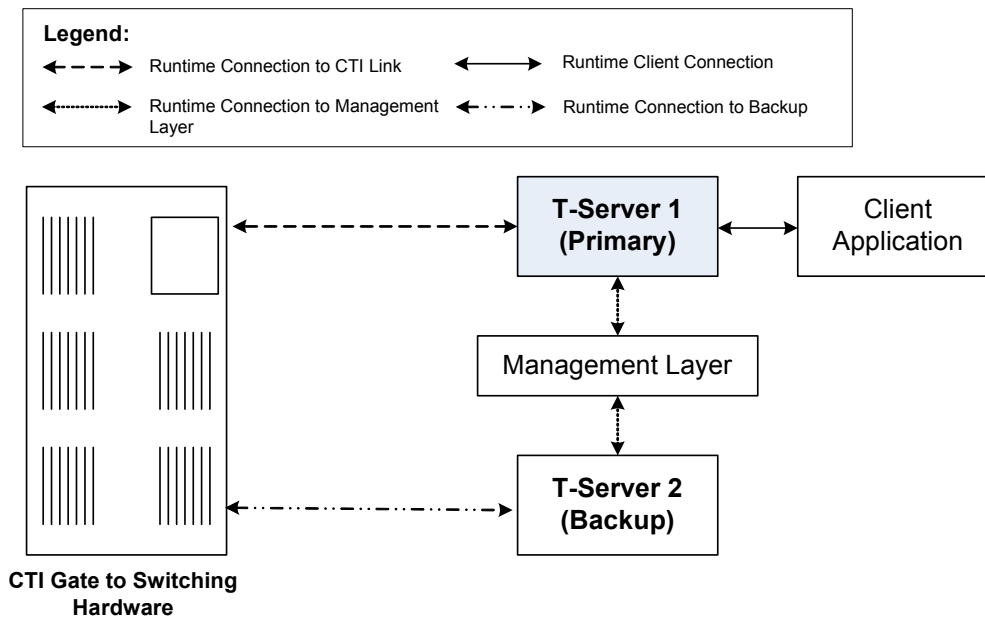


Figure 5: Warm Standby Redundancy Architecture

Although normal operations are restored as soon as the backup process takes over, the fault management effort continues. That effort consists of repeated attempts to restart the process that failed. Once successfully restarted, the process is assigned the backup role.

---

**Note:** You can find full details on the role of the Management Layer in redundant configurations in the *Framework 8.1 Deployment Guide*.

---

---

## Hot Standby Redundancy Type

Genesys uses the expression *hot standby* to describe the redundancy type in which a backup server application remains initialized, clients connect to both the primary and backup servers at startup, and the backup server data is synchronized from the primary server. Data synchronization and existing client connections to the backup guarantee higher availability of a component. (See Figure 6 on [page 48](#).)

Starting with release 7.1, the hot standby redundancy type is implemented in T-Servers for most types of switches. However, for some switches, you must compensate for the lack of link redundancy by using an additional Genesys component called *HA Proxy*.

### Hot Standby Redundancy Architecture

[Figure 6](#) illustrates the switch-independent side of a hot standby implementation. Here, T-Servers start simultaneously and connect to the switch. At T-Server startup, the Management Layer assigns the role of the primary server to T-Server 1, and the role of backup to T-Server 2. T-Server clients register with both T-Servers, but only the primary T-Server handles client requests other than the registration requests. The internal T-Server information, such as a DN status, ConnID, UserData, and Call Type, is synchronized between the primary and backup T-Servers. Therefore, the backup T-Server has the same information as the primary T-Server.

If T-Server 1 fails, the Management Layer makes T-Server 2 the new primary server, and it starts processing client requests. The Management Layer attempts to restart T-Server 1, and if it is successful, it makes T-Server 1 the new backup server.

The details of hot standby redundancy implementation between T-Servers and their switches vary depending on switch support for multiple CTI links. If your T-Server supports hot standby (see Table 1 on [page 25](#)), refer to Part Two for detailed information on the available hot standby schema.

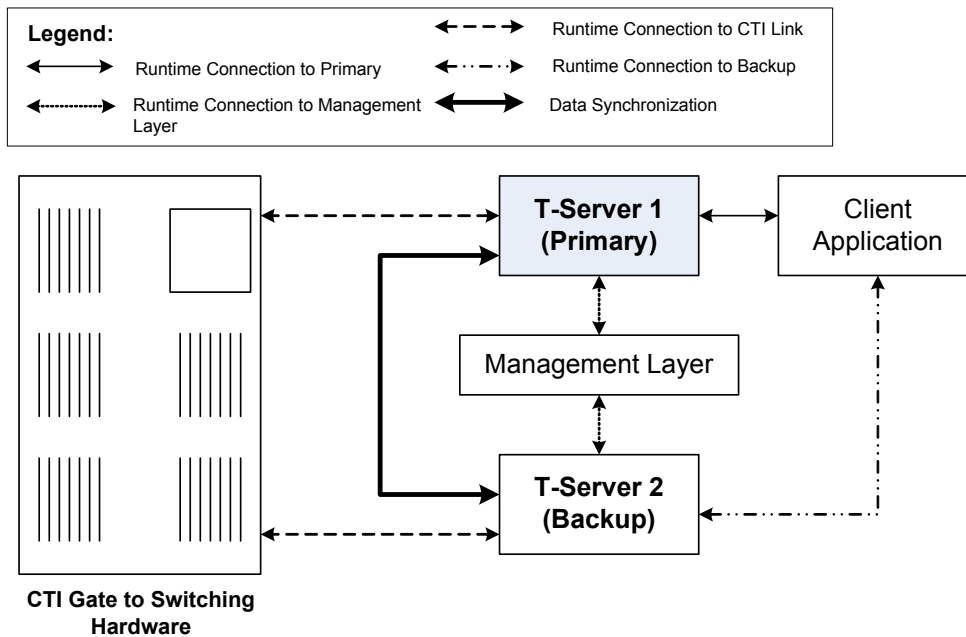


Figure 6: Hot Standby Redundancy Architecture

## Benefits of Hot Standby Redundancy

The hot standby redundancy type provides the following benefits over the warm standby type:

- Using hot standby ensures the processing of interactions in progress if a failure occurs. After the primary T-Server (T-Server 1) fails, T-Server 2 handles all new interactions and takes over the processing of interactions that are currently in progress.
- T-Servers perform one-way (from primary to backup) synchronization of call-associated data, including, but not limited to:
  - Connection IDs.
  - Attached user data.
  - Inter Server Call Control (ISCC; formerly called External Routing) call references to another site in a multi-site environment (to support the ISCC/COF feature).

**Note:** Refer to “ISCC Call Data Transfer Service” on [page 59](#) for ISCC feature descriptions.

- When mirrored links are not available, HA Proxy helps T-Server synchronize the current states of agents, calls, parties, and devices between the primary and backup T-Servers.



However, keep the following hot standby limitations in mind:

- Client requests sent during the failure and switchover may be lost.
- Routing requests sent by the switch during the failure and switchover may be lost.
- T-Server does not synchronize interactions that begin before it starts, including incomplete ISCC-related transactions.
- Some T-Library events might be duplicated or lost.
- Reference IDs from client requests can be lost in events.

---

## Prerequisites

This section presents basic requirements and recommendations for configuring and using redundant T-Servers.

### Requirements

You must install the Management Layer if you are installing redundant T-Server applications. In particular, install Local Control Agent (LCA) on each computer that runs T-Server.

---

**Warning!** Genesys strongly recommends that you install the backup and primary T-Servers on different host computers.

---

### Synchronization Between Redundant T-Servers

When T-Servers operate in a high-availability environment, the backup T-Server must be ready to take on the primary role when required. For this purpose, both T-Servers must be running and must have the same information. When you configure redundant T-Servers to operate with the hot standby type, the primary T-Server uses the connection to the backup to deliver synchronization updates. Genesys recommends that you enable the Advanced Disconnect Detection Protocol (ADDP), described in Chapter 1, for this connection. Do so using the configuration options in the “Backup-Synchronization Section” section. Refer to the “T-Server Common Configuration Options” chapter for option descriptions.

### Configuration Warnings

When configuring T-Servers to support either the warm standby or hot standby redundancy type, remember:

1. When at least one of the two T-Servers that operate in a redundant mode is running, do not change a redundancy type, host, or port in either T-Server configuration.
2. When both the primary and backup T-Servers are running, do not remove the backup T-Server `Application` object from the configuration.

You are responsible for the option synchronization in the configuration of the primary and backup T-Servers; Configuration Server does not synchronize either options or their values in different T-Server `Application` objects. That is, you must configure both T-Servers to have the same options with the same values. If you change a value in one T-Server configuration, you must change it in the other T-Server configuration manually. The log options in the primary T-Server can differ from those in the backup T-Server configuration. The link configuration options in the primary T-Server can also differ from those in the backup T-Server configuration.

---

## Warm Standby Deployment

This section describes how to configure redundant T-Servers to work with the warm standby redundancy type, including details on their connections and settings.

### General Order of Deployment

The general guidelines for T-Server warm standby configuration are:

1. Configure two T-Server `Application` objects as described in “Configuration of T-Server” on [page 39](#).
2. Make sure the `Switch` object is configured for the switch these T-Servers should serve, as described in “Configuration of T-Server” on [page 39](#).
3. Modify the configuration of the primary and backup T-Servers as instructed in the following sections.

After completing the configuration steps, ensure that both T-Servers are installed (see [page 52](#)).

## Modification of T-Servers for Warm Standby

Modify the configuration of both the primary and backup T-Server Application objects as described in the following sections.

---

**Note:** Starting with release 7.5, you can configure multiple ports for any application of type server. When multiple ports are configured for a server in a warm standby redundancy pair, the number of ports, their Port IDs, and the Listening Mode settings of the primary and backup servers must match respectively.

---

---

### Procedure:

#### Modifying the primary T-Server configuration for warm standby

##### Start of procedure

1. Stop both the primary and backup T-Servers if they are already running.
2. Open the Configuration Manager main window.
3. Open the Properties dialog box of the Application object for the T-Server that you want to configure as a primary server.
4. Click the Switches tab.
5. Ensure that it specifies the Switch that this T-Server Application should serve. If necessary, select the correct Switch using the Browse button.
6. Click Apply to save the configuration changes.
7. Click the Server Info tab.
8. Specify the T-Server Application you want to use as the backup server. Use the Browse button next to the Backup Server field to locate the backup T-Server Application object.
9. Select Warm Standby as the Redundancy Type.
10. Click Apply to save the configuration changes.
11. Click the Start Info tab.
12. Select Auto-Restart.
13. Click Apply and OK to save the configuration changes.

##### End of procedure

##### Next Steps

- [Procedure: Modifying the backup T-Server configuration for warm standby, on page 52](#)

---

## Procedure: Modifying the backup T-Server configuration for warm standby

### Start of procedure

1. Make sure the two T-Servers are *not* running.
2. Open the Configuration Manager main window.
3. Open the Properties dialog box of the Application object for the T-Server that you want to configure as a backup server.
4. Click the Switches tab.
5. Using the Browse button, select the same Switch object you associated with the primary T-Server Application object.
6. Click Apply to save the configuration changes.
7. Click the Start Info tab.
8. Select Auto-Restart.
9. Click Apply and OK to save the configuration changes.

### End of procedure

## Warm Standby Installation of Redundant T-Servers

The installation of a redundant T-Server is the same as that for the stand-alone T-Server. If you have not installed the primary and backup T-Servers yet, follow the instructions in “Installation of T-Server” on [page 40](#) for both installations.

---

## Hot Standby Deployment

This section describes how to configure redundant T-Servers to work with the hot standby redundancy type, including details on their connections and settings.

### General Order of Deployment

The general guidelines for T-Server hot standby configuration are:

1. Configure two T-Server Applications objects as described in “Configuring T-Server” on [page 39](#).

2. Make sure the `Switch` object is configured for the switch these T-Servers should serve, as described in “Configuration of Telephony Objects” on [page 36](#).
3. Modify the configuration of the primary and backup T-Servers as instructed in the following sections.

After completing the configuration steps, ensure that both T-Servers are installed (see [page 56](#)).

Table 1 on [page 25](#) summarizes hot standby redundancy support in various T-Servers. For detailed, up-to-date information on the subject, see the *Genesys Supported Media Interfaces Reference Manual* located on the Technical Support website at

<http://genesyslab.com/support/dl/retrieve/default.asp?item=A9CB309AF4DEB8127C5640A3C32445A7&view=item>.

## Modification of T-Servers for Hot Standby

Modify the configuration of both the primary and backup T-Server `Application` objects for hot standby redundancy as described in the following sections.

---

**Note:** Starting with release 7.5, you can configure multiple ports for any application of type server. When multiple ports are configured for a server in a hot standby redundancy pair, the number of ports, their Port IDs, and the Listening Mode settings of the primary and backup servers must match respectively.

---

---

### Procedure:

#### Modifying the primary T-Server configuration for hot standby

##### Start of procedure

1. Stop both primary and backup T-Servers if they are already running.
2. Open the Configuration Manager main window.
3. Open the `Properties` dialog box of the `Application` object for the T-Server that you want to configure as a primary server.
4. Click the `Switches` tab.
5. Ensure that it specifies the `Switch` that this T-Server `Application` should serve. If necessary, select the correct `Switch` using the `Browse` button.
6. Click `Apply` to save the configuration changes.
7. Click the `Server Info` tab.

8. In the Ports section, select the port to which the backup server will connect for HA data synchronization and click `Edit Port`.

---

**Note:** For information on adding multiple ports, see “Configuring multiple ports” on [page 40](#).

---

- a. In the Port Properties dialog box, on the Port Info tab, select the HA sync check box.
- b. Click `OK`.

---

**Note:** If the HA sync check box is not selected, the backup T-Server will connect to the *default* port of the primary T-Server.

---

9. Specify the T-Server Application you want to use as the backup server. Use the `Browse` button next to the Backup Server field to locate the backup T-Server Application object.
10. Select Hot Standby as the Redundancy Type.
11. Click `Apply` to save the configuration changes.
12. Click the `Start Info` tab.
13. Select `Auto-Restart`.
14. Click `Apply` to save the configuration changes.
15. To enable ADDP between the primary and backup T-Servers, click the `Options` tab. Open or create the backup-sync section and configure corresponding options.

---

**Note:** For a list of options and valid values, see the “Backup-Synchronization Section” section of “T-Server Common Configuration Options” chapter in Part Two of this document.

---

16. Click `Apply` and `OK` to save the configuration changes.

### End of procedure

### Next Steps

- [Procedure: Modifying the backup T-Server configuration for hot standby, on page 55](#)

---

## Procedure: Modifying the backup T-Server configuration for hot standby

### Start of procedure

1. Make sure the two T-Servers are *not* running.
2. Open the Configuration Manager main window.
3. Open the Properties dialog box of the Application object for the T-Server that you want to configure as a backup server.
4. Click the Switches tab.
5. Using the Browse button, select the same Switch object you associated with the primary T-Server Application.
6. Click the Server Info tab.
7. In the Ports section, select the port to which the primary server will connect for HA data synchronization and click Edit Port.

---

**Note:** For information on adding multiple ports, see “Configuring multiple ports” on [page 40](#).

---

- a. In the Port Properties dialog box, on the Port Info tab, select the HA sync check box.
- b. Click OK.

---

**Note:** If the HA sync check box is not selected, the primary T-Server will connect to the *default* port of the backup T-Server.

---

8. Click Apply to save the configuration changes.
9. Click the Start Info tab.
10. Select Auto-Restart.
11. Click the Options tab.
12. Modify the values for all necessary configuration options. Genesys recommends that you set all configuration options for the backup T-Server to the same values as for the primary T-Server; the only exceptions are the log options and the server-id option.
13. Click Apply and OK to save the configuration changes.

### End of procedure

## Hot Standby Installation of Redundant T-Servers

The installation of a redundant T-Server is the same as that for the stand-alone T-Server. If you have not installed the primary and backup T-Servers yet, follow instructions in “Installation of T-Server” on [page 40](#) for both installations.

---

## Next Steps

At this point, you have learned how to configure and install redundant T-Servers. Go to Chapter 5, “Starting and Stopping T-Server Components,” on [page 115](#), to test your configuration and installation, or continue with Chapter 4, “Multi-Site Support,” on [page 57](#), for more possibilities.



# 4

## Multi-Site Support

This chapter contains general information about multi-site environments, as well as information on deploying a multi-site environment for your T-Server.

This chapter is divided into the following sections:

- [Multi-Site Fundamentals, page 58](#)
- [ISCC Call Data Transfer Service, page 59](#)
- [ISCC/Call Overflow Feature, page 79](#)
- [Number Translation Feature, page 83](#)
- [Network Attended Transfer/Conference Feature, page 91](#)
- [Event Propagation Feature, page 93](#)
- [ISCC Transaction Monitoring Feature, page 100](#)
- [Configuring Multi-Site Support, page 100](#)
- [Next Steps, page 114](#)

---

**Note:** Each switch/T-Server combination offers different multi-site options. For details describing your specific switch/T-Server environment, refer to Chapter 10, “T-Server Common Configuration Options,” on [page 209](#).

---

The following instructions apply to both local and remote switches and T-Servers. Because different vendor switches can be installed at the local and remote locations, this chapter covers several, but not all, possible configurations. To help determine which sections of this chapter apply to your situation, refer to Table 3 on [page 75](#) and Table 4 on [page 80](#).

For more information on your specific switch/T-Server environment, refer to the multi-site topics in Part Two of this guide.

---

# Multi-Site Fundamentals

A multi-site configuration has two or more switches that belong to the same enterprise or service provider and that share the Genesys Configuration Database. (In some cases, this may include isolated partitions on a given switch served by different T-Servers.) The main goal of T-Server support for multi-site operations is to maintain critical information about a call as it travels from one switch to another.

T-Server supports multi-site operations using its *Inter Server Call Control* (ISCC; formerly called External Routing), which supports the following functions:

- **Call matching**—To link instances of a call distributed across multiple sites and to re-attach essential data associated with the call (ConnID, UserData, CallType, and CallHistory). The following T-Server features support this capability:
  - ISCC Call Data Transfer Service (active external routing)—when requested by a T-Server client by specifying the desired destination in the location parameter, and also with various ISCC strategies performed by direct dial or by using the Transfer Connect Service. See “ISCC Transaction Types” on [page 66](#) and “Transfer Connect Service Feature” on [page 78](#).
  - Inter Server Call Control/Call Overflow (ISCC/COF) feature (passive external routing)—applicable when calls are overflowed to another site either directly or manually (see [page 79](#)).
  - Number Translation feature (see [page 83](#)).
  - Network Attended Transfer/Conference (NAT/C) feature (see [page 91](#)).

---

**Note:** When ISCC detects call instance reappearance on a given site, the call is assigned a unique ConnID and the user data is synchronized with the previous call instances. This ensures that ConnIDs assigned to different instances of the same call on a given site are unique.

---

- **Call data synchronization between associated call instances (ISCC Event Propagation)**—To provide the most current data to call instances residing on remote T-Servers. The following T-Server features support this capability:
  - User Data propagation (see [page 94](#))
  - Party Events propagation (see [page 95](#))

---

**Note:** ISCC automatically detects topology loops and prevents continuous updates.

---

---

**Note:** In distributed networks, Genesys recommends using call flows that prevent call topology loops and multiple reappearances of the same call instance. This approach ensures that all T-Servers involved with the call report the same ConnID, and also optimizes telephony trunk allocation by preventing trunk tromboning.

---

The T-Server configuration contains information about other T-Servers with which it will communicate. T-Server uses this information to connect with the other T-Servers. During this “handshake” process, T-Servers exchange information about the following parameters:

- Protocol type
- Switch type
- Server name
- Location name (switch name)
- T-Server role (primary or backup)

To complete the handshake process, T-Servers exchange messages about the current condition of the links to their switches. After the handshake process is complete, T-Server is ready to support a multi-site operation.

---

## ISCC Call Data Transfer Service

Because ISCC supports active external routing, T-Servers that serve different switches (usually on different sites) can exchange call data when a call is passed from one switch to another. With this functionality, T-Server provides its clients with the following additional information about each call received from another switch:

- The connection identifier of the call (attribute ConnID).
- Updates to user data attached to the call at the previous site (attribute UserData).
- The call type of the call (attribute CallType)—In multi-site environments the CallType of the call may be different for each of its different legs. For example, one T-Server may report a call as an Outbound or Consult call, but on the receiving end this call may be reported as Inbound.
- The call history (attribute CallHistory)—Information about transferring/routing of the call through a multi-site contact center network.

---

**Note:** Load-sharing IVR Servers and Network T-Servers cannot be designated as the destination location for ISCC, except when cast-type is set to dnis-pool. Consult the *Universal Routing Deployment Guide* for specific configuration details.

---

Figure 7 shows the steps that occur during a typical external routing (ISCC) transaction. Note that the location where a call is initially processed is called the *origination location*, and the location to which the call is passed is called the *destination location*.

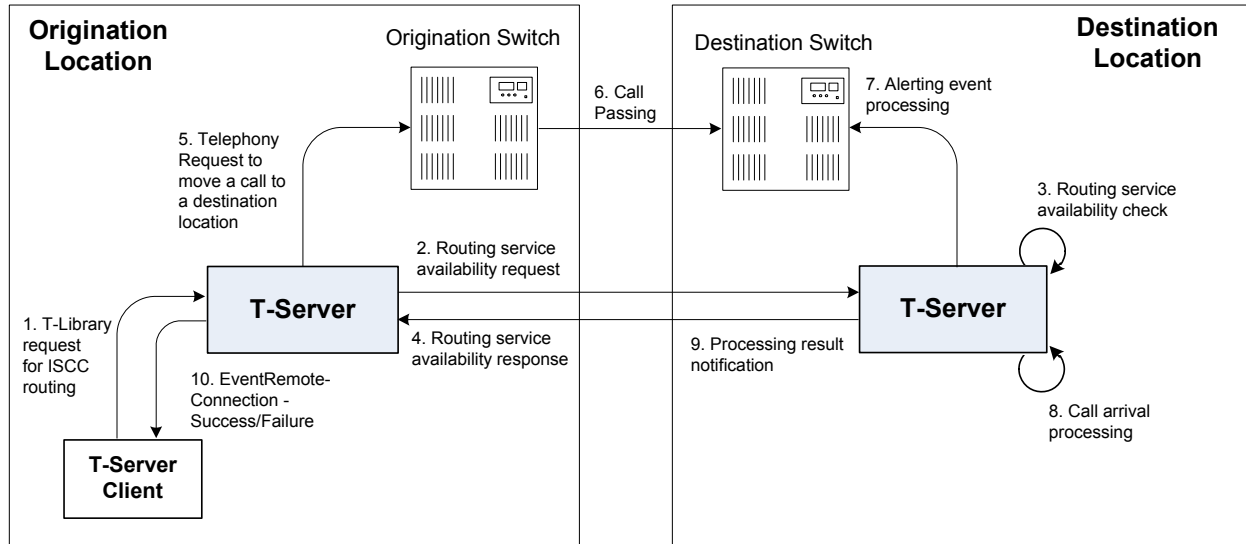


Figure 7: Steps in the ISCC Process

## ISCC Call Flows

The following section identifies the steps (shown in Figure 7) that occur during an ISCC transfer of a call.

### Step 1

A client connected to the T-Server at the origination location requests this T-Server to pass a call with call data to another location. For this purpose, the client must specify the `location` parameter (Attribute `Location`) when calling a corresponding T-Library function. ISCC processes the following T-Library requests:

- `TInitiateConference`
- `TInitiateTransfer`
- `TMakeCall`
- `TMuteTransfer`
- `TRouteCall`
- `TSingleStepTransfer`

## Step 2

Upon receiving a client's request, the origination T-Server checks that the:

1. Connection to the destination T-Server is configured in the origination T-Server Properties dialog box.
2. The connection to the destination T-Server is active.
3. The destination T-Server is connected to its link.
4. The origination T-Server is connected to its link.

If these four conditions are met, the origination T-Server determines the transaction type that will be used for passing call data to another location in this transaction. The following possibilities exist:

- The client can request what *ISCC transaction type* (or simply *transaction type*) to use by specifying an appropriate key-value pair in the `Extensions` attribute of the request. The key-value pair must have a key equal to `iscc-xaction-type` and either an integer value as specified in the `TXRouteType` enumeration (see the *Voice Platform SDK 8.x .NET (or Java) API Reference*) or a string value equal to one of the following: `default`, `route`, `direct` (or `direct-callid`), `direct-network-callid`, `direct-notoken`, `direct-ani`, `direct-uu`, `direct-digits`, `reroute`, `dnis-pool`, `pullback`, or `route-uu`.
- If the client does not specify the transaction type in the request or specifies the `default` transaction type, T-Server checks the Switch configuration for the transaction type configured in the `Access Code` (or `Default Access Code`) properties:
  - If the `Route Type` property of the `Access Code` is set to any value other than `default`, T-Server uses the specified value as the transaction type.
  - If the `Route Type` property of the `Access Code` is set to the `default` value, T-Server uses the first value from the list specified in the `cast-type` configuration option configured for the destination T-Server. If no value has been specified for the `cast-type` option, the default value of `route` is used as the transaction type.

---

**Note:** For more information on Access Codes and Default Access Code, see “Switches and Access Codes” on [page 102](#).

---

After the origination T-Server determines the requested transaction type, it determines if the destination T-Server supports this transaction type.

You must list the transaction types T-Server supports in the `cast-type` configuration option.

The origination T-Server issues a request for routing service availability and sends it to the destination T-Server. The T-Server request contains data that should be passed along with the call to the destination location. This data includes the transaction type, `ConnID`, `UserData`, `CallType`, and `CallHistory`.

The timer specified by the `request-tout` configuration option is set when the origination T-Server sends the request. If either the specified timeout expires or the call is abandoned before the origination T-Server receives a response from the destination T-Server, the operation is considered failed. In this scenario, the origination T-Server:

1. Generates a request to the destination T-Server to cancel the request for routing service.
2. Sends `EventError` to the client that requested the service.
3. Deletes information about the request.

### Step 3

The destination T-Server receives the request for routing service availability and checks the requested type of routing. Depending on the ISCC transaction type, it stores the request information and, when appropriate, allocates access resources for the coming call. For example, an External Routing Point is allocated when the transaction type is `route`, and an Access Resource of type `dnis` is allocated when the transaction type is `dnis-pool`.

---

**Note:** The `resource-allocation-mode` and `resource-load-maximum` configuration options determine how resources are allocated. For option descriptions, refer to Chapter 10, “T-Server Common Configuration Options,” on [page 209](#) for option descriptions.

---

If resources are unavailable, the request is queued at the destination location until a resource is free or the origination T-Server cancels the request. If the request is canceled, the destination T-Server deletes all information about the request.

If resources are unavailable because of incorrect configuration, the destination T-Server returns an error event to the origination T-Server.

### Step 4

If resources are available, the destination T-Server generates a positive response and the timer is started for the interval specified by the `timeout` configuration option of the destination T-Server.

### Step 5

If the origination T-Server receives a negative response, it sends an `EventError` message to the client and clears all data about the request.

If the origination T-Server receives the confirmation about routing service availability, it processes the client’s request and sends a corresponding message to the switch. The timer on the origination T-Server is also started for the interval specified by the `timeout` configuration option of the destination T-Server.

### Step 6

The origination switch processes the T-Server request and passes the call to the destination switch.

### Step 7

If the call arrives at the destination switch, the switch generates an alerting event.

The destination T-Server waits for the call no longer than the interval specified by the timeout configured on the destination T-Server. If the call is not received at the destination location within this interval, the destination T-Server issues a failure notification to the origination T-Server, deletes all data about the request, and, when appropriate, frees the resources previously allocated for the request.

If either the specified timeout expires or the call is abandoned before the origination T-Server receives a response from the destination T-Server, the operation is considered failed. In this case, the origination T-Server:

1. Generates a request to the destination T-Server to cancel the request for routing service.
2. Responds to the client that requested the service in one of the following ways:
  - If the origination T-Server has already sent a response to the request the client sent in Step 1, the origination T-Server supplements its response with `EventRemoteConnectionFailed`.
  - If the origination T-Server has not yet sent a response to the client, the origination T-Server sends `EventError`.
3. Deletes information about the request.

### Step 8

If the destination T-Server matches the arrived call, it updates the `ConnID`, `UserData`, `CallType`, and `CallHistory` attributes with the data received in the request for routing service availability. The connection ID is updated as follows:

The arrived call is assigned the `ConnID` that is specified in the request for routing service availability, but only if this `ConnID` does not coincide with the `ConnID` of a call that has existed at the destination site. If two such `ConnIDs` are identical, the arrived call is assigned a new unique `ConnID`.

For `direct-*` transaction types (where the asterisk stands for a `callid`, `uui`, `ani`, or `digits` extension), the call reaches the destination DN directly.

For the transaction types `route` and `route-uui`, the call first arrives at an External Routing Point from which it is routed to the destination DN. The call info is updated when the call reaches the External Routing Point. An External

Routing Point is considered free when the first alerting event (`EventQueued` or `EventRouteRequest`) is distributed.

Please keep the following issues in mind when using the ISCC feature:

- If routing from a dedicated External Routing Point to the destination DN fails, T-Server considers the transaction failed. However, the `ConnID`, `UserData`, `CallType`, and `CallHistory` attributes are updated. Then, T-Server attempts to route the call to one of the Default DNs configured for this External Routing Point.
- If the destination T-Server did not receive a request for routing service availability, but a call arrives at an External Routing Point, T-Server considers the call to be unexpected and routes the call to the DN specified by the `dn-for-unexpected-calls` configuration option. When no alternative targets are defined, the call remains at the External Routing Point until diverted by the switch or abandoned by the caller.

For `reroute` and `pullback` transaction types, the call returns to the network location. For the `dnis-pool` transaction type, the call reaches the destination DN directly.

### Step 9

If, in Step 8, the call does not arrive within the configured timeout, or the transaction fails, the destination T-Server sends a notification of failure to the origination T-Server.

Otherwise, the destination T-Server notifies the origination T-Server that the routing service was successful and deletes all information about the request.

### Step 10

The origination T-Server notifies the client that the routing service was successful (or failed) and deletes all information about the request.

## Client-Controlled ISCC Call Flow

The following section identifies the steps that occur during a client-controlled ISCC transfer of a call.

### Step 1

A client, such as Universal Routing Server (URS), that is connected to the T-Server at the origination location detects a call to be delivered to another destination location.



**Step 2**

The client chooses a destination location and the target DN for the call. Then, it sends the `TGetAccessNumber` request to the destination T-Server for routing service availability, indicating the target DN and other call context (`ConnID`, `UserData`, and `CallHistory` attributes).

**Step 3**

The destination T-Server receives the request for routing service availability. Depending on the ISCC transaction type, it stores the request information, including the call context. When appropriate, it allocates access resources for the coming call, such as External Routing Point.

If resources are unavailable, the request is queued at the destination T-Server until an appropriate ISCC resource is free or the client cancels the request. If the request is canceled, the destination T-Server deletes all information about the request.

If resources are unavailable because of incorrect configuration, the destination T-Server returns an `EventError` message to the client.

**Step 4**

The destination T-Server replies to the client with the `EventAnswerAccessNumber` message, which contains the allocated ISCC resource.

**Step 5**

The client requests that the origination T-Server delivers the call to the destination location using the allocated access resource.

**Step 6**

The origination T-Server receives and processes the client's request, and then sends a corresponding message to the switch.

**Step 7**

The call arrives at the destination switch and is reported to the destination T-Server via CTI. The call is matched by means of ISCC, based on the specified `cast-type` setting and allocated resource, and then the call is assigned a requested call context (such as `ConnID` or call data). Upon successful transaction completion, the destination T-Server notifies the client by sending `EventRemoteConnectionSuccess`.

The destination T-Server waits for the call no longer than the interval specified by the timeout that is configured on the destination T-Server. If the call is not received at the destination location within this interval, the destination T-Server issues a failure notification to the client by sending

`EventRemoteConnectionFailed`, deletes all data about the request, and, when appropriate, frees the resources previously allocated for the request.

The destination T-Server notifies the client whether the routing service succeeded or failed by sending either the `EventRemoteConnectionSuccess` or `EventRemoteConnectionFailure`, respectively.

## ISCC Transaction Types

As switches of different types provide calls with different sets of information parameters, a single mechanism for passing call data between the switches is not feasible in some cases. Therefore, the ISCC feature supports a number of mechanisms for passing call data along with calls between locations. This section describes ISCC transaction type principles, identifies which transaction types are supported for each T-Server, and defines each transaction type (beginning with “direct-ani” on [page 67](#)).

It is important to distinguish the two roles that T-Servers play in an external routing (ISCC) transaction—namely *origination T-Server* and *destination T-Server*:

- The origination T-Server initiates an ISCC transaction. It prepares to send the call to another T-Server and coordinates the process.
- The destination T-Server receives call data from an origination T-Server and matches this data to a call that will arrive at some time in the future.

The distinction between these roles is important because the range of telephony-hardware functionality often requires T-Servers to support two entirely different sets of ISCC transactions based on which of the two roles they play. For instance, it is very common for a particular T-Server to support many types of ISCC transactions when it takes on the origination role, but fewer when it takes on the role of a destination T-Server.

The ISCC transaction type `reroute` is a good example. Most T-Servers support `Reroute` as origination T-Servers, but very few support `Reroute` as destination T-Servers.

## Determining and Configuring Transaction Type Support

You can find descriptions of these transaction types starting on [page 67](#). Use Table 3 on [page 75](#) to identify the transaction types your destination T-Server supports. A blank table cell indicates that T-Server does not support a certain transaction type.

You can configure the transaction types specific to your T-Server as values of the `cast-type` configuration option specified in the ISCC configuration section `extrouter`. Refer to Chapter 10, “T-Server Common Configuration Options,” on [page 209](#) for the option description.

## ISCC Transaction Type General Principles

Generally, since most of the ISCC implementation is done at the T-Server Common Part (TSCP) code level, all T-Servers support certain ISCC transaction types. Any T-Server can act as the origination T-Server for the following transaction types:

- `direct-ani`, [page 67](#)
- `direct-notoken`, [page 69](#)
- `dnis-pool`, [page 70](#)
- `pullback`, [page 71](#)
- `reroute`, [page 72](#)
- `route` (aliased as `route-notoken`), the default transaction type, [page 73](#)

The following transaction types are unevenly supported for both the origination and destination T-Server roles:

- `direct-callid` (aliased as `direct`), [page 68](#)
- `direct-digits` (reserved for Genesys Engineering)
- `direct-network-callid`, [page 68](#)
- `direct-uui`, [page 69](#)
- `route-uui`, [page 74](#)

The `reroute` and `pullback` transaction types are supported only for selected T-Servers in the *destination* role. However, if you implement this support, other transaction types require additional configuration and testing—even those that would normally be supported by default.

## direct-ani

With the transaction type `direct-ani`, the ANI call attribute is taken as the parameter for call matching. Properly configured switches and trunks can keep the ANI attribute when a call is transferred over the network. T-Server can use this network feature for call matching.

---

**Warning!** Depending on the switch platform, it may be possible to inherit the ANI attribute after routing a call to a remote destination, and after performing a single-step transfer and other telephone actions. However, ISCC only works properly in scenarios where the ANI attribute on the destination T-Server is represented by exactly the same digit string as on the origination T-Server.

Typically, the ANI attribute represents the original call identifier (customer phone number), which guarantees that the attribute remains unique. However, you can use the `non-unique-ani` resource type to block ISCC from matching calls based on an ANI that is known to be non-unique. (See “Configuring access resources for non-unique ANI” on [page 111](#) for details.)

---

## direct-callid

With the transaction type `direct-callid`, the call reaches the destination DN directly from another location, and the `CallID` of the call is taken as the attribute for call matching. When a call arrives at the final destination, the destination T-Server identifies its `CallID`, and updates the call info if the `CallID` matches.

Use this transaction type when the destination switch has the capability to assign to an incoming call the same network-wide unique `CallID` that the origination switch has already assigned to that call.

---

**Notes:** The `direct-callid` transaction type is used only in conjunction with the `TRouteCall` and `TSingleStepTransfer` function calls. It is applied only to the call that is in progress, and does not apply to functions that involve in the creation of a new call, such as `TMakeCall`.

For T-Server for Nortel Communication Server 2000/2100, the `direct-callid` transaction type is also applied to the `TMuteTransfer` function.

---

## direct-network-callid

With the transaction type `direct-network-callid`, the call reaches the destination DN directly from another location, and the `NetworkCallID` of the call is taken as the attribute for call matching. When a call arrives at the final destination, the destination T-Server identifies its `NetworkCallID`, and updates the call info if the `NetworkCallID` matches.

Use this transaction type when the destination switch has the capability to assign to an incoming call the same network-wide unique `NetworkCallID` that the origination switch has already assigned to that call.

---

**Note:** To support this transaction type, you must configure `Target Type` and `ISCC Protocol Parameters` fields of the corresponding `Switch Access Code` in the Configuration Layer. For information about settings that are specific for your T-Server type, refer to Part Two of this document.

---

## direct-uui

With the transaction type `direct-uui`, so-called user-to-user information (UUI) is taken as the attribute for call matching. Some switches make it possible to send a small data packet along with a call. T-Server can use this data to recognize a call passed from one switch to another. The destination T-Server generates a local unique value for UUI, and then notifies the origination T-Server. The origination T-Server uses a provided value to mark the call coming from the origination location. The destination T-Server receives a call and checks whether it is marked with an exact UUI value. If so, the call is considered to be matched.

On the Avaya Communication Manager and the Aspect ACD, UUI is referred to as “user-to-user information.” On the Siemens Hicom 300 switch with CallBridge, UUI is referred to as “Private User Data.” On the Alcatel A4400/OXE switch, UUI is referred to as “correlator data.”

---

**Note:** To support this transaction type, you must configure your switches to pass the UUI provided by your T-Server. You must also ensure that the trunks involved do not drop this data.

---

## direct-notoken

With the transaction type `direct-notoken`, T-Server expects a call to arrive from another location to the destination DN specified in the request for routing service availability. When a call reaches the specified DN, T-Server processes the call as the expected externally-routed call.

---

**Notes:** This matching criterion is weak because any call that reaches the specified DN is considered to be the expected call. Genesys recommends that you use this transaction type only in a contact center subdivision that can only be reached from within the contact center (such as the second line of support, which customers cannot contact directly).

When using direct transaction types, Network T-Servers and load-sharing IVR Servers are not meant to act as destination T-Servers for call routing. Using Network T-Server with these transaction types requires special architecture.

---

## dnis-pool

With the `dnis-pool` transaction type, T-Server reserves one of its DNIS access resources and waits for the call that has the same DNIS attribute as the name of the reserved DNIS access resource.

If the arrived call is matched successfully, the destination T-Server may update the value of the DNIS attribute of the call (along with `ConnID`, `UserData`, `CallType`, and `CallHistory`) with the value of the DNIS attribute of the original call. This occurs when the value of the DNIS attribute of the original call is specified as a value of the key-value pair `_ISCC_TRACKING_NUMBER_` in the `Extensions` attribute of the original client request.

The DNIS matching can be based on any number of digits out of all the digits that comprise the DNIS attribute. The number of digits that T-Server should use for DNIS matching is specified for the destination switch as the `ISCC Protocol Parameters` property of the Switch Access Code. The value syntax should be as follows:

`dnis-tail=<number-of-digits>`

For example, if this property is set to the `dnis-tail=7` value, ISCC matches only the last seven digits of a DNIS.

You must configure DNIS access resources in the switch; otherwise, ISCC fails to use this transaction type and sends `EventError` in response to the client application request.

---

**Note:** The `dnis-pool` transaction type is typically used for networks that employ a “behind the SCP” architecture, such as network IVR. Network T-Server for GenSpec and IServer are two examples of this, but other Network T-Servers might also be used in this architecture.

---

### In Load-Balancing Mode

When T-Server uses load balancing for call routing with the `dnis-pool` transaction type, the following processes occur:

1. A client of the origination T-Server sends a request to pass a call to the location with a DNIS access resource specified in the key-value pair `iscc-selected-dnis`.
2. The origination T-Server distributes the request for a routing service to all destination T-Servers.
3. The destination T-Servers receive the request and check that the specified DNIS is not being used by another routing service request.
4. The origination T-Server expects to receive a positive response from each destination T-Server. If the origination T-Server receives a negative response from at least one T-Server, it sends an `EventError` to the client and clears all data about the request. If the origination T-Server receives the confirmation about routing service availability from all destination T-Servers, it processes the client's request and sends a corresponding message to the switch.
5. The origination switch processes the T-Server request and passes the call to the destination switch.
6. The call arrives at the destination switch, which generates an alerting event to one of the corresponding load-balanced destination T-Servers.
7. That destination T-Server processes the call and notifies the origination T-Server that the routing service was successful and deletes all information about the request.
8. The origination T-Server sends a routing service request cancellation to all other destination T-Servers.
9. The origination T-Server notifies the client that the routing service has been successful and deletes all information about the request.

### pullback

`PULLBACK` is used in the following scenario, for those T-Servers that support it:

1. A call arrives at Site A served by a Network T-Server.
2. At Site A, a Network T-Server client requests to pass the call by means of ISCC routing to Site B served by a premise T-Server. Any transaction type except `reroute` or `pullback` can be specified in this request.
3. The call arrives at Site B and is either answered by an agent or delivered to a routing point.
4. A client of the premise T-Server at Site B sends a `TRouteCall` or `TSingleStepTransfer` request to transfer the call to the network.

5. The Site B premise T-Server notifies the Network T-Server about this request.
6. The network T-Server receives the notification and issues an `EventRouteRequest` to obtain a new destination.
7. After receiving the new destination information, the Network T-Server disconnects the call from its current premise location at Site B and attempts to route the call to the new destination.
8. The Site B premise T-Server stops tracking the call, which has disconnected from the premise's agent DN or routing point and is delivered to the network.
9. The network T-Server completes routing the call to its new destination.

---

**Note:** The transaction type `pullback` can only be used to return a call from a premise T-Server to the Network T-Server that serves the site from which the call was previously transferred.

---

## reroute

Reroute is used in the following scenario, for those T-Servers that support it:

1. A call arrives at Site A served by a Network T-Server.
2. At Site A, a Network T-Server client requests to pass the call by means of ISCC to Site B served by a premise T-Server. Any transaction type except `reroute` or `pullback` can be specified in this request.
3. An agent at Site B answers the call.
4. A client of the premise T-Server at Site B sends a `TSingleStepTransfer` or `TRouteCall` request to transfer the call elsewhere (to a PSTN, to an agent, or to a routing point).
5. The Site B premise T-Server notifies the Network T-Server about this request and releases the call leg that resides at the agent's phone (using `TReleaseCall`) or at the Routing Point (using `TRouteCall` with the parameter `RouteTypeCallDisconnect`).
6. The Network T-Server receives the notification and reroutes the call to the requested destination by sending `EventRouteRequest` and attaching the call's user data.



---

**Notes:** The transaction type `reroute` can only be used to return a call from a premise T-Server to the Network T-Server that serves the site from which the call was previously transferred.

To perform multi-site operations that are initiated with `TRouteCall` and for which the `reroute` transaction type is requested, the origination T-Server must support the `RouteTypeCallDisconnect` subtype of `TRouteCall`.

---


## route

With the transaction type `route` (aliased as `route-notoken`), a call from the origination location reaches a dedicated External Routing Point, and from there, it is routed to a destination DN.

To control configured External Routing Points, T-Server must register these DNs with the switch. Failure to register implies that the External Routing Point is not available for ISCC purposes. Client applications can register External Routing Points via T-Server for monitoring purposes only.

### Point-to-Point (One-to-One)

In the Point-to-Point access mode, only one trunk line is used to access an External Routing Point (for example, VDN, CDN) at the destination site. See [Figure 8](#).

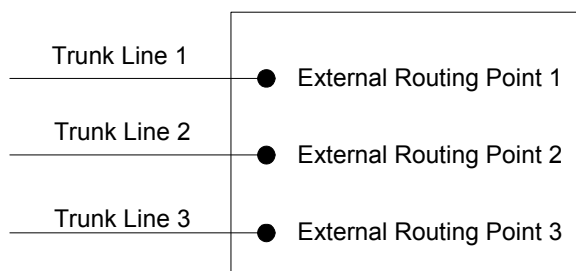

**Figure 8: Point-to-Point Trunk Configuration**


---

**Note:** Dedicated DNs of the External Routing Point type must be configured in a switch. See “Configuring Multi-Site Support” on [page 100](#).

---

### Multiple-to-Point (Multiple-to-One)

In the Multiple-to-Point access mode, trunk lines are assigned to the destination switch’s trunk group, from which calls are routed to the final destination. See [Figure 9](#).

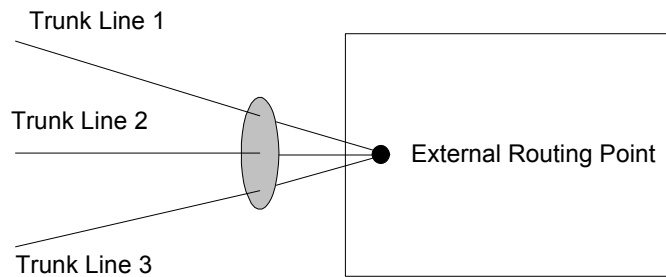

**Figure 9: Multiple-to-Point Trunk Configuration**

With this configuration, all calls reach the same External Routing Point. The DNIS attribute of a specific call differs from that of other calls and uniquely identifies the trunk from which the call arrived.

---

**Note:** To switch to this operating mode, you must configure the `route-dn` configuration option for T-Server.

---

### route-uui

The `route-uui` transaction type employs the dedicated External Routing Point feature of the `route` transaction type (page 73) and the UUI matching feature of the `direct-uui` transaction type (page 69). This transaction type accommodates those switches that require a designated External Routing Point even though they use UUI for tracking.

---

**Note:** To support this transaction type, you must configure your switches to pass the UUI provided by your T-Server. You must also ensure that the trunks involved do not drop this data.

---

## T-Server Transaction Type Support

Table 3 shows which transaction types are supported by a specific T-Server. Use this table to determine the transaction types that are available for use with your T-Server. This applies both to the `cast-type` you specify in the configuration options for your T-Server, and to any client-designated route-type requests specified for transfers of calls. A blank table cell indicates that T-Server does not support a certain transaction type.

**Table 3: T-Server Support of Transaction Types**

T-Server Type	Transaction Type										
	route		re-route	direct-callid	direct- uui / route- uui	direct- no- token	direct- ani	direct- digits	direct- network- callid	dnis- pool	pull- back
	one-to-one	multiple-to-one									
Aastra MXONE CSTA I	Yes			Yes <sup>a</sup>		Yes	Yes <sup>a</sup>				
Alcatel A4200/OXO	Yes			Yes		Yes	Yes				
Alcatel A4400/OXE	Yes			Yes <sup>a,b,c</sup>	Yes <sup>d</sup>	Yes	Yes <sup>a</sup>		Yes <sup>e</sup>		
Aspect ACD	Yes	Yes		Yes <sup>c</sup>		Yes <sup>f</sup>	Yes <sup>f</sup>				
Avaya Communication Manager	Yes				Yes	Yes	Yes				
Avaya INDeX	Yes					Yes	Yes <sup>b</sup>				
Avaya TSAPI	Yes				Yes	Yes	Yes				
Cisco UCCE	Yes					Yes	Yes				
Cisco Unified Communications Manager	Yes			Yes		Yes	Yes				
DataVoice Dharma	Yes			Yes		Yes	Yes				
Digitro AXS/20	Yes			Yes		Yes					
EADS Intecom M6880	Yes			Yes		Yes	Yes				
EADS Telecom M6500	Yes			Yes		Yes	Yes				
eOn eQueue	Yes			Yes		Yes					
Fujitsu F9600	Yes					Yes					

**Table 3: T-Server Support of Transaction Types (Continued)**

T-Server Type	Transaction Type										
	route		re-route	direct-callid	direct- uui / route- uui	direct- no- token	direct- ani	direct- digits	direct- network- callid	dnis- pool	pull- back
	one-to- one	multiple- to-one									
Huawei C&C08	Yes			Yes							
Huawei NGN	Yes					Yes	Yes				
Mitel MiTAI	Yes					Yes	Yes		Yes <sup>g</sup>		
NEC NEAX/APEX	Yes			Yes		Yes	Yes				
Nortel Communication Server 2000/2100	Yes			Yes <sup>f</sup>		Yes <sup>f</sup>	Yes <sup>f</sup>				
Nortel Communication Server 1000 with SCCS/MLS	Yes			Yes		Yes	Yes		Yes		
Philips Sopho iS3000	Yes			Yes		Yes	Yes				
Radvision iContact	Yes		Yes								Yes
Samsung IP-PCX IAP	Yes			Yes		Yes					
Siemens Hicom 300/HiPath 4000 CSTA I	Yes			Yes	Yes <sup>d</sup>	Yes	Yes				
Siemens HiPath 3000	Yes			Yes		Yes					
Siemens HiPath 4000 CSTA III	Yes				Yes <sup>d</sup>	Yes	Yes				

**Table 3: T-Server Support of Transaction Types (Continued)**

T-Server Type	Transaction Type										
	route		re-route	direct-callid	direct- uui / route- uui	direct- no- token	direct- ani	direct- digits	direct- network- callid	dnis- pool	pull- back
	one-to- one	multiple- to-one									
Siemens HiPath DX	Yes				Yes <sup>h</sup>	Yes	Yes <sup>i</sup>				
SIP Server	Yes		Yes		Yes <sup>j</sup>	Yes					Yes
Spectrum	Yes	Yes		Yes		Yes <sup>f</sup>	Yes <sup>f</sup>				
Tadiran Coral	Yes			Yes		Yes	Yes				
Teltronics 20-20	Yes			Yes		Yes	Yes				
Tenovis Integral 33/55	Yes			Yes		Yes	Yes				
Network T-Servers											
AT&T											
Concert											
CRSP											Yes
DTAG			Yes								
GenSpec	Yes	Yes	Yes							Yes	
IVR Server, using network configuration	Yes	Yes	Yes							Yes	Yes
KPN			Yes								
ISCP											
MCI											
NGSN	Yes										Yes
Network SIP Server	Yes					Yes	Yes			Yes	
Sprint	Yes										

**Table 3: T-Server Support of Transaction Types (Continued)**

T-Server Type	Transaction Type										
	route		re-route	direct-callid	direct-uuui / route-uuui	direct-no-token	direct-ani	direct-digits	direct-network-callid	dnis-pool	pull-back
	one-to-one	multiple-to-one									
SR-3511											
Stentor											

- a. Not supported in the case of function `TRouteCall` on a Virtual Routing Point: a Routing Point can be simulated using a hunt group with calls being deflected or transferred from the hunt-group member when routing. When a two-step (typically mute) transfer is used on such a hunt-group member, `CallID` and `ANI` usually change; thus, the `direct-callid` and `direct-ani` types do not work.
- b. Not supported in the case of function `TSingleStepTransfer` when the T-Server service is simulated using a two-step transfer to the switch. In this case, `CallID` and `ANI` change; thus, the `direct-callid` and `direct-ani` types do not work.
- c. Not supported if two T-Servers are connected to different nodes.
- d. There are some switch-specific limitations when assigning CSTA correlator data `UUUI` to a call.
- e. Supported only on ABCF trunks (Alcatel internal network).
- f. To use this transaction type, you must select the `Use Override` check box on the Advanced tab of the DN Properties dialog box.
- g. Supported only for `TRouteCall` requests made from a Native Routing Point.
- h. Not supported if a `TMakeCall` request is made.
- i. Not supported if a `TInitiateTransfer` or `TInitiateConference` request is made from an outgoing call on a device.
- j. SIP Server supports the `direct-uuui` type.

## Transfer Connect Service Feature

The Transfer Connect Service (TCS) feature supports transfer connect services available on some telephony networks. When this feature is enabled, ISCC passes user data to remote locations to which calls are transferred or conferenced using transfer connect services.

---

## Procedure: Activating Transfer Connect Service

### Start of procedure

1. Open the T-Server Application's Properties dialog box.
2. Click the Options tab.
3. Set the `tcs-use` configuration option to always.
4. Set the `tcs-queue` configuration option to the number of a DN on the origination switch.

ISCC uses this DN as an intermediate step when sending calls to the remote location. The DN that is configured as `tcs-queue` receives attached data indicating the Feature Access Code (FAC) needed to reach the remote site. After a call is directed to the DN with data, a monitoring application takes the data and generates the required DTMF (dual-tone multifrequency) tones to redirect the call through the network to the remote location.

5. When you are finished, click Apply.
6. Click OK to save your changes and exit the Properties dialog box.

### End of procedure

---

**Note:** With T-Server for Avaya Communication Manager, you can use `RequestRouteCall` with `RouteTypeOverwriteDNIS` to initiate the playing of DTMF tones. This is done through the use of another intermediate DN (typically, an announcement port configured to give the silent treatment), to which the call is routed. When the call is established on this DN, T-Server requests that the digits sent in the DNIS field of the `TRouteCall` be played by using the `ASAI-send-DTMF-single` procedure.

---

---

## ISCC/Call Overflow Feature

The Inter Server Call Control/Call Overflow (ISCC/COF) feature of T-Server, that supports *passive external routing*, is specifically designed to handle calls delivered between sites without an explicitly defined destination location. Such scenarios include contact center overflows and manual call transfers.

An *overflow situation* occurs when a call comes into a contact center where all agents are currently busy. In this situation, the switch can transfer (overflow) the incoming call to another site where there is an available agent.

T-Server uses two methods to handle call overflow and manual transfer scenarios. The first method is based on `NetworkCallID` matching and the second method is based on `ANI/OtherDN` matching.

When connected to each other via switch-specific networks, switches of some types can pass additional information along with transferred calls. This information may contain the `NetworkCallID` of a call, which is a networkwide unique identifier of the call.

When connected via a regular PSTN, switches of all types can send the `ANI` and/or `OtherDN` attributes to the destination switch during any call transfer operation.

While all T-Servers support the ISCC/COF feature using the `ANI` and/or `OtherDN` attributes, only a few support this feature using the `NetworkCallID` attribute. Table 4 shows the T-Server types that provide the `NetworkCallID` of a call.

**Table 4: T-Server Support of NetworkCallID for ISCC/COF Feature**

T-Server Type	Supported NetworkCallID Attribute
Alcatel A4400/OXE <sup>a</sup>	Yes
Aspect ACD	Yes
Avaya Communication Manager <sup>a,b</sup>	Yes
Avaya TSAPI <sup>a,b</sup>	Yes
Cisco UCCE	Yes
Mitel MiTAI <sup>a</sup>	Yes
Nortel Communication Server 2000/2100 <sup>a</sup>	Yes
Nortel Communication Server 1000 with SCCS/MLS <sup>a</sup>	Yes
SIP Server <sup>a</sup>	Yes
Spectrum	Yes

a. Supported only if the `match-flexible` configuration parameter is used.

b. ISCC/COF is cross-compatible between T-Server for Avaya Communication Manager and T-Server for Avaya TSAPI.

The ISCC/COF feature can use any of the three attributes (`NetworkCallID`, `ANI`, or `OtherDN`) as criteria for matching the arriving call with an existing call at another location. Consequently, the attribute that is used determines what



ConnID, UserData, CallType, and CallHistory are received for the matched call from the call's previous location.

**Warning!** Depending on the switch platform, it may be possible to inherit the ANI attribute after routing a call to a remote destination, and after performing a single-step transfer and other telephone actions. However, ISCC/COF works properly only in scenarios where the ANI attribute on the destination T-Server is represented by exactly the same unique digit string as on the origination T-Server.

Typically, the ANI attribute represents the original call identifier (customer phone number), which guarantees that the attribute remains unique.

**Note:** When the ISCC/COF feature is in use, the Number Translation feature becomes active. For more information on feature configuration, see “Number Translation Feature” on [page 83](#).

## ISCC/COF Call Flow

Figure 10 shows the sequence of steps that occur in an ISCC/COF scenario when a call is made or transferred by an agent at Site A to a DN at Site B, or when a call is overflowed from Site A to Site B.

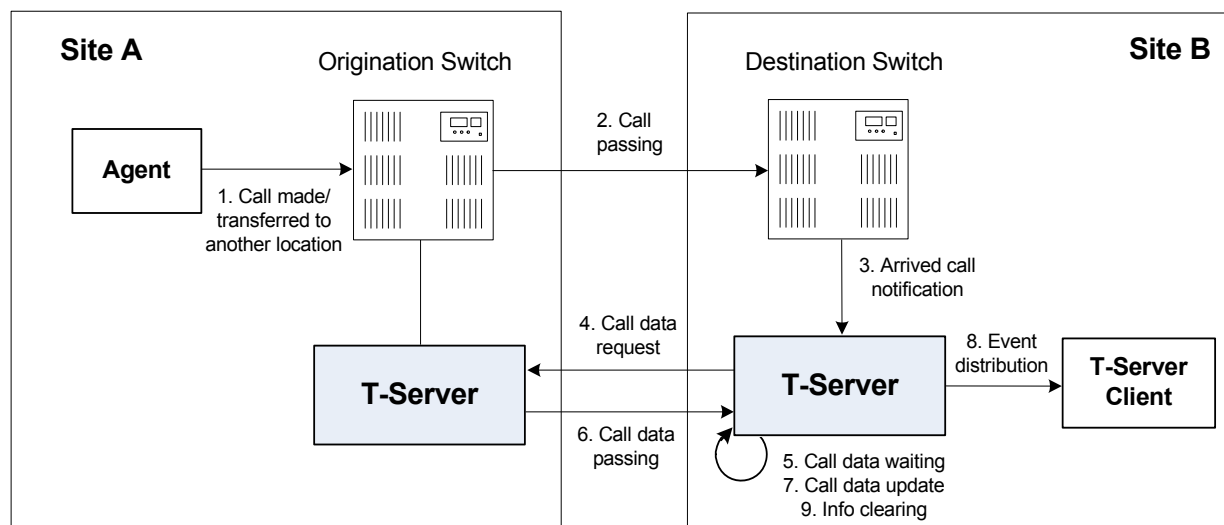


Figure 10: Steps in the ISCC/COF Process

### Step 1

An agent makes or transfers a call manually to another location or a call is overflowed from Site A (origination location) to Site B (destination location).

**Step 2**

Switch A (the origination switch) passes the call to Switch B (the destination switch).

**Step 3**

The call reaches the destination switch, which notifies the destination T-Server about the arrived call.

**Step 4**

The destination T-Server verifies with remote locations whether the call overflowed at any of them.

To determine which calls to check as possibly having overflowed, T-Server relies on the Switch object and the presence of DNs on the Switch configured as the Access Resource type with the Resource Type set either to `cof-in` (COF-IN DNs) or to `cof-not-in` (COF-NOT-IN DNs):

T-Server skips an arriving call when one of following conditions is met:

- The call arrives at a DN configured as an Enabled COF-NOT-IN DN.
- COF-IN DNs are configured, but the call arrives at a DN other than one of the configured COF-IN DNs or to a COF-IN DN which is Disabled.

In all other cases, the call is checked for overflow.

To determine which location the call arrived from, T-Server checks the call type and checks whether the call has the `NetworkCallID`, `ANI`, or `OtherDN` attribute:

- If the call is not an inbound call, the request for call data is sent to all remote locations *except* those whose Switch Access Code has the ISCC Call Overflow Parameters property set to `inbound-only=true`.
- If the call of any type has the `NetworkCallID` attribute, the destination T-Server sends a request for call data to the remote locations of the same switch type as the destination location if their Switch Access Codes have the ISCC Call Overflow Parameters property set to `match-callid`.
- If the call of any type has the `ANI` or `OtherDN` attribute, the request for call data is sent to remote locations whose Switch Access Code has the ISCC Call Overflow Parameters property set to `match-ani`.

**Step 5**

The destination T-Server waits (suspending events related to that call) for the call data from the remote T-Server for the time interval specified in the `cof-ci-req-tout` configuration option. Within this interval, T-Server holds any events related to the call. In addition, the `cof-ci-defer-delete` option on the origination T-Server establishes the time interval only after which that T-Server deletes the call information. And the `cof-ci-wait-all`, if set to true,

forces the origination T-Server to wait for responses related to possible call overflow situations before updating call data.

### Step 6

The T-Server at the location from which the call was transferred or overflowed sends call data to the requesting T-Server.

### Step 7

If a positive response to the call-data request is received, T-Server updates ConnID, UserData, CallType, and CallHistory, distributes all suspended events related to that call, and deletes all information regarding the transaction (Step 9).

### Step 8

If the timeout set by `cof-ci-req-tout` expires, T-Server distributes all suspended events, and starts the timeout specified by the `cof-rci-tout` option. If a positive response is received within the timeout set by `cof-rci-tout`, T-Server updates the ConnID, UserData, CallType, and CallHistory, and notifies client applications by distributing `EventPartyChanged`.

### Step 9

T-Server deletes all information regarding the transaction when one of these results occurs:

- The first positive response to the call-data request is received.
- Negative responses from all queried locations are received.
- The timeout specified by the `cof-rci-tout` option expires.

---

## Number Translation Feature

The Number Translation feature of T-Server extends the ISCC/COF and `direct-ani` transaction type functions to provide more flexibility for handling calls distributed across multiple sites. T-Server translates the input string (ANI string) into a number defined by the translation rules. This processing is called number translation. T-Servers participating in handling calls at multiple sites exchange the translated numbers in order to match the call instances.

The translation process involves two algorithms, one for rule selection and the other for the actual translation. Through the first algorithm, T-Server selects a rule that will be used for number translation. Through the second algorithm, T-Server translates the number according to the selected rule definition. See “Number Translation Rules” on [page 84](#) for more information on configuring rules for your environment.

Number translation occurs as follows:

1. The switch reports a number, typically via `AttributeANI`.
2. T-Server evaluates all configured inbound rules to determine which one is the best fit for the received number. The best fit is determined by comparing the length of, and the specific digits in, the input number with the inbound pattern of each configured rule. See “Rule Examples” on [page 89](#) for specific examples.
3. T-Server translates the number according to the selected rule.

To enable T-Server to translate numbers, you must perform specific configuration tasks that are associated with translation. See “Configuring Number Translation” on [page 91](#).

## Number Translation Rules

T-Server uses the number translation rules that you define in the T-Server configuration object in two ways:

- Rule selection—To determine which rule should be used for number translation
- Number translation—To transform the number according to the selected rule

### Using ABNF for Rules

The number translation rules must conform to the following syntax, represented using Augmented Backus-Naur Form (ABNF) notation. For more information about ABNF, see RFC 2234, “Augmented BNF for Syntax Specifications: ABNF.”

---

**Note:** The following notation explanations begin with the highest level notation. Each explanation includes the name of a component notation and a basic definition of each component that it contains. Some components require more detailed definitions, which are included later in this section.

---

#### Common Syntax Notations

Syntax notations common to many of these rules include:

- `*`—Indicates that 0 to an infinite number of the item following this symbol are acceptable.
- `1*`—Indicates that one repetition is required. For T-Server, only one instance is acceptable.
- `/`—Indicates that any of the items mentioned, or a combination of those items, is acceptable.

## Component Notations

Component notations include:

- `dialing-plan = *dialing-plan-rule`

where:

- `dialing-plan-rule` represents the name of the rule. Each rule must have a unique name. There are no other naming restrictions, and you do not need to model your names according to the examples in this chapter.

The rules are represented as separate options in the configuration. Also, fields from a rule are represented as parameters in a single option string.

- `rule = [name] in-pattern [out-pattern]`

where:

- `[name]` is the name for the rule option, for example, `rule-01`. In ABNF notation, the brackets `[]` indicate that 0 or 1 instance of the component is required. However, for T-Server, a name is required.
- `in-pattern` is the part of the rule to which T-Server looks when attempting to match the input number.
- `[out-pattern]` is the part of the rule that instructs T-Server on how to translate the input number into the required format. The brackets indicate that either 0 or 1 instance is required. You must create an `out-pattern` for number translation rules.
- `name = *( ALPHA / DIGIT / "-" )`

where:

- `ALPHA` indicates that letters can be used in the name for the rule option.
- `DIGIT` indicates that numbers can be used in the name for the rule option.
- `"-"` indicates that a dash (-) can also be used in the option name, for example, `rule-01`.
- `in-pattern = 1*(digit-part / abstract-group)`

where:

For example, `[1-9]` is the `digit-part` (representing a range of numbers)

and `ABBB` is the `abstract-group` for `in-pattern=[1-9]ABBB`.

- `out-pattern = 1*(symbol-part / group-identifier) *param-part`

where:

- `symbol-part` represents digits, symbols, or a combination. Symbols are rarely used. They are not used in the United States.

- `group-identifier` are letters that represent groups of numbers. A letter in the `out-pattern` represents one or more digits, based on the number of times the letter is used in the `in-pattern`.
- `*param-part` represents an additional parameter, such as `phone-context`. Reminder: an asterisk means that 0 to an infinite number of these are acceptable.

For example, in rule-04; `in-pattern=1AAABBBCCC`; `out-pattern=91ABC`, 91 is the `symbol-part`; A, B, and C are `group-identifiers` in the `out-pattern`, each representing three digits, since there are three instances of each in the `in-pattern`.

---

**Note:** Prefix an `out-pattern` value with a plus sign (+) for the inbound rule when the output must be in a global form (E.164 format).

---

- `digit-part = digits / range / sequence`  
where:
  - `digits` are numbers 0 through 9.
  - `range` is a series of digits, for example, 1-3.
  - `sequence` is a set of digits.
- `symbol-part = digits / symbols`  
where:
  - `digits` are numbers 0 through 9.
  - `symbols` include such characters as +, -, and so on.
- `range = "[" digits "-" digits "]" group-identifier`  
where:
  - `"[" digits "-" digits "]"` represents the numeric range, for example, [1-2].
  - `group-identifier` represents the group to which the number range is applied.

For example, [1-2] applies to group identifier A for `in-pattern=[1-2]ABBB`. When T-Server evaluates the rule to determine if it matches the number, it examines whether the first digit of the number, identified as `group-identifier A`, is 1 or 2.

- `sequence = "[" 1*(digits [" , " ] ) "]" group-identifier`  
where:
  - `"[" 1*(digits [" , " ] ) "]"` represents a sequence of digits, separated by commas, and bracketed. T-Server requires that each digit set have the same number of digits. For example, in [415, 650] the sets have three digits.
  - `group-identifier` represents the group to which the number sequence is applied.

For example, in `in-pattern=1[415,650]A*B`, `[415,650]` applies to group-identifier A. When T-Server evaluates the rule to determine if it matches the number, it examines whether the three digits (group-identifier A) following the 1 in the number are 415 or 650.

- `abstract-group = fixed-length-group / flexible-length-group / entity` where:

- `fixed-length-group` specifies a group composed of a specific number of digits and determined by how many times the group identifier is included in the `in-pattern`. For example, for `in-pattern=1AAABBBCCCC`, there are three digits in group A and B but four in group C.

When you create an `out-pattern`, you include the group identifier only once because the `in-pattern` tells T-Server how many digits belong in that group. For example, `rule-04` (see [page 89](#)) is `in-pattern=1AAABBBCCCC; out-pattern=91ABC`.

- `flexible-length-group` specifies a group composed of 0 or more digits in the group represented by the group-identifier. For example, in `in-pattern=1[415,650]A*B`, `*B` represents the flexible length group containing the remaining digits in the number.
- `entity` represents digits defined for a specific purpose, for example, country code.

The component `abstract-group` is used only for the `in-pattern`.

- `fixed-length-group = 1*group-identifier`

See the earlier explanation under `abstract-group`.

- `flexible-length-group = "*" group-identifier`

See the earlier explanation under `abstract-group`.

- `entity = "#" entity-identifier group-identifier`

where:

- `"#"` indicates the start of a Country Code `entity-identifier`.
- `entity-identifier` must be the letter C which represents Country Code when preceded by a pound symbol (#). Any other letter following the # causes an error.
- `group-identifier` represents the Country Code group when preceded by #C.

The entity component is a special group that assumes some kind of predefined processing, such as the Country Code detection.

- `param-part = ";" param-name "=" param-value`

where:

- `";"` is a required separator element.
- `param-name` is the name of the parameter.
- `"="` is the next required element.
- `param-value` represents the value for `param-name`.

- `param-name = "ext" / "phone-context" / "dn"`  
where:
  - "ext" refers to extension.
  - "phone-context" represents the value of the phone-context option configured on the switch.
  - "dn" represents the directory number.
- `param-value = 1*ANYSYMBOL`  
where:
  - ANYSYMBOL represents any number, letter, or symbol with no restrictions.
- `group-identifier = ALPHA`
- `entity-identifier = ALPHA`
- `digits = 1*DIGIT`
- `symbols = 1*("-" / "+" / ")" / "(" / ".")`

## Recommendations for Rule Configuration

The configuration of rules for inbound numbers usually depends on the settings in the corresponding PBX. These settings often define the form in which the PBX notifies its client applications about the number from which an inbound call is coming.

As a general guideline, configure rules that define how to process calls from:

- Internal numbers.
- External numbers within the same local dialing area.
- External numbers within the same country.
- International numbers.

Rules for inbound numbers, typically for North American locations, might look like this:

1. Two rules to transform internal numbers (extensions):  
`name=rule-01; in-pattern=[1-9]ABBB; out-pattern=AB`  
`name=rule-02; in-pattern=[1-9]ABBBB; out-pattern=AB`
2. A rule to transform local area code numbers (in 333-1234 format in this example):  
`name=rule-03; in-pattern=[1-9]ABBBBBB; out-pattern=+1222AB`
3. A rule to transform U.S. numbers (in +1(222)333-4444 format):  
`name=rule-04; in-pattern=1AAAAAAAAA; out-pattern=+1A`
4. A rule to transform U.S. numbers without the +1 prefix (in (222)333-4444 format):  
`name=rule-05; in-pattern=[2-9]ABBBBBBBB; out-pattern=+1AB`



5. A rule to transform U.S. numbers with an outside prefix (in 9 +1(222)333-4444 format):  
name=rule-06; in-pattern=91AAAAAAAAA; out-pattern=+1A
6. A rule to transform international numbers with an IDD (international dialing digits) prefix (in 011 +44(111)222-3333 format):  
name=rule-07; in-pattern=011\*A; out-pattern=+A
7. A rule to transform international numbers without an IDD prefix (in +44(111)222-3333 format):  
name=rule-08; in-pattern=[2-9]A\*B; out-pattern=+AB

## Rule Examples

This section provides examples of six rules that are configured as options in the Genesys Configuration Database. It also provides examples of how T-Server applies rules to various input numbers.

### Rules

- rule-01** in-pattern=[1-8]ABBB; out-pattern=AB
- rule-02** in-pattern=AAAA; out-pattern=A
- rule-03** in-pattern=1[415,650]A\*B; out-pattern=B
- rule-04** in-pattern=1AAABBBCCCC; out-pattern=91ABC
- rule-05** in-pattern=\*A913BBBB; out-pattern=80407913B
- rule-06** in-pattern=011#CA\*B; out-pattern=9011AB

### Examples

Here are examples of how T-Server applies configured above rules to various input numbers.

**Example 1** T-Server receives input number 2326.

As a result of the rule selection process, T-Server determines that the matching rule is rule-01:

```
name=rule-01; in-pattern=[1-8]ABBB; out-pattern=AB
```

The matching count for this rule is 1, because Group A matches the digit 2.

As a result of the parsing process, T-Server detects two groups: Group A = 2 and Group B = 326.

T-Server formats the output string as 2326.

**Example 2** T-Server receives input number 9122.

As a result of the rule selection process, T-Server determines that the matching rule is rule-02:

```
name=rule-02; in-pattern=AAAA; out-pattern=A
```

The matching count for this rule is 0; however, the overall length of the input number matches that of the in-pattern configuration.

As a result of the parsing process, T-Server detects one group: Group A = 9122.

T-Server formats the output string as 9122.

**Example 3** T-Server receives input number 16503222332.

As a result of the rule selection process, T-Server determines that the matching rule is rule-03:

name=rule-03; in-pattern=1[415, 650]A\*B; out-pattern=B

The matching count for this rule is 4, because the first digit matches and all three digits in Group A match.

As a result of the parsing process, T-Server detects two groups: Group A = 650 and Group B = 3222332.

T-Server formats the output string as 3222332.

**Example 4** T-Server receives input number 19253227676.

As a result of the rule selection process, T-Server determines that the matching rule is rule-04:

name=rule-04; in-pattern=1AAABBBCCCC; out-pattern=91ABC

The matching count for this rule is 1, because the first digit matches.

As a result of parsing process, T-Server detects three groups: Group A = 925, Group B = 322, and Group C = 7676.

T-Server formats the output string as 919253227676.

**Example 5** T-Server receives input number 4089137676.

As a result of rule selection process, T-Server determines that the matching rule is rule-05:

name=rule-05; in-pattern=\*A913BBBB; out-pattern=80407913B

The matching count for this rule is 3, because three digits match.

As a result of the parsing process, T-Server detects two groups: Group A = 408 and Group B = 7676.

T-Server formats the output string as 804079137676.

**Example 6** T-Server receives input number 011441112223333.

As a result of the rule selection process, T-Server determines that the matching rule is rule-06:

name=rule-06; in-pattern=011#CA\*B; out-pattern=9011AB

The matching count for this rule is 3, because three digits match.

As a result of the parsing process, T-Server detects two groups: Group A = 44 and Group B = 1112223333.

T-Server formats the output string as 9011441112223333.

---

## Procedure: Configuring Number Translation

**Purpose:** To configure the Number Translation feature in T-Server to provide more flexibility for handling calls distributed across multiple sites.

### Overview

- The Number Translation feature becomes active when the ISCC/COF feature and/or the `direct-ani` transaction type are used.
- This configuration procedure must be completed within the T-Server Application object corresponding to your T-Server.

### Start of procedure

1. Open the T-Server Application's Properties dialog box.
2. Click the Options tab.
3. Create a new section called `extrouter` or open an existing section with this name.
4. Create a new option called `inbound-translator-<n>`. This option points to another section that describes the translation rules for inbound numbers.
5. In this section, create one configuration option for each rule. Specify the rule name as the option name. The values of these options are the rules for the number translation.

For the option description and its valid values, see Chapter 10, “T-Server Common Configuration Options,” on [page 209](#).

6. When you are finished, click Apply.
7. Click OK to save your changes and exit the Properties dialog box.

### End of procedure


---

## Network Attended Transfer/Conference Feature

The Network Attended Transfer/Conference (NAT/C) feature is designed to enable agents working in multi-site contact centers to consult with each other before making call transfers or conferences, regardless of whether both agents work at the same or different sites. It also enables the agent who requests a consultation to maintain his or her conversation with the customer while the system is looking for an available agent and setting up the consultation call.

The NAT/C feature does not rely on the call transfer capabilities of the local switch.

There are two modes in which the network attended transfer/conference can be performed: *direct* and *URS-controlled*. Figure 11 shows the sequence of steps that occur in *URS-controlled* mode, when Agent A, who is handling a customer call, requests a consultation with another agent, and URS (Universal Routing Server) selects Agent B, who is working at another site. The *direct* mode is similar to the *URS-controlled* mode, with the difference that URS is not involved in the process (Step 2 and Step 3 are omitted).

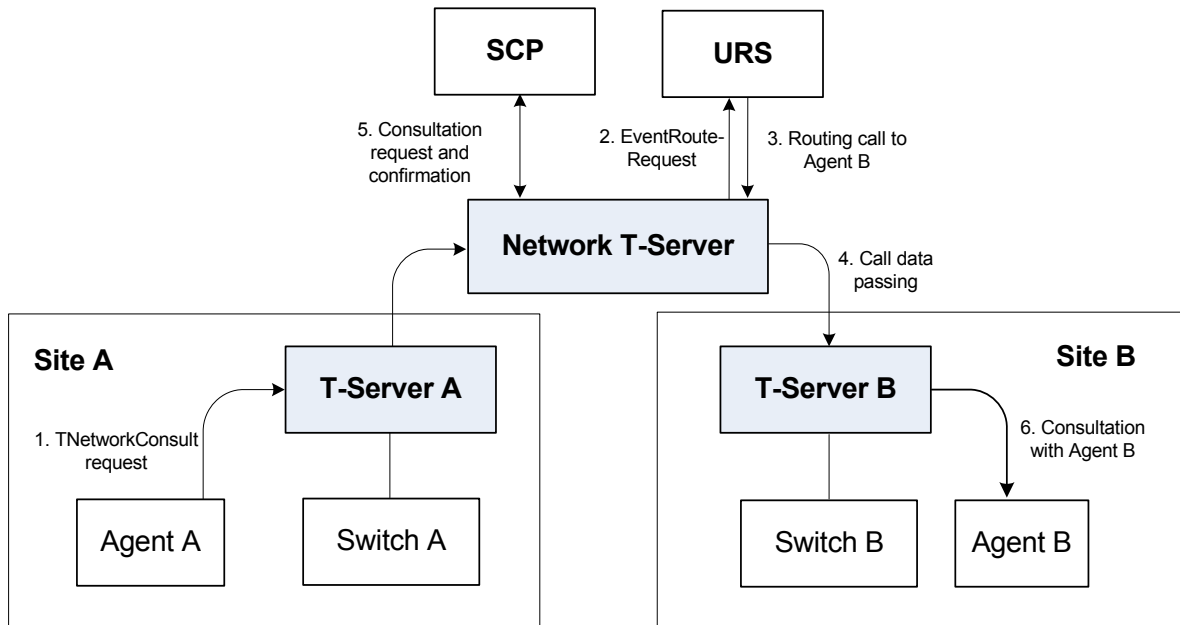

**Figure 11: Steps in the NAT/C Process in URS-Controlled Mode**

### Step 1

Agent A makes a request for a consultation with another agent. A `TNetworkConsult` request is relayed to the Network T-Server. Depending on the parameter settings of the `TNetworkConsult` request, the NAT/C feature will operate in either *direct* or *URS-controlled* mode. For more information, see the *Voice Platform SDK 8.x .NET (or Java) API Reference*.

### Step 2

(*URS-controlled* mode only.) The Network T-Server sends `EventRouteRequest` to URS.

### Step 3

(*URS-controlled* mode only.) URS locates an available agent at Site B and instructs the Network T-Server to route the call to Agent B. The Network

T-Server confirms the initiation of the network transfer by sending `EventNetworkCallStatus` to T-Server A, which then relays it to Agent A.

#### Step 4

The Network T-Server proceeds to obtain the access number from T-Server B, and passes the call data to T-Server B. (See “ISCC Call Data Transfer Service” on [page 59](#) for details.)

#### Step 5

The Network T-Server instructs the Service Control Point (SCP) to initiate a new voice path with Agent B. Once the connection is confirmed, the Network T-Server distributes `EventNetworkCallStatus` to both T-Server A and T-Server B, which then relay it to Agent A and Agent B respectively, to indicate that the consultation call is being established.

The Network T-Server also distributes `EventRouteUsed` to URS to confirm successful routing of the call to the selected agent.

#### Step 6

At this point, the customer is on hold, and Agent A is consulting with Agent B. Agent A can do one of the following:

- End the consultation and retrieve the original customer call
- Alternate between Agent B and the customer
- Set up a conference call with Agent B and the customer
- Transfer the customer call to Agent B

---

**Note:** All T-Servers support NAT/C requests with `AttributeHomeLocation` provided that this attribute identifies a network location that is capable of processing such requests. Refer to the *Network T-Server Deployment Guides* to determine whether a specific Network T-Server can process these requests.

---

---

## Event Propagation Feature

The Event Propagation feature complements the ISCC and ISCC/COF features by distributing updated user data and party-related events to remote T-Servers. This feature is used when a call is being made, transferred, or conferenced to another location, and when, as a result, one or more instances of the call reside at one location while other call instances reside at another location. In this scenario, when a client at one location makes changes to user data, updated user data is passed (*propagated*) to T-Servers at other locations.

The Event Propagation feature consists of User Data update propagation and Party Events propagation.

## User Data Propagation

User data propagation takes place when a client at one location makes changes to user data associated with a call that was made, transferred, conferenced, or routed to other locations. The remote clients involved with the call are notified about the changes with `EventAttachedDataChanged`.

When T-Server receives a local update to user data (that is, when a client of this T-Server has changed the call's user data), T-Server determines if parties at remote locations are involved with the call and, if so, sends (propagates) the updated user data to the T-Servers at remote locations.

When T-Server receives a remote update to user data (that is, when a client of a remote T-Server has changed the call's user data and the remote T-Server has used the Event Propagation feature to send the updated user data), T-Server:

1. Updates the user data of the corresponding local call.
2. Determines if parties at other remote locations are involved with the call and, if so, propagates the updated user data to T-Servers at other remote locations.

The locations to which user data is propagated are selected based on a call distribution topology. That is, the updated user data is passed directly to the location to which a call was sent and to the location from which the call was received, excluding the location from which the update was received.

For example, consider a call made from location A to location B, and then conferenced from location B to location C. The three instances of the call reside at different locations: the first instance is at location A, the second instance is at location B, and the third instance is at location C. The Event Propagation feature is employed in the following scenarios:

- When T-Server at location A receives a local update to user data, it notifies T-Server at location B (to which it sent the call) about changes to the call's user data. Thus, T-Server at location B receives a remote update to user data and, in turn, notifies T-Server at location C (to which it sent the call) about these changes.

Although T-Server at location C receives a remote update to user data, it does not pass the notification to any other T-Servers, because it did not send the call to any other locations. As mentioned earlier, T-Servers at locations B and C update the user data of the corresponding local calls and notify their clients about the changes with `EventAttachedDataChanged`.

- When T-Server at location B receives a local update to user data, it notifies T-Server at location C (to which it sent the call) and T-Server at location A (from which it received the call) about changes to the call's user data. Thus, T-Servers at locations C and A receive a remote update to user data.

Because T-Server at location C did not send the call to any other locations, and T-Server at location A originated the call, neither of these T-Servers passes the notification to any other T-Servers. T-Servers at locations C and A update the user data of the corresponding local calls and notify their clients about the changes with `EventAttachedDataChanged`.

- When T-Server at location C receives a local update to user data, it notifies T-Server at location B (from which it received the call) about changes to the call's user data. Thus, T-Server at location B receives a remote update to user data and, in turn, notifies T-Server at location A (from which it received the call) about these changes.

Although T-Server at location A receives a remote update to user data, it does not pass the notification to any other T-Servers, because it originated the call. T-Servers at locations B and A update the user data of the corresponding local calls and notify their clients about the changes with `EventAttachedDataChanged`.

When a call is distributed between location A and location C using location B, and is then deleted on location B, propagation between locations A and C still occurs through the transit node at location B.

## Party Events Propagation

Party events propagation takes place when a transfer or a conference is completed for a call that was made to or from one or more remote locations, or when a conference party is removed from the conference.

In these cases, the Event Propagation feature distributes party events, such as `EventPartyChanged`, `EventPartyAdded`, and `EventPartyDeleted`, to remote locations involved with the call, according to appropriate call model scenarios.

For example, consider a call made from DN 1 to DN 2 on location A. A `TInitiateConference` request is then issued for DN 2 to transfer the call to external DN 3 on location B. That transfer is made by means of ISCC routing. When this conference is completed on location A, the Event Propagation feature sends `EventPartyChanged` to location B and distributes this event to involved client applications that are connected to location B and registered for DN 3. After that, if a party of the conference is removed from the conference (for example, a party on DN 2), the Event Propagation feature sends `EventPartyDeleted` to location B and distributes this event to client applications registered for DN 3.

If a call involved in the propagation has no local parties but has two or more remote parties, the party events propagation is processed in the same manner as the propagation of user data updates.


For a complete event flow in such scenarios, refer to the *Genesys Events and Models Reference Manual*.

## Switch Partitioning

A multi-site environment with switch partitioning or intelligent trunks can be defined as a configuration of multiple virtual switches (or Switch objects) that are defined in Configuration Manager under a single Switching Office object representing a physical switch. Each Switch object has its own instance of a T-Server application. All T-Server applications connect to the switch via the same or different CTI link or a gateway. (See [Figure 12](#).)

When the Event Propagation feature is active, updated user data and party-related events—`EventPartyChanged`, `EventPartyDeleted`, and `EventPartyAdded`—are propagated to T-Servers that are involved in call transactions, such as transfer or conference. However, with switch partitioning, the call instances may reside at one partition or at different partitions.

### Site A

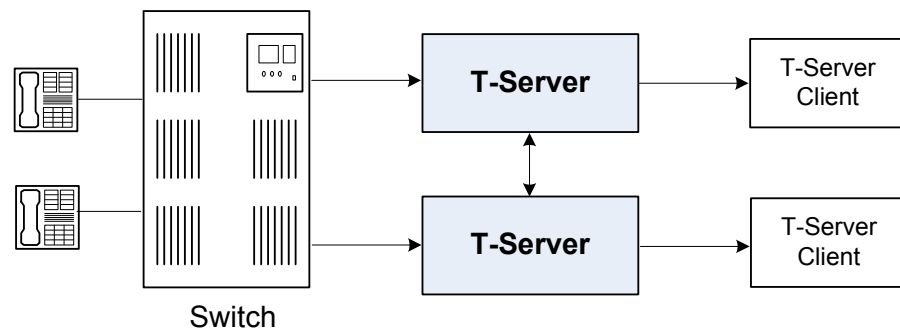

**Figure 12: Switch Partitioning Architecture**

Starting with version 8.0, in addition to `ConnIDs` and `UserData`, T-Server can synchronize the `CallType` attribute. Each T-Server is required to register all DNs it monitors. In a multi-partitioned environment, when configured, calls between partitions are reported as internal (`CallTypeInternal`). In a non-partitioned environment, such calls are reported as inbound (`CallTypeInbound`) and/or outbound (`CallTypeOutbound`), depending on the direction of a call. In order for T-Servers to report calls between specified partitions as internal, registered DNs of these partitions must be assigned to a Switch (T-Server), Switching Office, or Tenant, using the [dn-scope](#) configuration option. If DNs that are involved in calls are not in the T-Server scope, those DNs will be reported as inbound or outbound.

In addition, T-Server supports `LocalCallType` and `PropagatedCallType` attributes, which depend on the [propagated-call-type](#) configuration option setting for reporting. See the option description on [page 214](#).



To control race conditions that may occur in the switch-partitioned environment, use the `epp-tout` configuration option (see [page 229](#)).

---

**Notes:** Because of possible delays in TCP/IP connections, a sequence of events sent for the same call by two or more T-Servers to clients may appear in an unexpected order. For example, in a simple call scenario with two partitions, `EventRinging` and `EventEstablished` messages may both arrive before `EventDialing`.

Genesys switch partitioning does not apply to hardware partitioning functionality that is supported on some switches.

---

[Table 5](#) shows the T-Server types that support switch partitioning.

**Table 5: T-Server Support for Switch Partitioning**

T-Server Type	Supported
Alcatel A4400/OXE	Yes
Avaya Communication Manager	Yes
Avaya TSAPI	Yes
Cisco Unified Communications Manager	Yes
SIP Server	Yes

## Event Propagation Configuration

The basic Event Propagation feature configuration includes a setting of specific configuration options at a T-Server Application level. The advanced feature configuration allows you to customize the feature at a Switch level.

When determining whether to notify other T-Servers of changes to user data, or to distribute party events, T-Server checks:

1. Call topology (what location a call came from and to what location the call was then transferred or conferenced).
2. Outbound parameters of the Switch this T-Server relates to (whether propagation parameters are configured for the access codes this switch uses to reach the switch at the location a call came from and the switch at the location to which the call was then transferred or conferenced).

---

**Warning!** The direction of user-data or party-events propagation does not necessarily match the direction of call distribution. Therefore, the access code used to deliver the call can differ from the access code used for the purpose of Event Propagation.

---

If one of the T-Servers along the call distribution path has the Event Propagation feature disabled, that T-Server does not distribute events to remote locations.

---

**Procedure:****Activating Event Propagation: basic configuration**

**Purpose:** To activate the Event Propagation feature for User Data updates and call-party-associated events (Party Events) distribution.

**Start of procedure**

1. Open the T-Server Application's Properties dialog box.
2. Click the Options tab.
3. Open the extrouter section.
4. Set the [event-propagation](#) option to the list value.  
This setting enables User Data propagation. If you need to enable Party Events propagation, perform Step 5.
5. Set the [use-data-from](#) option to the current value.  
This setting enables Party Events propagation.  
For the option description and its valid values, see Chapter 10, “T-Server Common Configuration Options,” on [page 209](#).
6. When you are finished, click Apply.
7. Click OK to save your changes and exit the Properties dialog box.

**End of procedure****Next Steps**

- For advanced feature configuration, do the following procedure:  
[Procedure: Modifying Event Propagation: advanced configuration](#), on [page 98](#)

---

**Procedure:****Modifying Event Propagation: advanced configuration**

**Purpose:** To modify access codes for advanced Event Propagation configuration.

## Prerequisites

- [Procedure: Activating Event Propagation: basic configuration](#), on [page 98](#)

## Overview

You can set Event Propagation parameters using:

- The Default Access Code properties of the Switch that receives an ISCC-routed call (the destination switch).
- The Access Code properties of the Switch that passes an ISCC-routed call (the origination switch).

If you do not set up Event Propagation parameters for a given Access Code, T-Server uses corresponding settings configured for the Default Access Code of the destination switch.

The procedures for modifying Default Access Codes and Access Codes are very similar to each other.

## Start of procedure

1. Among configured Switches, select the Switch that the configured T-Server relates to.
2. Open the Switch's Properties dialog box and click either the Default Access Codes tab or the Access Codes tab.
3. Select a configured Default Access Code or configured Access Code and click Edit.

---

**Note:** If no Default Access Code is configured, see [page 103](#) for instructions. If no Access Codes are configured, see [page 104](#) for instructions.

---

4. In the Switch Access Code Properties dialog box that opens, specify a value for the ISCC Protocol Parameters field as follows:
  - To enable distribution of both user data associated with the call and call-party-associated events<sup>1</sup>, type:  
`propagate=yes`  
 which is the default value.
  - To enable distribution of user data associated with the call and disable distribution of call-party-associated events, type:  
`propagate=udata`
  - To disable distribution of user data associated with the call and enable distribution of call-party-associated events, type:

- 
1. The following are call-party-associated events: EventPartyChanged, EventPartyDeleted, and EventPartyAdded.

- `propagate=party`
  - To disable distribution of both user data associated with the call and call-party-associated events, type:  
`propagate=no`
- 5. Click OK to save configuration updates and close the Switch Access Code Properties dialog box.
- 6. Click Apply and OK to save configuration updates and close the Switch Properties dialog box.

End of procedure

---

## ISCC Transaction Monitoring Feature

This feature allows T-Server clients to monitor ISCC transactions that occur during the call data transfer between T-Servers in a multi-site environment.

In order to be able to monitor ISCC messaging, a T-Server client must subscribe to the ISCC Transaction Monitoring. Once a subscription request is confirmed, a client will receive updates about all multi-site operations of this T-Server.

The `TTransactionMonitoring` request is used to instruct T-Server to start, stop, or modify a client's subscription to Transaction Monitoring feature notifications by setting the `TSubscriptionOperationType` parameter to `SubscriptionStart`, `SubscriptionStop`, or `SubscriptionModify` respectively. The transaction status is reported in `EventTransactionStatus` messages to the subscribed clients.

To determine whether the Transaction Monitoring feature is supported by a specific T-Server, a T-Server client may query T-Server's capabilities. For more information about support of this feature, see *Genesys Events and Models Reference Manual* and *Voice Platform SDK 8.x .NET (or Java) API Reference*.

---

## Configuring Multi-Site Support

Prior to configuring T-Server to support multi-site operation, you must read the "Licensing Requirements" on [page 33](#), as well as previous sections of this chapter on multi-site deployment. In particular, Table 3 on [page 75](#) shows which transaction types are supported by a specific T-Server, while Table 4 on [page 80](#) shows whether your T-Server supports the `NetworkCallID` attribute for

the ISCC/COF feature. Use this information as you follow the instructions in this chapter.

---

**Note:** Before attempting to configure a multi-site environment, Genesys recommends that you plan the changes you want to make to your existing contact centers. You should then gather the configuration information you will need (such as the name of each T-Server application, port assignments, and switch names), and use Configuration Manager to create and partially configure each T-Server object. Review multi-site option values in the “extrouter Section” on [page 219](#) and determine what these values need to be, based on your network topology.

---

For T-Server to support multi-site operation, you must create and configure three types of objects in the Configuration Layer:

1. Applications
2. Switches, including Access Codes
3. DNs

You must configure these objects for origination and destination locations. Multi-site support features activate automatically at T-Server startup. See “DNs” on [page 108](#) for details.

## Applications

Ensure that T-Server Application objects, and their corresponding Host objects, exist and are configured for origination and destination locations.

Once you’ve done that, use Configuration Manager to add this configuration to a T-Server Application.

---

### Procedure: Configuring T-Server Applications

**Purpose:** To configure T-Server Application objects for multi-site operation support.

#### Start of procedure

1. Open the T-Server Application's Properties dialog box.
2. Click the Connections tab and click Add to add a connection to the appropriate T-Server. The Connection Info Properties dialog box displays.
3. Use the Browse button to search for the T-Server you want to connect to, and fill in the following values:
  - Port ID

- Connection Protocol
  - Local Timeout
  - Remote Timeout
  - Trace Mode
4. Click the Options tab. Create a new section called extrouter or open an existing section with this name.

---

**Note:** If you do not create the extrouter section, T-Server uses the default values of the corresponding configuration options.

---

5. Open the extrouter section. Configure the options used for multi-site support.

---

**Note:** For a list of options and valid values, see “extrouter Section” on [page 219](#), in the “T-Server Common Configuration Options” chapter in Part Two of this document.

---

6. When you are finished, click Apply.
7. Repeat this procedure for all T-Servers for origination and destination locations that are used for multi-site operations.

#### End of procedure

#### Next Steps

- See [“Switches and Access Codes.”](#)

## Switches and Access Codes

Ensure that Switching Office and Switch objects are configured for both origination and destination locations.

You configure Access Codes to a destination switch in the origination Switch's Properties dialog box. The only exception is the Default Access Code, which is configured at the destination Switch's Properties dialog box.

You can configure two types of switch Access Codes in the Switch's Properties dialog box:

- A Default Access Code (for inbound calls)—Specifies the access code that other switches can use to access this switch when they originate a multi-site transaction.
- An Access Code (for outbound calls)—Specifies the access code that this switch can use when it originates a multi-site transaction to access another switch.

When the origination T-Server processes a multi-site transaction, it looks for an access code to the destination switch. First, T-Server checks the Access Code of the origination Switch:

- If an access code to the destination switch is configured with the target type Target ISCC and with any transaction type except Forbidden, T-Server uses this access code to dial the destination switch.
- If the access code to the destination switch is not configured on the Access Code tab of the origination switch, the origination T-Server checks the Default Access Code tab of the destination switch. If an access code is configured there with the target type Target ISCC and with any transaction type except Forbidden, T-Server uses this access code to dial the destination switch.
- If no access code with the required properties is found, T-Server rejects the transaction.

---

**Note:** When migrating from previous releases of T-Servers to 8.1, or when using T-Servers of different releases (including 8.1) in the same environment, see “Compatibility Notes” on [page 107](#).

---

---

## Procedure: Configuring Default Access Codes

**Purpose:** To configure the Default Access Codes (one per Switch object) to be used by other switches to access this switch when they originate a multi-site transaction.

### Prerequisites

- Ensure that Switching Office and Switch objects are configured for both origination and destination locations.

### Start of procedure

1. Among configured Switches, select the Switch that the configured T-Server relates to.
2. Open the Switch Properties dialog box and click the Default Access Codes tab.
3. Click Add to open the Access Code Properties dialog box.

4. In the `Code` field, specify the access code used by remote switches to reach a DN at this switch. An access code is used as a prefix to the remote switch numbers.

---

**Note:** If no prefix is needed to dial to the configured switch, you can leave the `Code` field blank.

---

5. In the `Target Type` field, select `Target ISCC`.
6. In the `Route Type` field, select a value corresponding to the transaction type you want to use (given that it is supported for your switch type).
7. When you are finished, click `Apply`.

### End of procedure

### Next Steps

- See [“Configuring Access Codes.”](#)

---

## Procedure: Configuring Access Codes

**Purpose:** To configure the `Access Codes` (one or more per `Switch` object) that this switch can use when it originates a multi-site transaction to access another switch.

### Prerequisites

- Ensure that `Switching Office` and `Switch` objects are configured for both origination and destination locations.

### Start of procedure

1. Among configured `Switches`, select the `Switch` that the configured `T-Server` relates to.
2. Open the `Switch Properties` dialog box and click the `Access Codes` tab.
3. Click `Add` to open the `Access Code Properties` dialog box.
4. In the `Switch` field, specify the switch that this switch can reach using this access code. Use the `Browse` button to locate the remote switch.



5. In the Code field, specify the access code used to reach a DN at the remote switch from this switch. An access code is used as a prefix to the remote switch numbers.

---

**Note:** If no prefix is needed to dial from one switch to another, you can leave the Code field blank.

---

6. In the Target Type field, select Target ISCC.

When you select Target ISCC as your target type, the Properties dialog box changes its lower pane to the Sources pane. It is here that you enter the extended parameters for your access codes, by specifying the ISCC Protocol and ISCC Call Overflow Parameters.

To set these parameters, locate the two drop-down boxes that appear below the Target Type field in the Sources pane of that Properties dialog box.

- a. In the ISCC Protocol Parameters drop-down box, enter the appropriate ISCC Protocol parameter, as a comma-separated list of one or more of the following items shown in [Table 6](#):

**Table 6: Target Type: ISCC Protocol Parameters**

ISCC Protocol Parameters	Description
dnis-tail=<number-of-digits>	Where number-of-digits is the number of significant DNIS digits (last digits) used for call matching. 0 (zero) matches all digits.
propagate=<yes, udata, party, no>	Default is yes. For more information, see “Modifying Event Propagation: advanced configuration” on <a href="#">page 98</a> .
direct-network-callid=<>	For configuration information, see Part Two of this document. (Use <a href="#">Table 4</a> on <a href="#">page 80</a> to determine if your T-Server supports the direct-network-callid transaction type.)

- b. In the ISCC Call Overflow Parameters drop-down box, enter call overflow parameters, as a comma-separated list of one or more of the following items shown in [Table 7](#):

**Table 7: Target Type: ISCC Call Overflow Parameters**

ISCC Call Overflow Parameters	Description
match-callid	Matches calls using network CallID.
match-ani	Matches calls using ANI. <b>Note:</b> When using match-ani, the match-flexible parameter must be set to false.
match-flexible	Supports flexible call matching based on the following values: Default Value: true Valid Values: true, false, and [matching-context-type], where [matching-context-type] is the switch-specific value, which must be the same as the value of the <a href="#">default-network-call-id-matching</a> configuration option of the corresponding T-Server.
inbound-only=<boolean>	Default is true. Setting inbound-only to true disables COF on consultation and outbound calls.

7. In the Route Type field, select a value corresponding to the transaction type you want to use (given that it is supported for your switch type). [Table 8](#) contains cross-reference information on transaction types that the Configuration Layer and T-Server use.

**Table 8: Route Type and ISCC Transaction Type Cross-Reference**

Route Type Field Value	ISCC Transaction Type
Default	The first value from the list of values specified in the cast-type option for the T-Server at the destination site
Direct	direct-callid
Direct ANI	direct-ani
Direct Digits	direct-digits
Direct DNIS and ANI	Reserved

**Table 8: Route Type and ISCC Transaction Type Cross-Reference (Continued)**

Route Type Field Value	ISCC Transaction Type
Direct Network Call ID	direct-network-callid
Direct No Token	direct-notoken
Direct UII	direct-uuI
DNIS Pooling	dnis-pooling
Forbidden	External routing to this destination is not allowed
ISCC defined protocol	Reserved
PullBack	pullback
Re-Route	reroute
Route	route

8. When you are finished, click Apply.

### End of procedure

### Next Steps

- After configuring a switch for multi-site support, proceed with the configuration of DNs assigned to this switch.

## Compatibility Notes

When migrating from previous releases of T-Servers to 8.1, or when using T-Servers of different releases (including 8.1) in the same environment, keep in mind the following compatibility issues:

- The Target External Routing Point value of the Target Type field is obsolete and provided only for backward compatibility with T-Servers of releases 5.1 and 6.0. When two access codes for the same switch are configured, one with the Target ISCC target type and the other with the Target External Routing Point target type, T-Servers of releases 8.x, 7.x, 6.5, and 6.1:
  - Use the Target ISCC access code for transactions with T-Servers of releases 8.x, 7.x, 6.5, and 6.1.
  - Use the Target External Routing Point access code for transactions with T-Servers of releases 5.1 and 6.0.

When the only access code configured for a switch has the Target External Routing Point target type, T-Server uses this access code for all transactions.

- When the Target External Routing Point value of the Target Type field is configured, you must set the Route Type field to one of the following:
  - Default to enable the route transaction type
  - Label to enable the direct-ani transaction type
  - Direct to enable the direct transaction type

---

**Note:** The direct transaction type in releases 5.1 and 6.0 corresponds to the direct-callid transaction type in releases 6.1 and later.

---

- UseExtProtocol to enable the direct-uuu transaction type
- PostFeature to enable the reroute transaction type

These values are fully compatible with the transaction types supported in T-Server release 5.1.

- For successful multi-site operations between any two locations served by release 5.1 T-Servers, identical Route Type values must be set in the Switch's Access Code Properties dialog boxes for both the origination and destination switches.

## DNs

Use the procedures from this section to configure access resources for various transaction types.

---

### Procedure: Configuring access resources for the route transaction type

**Purpose:** To configure dedicated DNs required for the route transaction type.

#### Prerequisites

- Ensure that Switching Office and Switch objects are configured for both origination and destination locations.

**Start of procedure**

1. Under a configured Switch, select the DNs folder. From the main menu, select **File > New > DN** to create a new DN object.
2. On the **General** tab of the DN's **Properties** dialog box, specify the number of the configured DN as the value of the **Number** field. This value must correspond to the Routing Point number on the switch.
3. Select **External Routing Point** as the value of the **Type** field.
4. If a dialable number for that Routing Point is different from its DN name, specify the number in the **Association** field.
5. Click the **Access Numbers** tab. Click **Add** and specify these access number parameters:
  - Origination switch.
  - Access number that must be dialed to reach this DN from the origination switch.

In determining an access number for the Routing Point, T-Server composes it of the values of the following properties (in the order listed):

- a. Access number (if specified).
- b. Switch access code from the switch of the origination party to the switch to which the Routing Point belongs, concatenated with its **Association** (if the **Association** value is specified).
- c. Switch access code from the switch of the origination party to the switch to which the Routing Point belongs, concatenated with the number for the DN.
- d. Default access code of the switch to which the Routing Point belongs, concatenated with its **Association** (if the **Association** value is specified).
- e. Default access code of the switch to which the Routing Point belongs, concatenated with the number for the DN.

---

**Note:** If option `use-implicit-access-numbers` is set to true, the access number composed of switch access code and DN can be used for external transfers of calls originating at switches for which an access number is not specified.

---

6. When you are finished, click **Apply**.

**End of procedure**

---

## **Procedure:**

### **Configuring access resources for the dnis-pool transaction type**

**Purpose:** To configure dedicated DN's required for the dnis-pool transaction type.

#### **Start of procedure**

1. Under a configured Switch, select the DN's folder. From the main menu, select **File > New > DN** to create a new DN object.
2. On the **General** tab of the DN's **Properties** dialog box, specify the number of the configured DN as the value of the **Number** field. This value must be a dialable number on the switch.
3. Select **Access Resource** as the **Type** field and type **dnis** as the value of the **Resource Type** field on the **Advanced** tab.
4. Click the **Access Numbers** tab. Click **Add** and specify these **Access Number** parameters:
  - Origination switch.
  - Access number that must be dialed to reach this DN from the origination switch.

An access number for the access resource is determined in the same manner as for the route access resource.

5. When you are finished, click **Apply**.

#### **End of procedure**

---

## **Procedure:**

### **Configuring access resources for direct-\* transaction types**

#### **Start of procedure**

You can use any configured DN as an access resource for the **direct-\*** transaction types. (The **\*** symbol stands for any of the following: **callid**, **uui**, **notoken**, **ani**, or **digits**.)

You can select the **Use Override** check box on the **Advanced** tab to indicate whether the override value should be used instead of the number value to dial to the DN. You must specify this value if the DN has a different DN name and dialable number. In fact, this value is required for T-Servers for some switch

types—such as Aspect ACD, Nortel Communication Server 2000/2100, and Spectrum.

#### End of procedure

---

### Procedure: Configuring access resources for ISCC/COF

**Purpose:** To configure dedicated DNs required for the ISCC/COF feature.

#### Start of procedure

---

**Note:** Use Table 4 on [page 80](#) to determine if your T-Server supports the ISCC/COF feature.

---

1. Under a configured Switch, select the DNs folder. From the main menu, select **File > New > DN** to create a new DN object.
2. On the **General** tab of the **DN Properties** dialog box, enter the name of the configured DN in the **Number** field.

---

**Note:** The name of a DN of type **Access Resource** must match the name of a DN in your configuration environment (typically, a DN of type **Routing Point** or **ACD Queue**), so T-Server can determine whether the calls arriving at this DN are overflowed calls.

---

3. Select **Access Resource** as the value for the **Type** field.
4. On the **Advanced** tab, type **cof-in** or **cof-not-in** as the value for the **Resource Type** field.

---

**Note:** Calls coming to DNs with the **cof-not-in** value for the **Resource Type** are never considered to be overflowed.

---

5. When you are finished, click **Apply**.

#### End of procedure

---

### Procedure: Configuring access resources for non-unique ANI

**Purpose:** To configure dedicated DNs required for the non-unique-ani resource type.

The `non-unique-ani` resource type is used to block `direct-ani` and `COF/ani` from relaying on ANI when it matches configured/enabled resource digits. Using `non-unique-ani`, T-Server checks every ANI against a list of `non-unique-ani` resources.

**Start of procedure**

1. Under a configured Switch, select the DNs folder. From the main menu, select `File > New > DN` to create a new DN object.
2. On the General tab of the DN Properties dialog box, specify the ANI digits that need to be excluded from normal processing.
3. Select Access Resource as the value for the Type field.
4. On the Advanced tab, specify the Resource Type field as `non-unique-ani`.
5. When you are finished, click Apply.

**End of procedure**

---

**Procedure:****Modifying DNs for isolated switch partitioning**

**Purpose:** To modify DNs that belong to a particular partition where switch partitioning is used.

This configuration instructs T-Server to select an External Routing Point that has the same partition as the requested destination DN.

---

**Note:** When a target DN is not configured or has no configured partition name, T-Server allocates a DN of the External Routing Point type that belongs to any partition.

---

**Start of procedure**

1. Under a Switch object, select the DNs folder.
2. Open the Properties dialog box of a particular DN.
3. Click the Annex tab.
4. Create a new section named TServer.
5. Within that section, create a new option named `epn`. Set the option value to the partition name to which the DN belongs.
6. Repeat Steps 1–5 for all DNs, including DNs of the External Routing Point type, that belong to the same switch partition.



7. When you are finished, click Apply.

#### End of procedure

## Configuration Examples

This section provides two configuration examples and describes how the configuration settings affect T-Server's behavior.

### Multiple Transaction Types

This example demonstrates the difference in how ISCC directs a call when you specify two different transaction types (`route` and `direct-ani`).

In this example, you configure an origination and a destination switch for as described in “Switches and Access Codes” on [page 102](#).

1. Among configured Switches, select the origination Switch.
2. Open the Switch Properties dialog box and click the Default Access Codes tab.
3. Click Add to open the Access Code Properties dialog box.
4. Set the Access Code field to 9.
5. When you are finished, click Apply.
6. Among configured Switches, select the destination Switch.
7. Under the destination Switch, configure a DN as described in “Configuring access resources for the route transaction type” on [page 108](#).
8. Set the DN Number field to 5001234567.
9. Click the Advanced tab of this DN's Properties dialog box.
10. Select the Use Override check box and enter 1234567 in the Use Override field.
11. When you are finished, click Apply or Save.
12. Use a T-Server client application to register for this new DN with the destination T-Server and, therefore, with the switch.
13. Request to route a call from any DN at the origination switch to the destination DN you have just configured:
  - If you are using the `route` ISCC transaction type, the client requests that T-Server deliver a call to a destination location using the DN number 5001234567. ISCC requests that the switch dial one of the external routing points at the destination location, using the value either of the Access Number field or of the Access Code field, which is 9, concatenated with the external routing point at the destination location. The call is routed to the DN number 5001234567.

- If you are using the `direct-ani` ISCC transaction type, the client requests that T-Server deliver a call to a destination location using the DN number 1234567, which is the `Use Override` value. ISCC requests that the switch dial 91234567, which is a combination of the `Switch Access Code` value and the `Use Override` value. The destination T-Server is waiting for the call to directly arrive at DN number 5001234567.

## Call Overflow Methods

This section demonstrates how to indicate which overflow methods a switch supports.

In this example, for T-Server to use ANI/OtherDN matching in call overflow and manual transfer scenarios, set the ISCC Call Overflow Parameters to:

```
match-ani, inbound-only=true
```

when configuring Switch Access Codes as described on [page 104](#).

With this setting, the switch's location is queried for call data each time the destination T-Server receives an inbound call with the ANI or OtherDN attribute.

For T-Server to use NetworkCallID matching in call overflow and manual transfer scenarios, set the ISCC Call Overflow Parameters to (for example):

```
match-callid, inbound-only=false
```

when configuring Switch Access Codes as described on [page 104](#).

With this setting, the switch's location is queried for call data each time the destination T-Server receives a call of any type (including inbound) with the NetworkCallID attribute.

---

## Next Steps

Continue with Chapter 5, “Starting and Stopping T-Server Components,” on [page 115](#) to test your configuration and installation.

# 5

## Starting and Stopping T-Server Components

This chapter describes methods for stopping and starting T-Server, focusing on manual startup for T-Server and HA Proxy for all switches. It includes these sections:

- [Command-Line Parameters, page 115](#)
- [Starting and Stopping with the Management Layer, page 117](#)
- [Starting with Startup Files, page 118](#)
- [Starting Manually, page 119](#)
- [Verifying Successful Startup, page 125](#)
- [Stopping Manually, page 125](#)
- [Starting and Stopping with Windows Services Manager, page 126](#)
- [Next Steps, page 126](#)

---

### Command-Line Parameters

You can start and stop Framework components using the Management Layer, a startup file, a manual procedure, or the Windows Services Manager.

With all these methods, command-line parameters are usually required for a server application in addition to an executable file name.

Common command-line parameters are as follows:

-host	The name of the host on which Configuration Server is running.
-port	The communication port that client applications must use to connect to Configuration Server.
-app	The exact name of an Application object as configured in the Configuration Database.

-l	<p>The license address. Use for the server applications that check out technical licenses. Can be either of the following:</p> <ul style="list-style-type: none"> <li>• The full path to, and the exact name of, the license file used by an application. For example, -l /opt/mlink/license/license.dat.</li> <li>• The host name and port of the license server, as specified in the SERVER line of the license file, in the port@host format. For example, -l 7260@ctiserver.</li> </ul> <p><b>Note:</b> Specifying the License Manager's host and port parameter eliminates the need to store a copy of a license file on all computers running licensed applications.</p>
-V	<p>The version of a Framework component. Note that specifying this parameter does not start an application, but returns its version number instead. You can use either uppercase or lowercase.</p>
-nco X/Y	<p>The Nonstop Operation feature is activated; X exceptions occurring within Y seconds do not cause an application to exit. If the specified number of exceptions is exceeded within the specified number of seconds, the application exits or, if so configured, the Management Layer restarts the application. If the -nco parameter is not specified, the default value of 6 exceptions handled in 10 seconds applies. To disable the Nonstop Operation feature, specify -nco 0 when starting the application.</p>
-lmspath	<p>The full path to log messages files (the common file named common.lms and the application-specific file with the extension *.lms) that an application uses to generate log events. This parameter is used when the common and application-specific log message files are located in a directory other than the application's working directory, such as when the application's working directory differs from the directory to which the application is originally installed.</p> <p>Note that if the full path to the executable file is specified in the startup command-line (for instance, c:\gcti\multiserver.exe), the path specified for the executable file is used for locating the *.lms files, and the value of the lmspath parameter is ignored.</p>
- transport-port <port number>	<p>&lt;port number&gt; is the port number that a client will use for its TCP/IP connection to Configuration Server. See the Client-Side Port Definition section in the <i>Genesys 8.x Security Deployment Guide</i> for more information.</p>
- transport-address <IP address>	<p>&lt;IP address&gt; is the IP address that a client will use for its TCP/IP connection to Configuration Server. See the Client-Side Port Definition section in the <i>Genesys 8.x Security Deployment Guide</i> for more information.</p>

---

**Note:** In the command-line examples in this document, angle brackets indicate variables that must be replaced with appropriate values.

---

---

## Starting and Stopping with the Management Layer

---

### Procedure: Configuring T-Server to start with the Management Layer

#### Start of procedure

1. Open the T-Server Application's Properties dialog box.
2. Click the Start Info tab.
3. Specify the directory where the application is installed and/or is to run as the Working Directory.
4. Specify the name of the executable file as the command-line.
5. Specify command-line parameters as the Command-Line Arguments.  
The command-line parameters common to Framework server components are described on [page 115](#).
6. When you are finished, click Apply.
7. Click OK to save your changes and exit the Properties dialog box.

#### End of procedure

---

**Note:** Before starting an application with the Management Layer, make sure the startup parameters of the application are correctly specified in the application's Properties dialog box in Configuration Manager.

---

After its command-line parameters are correctly specified in the Properties dialog box, you can start and stop T-Server from Solution Control Interface (SCI), which is the graphical interface component of the Management Layer. (The starting procedure for SCI is described in the *Framework 8.1 Deployment Guide*.) *Framework 8.0 Solution Control Interface Help* provides complete instructions on starting and stopping applications.

You can also use the Management Layer to start a T-Server that has failed. To enable T-Server's autorestart functionality, select the corresponding check box in the Application's Properties dialog box.

Note that when you start (or restart) an application via the Management Layer, the application inherits environment variables from Local Control Agent (LCA), which executes the startup command. Therefore, you must also set the environment variables required by the application for the account that runs LCA.

---

**Warning!** *Stopping* an application via the Management Layer is not considered an application failure. Therefore, the Management Layer does not restart applications that it has stopped unless an appropriate alarm condition and alarm reaction are configured for these applications.

---

---

## Starting with Startup Files

Startup files are files with the extension `run.sh` (on UNIX) or `startServer.bat` (on Windows), which installation scripts create and place into the applications' directories during the installations. These files are created for all Framework server applications except:

- Configuration Server (primary or backup) running on Windows.
- Backup Configuration Server running on UNIX.
- DB Server running on Windows.
- LCA running on either Windows or UNIX.

When using a startup file, verify that the startup parameters the installation script inserted in the startup file are correct. Use the following instructions for UNIX and Windows to start those application for which startup files are created. See the appropriate sections in “Starting Manually” on [page 119](#) to identify which applications should be running for a particular application to start.

---

### Procedure: Starting T-Server on UNIX with a startup file

#### Start of procedure

1. Go to the directory where an application is installed.
2. Type the following command line:  

```
sh run.sh
```

#### End of procedure

---

## Procedure: Starting T-Server on Windows with a startup file

### Start of procedure

To start T-Server on Windows with a startup file, use either of these methods:

- Go to the directory where an application is installed and double-click the `startServer.bat` icon.

Or

- From the MS-DOS window, go to the directory where the application is installed and type the following command-line:  
`startServer.bat`

### End of procedure

---

## Starting Manually

When starting an application manually, you must specify the startup parameters at the command prompt, whether you are starting on UNIX or Windows. At the command prompt, command-line parameters must follow the name of the executable file. On the **Shortcut** tab of the **Program Properties** dialog box, command-line parameters must also follow the name of the executable file.

The command-line parameters common to Framework server components are described on [page 115](#).

If an **Application** object name, as configured in the Configuration Database, contains spaces (for example, **T-Server Nortel**), the **Application** name must be surrounded by quotation marks in the command-line:

```
-app "T-Server Nortel"
```

You must specify the rest of the command-line parameters as for any other application.

The following sections provide general instructions for starting HA Proxy and T-Server manually. Along with these instructions, refer to [Table 9](#), which lists T-Servers and HA Proxy executable file names for supported switches for Windows and UNIX operating systems.

**Table 9: T-Server and HA Proxy Executable Names**

T-Server Type	T-Server Executable File Name		HA Proxy Executable File Name	
	UNIX	Windows	UNIX	Windows
Aastra MXONE CSTA I	md110_server	md110_server.exe	Not Applicable	
Alcatel A4200/OXO	a4200_server	a4200_server.exe	Not Applicable	
Alcatel A4400/OXE	a4400_server	a4400_server.exe	Not Applicable	
Aspect ACD	aspect_server	aspect_server.exe	Not Applicable	
Avaya Communication Manager	avayacm_server	avayacm_server.exe	Not Applicable <sup>a</sup>	
Avaya INDeX	Not Applicable	index_server.exe	Not Applicable	
Avaya TSAPI	avayatsapi_server	avayatsapi_server.exe	Not Applicable	
Cisco UCCE	CiscoUCCE_server	CiscoUCCE_server.exe	Not Applicable	
Cisco Unified Communications Manager	ciscocm_server	ciscocm_server.exe	Not Applicable	
DataVoice Dharma	Dharma_server	Dharma_server.exe	Not Applicable	
Digitro AXS/20	digitro_server	digitro_server.exe	Not Applicable	
EADS Intecom M6880	intecom_server	intecom_server.exe	Not Applicable	
EADS Telecom M6500	m6500_server	m6500_server.exe	Not Applicable	
eOn eQueue	eon_server	eon_server.exe	Not Applicable	
Fujitsu F9600	Not Applicable	F9600_server.exe	Not Applicable	
Huawei C&C08	cc08_server	cc08_server.exe	Not Applicable	
Huawei NGN	huaweingn_server	huaweingn_server.exe	Not Applicable	
Mitel MiTAI	Not Applicable	mitel_server.exe	Not Applicable	
NEC NEAX/APEX	neax_server	neax_server.exe	Not Applicable	
Nortel Communication Server 2000/2100	ncs2000_server	ncs2000_server.exe	ha_proxy_dms	ha_proxy_dms.exe



**Table 9: T-Server and HA Proxy Executable Names (Continued)**

T-Server Type	T-Server Executable File Name		HA Proxy Executable File Name	
	UNIX	Windows	UNIX	Windows
Nortel Communication Server 1000 with SCSS/MLS	succession_server	succession_server.exe	Not Applicable	
Philips Sopho iS3000	iS3000_server	iS3000_server.exe	ha_proxy_iS3000	ha_proxy_iS3000.exe
Radvision iContact	nts_server	nts_server.exe	Not Applicable	
Samsung IP-PCX IAP	samsung_server	samsung_server.exe	Not Applicable	
Siemens Hicom 300/HiPath 400 CSTA I	rolmcb4_server	rolmcb4_server.exe	Not Applicable	
Siemens HiPath 3000	HiPath3000_server	HiPath3000_server.exe	Not Applicable	
Siemens HiPath 4000 CSTA III	HiPath4000_server	HiPath4000_server.exe	Not Applicable	
Siemens HiPath DX	HiPathDX_server	HiPathDX_server.exe	Not Applicable	
SIP Server	sip_server	sip_server.exe	Not Applicable	
Spectrum	spectrum_server	spectrum_server.exe	Not Applicable	
Tadiran Coral	Coral_server	Coral_server.exe	Not Applicable	
Teltronics 20-20	Teltronics2020_server	Teltronics2020_server.exe	ha_proxy_teltronics 2020	ha_proxy_teltronics 2020.exe
Tenovis Integral 33/55	Tenovis_server	Tenovis_server.exe	Not Applicable	
Network T-Servers				
AT&T	nts_server	nts_server.exe	Not Applicable	
Concert	nts_server	nts_server.exe	Not Applicable	
CRSP	nts_server	nts_server.exe	Not Applicable	
DTAG	dtag_server	dtag_server.exe	Not Applicable	
GenSpec	genspec_server	genspec_server.exe	Not Applicable	

**Table 9: T-Server and HA Proxy Executable Names (Continued)**

T-Server Type	T-Server Executable File Name		HA Proxy Executable File Name	
	UNIX	Windows	UNIX	Windows
ISCP	nts_server	nts_server.exe	Not Applicable	
IVR Server, using network configuration	nts_server	nts_server.exe	Not Applicable	
KPN	kpn_server	kpn_server.exe	Not Applicable	
MCI	mci800_server	mci800_server.exe	Not Applicable	
NGSN	nts_server	nts_server.exe	Not Applicable	
Network SIP Server	tsip_server	tsip_server.exe	Not Applicable	
Sprint	sprint_server	sprint_server.exe	Not Applicable	
SR3511	sr3511_server	sr3511_server.exe	Not Applicable	
Stentor	stentor_server	stentor_server.exe	Not Applicable	

- a. For releases prior to 7.1, this T-Server has an HA Proxy available: `ha_proxy_g3tcp` (UNIX) or `ha_proxy_g3tcp.exe` (Windows).

## HA Proxy

If you do not use HA Proxy in your Genesys implementation, proceed to “T-Server” on [page 123](#).

If one or more HA Proxy components are required for the T-Server connection, start HA Proxy before starting T-Server.

Before starting HA Proxy, be sure that the following components are running:

- DB Server that provides access to the Configuration Database
- Configuration Server

The command-line parameters common to Framework server components are described on [page 115](#).

---

## Procedure: Starting HA Proxy on UNIX manually

### Start of procedure

1. Go to the directory where HA Proxy is installed and type the following command-line:  
`ha_proxy_<switch> -host <Configuration Server host>  
 -port <Configuration Server port> -app <HA Proxy Application>`
2. Replace `ha_proxy_<switch>` with the correct HA Proxy executable name, which depends on the type of the switch used.  
 Table 9 on [page 120](#) lists HA Proxy executable names for supported switches.

### End of procedure

---

## Procedure: Starting HA Proxy on Windows manually

### Start of procedure

1. Start HA Proxy from either the Start menu or the MS-DOS window. If using the MS-DOS window, go to the directory where HA Proxy is installed and type the following command-line:  
`ha_proxy_<switch>.exe -host <Configuration Server host> -port  
 <Configuration Server port> -app <HA Proxy Application>`
2. Replace `ha_proxy_<switch>.exe` with the correct HA Proxy executable name, which depends on the type of the switch used.  
 Table 9 on [page 120](#) lists HA Proxy executable names for supported switches.

### End of procedure

## T-Server

Before starting T-Server, be sure that the following components are running:

- DB Server that provides access to the Configuration Database
- Configuration Server
- License Manager

---

**Note:** If an HA Proxy component is required for the T-Server connection, HA Proxy must be started before T-Server.

---

The command-line parameters common to Framework server components are described on [page 115](#).

---

## Procedure: Starting T-Server on UNIX manually

### Start of procedure

1. Go to the directory where T-Server is installed and type the following command-line:

```
<switch>_server -host <Configuration Server host>  
-port <Configuration Server port> -app <T-Server Application>  
-l <license address> -nco [X]/[Y]
```

2. Replace <switch>\_server with the correct T-Server executable name, which depends on the type of the switch used.

Table 9 on [page 120](#) lists T-Server executable names for supported switches.

### End of procedure

---

## Procedure: Starting T-Server on Windows manually

### Start of procedure

1. Start T-Server from either the Start menu or the MS-DOS window. If using the MS-DOS window, go to the directory where T-Server is installed and type the following command-line:

```
<switch>_server.exe -host <Configuration Server host>  
-port <Configuration Server port> -app <T-Server Application>  
-l <license address> -nco [X]/[Y]
```

2. Replace <switch>\_server.exe with the correct T-Server executable name, which depends on the type of the switch used.

Table 9 on [page 120](#) lists T-Server executable names for supported switches.

### End of procedure

---

## Verifying Successful Startup

After executing the startup command, you might want to check whether it was successful.

If you used the Management Layer to start either T-Server or HA Proxy, check whether Solution Control Interface displays `Started` or `Service Unavailable` status for the corresponding application. Refer to the “Troubleshooting” section of the *Framework 8.0 Management Layer User’s Guide* if the startup command does not result in either `Started` or `Service Unavailable` status for some period of time.

If you start your T-Server or HA Proxy with startup files or manually, and if you have configured logging to console or a log file, check the log for messages similar to the following:

- T-Server log file: `Link connected`
- HA Proxy log file: `Link connected`

---

## Stopping Manually

The following stopping procedures apply to Genesys server applications, such as DB Server, Configuration Server, Message Server, Local Control Agent, Solution Control Server, HA Proxy, T-Server, and Stat Server.

---

### Procedure: Stopping T-Server on UNIX manually

#### Start of procedure

To stop a server application from its console window on UNIX, use either of these commands:

- `Ctrl+C`
- `kill <process number>`

#### End of procedure

---

### Procedure: Stopping T-Server on Windows manually

#### Start of procedure

To stop a server application on Windows, use either of these commands:

- To stop a server application from its console window on Windows, use the `Ctrl+C` command.
- To stop a server application on Windows, use the End Task button on the Windows Task Manager.

End of procedure

---

## Starting and Stopping with Windows Services Manager

When starting an application installed as a Windows Service, make sure the startup parameters of the application are correctly specified in the ImagePath in the Application folder in the Registry Editor. The ImagePath must have the following value data:

```
<full path>\<executable file name> -service <Application Name as Service> -host <Configuration Server host>
-port <Configuration Server port> -app <Application Name>
-l <license address>
```

where the command-line parameters common to Framework server components are described on [page 115](#) and

`-service`      The name of the Application running as a Windows Service; typically, it matches the Application name specified in the `-app` command-line parameter.

Framework components installed as Windows Services with the autostart capability are automatically started each time a computer on which they are installed is rebooted.

You can start Framework components installed as Windows Services with the manual start capability with the Start button in Services Manager.

---

**Note:** Use the Windows Services window to change the startup mode from Automatic to Manual and vice versa.

---

Regardless of a component's start capability, you can stop Framework components installed as Windows Services with the Stop button in Services Manager.

---

## Next Steps

This chapter concludes Part One of this document—the set of general instructions for deploying any T-Server. Refer to subsequent chapters in this guide for detailed reference information and any special procedural instructions that pertain to your particular T-Server.



Part

# 2

## T-Server Configuration

Part Two of this *T-Server Deployment Guide* contains reference information that is specific to your T-Server. However, it also contains information on *all* T-Server options, both those that are specific to your T-Server and those that are common to all T-Servers. The information is divided among these chapters:

- Chapter 6, “Switch-Specific Configuration,” on [page 129](#), provides compatibility and configuration information that is specific to this T-Server, including instructions for setting the DN properties and recommendations for the switch configuration.
- Chapter 7, “Supported T-Server Features,” on [page 143](#), describes the features that are supported by this T-Server, including T-Library functionality, use of the Extensions attribute, and error messages.
- Chapter 8, “Supported High-Availability Configurations,” on [page 185](#), provides high-availability (HA) configuration notes that are specific to T-Server for Avaya TSAPI.
- Chapter 9, “Common Configuration Options,” on [page 187](#), describes the log configuration options that are common to all Genesys server applications.
- Chapter 10, “T-Server Common Configuration Options,” on [page 209](#), describes the configuration options common to all T-Server types, including options for multi-site configuration.
- Chapter 11, “T-Server-Specific Configuration Options,” on [page 237](#), describes the configuration options that are specific to this T-Server—that is, those that address the interface between T-Server and the switch.

---

## New in T-Server for Avaya TSAPI

The following new features are available in the initial 8.1 release or have been added in the most recent 8.0 release of T-Server for Avaya TSAPI:

- **Support for the `tsapi-configuration` section configuration options.**  
Starting with release 8.0.006.03, T-Server supports the following restricted configuration options that control the queue size parameters in the `AcsOpenStream` request:
  - `recv-extra-bufs`
  - `recv-q-size`
  - `send-extra-bufs`
  - `send-q-size`
- **Support for the Call Release Tracking Feature.** T-Server now supports the `releasing-party-report` configuration option to enable the Call Release Tracking feature, which provides information about which party initiated the release of the call. See [page 157](#) for details.
- **Support for Cause Codes.** T-Server now supports the configurable mapping of cause codes to the `CallState` attribute for predictive dialing scenarios. See [page 158](#) for details.

- 
- Notes:**
- Configuration option changes that apply to T-Server for Avaya TSAPI are described in “Changes from Release 8.0 to 8.1” on [page 262](#).
  - For a list of new features common to all T-Servers, see Part One of this document.
-



# 6

## Switch-Specific Configuration

This chapter presents switch-specific reference information for configuring T-Server for Avaya TSAPI. It includes the following sections:

- [Known Limitations, page 129](#)
- [Setting DN Properties, page 131](#)
- [Configuring Links and Switches, page 132](#)
- [Configuring AES connections, page 137](#)
- [Configuring the TSAPI Client, page 138](#)
- [Avaya TSAPI Requirements, page 139](#)
- [Genesys Requirements for Avaya TSAPI, page 141](#)

---

### Known Limitations

Several known limitations exist in the current T-Server for Avaya TSAPI environment:

1. For DNs not configured in the Configuration Layer, DN queries for dynamic DN registration are performed on the primary T-Server; however, synchronization of all DN states is not guaranteed. When performing a first time registration of a DN that is not in the Configuration Layer, and in the case where there is an active call on this DN, T-Server does not pass call information (in `Extensions`) to the registering TClient on the initial `EventDNBackInService` event.
2. T-Server does not support partitioned-switch configurations.
3. When T-Server has the value of the `second-call-as-consult` configuration option set to `true`, T-Server considers any manual second call that is made from a given DN as a consultation call to the first call. This might not always be desirable, especially in cases of manual calls in which the

second call is not intended to be a consultation call of the first. Further, in an HA environment, where the backup T-Server has the value of the `second-call-as-consult` set configuration option to `true`, the backup T-Server considers any second call made from the same DN as the first call as a consultation call of the first call. In cases of two independent CTI calls on the primary T-Server, the second call is not considered a consultation of the first call in the primary T-Server. However, in this scenario, backup T-Server represents the second call as a consultation call of the first. This has the potential of causing differences in data representation between the primary T-server and the backup T-Server (see the [consult-user-data](#) option).

4. Currently, in a high-availability (HA) environment, the call type is not automatically propagated to the backup T-Server. This potential difference in call type between primary and backup is only reflected in TEvents after switchover.
5. Currently, the PBX does not notify T-Server when the agent changes state by using the standard buttons on the physical phoneset. To ensure proper agent synchronization, Genesys suggests using either a softphone for all agent state changes, or feature access codes. In addition, the `query-agent-work-mode` configuration option, with its value set to `on-timer`, can be used to request agent states for all properly configured agents who are logged in but who are not on calls. See “[query-agent-work-mode](#)” on [page 244](#).
6. T-Server does not attempt to connect to a backup Configuration Server in a switchover scenario where the backup Configuration Server was configured for the primary Configuration Server after T-Server was started. In this scenario, you must manually restart T-Server to establish the connection to the backup Configuration Server.
7. To enable multi-site functionality, restart all T-Servers after adding the `extrouter` External Routing feature in the T-Server license file. T-Server verifies any modification to the license file at startup.
8. During installation, configure T-Server as case sensitive, to match the configuration of other Genesys products.
9. If Local Control Agent (LCA) starts as a Windows NT Service or as a UNIX background process, do not use the console output for the application log.
10. T-Server might incorrectly generate events in the following scenario:
  - a. DN1 on Site 1 uses the External Routing feature to place a call to DN2 on remote Site 2.
  - b. DN2 answers the call sent from DN1.
  - c. DN2 uses the External Routing feature to perform a call transfer to DN3 at Site 1.
  - d. DN3 answers the call sent from DN2.
  - e. With the call answered, DN2 completes the transfer.

- f. DN1 releases the call.

In this scenario, the T-Server at Site 1 might incorrectly generate events for the call and report an incorrect status of DN1 to T-Server clients.

11. If the former primary T-Server's link is still active during switchover, there is a delay before the new primary T-Server takes control of all calls. The length of the delay depends on the number of active calls and the value set for the `use-link-bandwidth` configuration option (see “`use-link-bandwidth`” on [page 253](#)).
12. No information that is passed by the Avaya PBX across the TSAPI link allows T-Server to identify the agent skill level or skill preference. T-Server is unable to distinguish between agent skill levels for any logic on the PBX that uses agent skill level (for example—Advocate primary/reserve skills). As a result, only skill membership can be distinguished.
13. Any call that is redirected back to the same queue from which it previously passed will not generate a second `EventQueued/EventDiverted` event within 2.5 seconds after being diverted from the queue.

## Setting DN Properties

[Table 10](#) describes how to set the DN properties in the Configuration Layer that are required to use this T-Server with Avaya TSAPI.

**Table 10: Setting DN Properties for Avaya TSAPI**

Switch Domain Type	Possible Types for the DN	
	DN Types <sup>a</sup>	Comments
VDN	External Routing Point	Any VDN with a corresponding “ <code>adjunct-route</code> ” programming script. External Routing Points are used on T-Server exclusively for Inter Server Call Control (ISCC) functionality.
VDN	Routing Point	Any VDN with a corresponding “ <code>adjunct-route</code> ” programming script.
VDN	ACD Queue (Switch-specific Type 2)	Any VDN without an “ <code>adjunct-route</code> ” programming script.
ACD Split	ACD Queue (Switch-specific Type 3)	

**Table 10: Setting DN Properties for Avaya TSAPI (Continued)**

Switch Domain Type	Possible Types for the DN	
	DN Types <sup>a</sup>	Comments
Phone Set (station) DN	ACD Position	Used for receiving/initiating calls with agent logged in.
	Extension	Used for receiving/initiating calls.
	Voice Treatment Port	Used for IVR (Interactive Voice Response) and other audio equipment.
	Voice Mail	Used for voice mail.
	Mixed	Reserved for Genesys Engineering.

- a. You must specify the same value for the switch-specific type property (on the Advanced tab of the DN Properties dialog box) for the DN for the ACD Queue type. For Avaya TSAPI, use one of the following values:

- 1—Default (not specified)
- 2—VDN
- 3—ACD Split/Skill/Hunt Group

## Configuring Links and Switches

### Configuring the CTI Link

You must configure a CTI link (between T-Server and Avaya TSAPI) properly; otherwise, T-Server will be unable to connect to the TSAPI link.

You can configure the link from within the AES interface by selecting CTI Link Admin then TSAPI Link.

---

**Warning!** Contact the switch vendor before changing the switch configuration.

---



---

### Procedure: Configuring a CTI Link between T-Server and Avaya TSAPI

**Purpose:** To configure a CTI link between T-Server and Avaya TSAPI.

## Start of procedure

1. Confirm that your TSAPI is licensed. See [Figure 13](#).



**AVAYA** **Application Enablement Services**  
Operations Administration and Maintenance

You are here: > [CTI OAM Home](#)

**Welcome to CTI OAM Screens**

[craft] logged in on Thu Aug 21 13:44:15 A.S.T. 2008

IMPORTANT: AE Services must be restarted for administrative changes to fully take effect. Changes to the Security Database do not require a restart.

Service	Controller Status
ASAI Link Manager	Running
DMCC Service	Running
CVLAN Service	Running
DLG Service	Running
Transport Layer Service	Running
TSAPI Service	Running

For status on actual services, please use [Status and Control](#).

**License Information**


You are licensed to run Application Enablement (CTI) version 4.0.

You are licensed for the following services

- DLG
- CVLAN
- TSAPI

**Figure 13: TSAPI License**

2. Select CTI Link Admin and then TSAPI Link from the main administration menu as shown in [Figure 14](#).

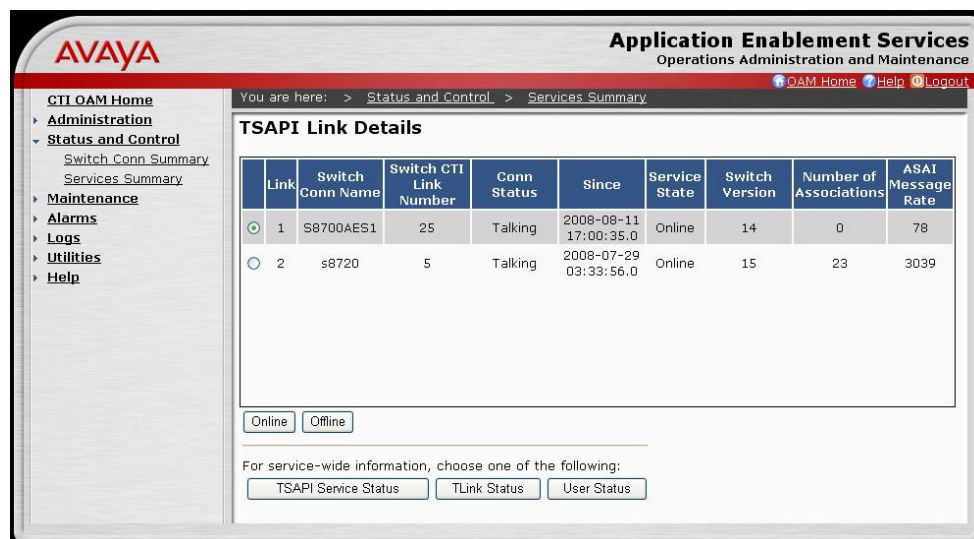

**AVAYA** **Application Enablement Services**  
Operations Administration and Maintenance

You are here: > [Status and Control](#) > [Services Summary](#)

**TSAPI Link Details**

Link	Switch Conn Name	Switch CTI Link Number	Conn Status	Since	Service State	Switch Version	Number of Associations	ASAI Message Rate
1	S8700AES1	25	Talking	2008-08-11 17:00:35.0	Online	14	0	78
2	s8720	5	Talking	2008-07-29 03:33:56.0	Online	15	23	3039

Online Offline

For service-wide information, choose one of the following:

TSAPI Service Status TLink Status User Status

**Figure 14: TSAPI Link Details**

3. Ensure that the Switch CTI Link Number column matches the CTI link number that is used in the Adjunct Routing Link command for all of your External Routing Point and Routing Point DNs as these values must be the same.
4. Edit the User ID that is used for the TSAPI connection by using the Edit User screen as shown in [Figure 15](#). The Avaya Role should be set, and the CT User must be set to Yes. The username can be any value

**AVAYA** Application Enablement Services  
Operations Administration and Maintenance

You are here: > User Management > List All Users

**User Management Home**

- User Management
  - List All Users
  - Add User
  - Search Users
  - Modify Default User
  - Change User Password
- Service Management
- Help

**Edit User**

Fields marked with \* can not be empty.

\* User Id: tsapi

\* Common Name: tsapi

\* Surname: tsapi

New Password:

Confirm New Password:

Admin Note:

Avaya Role: userservice.useradmin

Business Category:

Car License:

CM Home:

Csx Home:

CT User: Yes

Department Number:

Display Name:

Employee Number:

Employee Type:

Enterprise Handle:

Given Name:

Home Phone:

Home Postal Address:

Initials:

**Figure 15: Edit User**

**End of procedure**

## Configuring a TSAPI station

**Purpose:** To configure a TSAPI station.

**Start of procedure**

1. To verify whether a CTI link has been configured, list the CTI links by running a list CTI-Link command at the PBX command prompt.
2. If no CTI link is programmed, you must add one by using the add CTI-Link [#] command. [Figure 16](#) shows how to program the CTI link.
3. Assign the Extension and Name fields as required.

4. If heavy traffic (exceeding one call per second) is expected over the CTI link, set Event Minimization to y. Support for two-digit AUX reason codes over this particular link is configured here, as well as in system parameters features (for the overall PBX support). All other parameters should be set as indicated in [Figure 16](#).

```

CTI LINK
CTI Link: 37
Extension: 6037
Type: ADJ-IP
Name: TSAPI AES 2
COR: 1

CTI LINK
FEATURE OPTIONS
Event Minimization? n
Special Character For Restricted Number? n
Send Disconnect Event for Bridged Appearance? n
Two-Digit Aux Work Reason Codes? n
Block CMS Move Agent Events? n

CTI LINK
Bridged Appearance Origination Restriction? n
  
```

**Figure 16: The Add TSAPI Station Screens**

---

**Note:** The CTI Link number (37 in [Figure 16](#)) must be used both on the AES, when configuring the link, and in the adjunct vectors (for Routing Points and External Routing Points). Also, the Type must be ADJ-IP.

---

End of procedure

## Configuring the TimedAfterCallWork (TACW) Option

The `TimedAfterCallWork` (TACW) configuration option, when enabled, starts a timer after the `Disconnect` message is received from the TSAPI link. Avaya TSAPI automatically puts an agent into TACW after an ACD call release in the following scenarios:

- The agent is in the `Ready/AutoIn` state at the moment of release.
- TACW is administered for the VDN or the ACD Split that the call went through.
- When using the TACW functionality, the `predict-agent-work-mode` option must be set to `true`. See “predict-agent-work-mode” on [page 244](#) for details.

After the timer expires, T-Server sends a query to the switch for agent status. If the agent state has changed, T-Server updates the agent state accordingly (and



sends an appropriate event to clients). However, if the response from the switch indicates that the agent is still in the AfterCallWork state (because, for example, the agent manually has pressed a key to stay in this state), T-Server does not perform any additional actions. See “tacw” on [page 262](#) for details.

---

**Note:** T-Server monitors events from the desktop application and the phone set. All agent state changes (as well as Logout) are monitored. Upon receiving any such request and/or message, T-Server changes the agent state, without waiting for the timeout.

---

When working with the Configuration Layer, you must configure the TACW timeout on the Annex tab of DN Properties dialog box: in the TServer section, set the tacw configuration option with an integer value. The values specified in the Configuration Layer must correspond to the values configured on the switch as shown in [Figure 17](#).

---

**Note:** If the Annex tab does not appear in the DN Properties dialog box, select View > Options from the Configuration Manager main menu, select the Show Annex tab in object properties check box, and then click OK.

---

The screenshot shows the 'HUNT GROUP' configuration window. The settings are as follows:

- Skill? ☒ y
- AAS? ☒ n
- Measured:
- Supervisor Extension:
- Controlling Adjunct:
- VuStats Objective:
- Timed ACW Interval (sec):
- Multiple Call Handling:
- Expected Call Handling Time (sec):
- Service Level Target (% in sec):  in
- Redirect on No Answer (rings):
- Redirect to VDN:
- Forced Entry of Stroke Counts or Call Work Codes? ☒ n

**Figure 17: Example of TACW Configuration**

---

**Note:** According to Avaya specifications, the interval for the VDN overrides the TACW interval for the Hunt Group. Therefore, if a call passes through a VDN having a TACW value of 10 seconds, and it is queued through a vector step to a split/skill having a TACW value of 20 seconds, the VDN timer takes precedence.


---

In addition to the T-Server configuration, you must set the Allow VDN Override parameter on the switch to Y. See “Avaya TSAPI Requirements” on [page 139](#).




## Configuring AES connections

The CLAN IPs that are listed here should match the CLAN cards that are set up for AESVCS in the ip-services form as shown in [Figure 18](#).

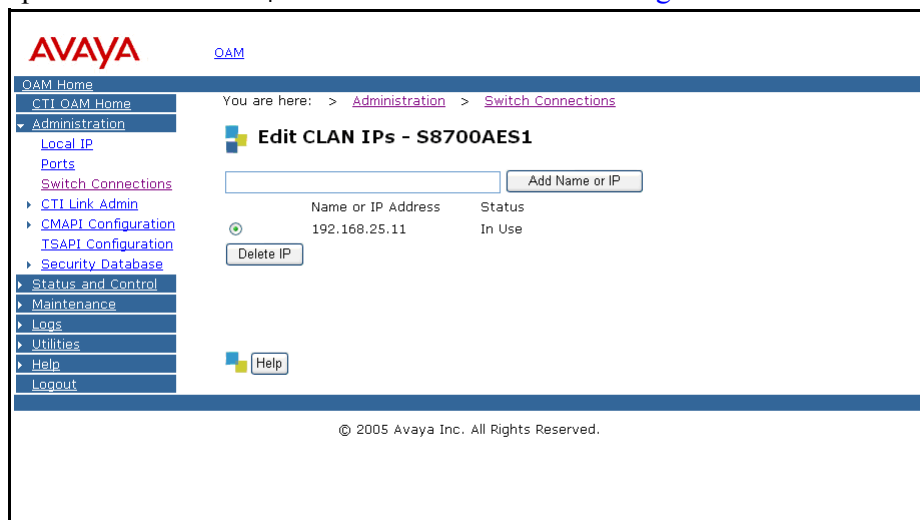

**Figure 18: CLAN IPs**

The switch password should match the password that is set up for this server on the ip-services page. The server name on the ip-services page must match the internal AES server name. See [Figure 19](#).

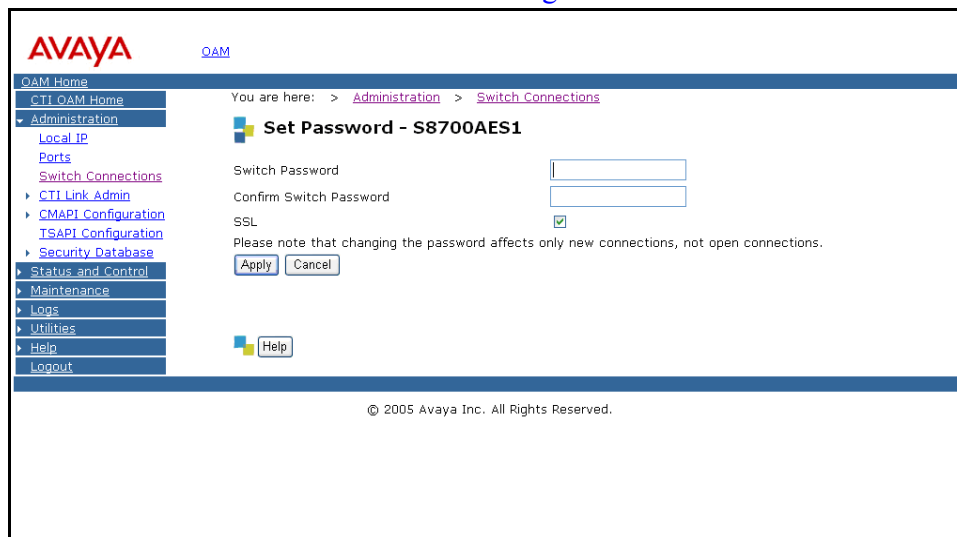

**Figure 19: Set Password**

The TSAPI Links screen configuration:

- Link is an arbitrary ID that is not referred to by T-Server and can be ignored.
- The Switch Connection column refers to the switch-connection name.

- The Switch CTI Link refers to the CTI Link object as configured on the S87xx.
- The ASAI Link version refers to the ASAI protocol version that the switch is using across that link.

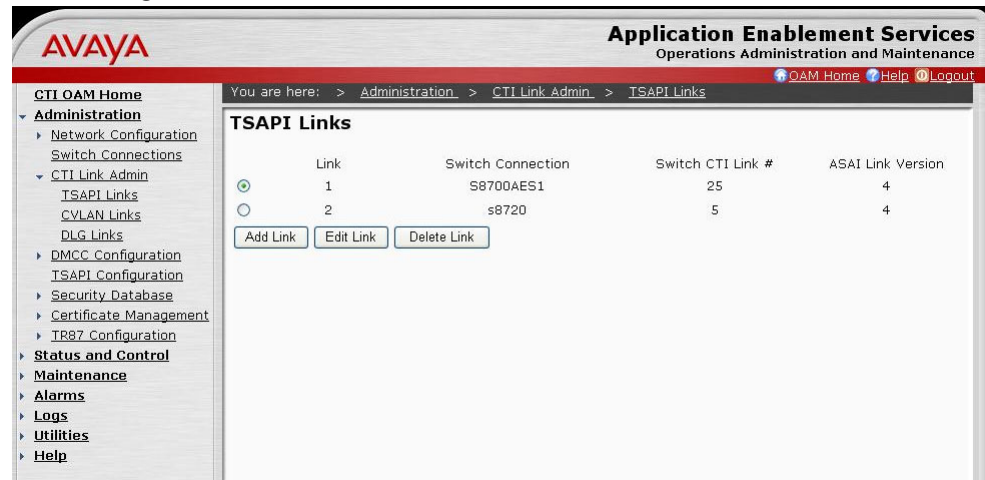


Figure 20: TSAPI Links

Enter the TSAPI information on the Add/Edit TSAPI Links screen as shown in Figure 21.

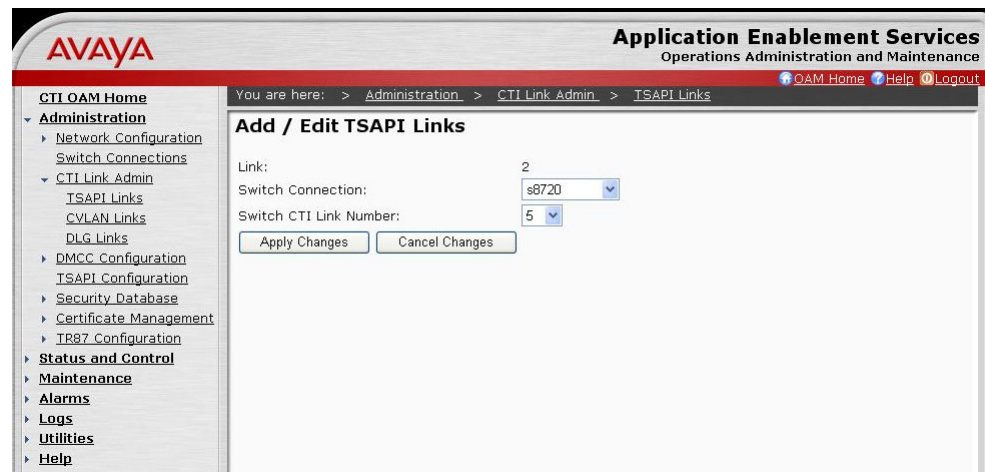


Figure 21: Add / Edit TSAPI Links Screen

## Configuring the TSAPI Client

T-Server for Avaya TSAPI requires that the Avaya TSAPI client library first be installed on the T-Server host computer. Please contact Avaya, or download this client from the Avaya Application Enablement Services Downloads online. The client library instructions describe how to perform this installation.

## Avaya TSAPI Requirements

The figures in this section are examples of VDN and vector configurations. You can modify these configurations to meet your business requirements. Just make sure that you understand the implications that any of these setting might have in your environment. For additional details, contact your switch vendor.

VECTOR DIRECTORY NUMBER	
Extension:	3701
Name:	link 1 - 1
Vector Number:	1
Allow VDN Override?	<input checked="" type="checkbox"/>
COR:	1
TN:	1
Measured:	none
VDN of Origin Annc. Extension:	
1st Skill:	
2nd Skill:	
3rd Skill:	

Figure 22: Example of VDN 3701 Configuration

CALL VECTOR	
Number:	1
Name:	link 1
Lock?	<input type="checkbox"/>
Basic?	y
EAS?	y
G3V4 Enhanced?	y
ANI/II-Digits?	y
ASAI Routing?	y
Prompting?	y
LAI?	n
G3V4 Adv Route?	y
CINFO?	y
BSR?	y
Holidays?	y
Variables?	n
01	wait-time 2 secs hearing ringback
02	adjunct routing link 1
03	wait-time 10 secs hearing silence
04	queue-to skill 2 pri 1
05	wait-time 999 secs hearing silence
06	stop
07	
08	
09	
10	
11	

Figure 23: Example of Call Vector 1 Configuration

CALL VECTOR			
Number: 9		Name: link 2 and 3 HA	
		Lock? <input type="checkbox"/>	
Basic? <input type="checkbox"/>	EAS? <input type="checkbox"/>	G3U4 Enhanced? <input type="checkbox"/>	ANI/II-Digits? <input type="checkbox"/>
Prompting? <input type="checkbox"/>	LAI? <input type="checkbox"/>	G3U4 Adv Route? <input type="checkbox"/>	CINFO? <input type="checkbox"/>
Variables? <input type="checkbox"/>		BSR? <input type="checkbox"/>	Holidays? <input type="checkbox"/>
01	wait-time	2	secs hearing ringback
02	adjunct	routing link	2
03	adjunct	routing link	3
04	wait-time	10	secs hearing silence
05	queue-to	skill	2 pri 1
06	wait-time	999	secs hearing silence
07	stop		
08			
09			
10			
11			

Figure 24: Example of Call Vector 9 Configuration

## Configuring an TSAPI Split

Enter display hunt-group # at the command prompt to display the Hunt-Group/Split Setup screen (see [Figure 25](#)). To force all agent control of the phone from the TSAPI link, set Controlling Adjunct to adj-ip; otherwise, set it to none. To change this entry, enter change hunt-group # at the command prompt. Tab to the entry and type in the correct response. If you change the value to adj-ip, a prompt requests the CTI link #. Enter the extension number assigned earlier for the TSAPI CTI link.

HUNT GROUP	
Skill? <input type="checkbox"/>	Expected Call Handling Time (sec): 180
AAS? <input type="checkbox"/>	
Measured: none	
Supervisor Extension:	
Controlling Adjunct: adj-ip	
Adjunct CTI Link: 1	
Timed ACW Interval (sec):	
Multiple Call Handling: none	
Redirect on No Answer (rings):	
Redirect to UDN:	

Figure 25: TSAPI Link, Hunt Group Configuration

# Genesys Requirements for Avaya TSAPI

The following are the Genesys requirements for Avaya TSAPI:

- Call Center Elite package
- Application Enablement Services (AES) server
- CLAN circuit pack (Depending on expected CTI message load, it may be desirable to have a dedicated C-LAN for the AES.)
- Additional licensing (see [Table 11](#) for details)

[Table 11](#) lists the various TSAPI capabilities, and indicates which package contains each one. For additional details, contact your switch vendor.

**Table 11: Supported Features**

Feature	TSAPI Basic	TSAPI Advanced
Adjunct Call Control Group	Y	
Domain Control Group	Y	
Event Notification Group	Y	
Request Feature Group	Y	
Set Value Group	Y	
Single Step Conference	Y	
Information Indicator (II) Digits	Y	
Predictive Dialing		Y
Adjunct Routing Group		Y
Selective Listening		Y

---

**Note:** Adjunct Routing is a separate billable feature from Avaya.

---



# 7

## Supported T-Server Features

This chapter describes the telephony functionality that is supported by T-Server for Avaya TSAPI. It includes the following sections:

- [T-Library Functionality, page 143](#)
- [Support for Agent Work Modes, page 152](#)
- [Support for Replacing Calling Party Number, page 154](#)
- [Support for Real-Time Agent State Using Device, Media and Call Control API, page 155](#)
- [Support for Notification of Failed Routing Attempts, page 156](#)
- [Support for the Call Release Tracking, page 157](#)
- [Support for Cause Codes, page 158](#)
- [Support for ISDN Network Redirection, page 159](#)
- [Support for Emulated Agents, page 159](#)
- [Support for Agent No Answer Supervision, page 160](#)
- [Support for Switch Partitioning, page 161](#)
- [Support for Avaya Enterprise Survivable Server \(ESS\), page 161](#)
- [Use of the Extensions Attribute, page 167](#)
- [Use of the UserData Attribute, page 178](#)
- [T-Server Error Messages, page 179](#)

---

## T-Library Functionality

The tables in this section present the T-Library functionality that is supported in T-Server for Avaya TSAPI. The table entries use the following notations:

**N**—Not supported

**Y**—Supported

**E**—Event only is supported

**I**—Supported, but reserved for Genesys Engineering

In [Table 12](#), events are listed in an arbitrary order when the set of events is sent in response to a single request. An asterisk (\*) indicates the event that contains the same ReferenceID as the request. For more information, refer to the *Genesys Events and Models Reference Manual* and the *Voice Platform SDK 8.x .NET (or Java) API Reference*.

[Table 12](#) reflects only the switch functionality used by Genesys software and might not include the complete set of events offered by the switch.

Certain requests listed in [Table 12](#) are reserved for Genesys Engineering and are listed here merely for completeness of information.

Notes describing specific functionality appear at the end of a table.

**Table 12: Supported T-Library Functionality**

Feature Request	Request Subtype	Corresponding Event(s)	Supported
<b>General Requests</b>			
TOpenServer		EventServerConnected	Y
TOpenServerEx		EventServerConnected	Y
TCloseServer		EventServerDisconnected	Y
TSetInputMask		EventACK	Y
TDispatch		Not Applicable	Y
TScanServer		Not Applicable	Y
TScanServerEx		Not Applicable	Y
<b>Registration Requests</b>			
TRegisterAddress <sup>a,b</sup>		EventRegistered	Y
TUnregisterAddress <sup>a</sup>		EventUnregistered	Y
<b>Call-Handling Requests</b>			
TMakeCall <sup>c</sup>	Regular	EventDialing	Y
	DirectAgent <sup>d</sup>		Y
	SupervisorAssist <sup>d</sup>		Y
	Priority <sup>d</sup>		Y
	DirectPriority <sup>d</sup>		Y



**Table 12: Supported T-Library Functionality (Continued)**

Feature Request	Request Subtype	Corresponding Event(s)	Supported
TAnswerCall		EventEstablished	Y
TReleaseCall		EventReleased	Y
TClearCall		EventReleased	Y
THoldCall		EventHeld	Y
TRetrieveCall		EventRetrieved	Y
TRedirectCall		EventReleased	Y
TMakePredictiveCall <sup>e</sup>		EventDialing* EventQueued	Y
<b>Transfer/Conference Requests</b>			
TInitiateTransfer <sup>c</sup>		EventHeld EventDialing*	Y
TCompleteTransfer <sup>f</sup>		EventReleased* EventPartyChanged	Y
TInitiateConference <sup>c</sup>		EventHeld EventDialing*	Y
TCompleteConference <sup>g</sup>		EventReleased* EventRetrieved EventPartyChanged EventPartyAdded	Y
TDeleteFromConference		EventPartyDeleted* EventReleased	Y
TReconnectCall		EventReleased, EventRetrieved*	Y
TAlternateCall		EventHeld* EventRetrieved	Y
TMergeCalls	ForTransfer	EventReleased* EventPartyChanged	Y
	ForConference	EventReleased* EventRetrieved EventPartyChanged EventPartyAdded	Y

**Table 12: Supported T-Library Functionality (Continued)**

Feature Request	Request Subtype	Corresponding Event(s)	Supported
TMuteTransfer		EventHeld EventDialing EventReleased EventPartyChanged	Y
TSingleStepTransfer		EventReleased EventPartyChanged	N
TSingleStepConference		EventRinging EventEstablished	Y
<b>Call-Routing Requests</b>			
TRouteCall <sup>c</sup>	Unknown	EventRouteUsed	I
	Default		I
	Label <sup>h</sup>		N
	OverwriteDNIS <sup>i</sup>		I
	DDD <sup>h</sup>		N
	IDDD <sup>h</sup>		N
	Direct		N
	Reject		I
	Announcement <sup>h</sup>		N
	PostFeature <sup>h</sup>		N
	DirectAgent <sup>d</sup>		I
	Priority <sup>d</sup>		I
	DirectPriority <sup>d</sup>		I
	AgentID <sup>h</sup>		N
	CallDisconnect <sup>h</sup>		N

**Table 12: Supported T-Library Functionality (Continued)**

Feature Request	Request Subtype	Corresponding Event(s)	Supported
<b>Call-Treatment Requests</b>			
TApplyTreatment	Unknown	(EventTreatmentApplied+ EventTreatmentEnd)/ EventTreatmentNotApplied	N
	IVR		N
	Music		N
	RingBack		N
	Silence		N
	Busy		N
	CollectDigits		N
	PlayAnnouncement		N
	PlayAnnouncementAnd-Digits		N
	VerifyDigits		N
	RecordUserAnnouncement		N
	DeleteUserAnnouncement		N
	CancelCall		N
	PlayApplication		N
	SetDefaultRoute		N
	TextToSpeech		N
	TextToSpeechAndDigits		N
	FastBusy		N
	RAN		N
TGiveMusicTreatment		EventTreatmentApplied	N
TGiveRingBackTreatment		EventTreatmentApplied	N
TGiveSilenceTreatment		EventTreatmentApplied	N
<b>DTMF (Dual-Tone Multifrequency) Requests</b>			
TCollectDigits		EventDigitsCollected	Y

**Table 12: Supported T-Library Functionality (Continued)**

Feature Request	Request Subtype	Corresponding Event(s)	Supported
TSendDTMF		EventDTMFSent	Y
<b>Voice-Mail Requests</b>			
TOpenVoiceFile		EventVoiceFileOpened	N
TCloseVoiceFile		EventVoiceFileClosed	N
TLoginMailBox		EventMailBoxLogin	N
TLogoutMailBox		EventMailBoxLogout	N
TPlayVoice		EventVoiceFileEndPlay	N
<b>Agent and DN Feature Requests</b>			
TAgentLogin <sup>j</sup>		EventAgentLogin	Y
TAgentLogout		EventAgentLogout <sup>k</sup>	Y
		EventQueueLogout	Y
TAgentSetReady		EventAgentReady	Y
TAgentSetNotReady		EventAgentNotReady	Y
TMonitorNextCall	OneCall	EventMonitoringNextCall	N
	AllCalls		N
TCancelMonitoring		EventMonitoringCancelled	N
TCallSetForward	None	EventForwardSet	Y
	Unconditional		Y
	OnBusy		N
	OnNoAnswer		N
	OnBusyAndNoAnswer		N
	SendAllCalls		Y
TCallCancelForward	None	EventForwardCancel	Y
TSetMuteOff		EventMuteOff	N
TSetMuteOn		EventMuteOn	N

**Table 12: Supported T-Library Functionality (Continued)**

Feature Request	Request Subtype	Corresponding Event(s)	Supported
TListenDisconnect		EventListenDisconnected	Y
TListenReconnect		EventListenReconnected	Y
TSetDNDOOn		EventDNDOOn	N
TSetDNDOff		EventDNDOff	N
TSetMessageWaitingOn		EventMessageWaitingOn	Y
TSetMessageWaitingOff		EventMessageWaitingOff	Y
		EventOffHook	Y
		EventOnHook	Y
		EventDNBackInService	Y
		EventDNOOutOfService	Y
<b>Query Requests</b>			
TQuerySwitch <sup>a</sup>	DateTime	EventSwitchInfo	Y
	ClassifierStat		Y
TQueryCall <sup>a</sup>	PartiesQuery	EventPartyInfo	Y
	StatusQuery		Y
TQueryAddress <sup>a,b</sup>	AddressStatus	EventAddressInfo	Y
	MessageWaitingStatus		Y
	AddressInfoNumberOfIdle Classifiers		Y
	AddressInfoNumberOf- ClassifiersInUse		Y
	AssociationStatus		N
	CallForwardingStatus		Y
	AgentStatus		Y
	NumberOfAgentsInQueue		Y
	NumberOfAvailableAgents- InQueue		Y

**Table 12: Supported T-Library Functionality (Continued)**

Feature Request	Request Subtype	Corresponding Event(s)	Supported
TQueryAddress <sup>a,b</sup> (continued)	NumberOfCallsInQueue	EventAddressInfo (continued)	Y
	AddressType		Y
	CallsQuery		Y
	SendAllCallsStatus		Y
	QueueLoginAudit		Y
	NumberOfIdleTrunks		Y
	NumberOfTrunksInUse		Y
	DatabaseValue		Y
	DNStatus		Y
	QueueStatus		Y
TQueryLocation <sup>a</sup>	AllLocations	EventLocationInfo <sup>l</sup>	I
	LocationData		I
	MonitorLocation		I
	CancelMonitorLocation		I
	MonitorAllLocations		I
	CancelMonitorAllLocations		I
TQueryServer <sup>a</sup>		EventServerInfo	Y
<b>User-Data Requests</b>			
TAttachUserData [Obsolete]		EventAttachedDataChanged	Y
TUpdateUserData		EventAttachedDataChanged	Y
TDeleteUserData		EventAttachedDataChanged	Y
TDeleteAllUserData		EventAttachedDataChanged	Y
<b>ISCC (Inter Server Call Control) Requests</b>			
TGetAccessNumber <sup>c</sup>		EventAnswerAccessNumber	I

**Table 12: Supported T-Library Functionality (Continued)**

Feature Request	Request Subtype	Corresponding Event(s)	Supported
TCancelReqGetAccess-Number <sup>c</sup>		EventReqGetAccess-NumberCanceled	I
<b>Special Requests</b>			
TReserveAgent		EventAgentReserved	Y
TSendEvent		EventACK	I
TSendEventEx		EventACK	I
TSetCallAttributes		EventCallInfoChanged	I
TSendUserEvent		EventACK	Y
TPrivateService		EventPrivateInfo	N
<b>Network Attended Transfer Requests<sup>m</sup></b>			
TNetworkConsult <sup>c</sup>		EventNetworkCallStatus	Y
TNetworkAlternate <sup>c</sup>		EventNetworkCallStatus	Y
TNetworkTransfer <sup>c</sup>		EventNetworkCallStatus	Y
TNetworkMerge <sup>c</sup>		EventNetworkCallStatus	Y
TNetworkReconnect <sup>c</sup>		EventNetworkCallStatus	Y
TNetworkSingleStep-Transfer <sup>c</sup>		EventNetworkCallStatus	Y
TNetworkPrivateService <sup>c</sup>		EventNetworkPrivateInfo	Y
<b>ISCC Transaction Monitoring Requests</b>			
TTransactionMonitoring		EventACK	Y
		EventTransactionStatus	E

- a. Only the requester is notified of the event associated with this request.
- b. If a link goes down, T-Server issues an `EventDNOutOfService` event for all DNs that were assigned to that link at startup unless such DNs were also assigned to another link (within the same T-Server), which remains active. When the status of the link goes back to normal, T-Server generates an `EventDNBackInService` event for every DN which was previously reported as out of service due to the link failure.

- c. Since this feature request can be made across locations in a multi-site environment, if the `location` attribute of the request contains a value relating to any location other than the local site—except when the response to this request is `EventError`—T-Server sends a second event response that contains the same `ReferenceID` as the first event. This second event is either `EventRemoteConnectionSuccess` or `EventRemoteConnectionFailed`.
- d. See TSAPI Direct Agent, Supervisor Assist, and Priority Calling options. For additional details, contact your switch vendor. The `Extensions` attribute key `AgentQueue` is supported on all Request Subtypes except Priority calling (see [page 167](#)).
- e. Queuing and routing of calls answered by a fax machine is not supported.
- f. T-Server sends an `EventPartyChanged` message after a `TCompleteTransfer` T-Library request for each of the parties that is moved to the original call that initially had been part of the call.
- g. T-Server sends an `EventPartyAdded` message after a `TCompleteConference` T-Library request for each of the parties that is moved to the original call that initially had been part of the call.
- h. Not supported. Using unsupported types results in undefined behavior; `EventError` is not guaranteed.
- i. Used for `TransfConnect` switched virtual circuits (SVCs).
- j. An agent can log in to multiple ACD Queue groups, if the ACD Queue groups are configured on the switch. Whether an agent logs in using a CTI request or a manual operation on a phone set, T-Server distributes `EventAgentLogin` for each Hunt Group where the agent actually logs in (provided that all ACD Queues are monitored), including the requested Hunt Group. The Hunt Group `Extensions` attribute is indicated in the `ThisQueue` attribute of the event. Regardless of the number of `EventAgentLogins` distributed for the agent, only one `EventAgentLogout` is distributed when the agent logs out of the last recorded Hunt Group. However, T-Server distributes an `EventQueueLogout` for each Hunt Group `Extensions` attribute as it receives confirmation that the agent has logged out of each of these Hunt Groups.
- k. T-Server provides the `ReasonCode` extension in all `EventAgentLogout` messages that do not have an explicit request, when available.
- l. Two subtypes are supported by `EventLocationInfo`: `LocationInfoLocationMonitorCanceled` and `LocationInfoAllLocationsMonitorCanceled`.
- m. All T-Servers support NAT/C requests with `AttributeHomeLocation` provided that this attribute identifies a network location that is capable of processing such requests. Refer to the *Network T-Server Deployment Guides* to determine whether a specific Network T-Server can process these requests.

## Support for Agent Work Modes

[Table 13](#) indicates how T-Server for Avaya TSAPI supports agent work modes.

**Table 13: Supported Agent Work Modes**

Agent Work Mode	T-Server <sup>a</sup>
AgentWorkModeUnknown	Y
AgentManualIn	Y



**Table 13: Supported Agent Work Modes (Continued)**

Agent Work Mode	T-Server <sup>a</sup>
AgentAutoIn	Y
AgentAfterCallWork	Y
AgentAuxWork <sup>b</sup>	Y

- a. The level of T-Server support for each agent work mode depends on the capabilities of the switch.
- b. T-Server sends an event to clients to notify them of a new ReasonCode if the AUX code for an agent is detected as changed.

## Support for Agent Work Mode Synchronization

Agent work mode changes on the TSAPI switch are not automatically sent to T-Server, which means that T-Server and its clients may not be aware of the correct agent work mode on the switch. T-Server has several features designed to work around this limitation:

1. When a link is restarted, all DN's are queried and the agent work mode is synchronized.
2. Use of T-Library requests to change work mode. If TAgentSetReady and TAgentSetNotReady requests are used, T-Server will know the correct agent work mode.
3. Query agent work mode after a call is released. If the value of this [query-agent-work-mode](#) configuration option is set to on-release (or on-timer), T-Server will send a query to the switch after each call is released on the DN. This will inform T-Server of the current agent state after each call release.
4. Prediction of work mode. If the value of this [predict-agent-work-mode](#) configuration option is true, T-Server will automatically presume the expected agent state after certain specific call scenarios.
5. TACW query. If the value of this [predict-agent-workmode](#) configuration option is true, and if the distributing ACD Queue or Routing Point DN has the DN specific option tacw configured, T-Server will query the switch after this time to determine if the after call work period is over.
6. Feature Access Code (FAC). FACs can be configured on T-Server to allow an agent to change agent state on the phone set with T-Server.
7. Periodic work mode queries. If the value of this [query-agent-work-mode](#) configuration option is set to on-timer, T-Server will send periodic queries to the switch to discover updates to the agent work mode.

Periodic queries can strain bandwidth limitations of the CTI link. Because of this, T-Server allows the following ways to customize periodic queries:

- T-Server allows customization of which DNs are queried through the DN specific (x)-query-on-timer configuration option.
- If value of this `enable-query-on-timer` configuration option is true, then the `query-on-timer-<workmode>` options will allow customization of a particular query polling timer for each work mode an agent may be in. Also, the AUX work mode has options for each reason code (for example `query-on-timer-AUX-1`) to set the polling time.

For more information on agent work mode synchronization, refer to the sections describing the configuration options.

## Feature Configuration

The following configuration options support the Agent Work Mode Synchronization feature:

- `enable-query-on-timer`
- `predict-agent-work-mode`
- `query-agent-work-mode`

---

# Support for Replacing Calling Party Number

Avaya TSAPI provides the capability to replace a calling number through the CTI request.

In order for T-Server to support the TSAPI Replace Calling Party Number feature, it must be activated on the switch by using the system-parameters special-applications form. To replace the calling party number for the `TMakeCall` and `TMakePredictive` requests, T-Clients must use the CPN-related `TKVList Extensions` keys that are described in the “Hardware Reasons in Extensions” section of the “Extensions” portions of the *Genesys Events and Models Reference Manual* and the *Voice Platform SDK 8.x .NET (or Java) API Reference*.

---

**Warning!** The `UU_DATA` key of the `UserData` attribute is used to support this feature. However, any other T-Server feature that also uses `UU_DATA` takes priority over the Replacing Calling Party Number feature. (That is, if `UU_DATA` is used by other features for the same call, then the Replacing Calling Party Number feature is not used.)

---

---

**Note:** The Replacing Calling Party Number feature is supported for switch versions R010 or later.

---

---

## Support for Real-Time Agent State Using Device, Media and Call Control API

T-Server uses the Device, Media and Call Control API (DMCC) link to monitor lamp state changes on the physical telephone. The lamp state changes are mapped to physical button functions (AgentAutoIn, AgentManualIn, AgentAfterCallWork, and AgentAuxWork). T-Server uses this information to generate agent state events that provide notifications about the agent state changes.

T-Server generates EventAgentReady/EventAgentNotReady when T-Server detects a lamp mode state change on the corresponding agent state button (on the physical set).

The DMCC link does not send notification when the button information is changed on the physical set. T-Server can utilize a query to obtain (or refresh) button information—the `update-button-info` option is used to obtain this button information.

Since the DMCC link does not report the AUX reason code, T-Server uses a query to obtain the reason code when it detects an AUX state change.

The `session-duration` option can be used to request a specific session duration with the DMCC link. T-Server will maintain this active session with periodic requests to the DMCC link to reset the application session timer. Additionally, T-Server will consider any failed response by DMCC, to this request, as a link drop.

### Use of the Extensions Attribute

T-Server supports the DMCCPassword key in the Extensions attribute, which enables TRegisterAddress to set the DMCC password for a DN that is not registered in the Configuration Layer. The password is assigned to the specific device and administered on Avaya TSAPI. If no password is provided, the password is assumed to be the same digits as the associated DN.

---

**Note:** The required DMCC password field on the switch is called Security Code.

---

## High-Availability

T-Server does not register DNs over the DMCC link if it is running in backup mode. Also, T-Server forces the DMCC link to shut down when it switches from primary to backup mode of operation.

## DN Registration

DMCC-enabled DNs are registered over the DMCC link. For any DN that fails registration, a retry attempt using the `max-attempts-to-register` configuration option is made.

## Feature Configuration

The following configuration options support the Real-Time Agent State (using DMCC API) feature:

- `max-attempts-to-register`
- `session-duration`
- `update-button-info`

---

# Support for Notification of Failed Routing Attempts

An alarm reaction in Solution Control Interface (SCI) can be triggered when a call has not been successfully routed. See the following related options for more details:

## Feature Configuration

The following configuration options support the Notification of Failed Route Attempts feature:

- `route-failure-alarm-high-wm`
- `route-failure-alarm-low-wm`
- `route-failure-alarm-period`

---

**Note:** When running in an HA environment, to eliminate the possibility of the backup T-Server clearing an alarm condition that was set by the primary T-Server, all alarm generation in the backup T-Server is disabled.

---

---

## Support for the Call Release Tracking

T-Server supports the Call Release Tracking feature, which provides information about which party initiated the release of the call. This feature can be valuable for different application to provide historical and real-time call reporting. The following restrictions/limitations apply to this feature:

- Event minimization on Avaya's link subsystem should not be enabled.
- Manual or external release identification scenarios are restricted to two-party calls where at least one party is a monitored extension, and the other party is either a monitored extension or is an unmonitored (possibly, external) extension.

### DN-Based Reporting

In DN-based reporting, information about the call release initiator will be reported in the `AttributeExtensions` using the `ReleasingParty` key in `EventReleased` and `EventAbandoned` messages, when those events are distributed.

One of the following values will be reported in the `ReleasingParty` key:

- 1 Local—The call is released because the `ThisDN` attribute in the `EventReleased` was requesting the release.
- 2 Remote—The call is released because the other party (which is remote to `ThisDN`) in the `EventReleased` or `EventAbandoned` events was requesting release operation.
- 3 Unknown—The call is released, but T-Server cannot determine the release initiator.

### Call-Based Reporting

Independently of DN-based reporting, T-Server provides the call release initiator in `AttributeCtrlParty` for `EventCallPartyDeleted` and `EventCallDeleted` messages. For scenarios where T-Server cannot provide the release initiator, `AttributeCtrlParty` will not appear in event reporting.

T-Server will provide `AttributeCtrlParty` reporting (for the party that initiated the call release) either:

- When the call is released using a GCTI request and T-Server is aware of the result of the requested operation, or;
- The PBX CTI protocol provides reliable information about the identity of party that released.

## Feature Configuration

The [releasing-party-report](#) configuration option enables or disables the Call Release Tracking feature.

---

**Note:** A client must subscribe for call-monitoring events by issuing a `TStartCallMonitoring` request in order to receive `EventCallPartyDeleted` and `EventCallDeleted` messages.

---

## Support for Cause Codes

T-Server supports the configurable mapping of cause codes to the `CallState` attribute for predictive dialing scenarios.

### Feature Configuration

The mapping of the cause code to the `CallState` attribute is achieved through a set of restricted configuration options that are configured in a section called `cause-to-callstate-map` of the T-Server application. See the “`cause-to-callstate-map` Section” on [page 254](#) for more information.

### Default Mapping of the CSTA Cause Code

[Table 14](#) contains the current default mapping of the CSTA cause code to the `CallState` attribute, which is used by T-Server for Avaya TSAPI.

These mappings apply to the “Abnormal Call Flow” cases for predictive calls when T-Server is in the Call Progress Detection state. See the *Genesys Events and Models Reference Manual* for details.

**Table 14: Default Mapping of the CSTA Cause Code**

CSTA Cause Code	Genesys CallState Attribute
CauseBusy (3)	CallStateBusy (6)
CauseCallNotAnswered (10)	CallStateNoAnswer (7)
CauseIncompatibleDestination (15)	CallStateSitInvalidnum (11)
CauseNetworkCongestion (20)	CallStateSitReorder (16)
CauseNetworkNotObtainable (21)	CallStateSitNocircuit (15)
CauseReorderTone (29)	CallStateSitReorder (16)
CauseTrunksBusy (33)	CallStateAllTrunksBusy (10)

**Table 14: Default Mapping of the CSTA Cause Code (Continued)**

CSTA Cause Code	Genesys CallState Attribute
CauseVoiceUnitInitiator (34)	CallStateAnsweringMachineDetected (9)
CauseNumberUnallocated (81)	CallStateSitInvalidnum (11)
CauseAlertTimeExpired (60)	CallStateNoAnswer (7)
CauseUnauthorizedBearerService (87)	CallStateFaxDetected (17)
Any other cause codes	CallStateGeneralError (3)

---

## Support for ISDN Network Redirection

When a `TRouteCall` is received that has the extension `TC-method = 00B`, T-Server adds the `ncr` flag to the `RouteSelect` CTI request which enables out of band (OOB) Transfer Connect Signaling (TCS) from the switch to the network. This applies to TCS calls only.

### Feature Configuration

The `send-tcs-dtmf` configuration option supports the ISDN Network Redirection feature.

---

## Support for Emulated Agents

This feature allows T-Server to provide agent login and agent work mode functionality independently of the switch. If the feature is activated, it is activated for all agents, and any changes in login status or work mode by the switch is ignored by T-Server.

Changes can be made to agent state using T-Library requests `AgentLogin`, `TAgentLogout`, `TAgentSetReady`, and `TAgentSetNotReady`. Emulated Agents support the following work modes:

- `AgentManualIn`
- `AgentAutoIn`
- `AgentLegalGuard`
- `AgentAfterCallWork`
- `AgentAuxWork`
- `AgentNoCallDisconnect`
- `AgentWalkAway`
- `AgentReturnBack`

The following restrictions apply to this feature:

- The AgentID must be configured in the Configuration Layer (Agent Login configuration object).
- Only one login with any given AgentID is allowed at any time.
- Only one agent login is allowed on the DN.
- If the password is configured in the Configuration Layer, it must be supplied in TAgentLogin, otherwise the request will fail.

## Feature Configuration

The `soft-login-support` configuration option supports the Emulated Agents feature.

---

## Support for Agent No Answer Supervision

The Agent No Answer Supervision feature allows T-Server to redirect a call that is ringing, and unanswered, on an agent's phone. This feature can be configured either through configuration options, or through extensions specified in the request TRouteCall.

Configure as follows:

- Extension NO\_ANSWER\_TIMEOUT / configuration option `agent-no-answer-timeout`—Specifies the time interval that an agent's phone will ring unanswered before the feature is activated.
- Extension NO\_ANSWER\_OVERFLOW / configuration option `agent-no-answer-overflow`—Specifies the target destination where the call will be redirected to, or specifies the last distribution DN.
- Extension NO\_ANSWER\_ACTION / configuration option `agent-no-answer-action`—Specifies whether the agent's work mode or login status will be changed.

## Feature Configuration

The following configuration options support the Agent No Answer Supervision feature:

- `agent-no-answer-timeout`
- `agent-no-answer-overflow`
- `agent-no-answer-action`



---

## Support for Switch Partitioning

Switch partitioning is a configuration of multiple virtual switches that are defined in Configuration Manager under a single `Switching Office` object that represents a physical switch.

### Feature Configuration

The following TServer section configuration options are common to all T-Server types and support switch partitioning in T-Server:

- `dn-scope`
- `propagated-call-type`

See “Switch Partitioning” on [page 96](#) for more information.

---

## Support for Avaya Enterprise Survivable Server (ESS)

Avaya Enterprise Survivable Server (ESS) provides enhanced availability and survivability for T-Server for Avaya TSAPI. It achieves this by separating the Avaya Media Server (switching) elements from the port network (facilities) elements, and providing the capability for the port networks to fail over to a different Avaya Media Server in the event of a failure.


### Bandwidth Considerations

Due to overall switch wide limits on bandwidth usage, careful consideration and planning should be given to the following configuration options in all T-Servers in switch partitioning environments:

- `use-link-bandwidth`
- `use-link-bandwidth-backup`

### Avaya ESS Architecture

In Genesys 8.x architecture for support of Avaya ESS, each switch Services Site on a switch is seen as a separate switch, and is therefore assigned to a dedicated T-Server (see [Figure 26](#)).

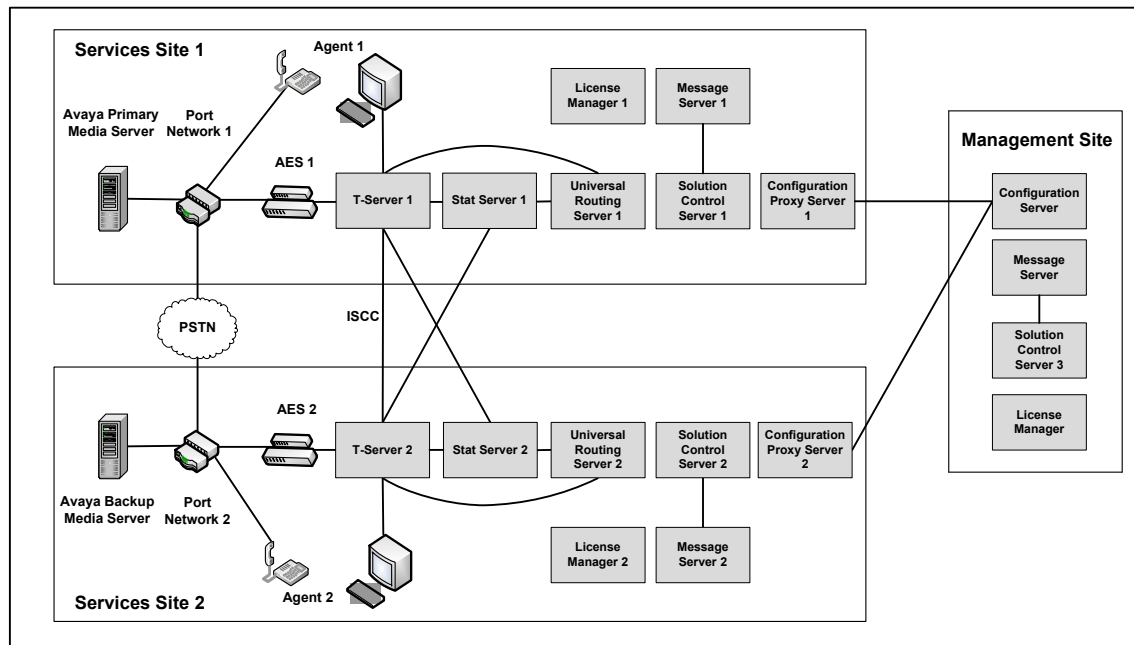

**Figure 26: Avaya ESS Reference Architecture**

This architecture helps to minimize the impact of the total loss of a single site by splitting Genesys components across two types of sites:

- Management Site—Houses Genesys Management applications.
- Services Site—Houses Avaya switches and associated Genesys components

Figure 26 displays a typical configuration with a single Management Site and two Services Sites. Each Services Site is associated with a single Avaya switch, and can function as a self-contained contact center.

Each DN is associated with a single switch, and there is no duplication of DNs between switches. Therefore all T-Servers in an ESS environment must set the following configuration option:

- `dn-scope = tenant`

Additional Services Sites, each associated with a different switch, can be added to this architecture according to the customer's needs.


Or, as an alternative, the Management Site components could be deployed at one of the Services Sites.

## Typical ESS Failure Support Scenarios

### Failure of the Avaya Primary Media Server

Failure of the Avaya Primary Media Server results when the backup Avaya Media Server is promoted to Avaya Primary Media Server. T-Server 1 and

T-Server 2 temporarily (for approximately 3.5 minutes) loses the Application Enablement Services (AES) Server link. After the Avaya Backup Media Server assumes control of the Port Networks, T-Server 1 and T-Server 2 automatically reconnect to the links. Avaya Primary Media Server failure results in the complete reset of CTI resources, resulting in dropped calls and logout of agents. (See [Figure 27](#).)

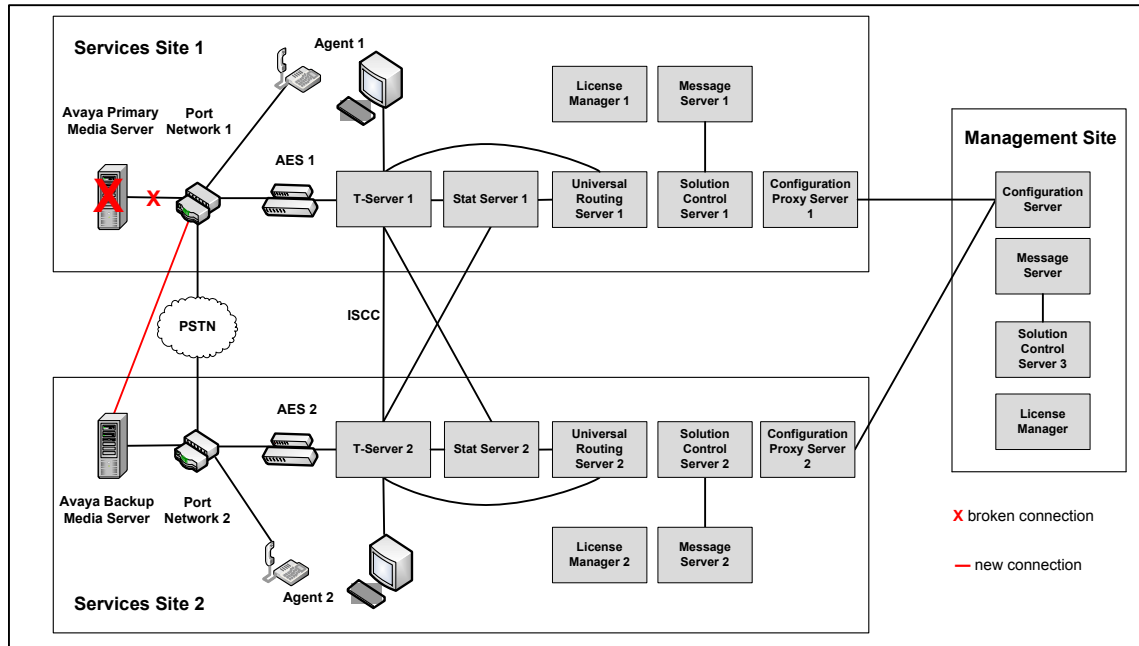

**Figure 27: Primary Media Server Failure**

## Isolation of the Management Site During Failure

Failure of the Management Site does not impact call handling at the Services Sites. Configuration Server Proxies at the Services Sites continue to provide read-only access to configuration data. After network connectivity is restored, configuration updates made at the Management Site during the outage are propagated to the Services Sites. (See [Figure 28](#).)

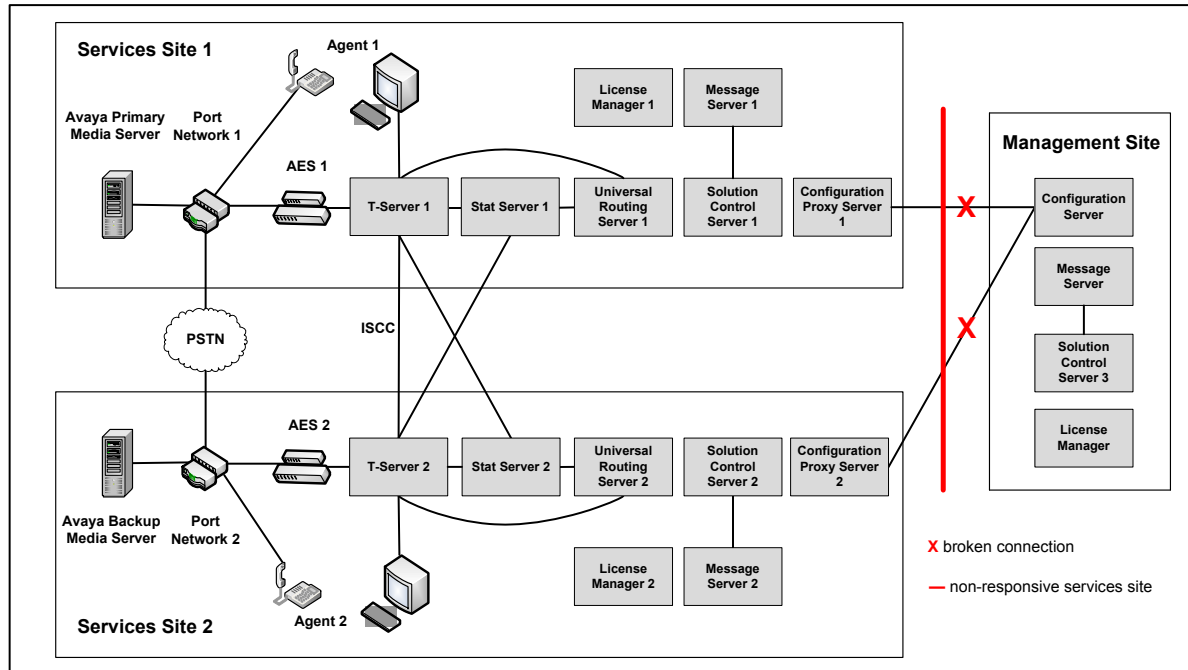


Figure 28: Management Site Isolation Failure

## Isolation of a Single Services Site During Failure

The failure of a network causes a total network isolation of Services Site 1. Services Site 1 continues to process calls. Configuration Server Proxy 1 continues to function, providing read-only configuration data to Service Site 1 applications. The network isolation of the Avaya Primary Media Server results in Port Network 2 changing its connection to the Avaya Backup Media Server. T-Server 2 temporarily loses the AES Server link connection. This failure results in the complete reset of the CTI resources. Due to network isolation, site-to-site ISCC calls are not possible (see [Figure 29](#)).


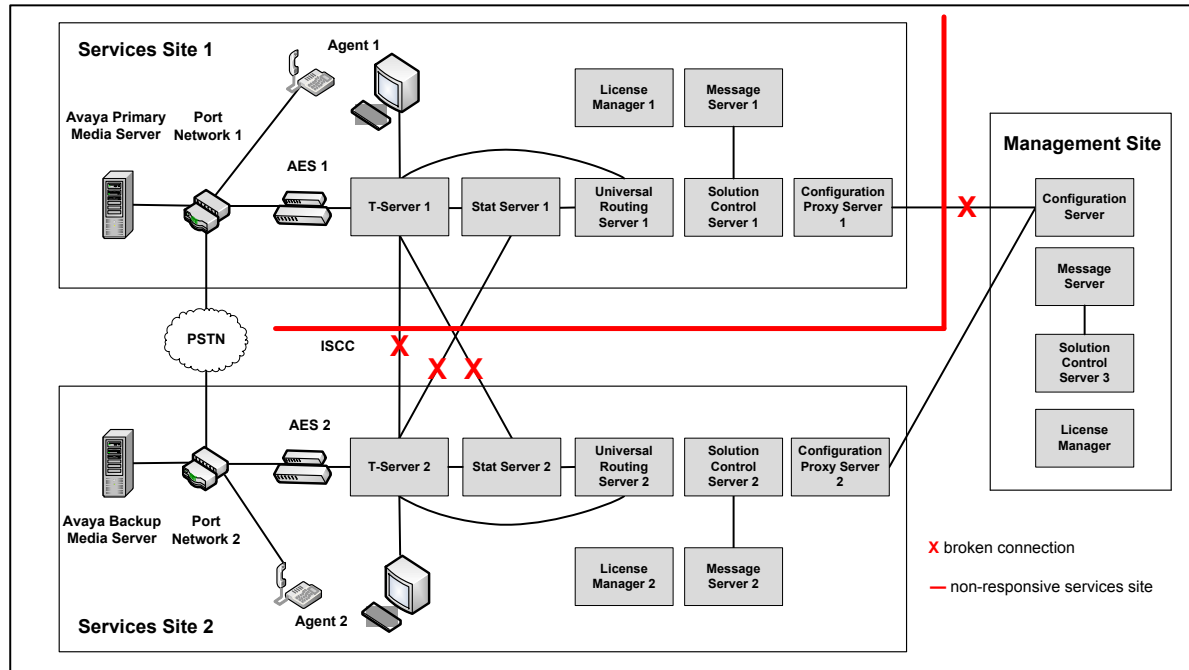


Figure 29: Single Services Site Isolation Failure

## Total Network Failure

The failure of a network causes total network isolation of both Services Sites and the Management Site. The Services Sites continue to process calls, and the Configuration Server Proxies continue to function, providing access to read-only configuration data. The network isolation of the Avaya Primary Media Server results in Port Network 2 changing its connection to the Avaya Backup Media Server. T-Server 2 temporarily (for approximately 3.5 minutes) loses its connection to the AES Server link. This failure results in the complete reset of CTI resources, resulting in dropped calls and logout of agents on Service Site 2. The network isolation prevents site-to-site ISCC calls. (See [Figure 30](#).)

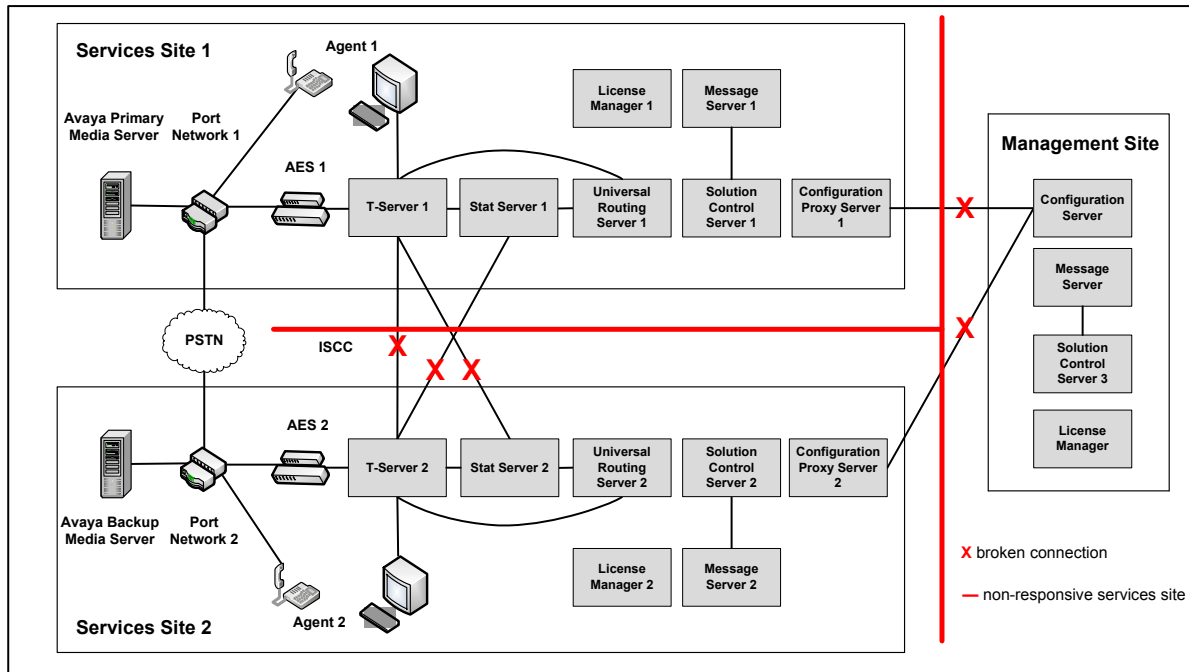

**Figure 30: Total Network Failure Affecting All Inter-Site Communication**

## Use of the Extensions Attribute

Table 15 indicates how T-Server for Avaya TSAPI supports the use of the Extensions attribute.

**Table 15: Use of the Extensions Attribute**

Request/Event	Attribute Extensions		
	Key	Value Type	Value Description
TAgentLogout or TAgentNotReady with WorkMode = AgentAuxWork	ReasonCode	integer	Can be used to send the ReasonCode to the switch—the valid values are 1-99. The logout ReasonCodes in the switch configuration must be set to forced or requested.
TMakeCall, with call_type = MakeCallDirectAgent/ MakeCallDirectPriority	AgentQueue	string	When included in TMakeCall, the value of the AgentQueue key should be a valid ACD Split/Skill value and the target of the TMakeCall request should be currently logged into this ACD Queue. If the AgentQueue key is not included, T-Server will choose from its list of known ACD Queues for the provided target of the TMakeCall request.
TMakeCall, with call_type = MakeCallSupervisorAssist	AgentQueue	string	When included in TMakeCall, the value of the AgentQueue key should be a valid ACD Split/Skill value and the originator of the TMakeCall request should be currently logged into this ACD Queue. If the AgentQueue key is not included, T-Server will choose from its list of known ACD Queues for the originator of the TMakeCall request.

**Table 15: Use of the Extensions Attribute (Continued)**

Request/Event	Attribute Extensions		
	Key	Value Type	Value Description
TRouteCall, with route_type = RouteTypeDirectAgent/ RouteTypeDirectPriority	AgentQueue	string	When included in TRouteCall, the value of the AgentQueue key should be a valid ACD Split/Skill and the target of the TRouteCall request should be currently logged into this ACD Queue. In this case, the AgentQueue key is used only if the value of the <a href="#">route-thru-queue</a> configuration option is set to false.
TMakeCall	Trunk	string	Can be used to pass TAC/ARS/AAR information for off-PBX destinations.
	CPNDigits	string	To replace the calling party number (CPN) for the TMakeCall, T-Clients must use the CPNDigits key with the TKVList keys that are described in the “Hardware Reasons in Extensions” section of the “Extensions” portion in the <i>Genesys Events and Models Reference Manual</i> . <b>Note:</b> The TKVList value is optional.



**Table 15: Use of the Extensions Attribute (Continued)**

Request/Event	Attribute Extensions		
	Key	Value Type	Value Description
TMakePredictiveCall	AMD	string	<p>Used to change default Answering Machine Detection (AMD) treatment for one particular call and specified by the <code>use-am-detection</code> configuration option.</p> <p><code>true, yes, drop</code>—Switch answering machine detection is requested. The switch attempts to classify the call as an answering machine and drops the call when an answering machine is detected.</p> <p><code>connect</code>—Switch answering machine detection is requested. The switch attempts to classify the call as an answering machine and does not drop the call when an answering machine is detected.</p> <p><code>admin</code>—The switch applies a treatment according to the switch configured AMD Treatment.</p> <p><code>false, no, unspecified</code>—No answering machine detection is requested.</p>
TMakePredictiveCall	CPNDigits	string	<p>To replace the calling party number (CPN) for the TMakePredictive, T-Clients must use the CPNDigits key with the TKVL ist keys that are described in the “Hardware Reasons in Extensions” section of the “Extensions” portion in the <i>Genesys Events and Models Reference Manual</i>.</p> <p><b>Note:</b> The TKVL ist value is optional.</p>
	VoiceDest	Any valid ACD Queue or Routing Point	An ACD Queue or Routing Point to which an outbound call that was answered by a live voice is transferred.

**Table 15: Use of the Extensions Attribute (Continued)**

Request/Event	Attribute Extensions		
	Key	Value Type	Value Description
TMakePredictiveCall	AnsMachine	Any valid ACD Queue or Routing Point	An ACD Queue or Routing Point to which an outbound call that was answered by a answering machine is transferred.
TRouteCall	CollectDigits	integer	Used for TSAPI-Requested Digit Collection, where the value (1-24) specifies the number of digits to be collected. See Avaya specifications for details.
	CollectedDigits	string	TSAPI-Provided Digits. See Avaya specifications for details.
TRouteCall	NO_ANSWER_TIMEOUT <sup>a</sup>	string	Calls ringing on an agent's phone that were distributed from an ACD Queue or a Routing Point wait for the telephone to ring for this timeout period (in seconds) before performing the actions described by the NO_ANSWER_ACTION key and redirect the call to the destination described in the NO_ANSWER_OVERFLOW key.
	NO_ANSWER_ACTION	string	Specifies the agent state (none, notready, walkaway) to which T-Server is set to after the time period for the NO_ANSWER_TIMEOUT key has expired. A value of none means that the agent remains in its current state.

**Table 15: Use of the Extensions Attribute (Continued)**

Request/Event	Attribute Extensions		
	Key	Value Type	Value Description
TRouteCall (continued)	NO_ANSWER_ OVERFLOW	string	After the time period for the NO_ANSWER_TIMEOUT key has expired, T-Server redirects the ringing call to the destination described with this key. If set to recall, the call is redirected back to the Routing Point or the ACD Queue. If set to none, the call continues ringing, otherwise providing digits for a valid destination—an ACD Queue or Routing Point on the local switch is recommended.
TListenDisconnect or TListenReconnect	TalkerDN	string	Specifies the party that should no longer be heard by the listener (in case of the ListenDisconnect request), or the party that should be reconnected. If you do not specify a value, the switch defaults to all the parties currently on the call.
TRegisterAddress	DMCCPassword	string	Assigned to the specific device and administered on Avaya TSAPI. If no password is provided, the password is assumed to be the same digits as the associated DN.
TInitiateConference	ConsultUser- Data	string	Used to specify the method of handling user data in a consultation call. Valid values are default, separate, inherited, and joint.
TInitiateTransfer	ConsultUser- Data	string	Used to specify the method of handling user data in a consultation call. Valid values are default, separate, inherited, and joint.
TMuteTransfer	ConsultUser- Data	string	Used to specify the method of handling user data in a consultation call. Valid values are default, separate, inherited, and joint.

**Table 15: Use of the Extensions Attribute (Continued)**

Request/Event	Attribute Extensions		
	Key	Value Type	Value Description
TSendDTMF	ToneDuration	integer	Used to specify the duration of each tone, in .01 second increments. The valid range of values accepted by the switch for this parameter is from 6 to 35 (0.06 to 0.35 seconds). <b>Note:</b> T-Server does not validate the range for the ToneDuration attribute.
	PauseDuration	integer	Used to specify the duration of the pause in between tones, in .01 second increments. The valid range of values accepted by the switch for this parameter is from 4 to 10 (0.04 to 0.10 seconds). <b>Note:</b> T-Server does not validate the range for the PauseDuration attribute.
TSingleStepConference	AlertingOrder	integer	0—Adds a station without alerting the station. 1—Alerts a station before adding. Use of this configuration option specifies whether the calling endpoint should be signaled before the party is added. Use of this key supports the Third-Party Single-Step Conference feature, which allows a station to be conferenced into an existing call.

**Table 15: Use of the Extensions Attribute (Continued)**

Request/Event	Attribute Extensions		
	Key	Value Type	Value Description
TSingleStepConference (continued)	Visibility <sup>b</sup>	integer	0—Listen only (no visibility). 1—Talk and listen (full visibility). Use of this option specifies whether the conferencing party should be muted or an active participant in the call. Use of this key supports the Third-Party Single-Step Conference feature, which allows a station to be conferenced into an existing call.
Events T-Server sends to the parties in a conference call: EventPartyChanged EventPartyAdded EventEstablished	NumOfOrigDNs	integer	The number of DN's on an original call (excluding the party already reported as ThisDN) and all other DN's. <i>n</i> is the number of the DN in question.
	OrigDN- <i>n</i>	string	
Events T-Server sends to the parties in a conference call: EventPartyChanged EventPartyAdded EventEstablished	NumOfConsult-DNs	integer	The number of DN's on a consultation call and all other DN's (is present in the EventPartyAdded event only). <i>n</i> is the number of the DN in question.
	ConsultDN- <i>n</i>	string	
EventAddressInfo with AddressInfoType = AddressInfoNumberOfAgents InQueue/ AvailableAgentsInQueue/ CallsInQueue	AgentsInQueue	integer	The requested number is returned in the AddressInfoStatus attribute and contains all three of the keys.
	AvailableAgents	integer	
	CallsInQueue	integer	
EventAddressInfo with AddressInfoType = AddressInfoCallsQuery	Call- <i>n</i>	integer	The CallID of a call on the DN, where <i>n</i> is the call number, which can be 1, 2, and so on.

**Table 15: Use of the Extensions Attribute (Continued)**

Request/Event	Attribute Extensions		
	Key	Value Type	Value Description
(continued)	Conn- <i>n</i>	string	Text representation of the ConnID for a call, where <i>n</i> is the call number, which can be 1, 2, and so on.
	State- <i>n</i>	integer	The state of ThisDN as of a party in the call, where <i>n</i> is the call number, which can be 1, 2, and so on. (See AddressStatusInfo-Type in the <i>Genesys Events and Models Reference Manual</i> or <i>Voice Platform SDK 8.x .NET (or Java) API Reference</i> for value meanings.)
EventAddressInfo with AddressInfoType = AddressInfoQueueLoginAudit	<DN- <i>n</i> >	<Agent-ID- <i>n</i> >	The AgentID of an agent that is logged on the DN specified by the key. <i>n</i> is the number of the DN in question.
EventAddressInfo with AddressInfoType = AddressInfoNumberOfIdle- Classifiers/ AddressInfo- NumberOfClassifiersInUse	Idle	integer	The number of idle classifiers.
	InUse	integer	The number of classifiers in use.
EventSwitchInfo with SwitchInfoType = SwitchInfoClassifierStat	Idle	integer	The number of idle classifiers.
	InUse	integer	The number of classifiers in use.
EventAddressInfo with AddressInfoType = AddressInfoNumberOfIdle- Trunks/ AddressInfoNumberOfTrunks- InUse	Idle	integer	The number of idle trunks.
	InUse	integer	The number of trunks in use.
EventAddressInfo with AddressInfoType = AddressInfoDatabaseValue	ID	string	The database value associated with the DN in question.

**Table 15: Use of the Extensions Attribute (Continued)**

Request/Event	Attribute Extensions		
	Key	Value Type	Value Description
EventRouteUsed	ErrorCode	integer	The value is a T-Library ErrorCode translated from the switch error code.
EventAddressInfo with AddressInfoType = AddressInfoDNStatus/ AddressInfoQueueStatus	status	integer	0 (idle) or the DN state as of a party in the call.
	AgentStatus	integer	<0 (Unknown) 0 (LoggedOut) 1 (LoggedIn) 2 (Ready) 3 (NotReady) 4 (AfterCallWork) 5 (WalkAway)
EventAddressInfo with AddressInfoType = AddressInfoDNStatus/ AddressInfoQueueStatus	queue- <i>n</i>	string	An ACD Queue where the agent is logged in, where <i>n</i> is the number of the ACD Queue, which can be 1, 2, and so on.
	conn- <i>n</i>	string	Text representation of the ConnID for a call (if applicable), where <i>n</i> is the number of the call, which can be 1, 2, and so on.
	ct-%d	integer	The call type (taken from TCallType) of the call reported by conn-%d (%d is an index).
EventAddressInfo with AddressInfoType = AddressInfoDNStatus/ AddressInfoQueueStatus	mt-%d	integer	The call type taken from TMediaType of the media type information.
	fwd	string	The destination DN. This value is not present if T-Server has no information about the Forward status.

**Table 15: Use of the Extensions Attribute (Continued)**

Request/Event	Attribute Extensions		
	Key	Value Type	Value Description
(continued)	mw1	integer	The Message Waiting Lamp (MWL) statuses: 0—MWL off 1—MWL on This value is not present if T-Server has no information about the MWL status.
EventPartyInfo	party- <i>n</i>	string	The DN of a party, where <i>n</i> is the number of the party, which can be 1, 2, and so on.
EventEstablished EventQueue EventRinging EventRouteRequest	II-Digits	integer	Indicator of the type of telephone from which the call was placed from. (See the Avaya document <i>TSAPI for Communication Manager Programmer Reference</i> for a description of these values.)
EventDialing EventHeld EventRetrieved EventRinging EventEstablished EventReleased EventRouteRequest EventQueued EventAbandoned EventDiverted EventPartyChanged EventPartyDeleted EventPartyAdded EventRouteUsed EventListenDisconnected EventListenReconnected EventDigitsCollected EventDTMFSent EventPartyInfo EventNetworkReached	UCID	binary	UCID (Universal Call ID) is provided by Avaya TSAPI and is included as a binary value (8 bytes) in <code>AttributeExtensions</code> of call-related events.



**Table 15: Use of the Extensions Attribute (Continued)**

Request/Event	Attribute Extensions		
	Key	Value Type	Value Description
EventReleased	CauseCode	integer	The value (a number between 1 and 87) represents the raw cause code provided by the switch link. See “Support for Cause Codes” on <a href="#">page 158</a> .
EventReleased EventAbandoned	ReleasingParty	string	Specifies which party initiated the release of a call: <ul style="list-style-type: none"> <li>• 1 Local—the call is released because <code>AttributeThisSDN</code> in <code>EventReleased</code> requested a release operation</li> <li>• 2 Remote—the call is released because the other party (which is remote to <code>AttributeThisSDN</code>) requested a release operation</li> <li>• 3 Unknown—the call is released, but T-Server cannot determine the release initiator</li> </ul> See “Support for the Call Release Tracking” on <a href="#">page 157</a> .
T-Server Common Part Extensions			
EventServerInfo	sdn-licenses-in-use	integer	Specifies how many SDN licenses are currently in use.
	sdn-licenses-available	integer	Specifies how many SDN licenses are currently available.

- a. If `NO_ANSWER_TIMEOUT` is specified, the action and overflow values will be taken from the `NO_ANSWER_ACTION` and `NO_ANSWER_OVERFLOW` keys. If the action and overflow keys are missing, the default value is used, and not the value from the configuration options on [page 240](#).
- b. T-Server sets the `AttributeOtherDNRole` attribute to `RoleObserver` in the `EventPartyAdded` event for scenarios in which a supervisor silently joins a call by initiating a `SingleStepConference` with the extension `Visibility` set to 0.

## Use of the UserData Attribute

Table 16 indicates how T-Server for Avaya TSAPI supports the use of the UserData attribute.

**Table 16: Use of the UserData Attribute**

Request/Event	UserData Attribute		
	Key	Value Type	Value Description
TMakeCall with UserData	UU_DATA	string or binary	Can be used to pass data between TSAPI applications.
TRouteCall with UserData (present on the call)	UU_DATA	string or binary	Can be used to pass data between TSAPI applications.
TReleaseCall with UserData (present on the call)	UU_DATA	string or binary	Can be used to pass data between TSAPI applications.
TInitiateConference with UserData	UU_DATA	string or binary	Can be used to pass data between TSAPI applications.
TInitiateTransfer with UserData	UU_DATA	string or binary	Can be used to pass data between TSAPI applications.
TMuteTransfer with UserData	UU_DATA	string or binary	Can be used to pass data between TSAPI applications.
TMakePredictiveCall with UserData	UU_DATA	string or binary	Can be used to pass data between TSAPI applications.
EventQueued with UserData	AnswerClass	string	T-Server attaches the UserData pair AnswerClass="AM" when a predictive call is connected after its answering party is recognized as an answering machine.

## T-Server Error Messages

Table 17 presents the complete set of error messages that T-Server distributes in `EventError`.

**Table 17: Error Messages for T-Server for Avaya TSAPI**

T-Server Code	Symbolic Name	Description
40	TERR_NOMORE_LICENSE	No more licenses.
41	TERR_NOT_REGISTERED	The DN client is trying to manipulate, but it has not yet been registered by that client.
42	TERR_RESOURCE_SEIZED	Client application is requesting registration of a DN, but another client has already registered it in <code>Private</code> mode. Only one application can have a DN registered in <code>Private</code> mode at any one time.
43	TERR_IN_SAME_STATE	Object is already in requested state.
50	TERR_UNKNOWN_ERROR	Unspecified error in client's request.
51	TERR_UNSUP_OPER	Client application is requesting a function that is not supported by this T-Server.
52	TERR_INTERNAL	Internal error (contact Genesys Technical Support).
53	TERR_INVALID_ATTR	Invalid attribute value in request.
54	TERR_NO_SWITCH	Client application is requesting a function that requires a switch connection, but the link is not in a connected state.
55	TERR_PROTO_VERS	Invalid authorization request: <code>RequestRegisterClient</code> has an incorrect protocol version (the client was built with a T-Library that is incompatible with T-Server).
56	TERR_INV_CONNID	Client application is requesting a function and specifying an invalid <code>connectionID</code> .

**Table 17: Error Messages for T-Server for Avaya TSAPI (Continued)**

<b>T-Server Code</b>	<b>Symbolic Name</b>	<b>Description</b>
57	TERR_TIMEOUT	Timeout expired.
58	TERR_OUT_OF_SERVICE	Out of Service.
59	TERR_NOT_CONFIGURED	DN is not configured in the Configuration Database.
100	TERR_UNKNOWN	The switch reports an unknown cause.
111	TERR_TOO_MANY_REQ	Too many outstanding requests.
118	TERR_SERV_UNAVAIL	Requested service unavailable.
147	TERR_NO_LINK_RESPND	No link is responding.
182	TERR_TARG_NOT_AGENT	Target set not ACD agent.
258	TERR_OP_NOT_CUR_SUP	Operation is not currently supported.
415	TERR_INV_DEST_DN	Invalid destination DN.
470	TERR_PARTY_NOT_ON_CALL	Party is not currently on call.
545	TERR_INV_ELEM_VAL	Invalid value within a message element.
565	TERR_INVALID_STATE	Invalid state.
851	TERR_INTC_NO_CONNECTION	No connection to the switch. Wait until the connection restores or reboots the link to the switch.
1700	TERR_AGENT_ALREADY_RESERVED	Agent attempt failed because this agent is already reserved by some other server.
<b>Network Attended Transfer/Conference Error Messages</b>		
1901	TERR_NATC_UNEXP_CONSULT	Unexpected request TNetworkConsult.
1902	TERR_NATC_UNEXP_ALTERNATE	Unexpected request TNetworkAlternate.
1903	TERR_NATC_UNEXP_RECONNECT	Unexpected request TNetworkReconnect.
1904	TERR_NATC_UNEXP_TRANSFER	Unexpected request TNetworkTransfer.
1905	TERR_NATC_UNEXP_MERGE	Unexpected request for TNetworkMerge.

**Table 17: Error Messages for T-Server for Avaya TSAPI (Continued)**

<b>T-Server Code</b>	<b>Symbolic Name</b>	<b>Description</b>
1906	TERR_NATC_UNEXP_SST	Unexpected request TNetworkSingleStepTransfer.
1907	TERR_NATC_UNEXP_NPS	Unexpected request TNetworkPrivateService.
1908	TERR_NATC_UNEXP_MSG	Unexpected message.
<b>Operational Errors Messages</b>		
1100	TERR_CSTA_RO_GEN_UNREC_ADPU	Unrecognized APDU.
1101	TERR_CSTA_RO_GEN_MISTYP_ADPU	Mistyped APDU.
1102	TERR_CSTA_RO_GEN_BAD_STR_ADPU	Badly structured APDU.
1110	TERR_CSTA_RO_INV_DUPLICATE	Duplicate invocation (packet missed).
1111	TERR_CSTA_RO_INV_UNREC_OP	Unrecognized operation (packet transmission error).
1112	TERR_CSTA_RO_INV_MISTYP_ARG	Mistyped argument (packet transmission error).
1113	TERR_CSTA_RO_INV_RES_LIMIT	Resource limitation.
1114	TERR_CSTA_RO_INV_INTR_RELEASE	Initiator releasing.
1115	TERR_CSTA_RO_INV_UNREC_LINK_ID	Unrecognized link ID.
1116	TERR_CSTA_RO_INV_LINK_RESP_UNEXP	Link response unexpected.
1117	TERR_CSTA_RO_INV_UNEXP_CHILD_OP	Unexpected child operation.
1120	TERR_CSTA_RO_RES_UNREC_INVOK	Unrecognized invocation.
1121	TERR_CSTA_RO_RES_RESP_UNEXP	Result response unexpected.
1122	TERR_CSTA_RO_RES_MISTYP_RES	Mistyped result.
1130	TERR_CSTA_RO_ERR_UNREC_INVOK	Unrecognized invocation.
1131	TERR_CSTA_RO_ERR_RESP_UNEXP	Error response unexpected.
1132	TERR_CSTA_RO_ERR_UNREC_ERROR	Unrecognized error.
1133	TERR_CSTA_RO_ERR_UNEXP_ERROR	Unexpected error.
1134	TERR_CSTA_RO_ERR_MISTYP_PARAM	Mistyped parameter.

**Table 17: Error Messages for T-Server for Avaya TSAPI (Continued)**

<b>T-Server Code</b>	<b>Symbolic Name</b>	<b>Description</b>
1140	TERR_CSTA_OPER_GENERIC	Generic operation error.
1141	TERR_CSTA_OPER_REQ_INCOMPAT	Request incompatible with object.
1142	TERR_CSTA_OPER_OUT_OF_RANGE	Value out of range.
1143	TERR_CSTA_OPER_OBJ_NOT_KNOWN	Object not known.
1144	TERR_CSTA_OPER_INV_CALLING	Invalid calling device.
1145	TERR_CSTA_OPER_INV_CALLED	Invalid called device.
1146	TERR_CSTA_OPER_INV_FORWARDING	Invalid forwarding device.
1147	TERR_CSTA_OPER_PRIV_VIOL_SPECIFIED	Privilege violation on specified device.
1148	TERR_CSTA_OPER_PRIV_VIOL_CALLED	Privilege violation on called device.
1149	TERR_CSTA_OPER_PRIV_VIOL_CALLING	Privilege violation on calling device.
1150	TERR_CSTA_OPER_INV_CALL_ID	Invalid call identifier.
1151	TERR_CSTA_OPER_INV_DEV_ID	Invalid device identifier.
1152	TERR_CSTA_OPER_INV_CONN_ID	Invalid connection identifier.
1153	TERR_CSTA_OPER_INV_DEST	Invalid destination.
1154	TERR_CSTA_OPER_INV_FEATURE,	Invalid feature.
1155	TERR_CSTA_OPER_INV_ALLOC_STATE	Invalid allocation state.
1156	TERR_CSTA_OPER_INV_XREF_ID	Invalid cross-reference ID.
1157	TERR_CSTA_OPER_INV_OBJ_TYP	Invalid object type.
1158	TERR_CSTA_OPER_SEC_VIOL	Security violation.
<b>State Incompatibility Errors</b>		
1160	TERR_CSTA_INCOMP_GENERIC	Generic state incompatibility error.
1161	TERR_CSTA_INCOMP_INCORR_STATE	Incorrect object state.
1162	TERR_CSTA_INCOMP_INV_CONN_ID	Invalid connection ID.
1163	TERR_CSTA_INCOMP_NO_ACT_CALL	No active call.
1164	TERR_CSTA_INCOMP_NO_HELD_CALL	No held call.

**Table 17: Error Messages for T-Server for Avaya TSAPI (Continued)**

<b>T-Server Code</b>	<b>Symbolic Name</b>	<b>Description</b>
1165	TERR_CSTA_INCOMP_NO_CALL_TO_CLEAR	No call to clear.
1166	TERR_CSTA_INCOMP_NO_CONN_TO_CLEAR	No connection to clear.
1167	TERR_CSTA_INCOMP_NO_CALL_TO_ANSW	No call to answer.
1168	TERR_CSTA_INCOMP_NO_CALL_TO_COMPL	No call to complete.
<b>System Resource Availability Errors</b>		
1170	TERR_CSTA_SYSRES_GENERIC	Generic system resource availability error.
1171	TERR_CSTA_SYSRES_SERV_BUSY	Service busy.
1172	TERR_CSTA_SYSRES_RES_BUSY	Resource busy.
1173	TERR_CSTA_SYSRES_RES_OUT_OF_SERV	Resource out of service.
1174	TERR_CSTA_SYSRES_NET_BUSY	Network busy.
1175	TERR_CSTA_SYSRES_NET_OUT_OF_SERV	Network out of service.
1176	TERR_CSTA_SYSRES_MON_LIMIT_EXC	Overall monitor limit exceeded.
1177	TERR_CSTA_SYSRES_CONF_LIMIT_EXC	Conference member limit exceeded.
<b>Subscribed Resource Availability Errors</b>		
1180	TERR_CSTA_SUBRES_GENERIC	Generic subscribe resource availability error.
1181	TERR_CSTA_SUBRES_MON_LIMIT_EXC	Object monitor limit exceeded.
1182	TERR_CSTA_SUBRES_TRUNK_LIMIT_EXC	External trunk limit exceeded.
1183	TERR_CSTA_SUBRES_OUTST_LIMIT_EXC	Outstanding request limit exceeded.
<b>Performance Management Errors</b>		
1185	TERR_CSTA_PERF_GENERIC	Generic performance management error.
1186	TERR_CSTA_PERF_LIMIT_EXC	Performance limit exceeded.

**Table 17: Error Messages for T-Server for Avaya TSAPI (Continued)**

T-Server Code	Symbolic Name	Description
<b>Security Errors</b>		
1190	TERR_CSTA_SECUR_UNSPECIFIED	Unspecified security error.
1191	TERR_CSTA_SECUR_SEQ_NUM_VIOL	Sequence number violated.
1192	TERR_CSTA_SECUR_TIME_STAMP_VIOL	Time stamp violated.
1193	TERR_CSTA_SECUR_PAC_VIOL	PAC violated.
1194	TERR_CSTA_SECUR_SEAL_VIOL	Seal violated.

- a. In this T-Server, some functionality depends on a specific type of client notification known as a call control. Currently there is a switch-wide limit of one call controller per call. This limitation may impact third-party applications, such as T-Server, and their ability to request certain telephony functions and further limit their access to switch event reporting. Due to this switch-wide limit, there is a race condition among multiple connected adjunct applications that request a call control for the same call—that is, only one of the requesting adjuncts will obtain the call control, and all other applications will receive an error.

If T-Server receives an error in response to a request to obtain a call controller; T-Server generates either an `EventError` or an `EventHardware` error (depending on the context of the request). In both cases, the `ErrorCode` in the event is set to 607 (indicating that the domain or call is being monitored by another adjunct) Under some conditions this error may inhibit T-Server functionality.

Because the activation of a call controller depends on information received over another communication channel on the switch—domain/event notification; it may be helpful to know which associations are active on what links for a specific DN resource. By using Avaya Site Administration (GEDI), it is possible to obtain information about which link a specific DN resource is actively monitoring along with its association. For example, if a T-Client is receiving multiple instances of `EventHardwareError` on a specific DN, using `ListMon` on this specific DN provides information about which links this DN is actively monitoring. This may help to pinpoint the specific CTI applications that are also requesting a call control to the Avaya switch.



# 8


## Supported High-Availability Configurations

The information in this chapter is divided among the following sections:

- [HA Default Configuration, page 185](#)
- [Examples of Warm Standby Configurations, page 186](#)

### HA Default Configuration

In the default configuration to support high-availability, the primary T-Server connects directly to a single link. Additionally, the backup T-Server connects directly to a single link. Each link connection is supported by a separate AES server, to avoid single point of failure, which is inherent in using only one AES server interface (see [Figure 31](#)).

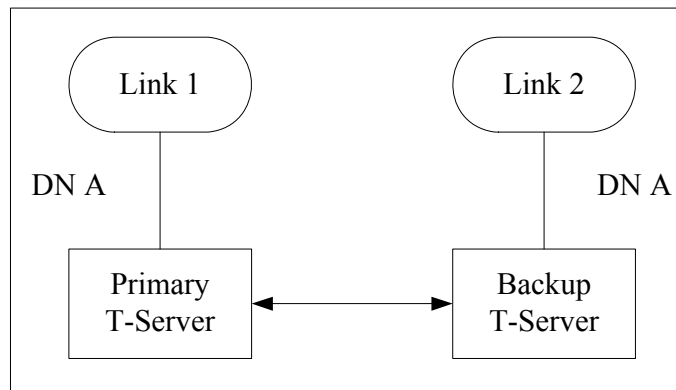

**Figure 31: HA Default Configuration**

To ensure that the primary and backup T-Servers have identical DN state changes, all DNs must be registered on each link by each T-Server. If any T-Server (primary or backup) fails to obtain a domain controller due to some

reason other than Invalid number domain controller, that T-Server provides an LMS warning.

---

**Warning!** For high-availability, any T-Server pair in warm or hot standby must have two AES servers to allow messages to go to both the primary and backup T-Server. Otherwise, messages are split between the primary and backup T-Server.


---

## Examples of Warm Standby Configurations

This section contains examples of the warm-standby configurations for Avaya TSAPI. The examples reflect configurations that are used only with Genesys software and might not represent all possible configurations.


Figures 32 and 33 show two possible warm-standby configurations.

In Figure 32, the primary T-Server (TS1) is on Host1, and it connects to Link1 on Avaya TSAPI; the backup T-Server (TS2) is on Host2, and it connects to Link2 on the switch. Each link on the switch is configured individually to connect to its respective host.

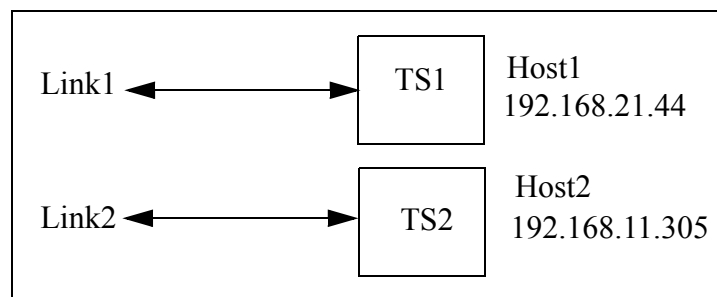

**Figure 32: Each T-Server Connects to One Link on the Switch**

In Figure 33, the primary and the backup T-Servers (TS1, TS2) are located on the same host (Host1). Each T-Server is configured to connect to a link on the switch. Both links are configured for the same host (Host1). In this case, when each T-Server starts, it uses its respective link to connect to the switch.

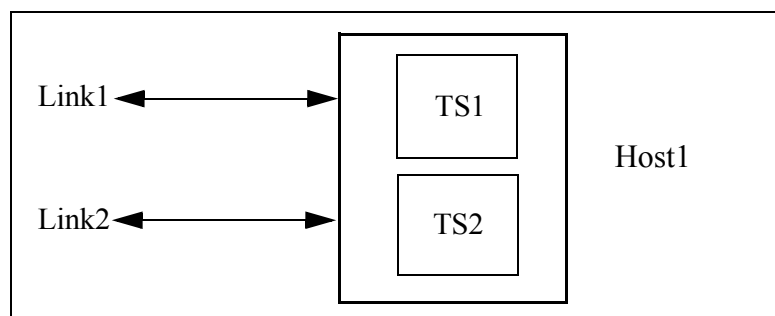

**Figure 33: T-Servers Located on the Same Host**

## 9

## Common Configuration Options

Unless otherwise noted, the common configuration options that this chapter describes are common to all Genesys server applications and applicable to any Framework server component. This chapter includes the following sections:

- [Setting Configuration Options, page 187](#)
- [Mandatory Options, page 188](#)
- [log Section, page 188](#)
- [log-extended Section, page 202](#)
- [log-filter Section, page 204](#)
- [log-filter-data Section, page 204](#)
- [security Section, page 205](#)
- [sml Section, page 205](#)
- [common Section, page 207](#)
- [Changes from 8.0 to 8.1, page 207](#)

---

**Note:** Some server applications also support log options that are unique to them. For descriptions of a particular application's unique log options, refer to the chapter/document about that application.

---

---

## Setting Configuration Options

Unless specified otherwise, set common configuration options in the Options of the Application object, using one of the following navigation paths:

- In Genesys Administrator—Application object > Options tab > Advanced View (Options)
- In Configuration Manager—Application object > Properties dialog box > Options tab

---

**Warning!** Configuration section names, configuration option names, and predefined option values are case-sensitive. Type them in Genesys Administrator or Configuration Manager exactly as they are documented in this chapter.

---

## Mandatory Options

You do not have to configure any common options to start Server applications.

---

## log Section

This section must be called `log`.

### **verbose**

Default Value: `all`

Valid Values:

<code>all</code>	All log events (that is, log events of the Standard, Trace, Interaction, and Debug levels) are generated.
<code>debug</code>	The same as <code>all</code> .
<code>trace</code>	Log events of the Trace level and higher (that is, log events of the Standard, Interaction, and Trace levels) are generated, but log events of the Debug level are not generated.
<code>interaction</code>	Log events of the Interaction level and higher (that is, log events of the Standard and Interaction levels) are generated, but log events of the Trace and Debug levels are not generated.
<code>standard</code>	Log events of the Standard level are generated, but log events of the Interaction, Trace, and Debug levels are not generated.
<code>none</code>	No output is produced.

Changes Take Effect: Immediately

Determines whether a log output is created. If it is, specifies the minimum level of log events generated. The log events levels, starting with the highest priority level, are Standard, Interaction, Trace, and Debug. See also “Log Output Options” on [page 194](#).

---

**Note:** For definitions of the Standard, Interaction, Trace, and Debug log levels, refer to the *Framework 8.0 Management Layer User’s Guide*, *Framework 8.0 Genesys Administrator Help*, or to *Framework 8.0 Solution Control Interface Help*.

---

### **buffering**

Default Value: `true`

**Valid Values:**

`true`                      Enables buffering.  
`false`                     Disables buffering.

**Changes Take Effect:** Immediately

Turns on/off operating system file buffering. The option is applicable only to the `stderr` and `stdout` output (see [page 194](#)). Setting this option to `true` increases the output performance.

---

**Note:** When buffering is enabled, there might be a delay before log messages appear at the console.

---

**segment**

Default Value: `false`

**Valid Values:**

`false`                      No segmentation is allowed.  
`<number> KB` or        Sets the maximum segment size, in kilobytes. The minimum  
`<number>`                   segment size is `100 KB`.  
`<number> MB`            Sets the maximum segment size, in megabytes.  
`<number> hr`             Sets the number of hours for the segment to stay open. The  
                                  minimum number is 1 hour.

**Changes Take Effect:** Immediately

Specifies whether there is a segmentation limit for a log file. If there is, sets the mode of measurement, along with the maximum size. If the current log segment exceeds the size set by this option, the file is closed and a new one is created. This option is ignored if log output is not configured to be sent to a log file.

**expire**

Default Value: `false`

**Valid Values:**

`false`                      No expiration; all generated segments are stored.  
`<number> file` or        Sets the maximum number of log files to store. Specify a  
`<number>`                   number from `1–1000`.  
`<number> day`            Sets the maximum number of days before log files are  
                                  deleted. Specify a number from `1–100`.

**Changes Take Effect:** Immediately

Determines whether log files expire. If they do, sets the measurement for determining when they expire, along with the maximum number of files (segments) or days before the files are removed. This option is ignored if log output is not configured to be sent to a log file.

---

**Note:** If an option's value is set incorrectly—out of the range of valid values— it will be automatically reset to `10`.

---

**keep-startup-file**Default Value: `false`

Valid Values:

<code>false</code>	No startup segment of the log is kept.
<code>true</code>	A startup segment of the log is kept. The size of the segment equals the value of the <code>segment</code> option.
<code>&lt;number&gt; KB</code>	Sets the maximum size, in kilobytes, for a startup segment of the log.
<code>&lt;number&gt; MB</code>	Sets the maximum size, in megabytes, for a startup segment of the log.

Changes Take Effect: After restart

Specifies whether a startup segment of the log, containing the initial T-Server configuration, is to be kept. If it is, this option can be set to `true` or to a specific size. If set to `true`, the size of the initial segment will be equal to the size of the regular log segment defined by the `segment` option. The value of this option will be ignored if segmentation is turned off (that is, if the `segment` option set to `false`).

---

**Note:** This option applies only to T-Servers.

---

**messagefile**

Default Value: As specified by a particular application

Valid Values: `<string>.lms` (message file name)Changes Take Effect: Immediately, if an application cannot find its `*.lms` file at startup

Specifies the file name for application-specific log events. The name must be valid for the operating system on which the application is running. The option value can also contain the absolute path to the application-specific `*.lms` file. Otherwise, an application looks for the file in its working directory.

---

**Warning!** An application that does not find its `*.lms` file at startup cannot generate application-specific log events and send them to Message Server.

---

**message\_format**Default Value: `short`

Valid Values:

<code>short</code>	An application uses compressed headers when writing log records in its log file.
<code>full</code>	An application uses complete headers when writing log records in its log file.

Changes Take Effect: Immediately

Specifies the format of log record headers that an application uses when writing logs in the log file. Using compressed log record headers improves application performance and reduces the log file's size.

With the value set to short:

- A header of the log file or the log file segment contains information about the application (such as the application name, application type, host type, and time zone), whereas single log records within the file or segment omit this information.
- A log message priority is abbreviated to Std, Int, Trc, or Dbg, for Standard, Interaction, Trace, or Debug messages, respectively.
- The message ID does not contain the prefix GCTI or the application type ID.

A log record in the full format looks like this:

```
2002-05-07T18:11:38.196 Standard localhost cfg_dbserver GCTI-00-05060
Application started
```

A log record in the short format looks like this:

```
2002-05-07T18:15:33.952 Std 05060 Application started
```

---

**Note:** Whether the full or short format is used, time is printed in the format specified by the `time_format` option.

---

## time\_convert

Default Value: Local

Valid Values:

local	The time of log record generation is expressed as a local time, based on the time zone and any seasonal adjustments. Time zone information of the application's host computer is used.
utc	The time of log record generation is expressed as Coordinated Universal Time (UTC).

Changes Take Effect: Immediately

Specifies the system in which an application calculates the log record time when generating a log file. The time is converted from the time in seconds since the Epoch (00:00:00 UTC, January 1, 1970).

## time\_format

Default Value: time

Valid Values:

time	The time string is formatted according to the HH:MM:SS.sss (hours, minutes, seconds, and milliseconds) format.
locale	The time string is formatted according to the system's locale.
ISO8601	The date in the time string is formatted according to the ISO 8601 format. Fractional seconds are given in milliseconds.

Changes Take Effect: Immediately

Specifies how to represent, in a log file, the time when an application generates log records.

A log record's time field in the ISO 8601 format looks like this:

2001-07-24T04:58:10.123

### **print-attributes**

Default Value: `false`

Valid Values:

`true` Attaches extended attributes, if any exist, to a log event sent to log output.

`false` Does not attach extended attributes to a log event sent to log output.

Changes Take Effect: Immediately

Specifies whether the application attaches extended attributes, if any exist, to a log event that it sends to log output. Typically, log events of the Interaction log level and Audit-related log events contain extended attributes. Setting this option to `true` enables audit capabilities, but negatively affects performance. Genesys recommends enabling this option for Solution Control Server and Configuration Server when using audit tracking. For other applications, refer to *Genesys 8.0 Combined Log Events Help* to find out whether an application generates Interaction-level and Audit-related log events; if it does, enable the option only when testing new interaction scenarios.

### **check-point**

Default Value: 1

Valid Values: 0–24

Changes Take Effect: Immediately

Specifies, in hours, how often the application generates a check point log event, to divide the log into sections of equal time. By default, the application generates this log event every hour. Setting the option to 0 prevents the generation of check-point events.

### **memory**

Default Value: No default value

Valid Values: `<string>` (memory file name)

Changes Take Effect: Immediately

Specifies the name of the file to which the application regularly prints a snapshot of the memory output, if it is configured to do this (see “Log Output Options” on [page 194](#)). The new snapshot overwrites the previously written data. If the application terminates abnormally, this file will contain the latest



log messages. Memory output is not recommended for processors with a CPU frequency lower than 600 MHz.

---

**Note:** If the file specified as the memory file is located on a network drive, an application does not create a snapshot file (with the extension `*.memory.log`).

---

### memory-storage-size

Default Value: 2 MB

Valid Values:

<number> KB or <number>    The size of the memory output, in kilobytes.  
The minimum value is 128 KB.

<number> MB                    The size of the memory output, in megabytes.  
The maximum value is 64 MB.

Changes Take Effect: When memory output is created

Specifies the buffer size for log output to the memory, if configured. See also “Log Output Options” on [page 194](#).

### spool

Default Value: The application’s working directory

Valid Values: <path>    (the folder, with the full path to it)

Changes Take Effect: Immediately

Specifies the folder, including full path to it, in which an application creates temporary files related to network log output. If you change the option value while the application is running, the change does not affect the currently open network output.

### compatible-output-priority

Default Value: false

Valid Values:

true                    The log of the level specified by “Log Output Options” is sent to the specified output.

false                   The log of the level specified by “Log Output Options” and higher levels is sent to the specified output.

Changes Take Effect: Immediately

Specifies whether the application uses 6.x output logic. For example, you configure the following options in the log section for a 6.x application and for a 7.x application:

```
[log]
```

```
verbose = all
```

```
debug = file1
```

```
standard = file2
```

The log file content of a 6.x application is as follows:

- `file1` contains Debug messages only.
- `file2` contains Standard messages only.

The log file content of a 7.x application is as follows:

- `file1` contains Debug, Trace, Interaction, and Standard messages.
- `file2` contains Standard messages only.

If you set `compatible-output-priority` to `true` in the 7.x application, its log file content will be the same as for the 6.x application.

---

**Warning!** Genesys does not recommend changing the default value of this option unless you have specific reasons to use the 6.x log output logic—that is, to mimic the output priority as implemented in releases 6.x. Setting this option to `true` affects log consistency.

---

## Log Output Options

To configure log outputs, set log level options (`all`, `alarm`, `standard`, `interaction`, `trace`, and/or `debug`) to the desired types of log output (`stdout`, `stderr`, `network`, `memory`, and/or `[filename]`, for log file output).

You can use:

- One log level option to specify different log outputs.
- One log output type for different log levels.
- Several log output types simultaneously, to log events of the same or different log levels.

You must separate the log output types by a comma when you are configuring more than one output for the same log level. See “Examples” on [page 198](#).

---

**Warnings!**

- If you direct log output to a file on the network drive, an application does not create a snapshot log file (with the extension `*.snapshot.log`) in case it terminates abnormally.
- Directing log output to the console (by using the `stdout` or `stderr` settings) can affect application performance. Avoid using these log output settings in a production environment.

---



---

**Note:** The log output options are activated according to the setting of the `verbose` configuration option.

---

### **all**

Default Value: No default value

**Valid Values (log output types):**

<code>stdout</code>	Log events are sent to the Standard output ( <code>stdout</code> ).
<code>stderr</code>	Log events are sent to the Standard error output ( <code>stderr</code> ).
<code>network</code>	Log events are sent to Message Server, which can reside anywhere on the network. Message Server stores the log events in the Log Database.  Setting the <code>all</code> log level option to the <code>network</code> output enables an application to send log events of the <code>Standard</code> , <code>Interaction</code> , and <code>Trace</code> levels to Message Server. <code>Debug</code> -level log events are neither sent to Message Server nor stored in the Log Database.
<code>memory</code>	Log events are sent to the memory output on the local disk. This is the safest output in terms of the application performance.
<code>[filename]</code>	Log events are stored in a file with the specified name. If a path is not specified, the file is created in the application's working directory.

**Changes Take Effect: Immediately**

Specifies the outputs to which an application sends all log events. The log output types must be separated by a comma when more than one output is configured. For example:

```
all = stdout, logfile
```

---

**Note:** To ease the troubleshooting process, consider using unique names for log files that different applications generate.

---

**alarm**

Default Value: No default value

**Valid Values (log output types):**

<code>stdout</code>	Log events are sent to the Standard output ( <code>stdout</code> ).
<code>stderr</code>	Log events are sent to the Standard error output ( <code>stderr</code> ).
<code>network</code>	Log events are sent to Message Server, which resides anywhere on the network, and Message Server stores the log events in the Log Database.
<code>memory</code>	Log events are sent to the memory output on the local disk. This is the safest output in terms of the application performance.
<code>[filename]</code>	Log events are stored in a file with the specified name. If a path is not specified, the file is created in the application's working directory.

**Changes Take Effect: Immediately**

Specifies the outputs to which an application sends the log events of the `Alarm` level. The log output types must be separated by a comma when more than one output is configured. For example:

```
standard = stderr, network
```

**standard**

Default Value: No default value

Valid Values (log output types):

<code>stdout</code>	Log events are sent to the Standard output ( <code>stdout</code> ).
<code>stderr</code>	Log events are sent to the Standard error output ( <code>stderr</code> ).
<code>network</code>	Log events are sent to Message Server, which can reside anywhere on the network. Message Server stores the log events in the Log Database.
<code>memory</code>	Log events are sent to the memory output on the local disk. This is the safest output in terms of the application performance.
<code>[filename]</code>	Log events are stored in a file with the specified name. If a path is not specified, the file is created in the application's working directory.

Changes Take Effect: Immediately

Specifies the outputs to which an application sends the log events of the Standard level. The log output types must be separated by a comma when more than one output is configured. For example:

```
standard = stderr, network
```

**interaction**

Default Value: No default value

Valid Values (log output types):

<code>stdout</code>	Log events are sent to the Standard output ( <code>stdout</code> ).
<code>stderr</code>	Log events are sent to the Standard error output ( <code>stderr</code> ).
<code>network</code>	Log events are sent to Message Server, which can reside anywhere on the network. Message Server stores the log events in the Log Database.
<code>memory</code>	Log events are sent to the memory output on the local disk. This is the safest output in terms of the application performance.
<code>[filename]</code>	Log events are stored in a file with the specified name. If a path is not specified, the file is created in the application's working directory.

Changes Take Effect: Immediately

Specifies the outputs to which an application sends the log events of the Interaction level and higher (that is, log events of the Standard and Interaction levels). The log outputs must be separated by a comma when more than one output is configured. For example:

```
interaction = stderr, network
```

**trace**

Default Value: No default value

**Valid Values (log output types):**

<code>stdout</code>	Log events are sent to the Standard output ( <code>stdout</code> ).
<code>stderr</code>	Log events are sent to the Standard error output ( <code>stderr</code> ).
<code>network</code>	Log events are sent to Message Server, which can reside anywhere on the network. Message Server stores the log events in the Log Database.
<code>memory</code>	Log events are sent to the memory output on the local disk. This is the safest output in terms of the application performance.
<code>[filename]</code>	Log events are stored in a file with the specified name. If a path is not specified, the file is created in the application's working directory.

**Changes Take Effect: Immediately**

Specifies the outputs to which an application sends the log events of the Trace level and higher (that is, log events of the Standard, Interaction, and Trace levels). The log outputs must be separated by a comma when more than one output is configured. For example:

```
trace = stderr, network
```

**debug**

Default Value: No default value

**Valid Values (log output types):**

<code>stdout</code>	Log events are sent to the Standard output ( <code>stdout</code> ).
<code>stderr</code>	Log events are sent to the Standard error output ( <code>stderr</code> ).
<code>memory</code>	Log events are sent to the memory output on the local disk. This is the safest output in terms of the application performance.
<code>[filename]</code>	Log events are stored in a file with the specified name. If a path is not specified, the file is created in the application's working directory.

**Changes Take Effect: Immediately**

Specifies the outputs to which an application sends the log events of the Debug level and higher (that is, log events of the Standard, Interaction, Trace, and Debug levels). The log output types must be separated by a comma when more than one output is configured—for example:

```
debug = stderr, /usr/local/genesys/logfile
```

---

**Note:** Debug-level log events are never sent to Message Server or stored in the Log Database.

---

## Log File Extensions

You can use the following file extensions to identify log files that an application creates for various types of output:

- `*.log`—Assigned to log files when you configure output to a log file. For example, if you set `standard = confservlog` for Configuration Server, it prints log messages into a text file called `confservlog.<time_stamp>.log`.
- `*.qsp`—Assigned to temporary (spool) files when you configure output to the network but the network is temporarily unavailable. For example, if you set `standard = network` for Configuration Server, it prints log messages into a file called `confserv.<time_stamp>.qsp` during the time the network is not available.
- `*.snapshot.log`—Assigned to files that contain the output snapshot when you configure output to a log file. The file contains the last log messages that an application generates before it terminates abnormally. For example, if you set `standard = confservlog` for Configuration Server, it prints the last log message into a file called `confserv.<time_stamp>.snapshot.log` in case of failure.

---

**Note:** Provide `*.snapshot.log` files to Genesys Technical Support when reporting a problem.

---

- `*.memory.log`—Assigned to log files that contain the memory output snapshot when you configure output to memory and redirect the most recent memory output to a file. For example, if you set `standard = memory` and `memory = confserv` for Configuration Server, it prints the latest memory output to a file called `confserv.<time_stamp>.memory.log`.

## Examples

This section presents examples of a log section that you might configure for an application when that application is operating in production mode and in two lab modes, debugging and troubleshooting.

### Production Mode Log Section

```
[log]
verbose = standard
standard = network, logfile
```

With this configuration, an application only generates the log events of the Standard level and sends them to Message Server, and to a file named `logfile`, which the application creates in its working directory. Genesys recommends that you use this or a similar configuration in a production environment.

---

**Warning!** Directing log output to the console (by using the `stdout` or `stderr` settings) can affect application performance. Avoid using these log output settings in a production environment.

---

## Lab Mode Log Section

```
[log]
verbose = all
all = stdout, /usr/local/genesys/logfile
trace = network
```

With this configuration, an application generates log events of the Standard, Interaction, Trace, and Debug levels, and sends them to the standard output and to a file named `logfile`, which the application creates in the `/usr/local/genesys/` directory. In addition, the application sends log events of the Standard, Interaction, and Trace levels to Message Server. Use this configuration to test new interaction scenarios in a lab environment.

## Failure-Troubleshooting Log Section

```
[log]
verbose = all
standard = network
all = memory
memory = logfile
memory-storage-size = 32 MB
```

With this configuration, an application generates log events of the Standard level and sends them to Message Server. It also generates log events of the Standard, Interaction, Trace, and Debug levels, and sends them to the memory output. The most current log is stored to a file named `logfile`, which the application creates in its working directory. Increased memory storage allows an application to save more of the log information generated before a failure.

---

**Note:** If you are running an application on UNIX, and you do not specify any files in which to store the memory output snapshot, a core file that the application produces before terminating contains the most current application log. Provide the application's core file to Genesys Technical Support when reporting a problem.

---

## Debug Log Options

The options in this section enable you to generate Debug logs containing information about specific operations of an application.

**x-conn-debug-open**

Default Value: 0

Valid Values:

- 0 Log records are not generated.
- 1 Log records are generated.

Changes Take Effect: After restart

Generates Debug log records about “open connection” operations of the application.

---

**Warning!** Use this option only when requested by Genesys Technical Support.

---

**x-conn-debug-select**

Default Value: 0

Valid Values:

- 0 Log records are not generated.
- 1 Log records are generated.

Changes Take Effect: After restart

Generates Debug log records about “socket select” operations of the application.

---

**Warning!** Use this option only when requested by Genesys Technical Support.

---

**x-conn-debug-timers**

Default Value: 0

Valid Values:

- 0 Log records are not generated.
- 1 Log records are generated.

Changes Take Effect: After restart

Generates Debug log records about the timer creation and deletion operations of the application.

---

**Warning!** Use this option only when requested by Genesys Technical Support.

---

**x-conn-debug-write**

Default Value: 0

Valid Values:

- 0 Log records are not generated.
- 1 Log records are generated.

Changes Take Effect: After restart



Generates Debug log records about “write” operations of the application.

---

**Warning!** Use this option only when requested by Genesys Technical Support.

---

### **x-conn-debug-security**

Default Value: 0

Valid Values:

0 Log records are not generated.

1 Log records are generated.

Changes Take Effect: After restart

Generates Debug log records about security-related operations, such as Transport Layer Security and security certificates.

---

**Warning!** Use this option only when requested by Genesys Technical Support.

---

### **x-conn-debug-api**

Default Value: 0

Valid Values:

0 Log records are not generated.

1 Log records are generated.

Changes Take Effect: After restart

Generates Debug log records about connection library function calls.

---

**Warning!** Use this option only when requested by Genesys Technical Support.

---

### **x-conn-debug-dns**

Default Value: 0

Valid Values:

0 Log records are not generated.

1 Log records are generated.

Changes Take Effect: After restart

Generates Debug log records about DNS operations.

---

**Warning!** Use this option only when requested by Genesys Technical Support.

---

**x-conn-debug-all**

Default Value: 0

Valid Values:

- 0 Log records are not generated.
- 1 Log records are generated.

Changes Take Effect: After restart

Generates Debug log records about open connection, socket select, timer creation and deletion, write, security-related, and DNS operations, and connection library function calls. This option is the same as enabling or disabling all of the previous x-conn-debug-`<op type>` options.

---

**Warning!** Use this option only when requested by Genesys Technical Support.

---

## log-extended Section

This section must be called log-extended.

**level-reassign-`<eventID>`**Default Value: Default value of log event `<eventID>`

Valid Values:

- alarm The log level of log event `<eventID>` is set to Alarm.
- standard The log level of log event `<eventID>` is set to Standard.
- interaction The log level of log event `<eventID>` is set to Interaction.
- trace The log level of log event `<eventID>` is set to Trace.
- debug The log level of log event `<eventID>` is set to Debug.
- none Log event `<eventID>` is not recorded in a log.

Changes Take Effect: Immediately

Specifies a log level for log event `<eventID>` that is different than its default level, or disables log event `<eventID>` completely. If no value is specified, the log event retains its default level. This option is useful when you want to customize the log level for selected log events.

These options can be deactivated with the option [level-reassign-disable](#).

---

**Warning!** Use caution when making these changes in a production environment.

Depending on the log configuration, changing the log level to a higher priority may cause the log event to be logged more often or to a greater number of outputs. This could affect system performance.

Likewise, changing the log level to a lower priority may cause the log event to be not logged at all, or to be not logged to specific outputs, thereby losing important information. The same applies to any alarms associated with that log event.

---

In addition to the preceding warning, take note of the following:

- Logs can be customized only by release 7.6 or later applications.
- When the log level of a log event is changed to any level except none, it is subject to the other settings in the [log] section at its new level. If set to none, it is not logged and is therefore not subject to any log configuration.
- Using this feature to change the log level of a log changes only its priority; it does not change how that log is treated by the system. For example, increasing the priority of a log to Alarm level does not mean that an alarm will be associated with it.
- Each application in a High Availability (HA) pair can define its own unique set of log customizations, but the two sets are not synchronized with each other. This can result in different log behavior depending on which application is currently in primary mode.
- This feature is not the same as a similar feature in Universal Routing Server (URS) release 7.2 or later. In this Framework feature, the priority of log events are customized. In the URS feature, the priority of debug messages only are customized. Refer to the *Universal Routing Reference Manual* for more information about the URS feature.
- You cannot customize any log event that is not in the unified log record format. Log events of the Alarm, Standard, Interaction, and Trace levels feature the same unified log record format.

### Example

This is an example of using customized log level settings, subject to the following log configuration:

```
[log]
verbose=interaction
all=stderr
interaction=log_file
standard=network
```

Before the log levels of the log are changed:

- Log event 1020, with default level standard, is output to `stderr` and `log_file`, and sent to Message Server.
- Log event 2020, with default level standard, is output to `stderr` and `log_file`, and sent to Message Server.
- Log event 3020, with default level trace, is output to `stderr`.
- Log event 4020, with default level debug, is output to `stderr`.

Extended log configuration section:

```
[log-extended]
level-reassign-1020=none
level-reassign-2020=interaction
level-reassign-3020=interaction
level-reassign-4020=standard
```

After the log levels are changed:

- Log event 1020 is disabled and not logged.
- Log event 2020 is output to `stderr` and `log_file`.
- Log event 3020 is output to `stderr` and `log_file`.
- Log event 4020 is output to `stderr` and `log_file`, and sent to Message Server.

### level-reassign-disable

Default Value: `false`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

When this option is set to `true`, the original (default) log level of all log events in the `[log-extended]` section are restored. This option is useful when you want to use the default levels, but not delete the customization statements.

---

## log-filter Section

The `log-filter` section contains configuration options used to define the default treatment of filtering data in log output. This section contains one configuration option, `default-filter-type`. Refer to the chapter “Hide Selected Data in Logs” in the *Genesys 8.x Security Deployment Guide* for complete information about this option.

---

## log-filter-data Section

The `log-filter-data` section contains configuration options used to define the treatment of filtering data in log output on a key-by-key basis. This section contains one configuration option in the form of `<key name>`. Refer to the

chapter “Hide Selected Data in Logs” in the *Genesys 8.0 Security Deployment Guide* for complete information about this option.

---

## security Section

The `security` section contains configuration options used to specify security elements for your system. In addition to other options that may be required by your application, this section contains the configuration option `disable-rbac`, which is used to enable or disable Role-Based Access Control for an application. Refer to the chapter “Role-Based Access Control” in the *Genesys 8.x Security Deployment Guide* for complete information about this option.

---

## sml Section

This section must be called `sml`.

Options in this section are defined in the Annex of the `Application` object, as follows:

- in Genesys Administrator—`Application` object > `Options` tab > `Advanced View` (Annex)
- in Configuration Manager—`Application` object > `Properties` dialog box > `Annex` tab

---

**Warning!** Use the first three options in this section (`heartbeat-period`, `heartbeat-period-thread-class-<n>`, and `hangup-restart`) with great care, and only with those applications of which support for this functionality has been announced. Failure to use these options properly could result in unexpected behavior, from ignoring the options to an unexpected restart of the application.

---

### heartbeat-period

Default Value: None

Valid Values:

- |                       |   |
|-----------------------|---|
| <code>0</code>        | This method of detecting an unresponsive application is not used by this application. |
| <code>3-604800</code> | Length of timeout, in seconds; equivalent to 3 seconds–7 days.                        |

Changes Take Effect: Immediately

Specifies the maximum amount of time, in seconds, in which heartbeat messages are expected from an application. If Local Control Agent (LCA) does not receive a heartbeat message from the application within this period, it assumes the application is not responding and carries out corrective action.

This option can also be used to specify the maximum heartbeat interval for threads registered with class zero (0). This thread class is reserved for use by the Management Layer only.

If this option is not configured or is set to zero (0), heartbeat detection is not used by this application.

### **heartbeat-period-thread-class-<n>**

Default Value: None

Valid Values:

- 0 Value specified by `heartbeat-period` in application is used.
- 3-604800 Length of timeout, in seconds; equivalent to 3 seconds–7 days.

Changes Take Effect: Immediately

Specifies the maximum amount of time, in seconds, in which heartbeat messages are expected from a thread of class <n> registered by an application. If a heartbeat message from the thread is not received within this period, the thread is assumed to be not responding, and therefore, the application is unable to provide service.

If this option is not configured or is set to zero (0), but the application has registered one or more threads of class <n>, the value specified by the value of `heartbeat-period` for the application will also be applied to these threads.

Refer to application-specific documentation to determine what thread classes, if any, are used.

### **hangup-restart**

Default Value: true

Valid Values: true, false

Changes Take Effect: Immediately

If set to true (the default), specifies that LCA is to restart the unresponsive application immediately, without any further interaction from Solution Control Server.

If set to false, specifies that LCA is only to generate a notification that the application has stopped responding.

### **suspending-wait-timeout**

Default Value: 10

Valid Values: 5-600

Changes Take Effect: Immediately

Specifies a timeout (in seconds) after the Stop Graceful command is issued to an application during which the status of the application should change to `Suspending` if the application supports graceful shutdown. If the status of the application does not change to `Suspending` before the timeout expires, it is assumed that the application does not support graceful shutdown, and it is stopped ungracefully.

Use this option if you are unsure whether the Application supports graceful shutdown.

---

**Note:** Genesys recommends that you do not set this option for any Management Layer component (Configuration Server, Message Server, Solution Control Server, or SNMP Master Agent) or any DB Server. These components by definition do not support graceful shutdown, so this option is not required.

---

---

## common Section

This section must be called `common`.

### **enable-async-dns**

Default Value: `off`

Valid Values:

`off`                      Disables asynchronous processing of DNS requests.  
`on`                        Enables asynchronous processing of DNS requests.

Changes Take Effect: Immediately

Enables the asynchronous processing of DNS requests such as, for example, host-name resolution.

---

**Warnings!** • Use this option only when requested by Genesys Technical Support.  
• Use this option only with T-Servers.

---

### **rebind-delay**

Default Value: `10`

Valid Values: `0–600`

Changes Take Effect: After restart

Specifies the delay, in seconds, between socket-bind operations that are being executed by the server. Use this option if the server has not been able to successfully occupy a configured port.

---

**Warning!** Use this option only when requested by Genesys Technical Support.

---

---

## Changes from 8.0 to 8.1

There are no changes in common configuration options between 8.0 and 8.1 releases.





# 10

## T-Server Common Configuration Options

This chapter describes the configuration options that are generally common to all T-Server types, with some exceptions noted. It contains the following sections:

- [Setting Configuration Options, page 209](#)
- [Mandatory Options, page 210](#)
- [TServer Section, page 210](#)
- [license Section, page 215](#)
- [agent-reservation Section, page 218](#)
- [extrouter Section, page 219](#)
- [backup-sync Section, page 230](#)
- [call-cleanup Section, page 232](#)
- [Translation Rules Section, page 233](#)
- [security Section, page 234](#)
- [Timeout Value Format, page 234](#)
- [Changes from Release 8.0 to 8.1, page 235](#)

T-Server also supports common log options described in Chapter 9, “Common Configuration Options,” on [page 187](#).

---

### Setting Configuration Options

Unless specified otherwise, set T-Server common configuration options in the Options of the Application object, using one of the following navigation paths:

- In Genesys Administrator—Application object > Options tab > Advanced View (Options)
- In Configuration Manager—Application object > Properties dialog box > Options tab

---

# Mandatory Options

Except as noted for certain environments, the configuration of common options is not required for basic T-Server operation.

---

## TServer Section

The TServer section contains the configuration options that are used to support the core features common to all T-Servers.

This section must be called TServer.

### ani-distribution

Default Value: inbound-calls-only

Valid Values: inbound-calls-only, all-calls, suppressed

Changes Take Effect: Immediately

Controls the distribution of the ANI information in TEvent messages. When this option is set to all-calls, the ANI attribute will be reported for all calls for which it is available. When this option is set to suppressed, the ANI attribute will not be reported for any calls. When this option is set to inbound-calls-only, the ANI attribute will be reported for inbound calls only.

### background-processing

Default Value: true

Valid Values: true, false

Changes Take Effect: Immediately

When set to true, T-Server processes all client requests in the background, giving higher priority to the rest of the messages. This ensures that it processes these messages without any significant delay.

With Background Processing functionality enabled, T-Server processes all switch messages immediately and waits until there are no switch messages before processing the message queue associated with T-Server client requests. T-Server reads all connection sockets immediately and places client requests in the input buffer, which prevents T-Server clients from disconnecting because of configured timeouts.

When T-Server processes client requests from the message queue, requests are processed in the order in which T-Server received them.

When set to false, T-Server processes multiple requests from one T-Server client before proceeding to the requests from another T-Server client, and so on.

**background-timeout**

Default Value: 60 msec

Valid Values: See “Timeout Value Format” on [page 234](#).

Changes Take Effect: Immediately

Specifies the time interval that T-Server waits before processing client requests in background mode. You must set the `background-processing` option to `true` in order for this option to take effect.

**check-tenant-profile**

Default Value: `false`

Valid Values: `true`, `false`

Changes Take Effect: For the next connected client

When set to `true`, T-Server only allows a client to register if the client provides the correct name and password of a T-Server Tenant. If the client provides the Tenant name concatenated with a slash (/) and the Tenant password for the Tenant to which T-Server belongs as the value of `AttributeApplicationPassword` in the `TRegisterClient` request, T-Server allows that client to register DNs that are included in the switch configuration in the Configuration Database, but it does not allow the client to register DNs that are *not* included in the switch configuration.

**consult-user-data**

Default Value: `separate`

Valid Values:

<code>separate</code>	Stores user data for original and consultation calls in separate structures. The data attached to the original call is available for review or changes only to the parties of that call. The data attached to the consultation call is available only to the parties of the consultation call.
<code>inherited</code>	Copies user data from an original call to a consultation call when the consultation call is created; thereafter, stores user data separately for the original and the consultation call. Changes to the original call's user data are not available to the parties of the consultation call, and vice versa.
<code>joint</code>	Stores user data for an original call and a consultation call in one structure. The user data structure is associated with the original call, but the parties of both the original and consultation calls can see and make changes to the common user data.

Changes Take Effect: For the next consultation call created

Specifies the method for handling user data in a consultation call.

---

**Note:** A T-Server client can also specify the `consult-user-data` mode in the `Extensions` attribute `ConsultUserData` key for a conference or transfer request. If it is specified, the method of handling user data is based on the value of the `ConsultUserData` key-value pair of the request and takes precedence over the T-Server `consult-user-data` option. If it is not specified in the client request, the value specified in the `consult-user-data` option applies.

---

### customer-id

Default Value: No default value. (A value must be specified for a multi-tenant environment.)

Valid Values: Any character string

Changes Take Effect: Immediately

Identifies the T-Server customer. You must set this option to the name of the tenant that is using this T-Server. You must specify a value for this option if you are working in a multi-tenant environment.

---

**Note:** Do not configure the `customer-id` option for single-tenant environments.

---

### dn-scope

Default Value: `undefined`

Valid Values: `undefined`, `switch`, `office`, `tenant`

Changes Take Effect: Immediately

Related Feature: “Switch Partitioning” on [page 96](#)

Specifies whether DNs associated with the `Switch`, `Switching Office`, or `Tenant` objects will be considered in the T-Server monitoring scope, enabling T-Server to report calls to or from those DNs as internal.

With a value of `tenant`, all DNs associated with the switches that are within the `Tenant` will be in the T-Server monitoring scope. With a value of `office`, all DNs associated with the switches that are within the `Switching Office` will be in the T-Server monitoring scope. With a value of `switch`, all DNs associated with the `Switch` will be in the T-Server monitoring scope.

With a value of `undefined` (the default), pre-8.x T-Server behavior applies and the switch partitioning is not turned on.

---

**Note:** Setting the option to a value of `office` or `tenant`, which requires T-Server to monitor a large set of configuration data, may negatively affect T-Server performance.

---

**log-trace-flags**

Default Value: `+iscc, +cfg$dn, -cfgserv, +passwd, +udata, -devlink, -sw, -req, -callops, -conn, -client`

Valid Values (in any combination):

<code>+/-iscc</code>	Turns on/off the writing of information about Inter Server Call Control (ISCC) transactions.
<code>+/-cfg\$dn</code>	Turns on/off the writing of information about DN configuration.
<code>+/-cfgserv</code>	Turns on/off the writing of messages from Configuration Server.
<code>+/-passwd</code>	Turns on/off the writing of <code>AttributePassword</code> in <code>TEvents</code> .
<code>+/-udata</code>	Turns on/off the writing of attached data.
<code>+/-devlink</code>	Turns on/off the writing of information about the link used to send CTI messages to the switch (for multilink environments).
<code>+/-sw</code>	Reserved by Genesys Engineering.
<code>+/-req</code>	Reserved by Genesys Engineering.
<code>+/-callops</code>	Reserved by Genesys Engineering.
<code>+/-conn</code>	Reserved by Genesys Engineering.
<code>+/-client</code>	Turns on/off the writing of additional information about the client's connection.

Changes Take Effect: Immediately

Specifies—using a space-, comma- or semicolon-separated list—the types of information that are written to the log files.

**management-port**

Default Value: `0`

Valid Values: `0` or any valid TCP/IP port

Changes Take Effect: After T-Server is restarted

Specifies the TCP/IP port that management agents use to communicate with T-Server. If set to `0` (zero), this port is not used.

**merged-user-data**

Default Value: `main-only`

Valid Values:

<code>main-only</code>	T-Server attaches user data from the remaining call only.
<code>merged-only</code>	T-Server attaches user data from the merging call.
<code>merged-over-main</code>	T-Server attaches user data from the remaining and the merging call. In the event of equal keys, T-Server uses data from the merging call.
<code>main-over-merged</code>	T-Server attaches data from the remaining and the merging call. In the event of equal keys, T-Server uses data from the remaining call.

Changes Take Effect: Immediately

Specifies the data that is attached to the resulting call after a call transfer, conference, or merge completion.

---

**Note:** The option setting does not affect the resulting data for merging calls if the `consult-user-data` option is set to `joint`. (See “consult-user-data” on [page 211](#).)

---

### **propagated-call-type**

Default Value: `false`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

Related Feature: “Switch Partitioning” on [page 96](#)

Determines what T-Server reports as the value of the `CallType` attribute in events related to calls that have been synchronized with another site via ISCC, as follows:

- When set to `false`, T-Server reports in events related to calls that have been synchronized with another site via ISCC the same value for the `CallType` attribute as it did in pre-8.0 releases and adds the new `PropagatedCallType` attribute with the value of the `CallType` attribute at the origination site. This provides backward compatibility with existing T-Server clients.
- When set to `true`, T-Server reports in events related to calls that have been synchronized with another site via ISCC the same value for the `CallType` attribute as at the origination site, and adds the new `LocalCallType` attribute with the same value as `CallType` in pre-8.0 releases.

### **server-id**

Default Value: An integer equal to the value `ApplicationDBID` as reported by Configuration Server

Valid Values: Any integer from 0–16383

Changes Take Effect: Immediately

Specifies the `Server ID` that T-Server uses to generate `Connection IDs` and other unique identifiers. In a multi-site environment, you must assign each T-Server a unique `Server ID`, in order to avoid confusion in reporting applications and T-Server behavior.

Configuration of this option is necessary for Framework environments in which there are two or more instances of the Configuration Database.

---

**Note:** If you do not specify a value for this option, T-Server populates it with the `ApplicationDBID` as reported by Configuration Server. Each data object in the Configuration Database is assigned a separate DBID that maintains a unique `Server ID` for each T-Server configured in the database.

---

---

**Warning!** Genesys does not recommend using multiple instances of the Configuration Database.

---

### **user-data-limit**

Default Value: 16000

Valid Values: 0–65535

Changes Take Effect: Immediately

Specifies the maximum size (in bytes) of user data in a packed format.

---

**Note:** When T-Server works in mixed 8.x/7.x/6.x environment, the value of this option must not exceed the default value of 16000 bytes; otherwise, 6.x T-Server clients might fail.

---

---

## **license Section**

The License section contains the configuration options that are used to configure T-Server licenses. They set the upper limit of the seat-related DN licenses (`tserver_sdn`) that T-Server tries to check out from a license file. See “License Checkout” on [page 216](#).

This section must be called `license`.

---

**Notes:**

- T-Server also supports the `license-file` option described in the *Genesys Licensing Guide*.
- The `license` section is not applicable to Network T-Server for DTAG.
- On selected platforms, the limitation of 9999 licenses may no longer apply. Use values greater than 9999 only when instructed by Genesys Technical Support.

---

If you use two or more T-Servers, and they share licenses, you must configure the following options in the `license` section of the T-Servers.

### **num-of-licenses**

Default Value: 0 or `max` (all available licenses)

Valid Values: String `max` or any integer from 0–9999

Changes Take Effect: Immediately

Specifies how many DN licenses T-Server checks out. T-Server treats a value of 0 (zero) the same as it treats `max`—that is, it checks out all available licenses.

The sum of all `num-of-licenses` values for all concurrently deployed T-Servers must not exceed the number of seat-related DN licenses (`tserver_sdn`) in the corresponding license file. The primary and backup

T-Servers share the same licenses, and therefore they need to be counted only once. T-Server checks out the number of licenses indicated by the value for this option, regardless of the number actually in use.

### num-sdn-licenses

Default Value: 0 or max (all DN licenses are seat-related)

Valid Values: String max (equal to the value of num-of-licenses), or any integer from 0–9999

Changes Take Effect: Immediately

Specifies how many seat-related licenses T-Server checks out. A value of 0 (zero) means that T-Server does not grant control of seat-related DNs to any client, and it does not look for seat-related DN licenses at all.

The sum of all num-sdn-licenses values for all concurrently deployed T-Servers must not exceed the number of seat-related DN licenses (tserver\_sdn) in the corresponding license file. The primary and backup T-Servers share the same licenses, and therefore they need to be counted only once. T-Server checks out the number of licenses indicated by the value for this option, regardless of the number actually in use.

- 
- Notes:**
- For Network T-Servers, Genesys recommends setting this option to 0.
  - Be sure to configure in the Configuration Database all the DNs that agents use (Extensions and ACD Positions) and that T-Server should control. For further information, see Chapter 7, “DNs and Agent Logins,” [page 38](#).
- 

## License Checkout

[Table 18](#) shows how to determine the number of seat-related DN licenses that T-Server attempts to check out. See the examples on [page 217](#).

**Table 18: License Checkout Rules**

Options Settings <sup>a</sup>		License Checkout <sup>b</sup>
num-of-licenses	num-sdn-licenses	Seat-related DN licenses
max (or 0)	max	all available
max (or 0)	x	x
max (or 0)	0	0
x	max	x



**Table 18: License Checkout Rules (Continued)**

Options Settings <sup>a</sup>		License Checkout <sup>b</sup>
num-of-licenses	num-sdn-licenses	
x	y	min (y, x)
x	0	0

- In this table, the following conventions are used: x and y - are positive integers; max is the maximum number of licenses that T-Server can check out; min (y, x) is the lesser of the two values defined by y and x, respectively.
- The License Checkout column shows the number of licenses that T-Server attempts to check out. The actual number of licenses will depend on the licenses' availability at the time of checkout, and it is limited to 9999.

## Examples

This section presents examples of option settings in the license section.

### Example 1

If...		Then...
Options Settings	License File Settings	License Checkout
num-of-licenses = max	tserver_sdn = 500	500 seat-related DN's
num-sdn-licenses = max		

### Example 2

If...		Then...
Options Settings	License File Settings	License Checkout
num-of-licenses = 1000	tserver_sdn = 500	500 seat-related DN's
num-sdn-licenses = max		

**Example 3**

If...		Then...
Options Settings	License File Settings	License Checkout
num-of-licenses = 1000	tserver_sdn = 600	400 seat-related DN's
num-sdn-licenses = 400		

**Example 4**

If...		Then...
Options Settings	License File Settings	License Checkout
num-of-licenses = max	tserver_sdn = 5000	1000 seat-related DN's
num-sdn-licenses = 1000		

---

## agent-reservation Section

The `agent-reservation` section contains the configuration options that are used to customize the T-Server Agent Reservation feature. See “Agent Reservation” on [page 28](#) section for details on this feature.

This section must be called `agent-reservation`.

---

**Note:** The Agent Reservation functionality is currently a software-only feature that is used to coordinate multiple client applications. This feature does not apply to multiple direct or ACD-distributed calls.

---

### collect-lower-priority-requests

Default Value: `true`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

Specifies whether an agent reservation request is collected, depending on its priority during the time interval specified by the `request-collection-time` configuration option. When set to `false`, during the `request-collection-time` interval T-Server collects reservation requests of the highest priority only, rejecting newly submitted requests that have a lower priority or rejecting all previously submitted requests if a request with a higher priority arrives. When set to `true` (the default), agent reservation requests are collected as they were in pre-8.x releases.

**reject-subsequent-request**

Default Value: `true`

Valid Values:

- |                    |   |
|--------------------|---|
| <code>true</code>  | T-Server rejects subsequent requests.   |
| <code>false</code> | A subsequent request prolongs the current reservation made by the same client application for the same agent. |

Changes Take Effect: Immediately

Specifies whether T-Server rejects subsequent requests from the same client application, for an agent reservation for the same Agent object that is currently reserved.

---

**Note:** Genesys does not recommend setting this option to `false` in a multi-site environment in which remote locations use the Agent-Reservation feature.

---

**request-collection-time**

Default Value: `100 msec`

Valid Values: See “Timeout Value Format” on [page 234](#).

Changes Take Effect: Immediately

Specifies the interval that agent reservation requests are collected before a reservation is granted. During this interval, agent reservation requests are delayed, in order to balance successful reservations between client applications (for example, Universal Routing Servers).

**reservation-time**

Default Value: `10000 msec`

Valid Values: See “Timeout Value Format” on [page 234](#).

Changes Take Effect: Immediately

Specifies the default interval for which an Agent DN is reserved. During this interval, the agent cannot be reserved again.

---

## extrouter Section

The `extrouter` section contains the configuration options that are used to support multi-site environments with the Inter Server Call Control (ISCC) feature. The configuration options in this section of the document are grouped with related options that support the same functionality, as follows:

- [ISCC Transaction Options, page 221](#)
- [Transfer Connect Service Options, page 225](#)
- [ISCC/COF Options, page 226](#)
- [Event Propagation Options, page 228](#)
- [Number Translation Option, page 229](#)
- [GVP Integration Option, page 230](#)

This configuration section must be called `extrouter`.

For a description of the ways in which T-Server supports multi-site configurations and for an explanation of the configuration possibilities for a multi-site operation, see the “[Multi-Site Support](#)” chapter.

---

**Note:** In a multi-site environment, you must configure the `timeout`, `cast-type`, and `default-dn` options with the same value for both the primary and backup T-Servers. If you do not do this, the value specified for the backup T-Server overrides the value specified for the primary T-Server.

---

### **match-call-once**

Default Value: `true`

Valid Values:

- |                    |  |
|--------------------|--|
| <code>true</code>  | ISCC does not process (match) an inbound call that has already been processed (matched).                                 |
| <code>false</code> | ISCC processes (attempts to match) a call as many times as it arrives at an ISCC resource or multi-site-transfer target. |

Changes Take Effect: Immediately

Specifies how many times ISCC processes an inbound call when it arrives at an ISCC resource. When set to `false`, ISCC processes (attempts to match) the call even if it has already been processed.

---

**Note:** Genesys does not recommend changing the default value of the `match-call-once` option to `false` unless you have specific reasons. Setting this option to `false` may lead to excessive or inconsistent call data updates.

---

### **reconnect-tout**

Default Value: `5 sec`

Valid Values: See “Timeout Value Format” on [page 234](#).

Changes Take Effect: At the next reconnection attempt

Specifies the time interval after which a remote T-Server attempts to connect to this T-Server after an unsuccessful attempt or a lost connection. The number of attempts is unlimited. At startup, T-Server immediately attempts the first connection, without this timeout.

### **report-connid-changes**

Default Value: `false`

Valid Values:

- |                    |  |
|--------------------|--|
| <code>true</code>  | <code>EventPartyChanged</code> is generated.     |
| <code>false</code> | <code>EventPartyChanged</code> is not generated. |

Changes Take Effect: Immediately

Specifies whether the destination T-Server generates `EventPartyChanged` for the incoming call when the resulting `ConnID` attribute is different from the `ConnID` attribute of an instance of the same call at the origination location.

### **use-data-from**

Default Value: `current`

Valid Values:

<code>active</code>	The values of <code>UserData</code> and <code>ConnID</code> attributes are taken from the consultation call.
<code>original</code>	The values of <code>UserData</code> and <code>ConnID</code> attributes are taken from the original call.
<code>active-data-original-call</code>	The value of the <code>UserData</code> attribute is taken from the consultation call and the value of <code>ConnID</code> attribute is taken from the original call.
<code>current</code>	<p>If the value of <code>current</code> is specified, the following occurs:</p> <ul style="list-style-type: none"> <li>• Before the transfer or conference is completed, the <code>UserData</code> and <code>ConnID</code> attributes are taken from the consultation call.</li> <li>• After the transfer or conference is completed, <code>EventPartyChanged</code> is generated, and the <code>UserData</code> and <code>ConnID</code> are taken from the original call.</li> </ul>

Changes Take Effect: Immediately

Specifies the call from which the values for the `UserData` and `ConnID` attributes are taken for a consultation call that is routed or transferred to a remote location.

---

**Note:** For compatibility with the previous T-Server releases, you can use the values `consult`, `main`, and `consult-user-data` for this option. These are aliases for `active`, `original`, and `current`, respectively.

---

## **ISCC Transaction Options**

### **cast-type**

Default Value: `route`, `route-uui`, `reroute`, `direct-callid`, `direct-uui`, `direct-network-callid`, `direct-notoken`, `direct-digits`, `direct-ani`, `dnis-pool`, `pullback`

Valid Values: `route`, `route-uui`, `reroute`, `direct-callid`, `direct-uui`, `direct-network-callid`, `direct-notoken`, `direct-digits`, `direct-ani`, `dnis-pool`, `pullback`

Changes Take Effect: For the next request for the remote service

Specifies—using a space-, comma- or semicolon-separated list—the routing types that can be performed for this T-Server.

The valid values provide for a range of mechanisms that the ISCC feature can support with various T-Servers, in order to pass call data along with calls between locations.

Because switches of different types provide calls with different sets of information parameters, some values might not work with your T-Server. See Table 3 on [page 75](#) for information about supported transaction types by a specific T-Server. The “[Multi-Site Support](#)” chapter also provides detailed descriptions of all transaction types.

---

**Notes:** For compatibility with the previous T-Server releases, you can use the `direct` value for this option. This is an alias for `direct-callid`.

An alias, `route-notoken`, has been added to the `route` value.

---

### default-dn

Default Value: No default value

Valid Values: Any DN

Changes Take Effect: For the next request for the remote service

Specifies the DN to which a call is routed when a Destination DN (`AttributeOtherDN`) is not specified in the client’s request for routing. If neither this option nor the client’s request contains the destination DN, the client receives `EventError`.

---

**Note:** This option is used only for requests with route types `route`, `route-uui`, `direct-callid`, `direct-network-callid`, `direct-uui`, `direct-notoken`, `direct-digits`, and `direct-ani`.

---

### direct-digits-key

Default Value: `CDT_Track_Num`

Valid Values: Any valid key name of a key-value pair from the `UserData` attribute

Changes Take Effect: For the next request for the remote service

Specifies the name of a key from the `UserData` attribute that contains a string of digits that are used as matching criteria for remote service requests with the `direct-digits` routing type.

---

**Note:** For compatibility with the previous T-Server releases, this configuration option has an alias value of `cdt-udata-key`.

---

**dn-for-unexpected-calls**

Default Value: No default value

Valid Values: Any DN

Changes Take Effect: Immediately

Specifies a default DN for unexpected calls arriving on an External Routing Point.

**network-request-timeout**

Default Value: 20 sec

Valid Values: See “Timeout Value Format” on [page 234](#).

Changes Take Effect: For the next network request

For a premise T-Server, this option specifies the time interval that the premise T-Server waits for a response, after relaying a TNetwork<...> request to the Network T-Server. For a Network T-Server, this option specifies the time interval that the Network T-Server waits for a response from an SCP (Service Control Point), after initiating the processing of the request by the SCP.

When the allowed time expires, the T-Server cancels further processing of the request and generates EventError.

**register-attempts**

Default Value: 5

Valid Values: Any positive integer

Changes Take Effect: For the next registration

Specifies the number of attempts that T-Server makes to register a dedicated External Routing Point.

**register-tout**

Default Value: 2 sec

Valid Values: See “Timeout Value Format” on [page 234](#).

Changes Take Effect: For the next registration

Specifies the time interval after which T-Server attempts to register a dedicated External Routing Point. Counting starts when the attempt to register a Routing Point fails.

**request-tout**

Default Value: 20 sec

Valid Values: See “Timeout Value Format” on [page 234](#).

Changes Take Effect: For the next request for remote service

Specifies the time interval that a T-Server at the origination location waits for a notification of routing service availability from the destination location. Counting starts when the T-Server sends a request for remote service to the destination site.

**resource-allocation-mode**Default Value: `circular`

Valid Values:

- `home` T-Server takes an alphabetized (or numerically sequential) list of configured DNs and reserves the first available DN from the top of the list for each new request. For example, if the first DN is not available, the second DN is allocated for a new request. If the first DN is freed by the time the next request comes, the first DN is allocated for this next request.
- `circular` T-Server takes the same list of configured DNs, but reserves a subsequent DN for each subsequent request. For example, when the first request comes, T-Server allocates the first DN; when the second request comes, T-Server allocates the second DN; and so on. T-Server does not reuse the first DN until reaching the end of the DN list.

Changes Take Effect: Immediately

Specifies the manner in which T-Server allocates resources (that is, DNs of the External Routing Point type and Access Resources with the Resource Type set to `dnis`) for multi-site transaction requests.

**resource-load-maximum**Default Value: `0`

Valid Values: Any positive integer

Changes Take Effect: Immediately

Specifies the maximum number of ISCC routing transactions that can be concurrently processed at a single DN of the External Routing Point route type. After a number of outstanding transactions at a particular DN of the External Routing Point type reaches the specified number, T-Server considers the DN not available. Any subsequent request for this DN is queued until the number of outstanding transactions decreases. A value of `0` (zero) means that no limitation is set to the number of concurrent transactions at a single External Routing Point. In addition, the `0` value enables T-Server to perform load balancing of all incoming requests among all available External Routing Points, in order to minimize the load on each DN.

**route-dn**

Default Value: No default value

Valid Values: Any DN

Changes Take Effect: Immediately

Specifies the DN that serves as a Routing Point for the `route` transaction type in the multiple-to-one access mode.



**timeout**

Default Value: 60 sec

Valid Values: See “Timeout Value Format” on [page 234](#).

Changes Take Effect: For the next request for remote service

Specifies the time interval that the destination T-Server waits for a call routed from the origination location. Counting starts when this T-Server notifies the requesting T-Server about routing service availability. The timeout must be long enough to account for possible network delays in call arrival.

**use-implicit-access-numbers**

Default Value: false

Valid Values: true, false

Changes Take Effect: After T-Server is restarted

Determines whether an External Routing Point in which at least one access number is specified is eligible for use as a resource for calls coming from switches for which an access number is not specified in the External Routing Point. If this option is set to false, the External Routing Point is not eligible for use as a resource for calls coming from such switches. If this option is set to true, an implicit access number for the External Routing Point, composed of the switch access code and the DN number of the External Routing Point, will be used.

---

**Note:** If an External Routing Point does not have an access number specified, this option will not affect its use.

---

## Transfer Connect Service Options

**tcs-queue**

Default Value: No default value

Valid Values: Any valid DN number

Changes Take Effect: For the next request for the remote service

Specifies the TCS DN number to which a call, processed by the TCS feature, is dialed after the originating external router obtains an access number. This option applies only if the [tcs-use](#) option is activated.

**tcs-use**

Default Value: never

Valid Values:

never	The TCS feature is not used.
always	The TCS feature is used for every call.
app-defined	In order to use the TCS feature for a multi-site call transfer request, a client application must add a key-value pair with a TC-type key and a nonempty string value to the UserData attribute of the request.

Changes Take Effect: Immediately

Specifies whether the Transfer Connect Service (TCS) feature is used.

---

**Note:** For compatibility with the previous T-Server releases, you can use the value `up-app-depended` for this option. This is an alias for `app-defined`.

---

## ISCC/COF Options

**cof-ci-defer-create**

Default Value: 0

Valid Values: See “Timeout Value Format” on [page 234](#).

Changes Take Effect: Immediately

Specifies the time interval that T-Server waits for call data from the switch before generating a negative response for a call data request from a remote T-Server. If T-Server detects the matching call before this timeout expires, it sends the requested data. This option applies only if the `cof-feature` option is set to true.

**cof-ci-defer-delete**

Default Value: 0

Valid Values: See “Timeout Value Format” on [page 234](#).

Changes Take Effect: Immediately

Specifies the time interval that T-Server waits before deleting call data that might be overflowed. If set to 0, deletion deferring is disabled. This option applies only if the `cof-feature` option is set to true.

**cof-ci-req-tout**

Default Value: 500 msec

Valid Values: See “Timeout Value Format” on [page 234](#).

Changes Take Effect: For the next COF operation

Specifies the time interval during which T-Server will wait for call data requested with respect to a call originated at another site. After T-Server sends the call data request to remote T-Servers, all events related to this call will be

suspended until either the requested call data is received or the specified timeout expires. This option applies only if the `cof-feature` option is set to `true`.

### **cof-ci-wait-all**

Default Value: `false`

Valid Values:

- |                    |  |
|--------------------|--|
| <code>true</code>  | T-Server waits for responses from all T-Servers that might have the requested call data before updating the call data with the latest information. |
| <code>false</code> | T-Server updates the call data with the information received from the first positive response.   |

Changes Take Effect: Immediately

Specifies whether T-Server, after sending a request for matching call data, waits for responses from other T-Servers before updating the call data (such as `CallHistory`, `ConnID`, and `UserData`) for a potentially overflowed call. The waiting period is specified by the `cof-ci-req-tout` and `cof-rci-tout` options. This option applies only if the `cof-feature` option is set to `true`.

### **cof-feature**

Default Value: `false`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

Enables or disables the Inter Server Call Control/Call Overflow (ISCC/COF) feature.

### **cof-rci-tout**

Default Value: `10 sec`

Valid Values: See “Timeout Value Format” on [page 234](#).

Changes Take Effect: For the next COF operation

Specifies the time interval that T-Server waits for call data from other T-Servers’ transactions. Counting starts when `cof-ci-req-tout` expires. This option applies only if the `cof-feature` option is set to `true`.

### **local-node-id**

Default Value: `0`

Valid Values: `0` or any positive integer

Changes Take Effect: Immediately

This option, if enabled, checks all networked calls against the specified `NetworkNodeID` (the identity of the switch to which the call initially arrived). If the `NetworkNodeID` is the same as the value of this option, the request for call information is *not* sent. The default value of `0` disables the functionality of this

option. To establish an appropriate `NetworkNodeID`, specify a value other than the default. This option applies only if the `cof-feature` option is set to `true`.

---

**Note:** This option applies only to T-Server for Nortel Communication Server 2000/2100.

---

### default-network-call-id-matching

Default Value: No default value

Valid Values: See the “T-Server-Specific Configuration Options” chapter for an option description for your T-Server

Changes Take Effect: Immediately

When a value for this option is specified, T-Server uses the `NetworkCallID` attribute for the ISCC/COF call matching.

To activate this feature, the `cof-feature` option must be set to `true`.

---

**Note:** SIP Server and several T-Servers support the `NetworkCallID` attribute for the ISCC/COF call matching in a way that requires setting this option to a specific value. For information about the option value that is specific for your T-Server, see the “T-Server-Specific Configuration Options” chapter of your *T-Server Deployment Guide*.

---

## Event Propagation Options

### compound-dn-representation

Default Value: `true`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

Specifies which format T-Server uses to represent a DN when reporting an `OtherDN` or `ThirdPartyDN` attribute in event propagation messages.

When set to `true`, the `<switch>::DN` (compound) format is used. This option value supports backward compatibility for pre-8.x T-Server ISCC/EPP functionality and is provided for multi-site deployments where the same DNs are configured under several switches.

When set to `false`, the DN (non-compound) format is used. This option value ensures more transparent reporting of `OtherDN` or `ThirdPartyDN` attributes and is recommended for all single-site deployments, as well as for multi-site deployments that do not have the same DNs configured under several switches. This option applies only if the `event-propagation` option is set to `list`.

---

**Note:** Local DNs are always represented in the non-compound (DN) form.

---

**epp-tout**

Default Value: 0

Valid Values: See “Timeout Value Format” on [page 234](#).

Changes Take Effect: Immediately

Specifies the time interval during which T-Server attempts to resolve race conditions that may occur in deployments that use switch partitioning or intelligent trunks. This option applies only if the [event-propagation](#) option is set to `list`.

---

**Note:** If the time interval is not long enough to account for possible network switching delays, T-Server may produce duplicated events, such as events that are propagated by the ISCC and generated locally.

---

**event-propagation**

Default Value: `list`

Valid Values:

- `list` Changes in user data and party events are propagated to remote locations through call distribution topology.
- `off` The feature is disabled. Changes in user data and party events are not propagated to remote locations.

Changes Take Effect: Immediately

Specifies whether the Event Propagation feature is enabled.

## Number Translation Option

**inbound-translator-<n>**

Default Value: No default value

Valid Value: Any valid name

Changes Take Effect: Immediately

Specifies the name of another configuration section as the value for the `inbound-translator` option. For example,

```
inbound-translator-1 = ani-translator
```

where `ani-translator` is the name of the configuration that describes the translation rules for inbound numbers.

## GVP Integration Option

### handle-vsp

Default Value: no

Valid Values:

requests	ISCC will process and adjust requests related to this DN and containing a Location attribute before submitting them to the service provider.
events	ISCC will process and adjust each event received from the service provider in response to a request containing a Location attribute before distributing the event to T-Server clients.
all	ISCC will process and adjust both events and requests.
no	No ISCC processing of such requests and events takes place.

Changes Take Effect: Immediately

Specifies if multi-site Call Data synchronization of virtual calls or simulated call flows is performed by T-Server or is left to an external application (Service Provider) that has registered for a DN with the AddressType attribute set to VSP (Virtual Service Provider).

---

## backup-sync Section

The backup-synchronization section contains the configuration options that are used to support a high-availability (hot standby redundancy type) configuration.

This section must be called backup-sync.

---

**Note:** These options apply only to T-Servers that support the hot standby redundancy type.

---

### addp-remote-timeout

Default Value: 0

Valid Values: Any integer from 0–3600

Changes Take Effect: Immediately

Specifies the time interval that the redundant T-Server waits for a response from this T-Server after sending a polling signal. The default value of 0 (zero) disables the functionality of this option. To establish an appropriate timeout, specify a value other than the default. This option applies only if the [protocol](#) option is set to addp.

**addp-timeout**

Default Value: 0

Valid Values: Any integer from 0–3600

Changes Take Effect: Immediately

Specifies the time interval that this T-Server waits for a response from another T-Server after sending a polling signal. The default value of 0 (zero) disables the functionality of this option. To establish an appropriate timeout, specify a value other than the default. This option applies only if the [protocol](#) option is set to `addp`.

**addp-trace**

Default Value: `off`

Valid Values:

`off`, `false`, `no`      No trace (default).

`local`, `on`, `true`, `yes`      Trace on this T-Server side only.

`remote`      Trace on the redundant T-Server side only.

`full`, `both`      Full trace (on both sides).

Changes Take Effect: Immediately

Specifies whether `addp` messages are traced in a log file, to what level the trace is performed, and in which direction. This option applies only if the [protocol](#) option is set to `addp`.

**protocol**

Default Value: `default`

Valid Values:

`default`      The feature is not active.

`addp`      Activates the Advanced Disconnect Detection Protocol.

Changes Take Effect: When the next connection is established

Specifies the name of the method used to detect connection failures. If you specify the `addp` value, you must also specify a value for the [addp-timeout](#), [addp-remote-timeout](#), and [addp-trace](#) options.

**sync-reconnect-tout**

Default Value: 20 sec

Valid Values: See “Timeout Value Format” on [page 234](#).

Changes Take Effect: Immediately

Specifies the time interval after which the backup T-Server attempts to reconnect to the primary server (for a synchronized link).

---

## call-cleanup Section

The call-cleanup section contains the configuration options that are used to control detection and cleanup of stuck calls in T-Server. For more information on stuck call handling, refer to the “Stuck Call Management” chapter in the *Framework 8.0 Management Layer User’s Guide*.

This section must be called `call-cleanup`.

### cleanup-idle-tout

Default Value: 0

Valid Values: See “Timeout Value Format” on [page 234](#).

Changes Take Effect: Immediately

Specifies the time interval that T-Server waits for a call to be updated from its last update. After this time elapses, if no new events about the call are received, T-Server clears this call as a stuck call, either by querying the switch (if a CTI link provides such capabilities) or by deleting the call information from memory unconditionally. The default value of 0 disables the stuck calls cleanup.

---

**Note:** If the call-cleanup functionality is enabled in T-Server for Avaya Communication Manager, the UCID (Universal Call ID) feature must be enabled on the switch as well. This allows the UCID to be generated and passed to T-Server.

---

### notify-idle-tout

Default Value: 0

Valid Values: See “Timeout Value Format” on [page 234](#).

Changes Take Effect: Immediately

Specifies the time interval that T-Server waits for a call to be updated from its last update. After this time elapses, if no new events about the call are received, T-Server reports this call as a stuck call. The default value of 0 disables the stuck calls notification.

### periodic-check-tout

Default Value: 10 min

Valid Values: See “Timeout Value Format” on [page 234](#).

Changes Take Effect: Immediately

Specifies the time interval for periodic checks for stuck calls. These checks affect both notification and cleanup functionality, and are made by checking the T-Server’s own call information with call information available in the switch. For performance reasons, T-Server does not verify whether the



`notify-idle-tout` or `cleanup-idle-tout` option has expired before performing this check.

---

**Note:** Setting this option to a value of less than a few seconds can affect T-Server performance.

---

## Examples

This section presents examples of option settings in the `call-cleanup` section.

**Example 1** `cleanup-idle-tout = 0`  
`notify-idle-tout = 0`  
`periodic-check-tout = 10`

With these settings, T-Server will not perform any checks for stuck calls.

**Example 2** `cleanup-idle-tout = 0`  
`notify-idle-tout = 5 min`  
`periodic-check-tout = 10 min`

With these settings, T-Server performs checks every 10 minutes and sends notifications about all calls that have been idle for at least 5 minutes.

**Example 3** `cleanup-idle-tout = 20 min`  
`notify-idle-tout = 5 min`  
`periodic-check-tout = 10 min`

With these settings, T-Server performs checks every 10 minutes, sends notifications about all calls that have been idle for at least 5 minutes, and attempts to clean up all calls that have been idle for more than 20 minutes.

---

## Translation Rules Section

The section name is specified by the `inbound-translator-<n>` option. It contains options that define translation rules for inbound numbers.

You can choose any name for this section, provided that it matches the value of the section. Every option in this section corresponds to a rule and must conform to the format described below. You can configure as many rules as necessary to accommodate your business needs.

### **rule-<n>**

Default Value: No default value

Valid Value: Any valid string in the following format:

`in-pattern=<input pattern value>;out-pattern=<output pattern value>`

Changes Take Effect: Immediately

Defines a rule to be applied to an inbound number. The two parts of the option value describe the input and output patterns in the rule. When configuring the

pattern values, follow the syntax defined in “Using ABNF for Rules” on [page 84](#). See “Configuring Number Translation” on [page 91](#) for examples of these rules as well as detailed instructions for creating rules for your installation. For example, a value for this configuration option might look like this:

```
rule-01 = in-pattern=0111#CABBB*ccD; out-pattern=ABD
```

---

## security Section

The `security` section contains the configuration options that are used to configure secure data exchange between T-Servers and other Genesys components. Refer to the *Genesys 8.x Security Deployment Guide* for complete information on the security configuration.

---

## Timeout Value Format

This section of the document describes the values to use for those T-Server common options that set various timeouts. The current format allows you to use fractional values and various time units for timeout settings.

For timeout-related options, you can specify any value that represents a time interval, provided that it is specified in one of the following formats:

```
[[hours:]minutes:]seconds][milliseconds]
```

or

```
[hours hr][minutes min][seconds sec][milliseconds msec]
```

Where a time unit name in *italic* (such as *hours*) is to be replaced by an integer value for this time unit.

Integer values with no measuring units are still supported, for compatibility with previous releases of T-Server. When you do not specify any measuring units, the units of the default value apply. For example, if the default value equals `60 sec`, specifying the value of `30` sets the option to 30 seconds.

### Example 1

The following settings result in a value of 1 second, 250 milliseconds:

```
sync-reconnect-tout = 1.25
```

```
sync-reconnect-tout = 1 sec 250 msec
```

### Example 2

The following settings result in a value of 1 minute, 30 seconds:

```
timeout = 1:30
```

```
timeout = 1 min 30 sec
```

---

## Changes from Release 8.0 to 8.1

[Table 19](#) lists the configuration options that:

- Are new or changed in the 8.1 release of T-Server
- Have been added or changed since the most recent 8.0 release of this document

If a configuration option has been replaced with another that enables the same functionality, the new option name and its location in this chapter are noted.

**Table 19: Option Changes from Release 8.0 to 8.1**

Option Name	Option Values	Type of Change	Details
TServer Section			
background-processing	true, false	See Details	Default value changed to true. See the option description on <a href="#">page 210</a> .



# 11

## T-Server-Specific Configuration Options

This chapter describes the configuration options that are unique to T-Server for Avaya TSAPI. It includes the following sections:

- [Application-Level Options, page 237](#)
- [DN-Level Options, page 260](#)
- [Changes from Release 8.0 to 8.1, page 262](#)

To establish a link connection, configure the link options that apply to the connection protocol that is used in your environment (for example, TCP/IP).

The options that are common to all T-Servers are described in Chapter 9, “Common Configuration Options,” on [page 187](#) and Chapter 10, “T-Server Common Configuration Options,” on [page 209](#).

---

### Application-Level Options

Unless specified otherwise, set T-Server configuration options in the `Options` of the `Application` object, using one of the following navigation paths:

- In Genesys Administrator—`Application` object > `Options` tab > `Advanced View (Options)`
- In Configuration Manager—`Application` object > `Properties` dialog box > `Options` tab

For ease of reference, the options have been arranged in alphabetical order within their corresponding sections:

- [Mandatory Options, page 238](#)
- [TServer Section, page 238](#)
- [cause-to-callstate-map Section, page 254](#)
- [query-agent-state Section, page 255](#)
- [tsapi-configuration Section, page 258](#)

- [extrouter Section, page 259](#)
- [CTI-Link Section for DMCC, page 259](#)

## Mandatory Options

**Table 20** table lists the options that you must configure for basic T-Server operation. All other options in this chapter are configured to enable T-Server to support other features.

To establish a link connection, simply configure the link options that apply to the connection protocol that is used in your environment.

**Table 20: Mandatory Options**

Option Name	Default Value	Details
<b>T-Server Section</b>		
password	No default value	Specifies the password of the user who is requesting the TSAPI service. See the description on <a href="#">page 261</a> .
tsapi-server-id	No default value	Specifies the TSAPI service ID. See the description on <a href="#">page 250</a> .
user-login	No default value	Specifies the login ID of the user who is requesting the TSAPI service. See the description on <a href="#">page 250</a> .

## TServer Section

This section must be called TServer.

### **after-call-fac**

Default Value: No default value

Valid Values: Any valid FAC number

Changes Take Effect: Immediately

Causes T-Server to invoke the AfterCallWork work mode when the agent presses the corresponding button on the handset.

A corresponding dialable number on the PBX (typically an announcement extension) must exist and must not be used for any other purpose than for the following configuration options: `after-call-fac`, `auto-in-fac`, `aux-work-fac`, and `manual-in-fac`.

When T-Server sees a call initiated to one of the dialable numbers from a DN that is logged in, it drops the call, and then makes a CTI request to change the state of the initiating station as appropriate.

For example—if you set `auto-in-fac` to a value of `3000`, and the agent station is `4000`, and if T-Server sees a call initiated from `4000` to `3000`, and `4000` is logged in, T-Server sends a CTI request to the link to drop the call, and then a subsequent request to change the agent state to Auto-In. Assuming that the requests are all successful, T-Server also sends appropriate TEvents.

### **agent-no-answer-action**

Default Value: none

Valid Values: none, notready, walkaway

Changes Take Effect: Immediately

Related Feature: “Support for Agent No Answer Supervision” on [page 160](#)

Specifies the agent state to which T-Server is set after the time period for the `agent-no-answer-timeout` option has expired. If the value of this configuration option is set to none, the agent will remain in its current state.

- 
- Notes:**
- The walkaway value is identical to the NotReady value unless a non-ACD (soft agents) setup is utilized.
  - The walkaway value is a special NotReady work mode that is applicable for soft agents only. Otherwise the NotReady work mode will be AuxWork.
- 

### **agent-no-answer-overflow**

Default Value: none

Valid Values:

none	The call will remain ringing on the agent phone.
recall	The call will be redirected back to the Routing Point or the ACD Queue that delivered the call to the agent.
Any destination digits	A valid destination DN must be provided (an ACD Queue or Routing Point on the local switch is recommended).

Changes Take Effect: Immediately

Related Feature: “Support for Agent No Answer Supervision” on [page 160](#)

Redirects the ringing call to the destination described by this option after the time period for the `agent-no-answer-timeout` option has expired, T-Server.

**agent-no-answer-timeout**

Default Value: 0

Valid Values: 0–600

Changes Take Effect: Immediately

Related Feature: “Support for Agent No Answer Supervision” on [page 160](#)

Performs the actions that are described by the [agent-no-answer-action](#) configuration option, and then redirects the call to the destination that is described in the [agent-no-answer-overflow](#) configuration option, after a call that was distributed from an ACD Queue or a Routing Point rings for the duration of this timeout period (in seconds). The default value of 0 (zero) disables the functionality of this option.

**auto-in-fac**

Default Value: No default value

Valid Values: Any valid FAC number

Changes Take Effect: Immediately

Causes T-Server to invoke the AutoIn work mode when the agent presses the corresponding button on the handset. (See “after-call-fac” on [page 238](#) for more information).

**aux-work-fac**

Default Value: No default value

Valid Values: Any valid FAC number

Changes Take Effect: Immediately

Causes T-Server to invoke the AuxWork work mode when the agent presses corresponding button on the handset. (See “after-call-fac” on [page 238](#) for more information).

**call-delete-delay-msec**

Default Value: 7000

Valid Values: Any positive integer

Changes Take Effect: For a new period of time

Specifies the length of time (in milliseconds) that T-Server preserves call information (such as attached data) after all monitored parties have been dropped from the call. This feature is useful when calls are transferred from one monitored number to another through nonmonitored queues or VDNs.



**create-addr-on-register**Default Value: `true`Valid Values: `true`, `false`

Changes Take Effect: Immediately

Registers and sends requests for DNs that do not have an entry in Configuration Manager. If the value of this configuration option is set to `true`, clients can register and send requests for DNs that do not have an entry in Configuration Manager. If the value of this configuration option is set to `false`, clients that register for DNs not in Configuration Manager will return the error: DN is not configured in CME.

**delay-logout-report**Default Value: `false`Valid Values: `true`, `false`

Changes Take Effect: Immediately

Delays the agent logout notification from the switch. If the value of this configuration option is set to `true`, T-Server waits for 250 milliseconds after it receives an agent logout notification from the switch before it raises the `EventAgentLogout` event. If the agent logs back in before this 250 milliseconds delay expires, the `EventAgentLogout` notification is never sent and the agent remains logged-in.

This option is designed to allow an agent's skills to be redefined by the switch, which generates a fast logout/login sequence, without Stat Server reporting the momentary agent logout.

**disable-digits-collection**Default Value: `true`

Valid Values:

- |                    |  |
|--------------------|--|
| <code>true</code>  | Enables routing to an internal call if the Digits Collection operation fails. You can also specify Digits Collection for each individual call. |
| <code>false</code> | Disables this feature.   |

Changes Take Effect: Immediately

Specifies whether T-Server enables the collection of digits (Digits Collection) after receiving a `TRouteCall` request. This option does not affect any previously collected digits—for example, those that are sent in the `EventRouteRequest` event.

For internal calls, T-Server automatically disables digit collection, but it can erroneously identify a call as inbound if the call arrives from a PBX number that is not registered in the Configuration Layer.

**log-trace-flags (specific to this T-Server)**

Default Value: `-empty_ie, -qass, -tsapipoll, -tsapierror`

Valid Values (in any combination):

<code>+/-empty_ie</code>	Turns on or off the writing of default information inside TSAPI log messages.
<code>+/-qass</code>	Turns on or off the writing of information about the synchronization queries to and from the link.
<code>+/-tsapipoll</code>	Turns logging on or off before and after polling the TSAPI library for events.
<code>+/-tsapierror</code>	Turns logging on or off for TSAPI return errors after polling or sending requests.

These are specific values for this T-Server, in addition to the other values of this option. For more information, see Chapter 10, “log-trace-flags,” on [page 213](#).

**manual-in-fac**

Default Value: No default value

Valid Values: Any valid FAC number

Changes Take Effect: Immediately

Causes T-Server to invoke the `ManualIn` work mode when the agent presses the corresponding button on the handset. (See “after-call-fac” on [page 238](#) for more information.)

**max-attempts-to-register**

Default Value: 10

Valid Values: Any positive integer

Changes Take Effect: Immediately

Related Feature: “Support for Real-Time Agent State Using Device, Media and Call Control API” on [page 155](#)

Determines how many times T-Server attempts to re-register a DN after a failed initial registration attempt.

---

**Note:** DMCC-enabled DNs are registered over the DMCC link. For any DN that fails registration, a retry attempt using the `max-attempts-to-register` configuration option is made.

---

**merge-consult-data**Default Value: `false`

Valid Values:

<code>false</code>	T-Server attaches data from the original call only.
<code>orig-prio</code>	T-Server attaches data from the original call and the consultation call. In the case of equal keys, T-Server uses data from the original call.
<code>consult-prio</code>	T-Server attaches data from the original call and the consultation call. In the case of equal keys, T-Server uses data from the consultation call.

Changes Take Effect: Immediately

Specifies the data to attach to the resulting call upon Transfer/Conference completion.

- 
- Notes:**
- T-Server ignores this option if you set the T-Server common option `consult-user-data` to `joint` (see [page 211](#)).
  - This option is an alias of the `merged-user-data` option (see the option description on [page 213](#)). For compatibility with the previous releases, you can use the values `false`, `orig-prio`, and `consult-prio` for this option. These are aliases for `main-only`, `main-over-merged`, and `merged-over-main`, respectively.
- 

**msec-wait-for-ack**Default Value: `12000`Valid Values: Any integer in the range `1000–100000`

Changes Take Effect: For T-Server client requests that are received after the option's value is changed

Specifies the interval (in milliseconds) T-Server waits for an acknowledgment before reporting an error to the client.

**out-of-service-retry-interval**Default Value: `900,000` (15 minutes)

Valid Values: Any positive integer

Changes Take Effect: At the beginning of the next time interval

Specifies the polling interval (in milliseconds) after which T-Server will re-attempt to register out-of-service DNs after the initial registration fails. If the value of this configuration option is set to `0`, T-Server will not re-attempt to register out-of-service DNs. If an out-of-service DN is successfully registered after this interval, an `EventBackInService` message is sent for the DN and it enters the `back-in-service` (idle) state.

**predict-agent-work-mode**

Default Value: true

Valid Values: true, false

Changes Take Effect: Immediately

Sends an `EventAgentNotReady` event when the switch changes the agent's work mode to `NotReady` without a request from T-Server. It applies to the following scenarios:

- If an agent in `AgentManualIn` work mode receives and releases an ACD call, the switch changes the agent work mode to `AgentAfterCallWork`.
- If an agent in `AgentManualIn` (or `AgentAutoIn`) work mode does not answer the ACD call, and the call is redirected, the switch changes the agent work mode to `AgentAuxWork`.
- If the `TimedAfterCallWork` (TACW) functionality is applied to an ACD call (that is, if a call is delivered through a VDN or an ACD Split with TACW configured), and an agent in `AgentAutoIn` mode receives and releases this call, the switch changes the agent work mode to `AgentAfterCallWork` for the specified timeout.

---

**Note:** When you are using the TACW functionality, you must set the `predict-agent-work-mode` option to true.

---

**query-agent-work-mode**

Default Value: on-restart

Valid Values:

- `on-restart` T-Server requests the agent state every time connection to the link is re-established. T-Server generates `EventAgentReady/EventNotReady` if it finds that the work mode changed after the last event was sent.
- `on-release` T-Server requests the agent state every time a call is released on the agent's phone. T-Server generates `EventAgentReady/EventNotReady` if it finds that the work mode changed after the last event was sent. This option includes queries on `on-restart`.
- `on-timer` T-Server queries agent states for all properly configured agents who are logged in but who are not on calls. T-Server polls a given agent state at a regular interval (in seconds) while the agent is logged in but not on a call. The default is 3 seconds.

To override the value `on-timer` for a specific DN, set the option `query-on-timer` in the TServer section on the Annex tab of the DN Properties dialog box. If the value of this configuration option is set to `false`, T-Server does not issue agent state queries to the affected DN. If the value of this configuration option is set to `true`, T-Server issues agent state queries to the affected DN. (DNs such as VTO ports or supervisors might not need to be queried, and this can preserve bandwidth resources). This option includes queries on `on-release` and on `on-restart`.

Changes Take Effect: Immediately

Specifies when T-Server requests the agent state from the switch.

---

**Note:** When you are using the DMCC functionality, you must set the `query-agent-work-mode` configuration option to `on-restart`, or `on-release=2`.

---

### releasing-party-report

Default Value: `false`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

Related Feature: “Support for the Call Release Tracking” on [page 157](#)

Specifies whether T-Server reports the `ReleasingParty` key in the `AttributeExtensions` of the `EventReleased` and `EventAbandoned` messages to indicate which party initiated the call release. Additionally, this configuration option specifies whether T-Server reports the `CtrlParty` attribute in the `EventCallPartyDeleted` and `EventCallDeleted` messages to indicate which party initiated the call release (when call monitoring is enabled in T-Server). This option can be configured only in the `TServer` section of the T-Server `Application` object. If the value of this configuration option is set to `true`, the value assigned to the `CtrlParty` attribute will contain the DN of the party that initiated the release, and the `ReleasingParty` key will contain one of the following values:

- 1 `Local`—the call is released because the `ThisDN` attribute in the `EventReleased` message requested a release operation
- 2 `Remote`—the call is released because the other party (which is remote to the `ThisDN` attribute) in the `EventReleased` or `EventAbandoned` message requested a release operation
- 3 `Unknown`—the call is released, but T-Server cannot determine the release initiator

If the value of this configuration option is set to `false`, the `ReleasingParty` key and `AttributeCtrlParty` reporting are disabled.

---

**Note:** The `ReleasingParty` key is reported in the `EventReleased` and `EventAbandoned` messages when the `CallState` attribute equals a value of 0 (zero)—`CallStateOK`.

---

**route-failure-alarm-high-wm**

Default Value: 10

Valid Values: 0-100000

Changes Take Effect: Immediately

Related Feature: “Support for Notification of Failed Routing Attempts” on [page 156](#)

Defines the high water mark, which must be exceeded, in order for the alarm on route failure message to be triggered within the assigned period.

**route-failure-alarm-low-wm**

Default Value: 1

Valid Values: 1-100000

Changes Take Effect: Immediately

Related Feature: “Support for Notification of Failed Routing Attempts” on [page 156](#)

Defines the low water mark, which must not be exceeded while under the alarm condition, in order for the alarm on route failure alarm to be cleared, within the assigned period.

**route-failure-alarm-period**

Default Value: 0

Valid Values: 0-100000

Changes Take Effect: Immediately

Related Feature: “Support for Notification of Failed Routing Attempts” on [page 156](#)

Defines the interval in seconds during which the number of failed route requests are totaled, in order to determine a possible route alarm based on the above water marks. The default value of 0 (zero) disables the feature.

**route-thru-queue**

Default Value: false

Valid Values: true, false

Changes Take Effect: Immediately

Related Feature: “Support for Notification of Failed Routing Attempts” on [page 156](#)

If the value of this configuration option is set to true, T-Server uses the DirectAgent option in the RouteSelect request that it sends to the switch when T-Server routes a call to an agent in the Ready state (either AutoIn or ManualIn). This means the call is treated as an ACD call (that is, the switch changes the agent work mode from ManualIn to AfterCallWork on release).

**second-call-as-consult**Default Value: `false`Valid Values: `true`, `false`

Changes Take Effect: Immediately

Treats a second call on an extension as a consultation call for the call on hold. If the value of this configuration option is set to `true`, and the agent at an extension on a pre-existing call manually initiates a consultation call, T-Server treats this second call as a consultation call for the call on hold.

This option is extended to allow for configuration, on the Annex tab of the DN Properties dialog box in the TServer section. This extension to configuration serves to override the TServer option `second-call-as-consult`, if present, on a DN basis. For more information, see the DN-level option “predict-agent-work-mode” on [page 244](#) and “Configuring the TimedAfterCallWork (TACW) Option” on [page 135](#) for more details.

---

**Note:** This configuration option works only for non-CTI-initiated calls.

---

**send-tcs-dtmf**Default Value: `never`

Valid Values:

- |                     |   |
|---------------------|---|
| <code>never</code>  | T-Server does not send a DTMF tone. The IVR port should be used to answer TCS (Transfer Connect Signaling) calls and output DTMF tones. |
| <code>answer</code> | T-Server automatically sends a DTMF tone, in the same way that it does for <code>RouteTypeOverrideDNIS</code> .                         |

Changes Take Effect: Immediately

Related Feature: “Support for ISDN Network Redirection” on [page 159](#)

Specifies how T-Server sends a DTMF tone.

**set-call-type-on-dialing**Default Value: `false`

Valid Values:

- |                    |  |
|--------------------|--|
| <code>true</code>  | T-Server assigns a <code>CallType</code> attribute based on a dialed number that T-Server compares to the telephony configuration.   |
| <code>false</code> | T-Server assigns a <code>CallType</code> attribute if the <code>EventDialing</code> message is <code>0</code> (unknown). After that, T-Server assigns a <code>CallType</code> attribute based on a connected number. |

Changes Take Effect: Immediately

Specifies whether T-Server determines a `CallType` attribute in the `EventDialing` message.

**simulated-heartbeat-enabled**

Default Values:

`true` For T-Servers built with a TSAPI library version earlier than 4.1.  
`false` For T-Servers built with a TSAPI library version 4.1 or later.

Valid Values: `true`, `false`

Changes Take Effect: Immediately

Enables a simulated heartbeat polling of a TSAPI link. T-Server queries the date and time of a TSAPI link after an elapsed time interval of inactivity on the TSAPI link. See the [simulated-heartbeat-interval](#) option for more details.

**simulated-heartbeat-interval**

Default Value: 20

Valid Values: 5–60

Changes Take Effect: Immediately

Specifies a time interval in seconds that T-Server waits for messages from the TSAPI link before sending a simulated heartbeat message to the link by querying the date and time of the TSAPI link. If no messages are received within three consecutive heartbeat intervals, T-Server assumes that a network failure has occurred, and closes and reopens the connection to the link.

**soft-login-support**

Default Value: `false`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

Related Feature: “Support for Emulated Agents” on [page 159](#)

Turns on or off the Emulated Agent States (also known as the Soft Agent) feature. If the value of this configuration option is set to `true`, T-Server processes all agent-related feature requests (`TAgentLogin`, `TAgentLogout`, `TAgentSetReady`, and `TAgentNotReady`) internally, without interacting with the CTI link. T-Server accepts all client requests, provided that they do not contradict the Agent-State diagram. See the *Genesys Events and Models Reference Manual* and the *Voice Platform SDK 8.x .NET (or Java) API Reference* for more information.

The following conditions must be met:

- AgentID must be configured in the Configuration Layer (the `Agent Login` object)
- Only one login with any given AgentID is allowed at any time.
- Only one agent login is allowed on the DN.
- If the password is configured in the Configuration Layer, it must be supplied in the `TAgentLogin` request (otherwise the request fails).



- The work mode is not used in TAgentSetReady, but T-Server supports all NotReady substates that are shown on the Agent-State diagram.

---

**Note:** The T-Server Common Part implements the Emulated Agent States feature. When it is enabled, T-Server processes agent-related CTI messages, but it does not distribute corresponding agent-related events when an agent logs in or out manually using a phone set. To avoid desynchronization between the switch and the reporting application, agents should not log in or out manually (a so-called “hard” login) when the `soft-login-support` configuration option is enabled.

---

### soft-wrap-up-time

Default Value: 0

Valid Values: See “Timeout Value Format” on [page 234](#).

Changes Take Effect: Immediately

Sets the default wrap-up time for the Soft Agent feature (you can also specify a wrap-up time for each agent login in the Agent Login Properties dialog box when configuring the Person for particular agent under the Agent Info tab); however, it does not affect the state of the agents logged in on the PBX. If the wrap-up time is set to a non-zero value, T-Server emulates the AfterCallWork state after each call that was released when the agent was in the Ready state.

---

**Note:** You must set the value of the `soft-login-support` configuration option to true to use the `soft-wrap-up-time` configuration option.

---

### tsapi-heartbeat-interval

Default Value: 20

Valid Values: 5–60

Changes Take Effect: Immediately

Defines the time interval (in seconds) that is allowed by the TSAPI service for inactivity on the connection between T-Server and the TSAPI service before sending an internal heartbeat message to the TSAPI library of the client. If the TSAPI client library determines that it has not received events for two heartbeat intervals, it assumes that a network failure has occurred, and closes the ACS stream. T-Server then distributes the EventLinkDisconnected event and attempts to reopen the link.

---

**Note:** This option is available only for T-Servers built with a TSAPI library version 4.1 or later.

---

**tsapi-server-id**

Default Value: Mandatory field. No default value.

Valid Values: Any valid string

Changes Take Effect: After a link restart

Specifies the TSAPI service ID.

---

**Note:** An example of a TSAPI service ID is AVAYA#S8720#CSTA#S8700-AES-1.

---

**update-button-info**

Default Value: `false`

Valid Values: `true`, `false`

Changes Take Effect: After deleting the option

Related Features: “Support for Real-Time Agent State Using Device, Media and Call Control API” on [page 155](#)

Forces queries on all DMCC-enabled DNs for button information. The switch does not inform T-Server of any changes in the button states on phone sets. To get around this, T-Server must obtain this information by querying the DNs. To trigger these queries, the value of this option must be toggled from `false` to `true`. The queries are done only once per toggle.

**use-pending-work-mode**

Default Value: `false`

Valid Values: `true`, `false`

Changes Take Effect: Immediately

Related Features: “Support for Real-Time Agent State Using Device, Media and Call Control API” on [page 155](#)

Requests a pending work mode change as opposed to a regular work mode change. If the value for this configuration option is set to `true`, T-Server requests a pending work mode change, for `TAgentReady` and `TAgentNotReady` requests, as opposed to a regular work mode change. This functionality potentially allows the switch to perform pending work mode state changes while an agent is on a call.

---

**Note:** Confirm that the switch version that is used in your environment supports pending work mode functionality. Contact your switch vendor for information that is related to supported functionality

---

**user-login**

Default Value: Mandatory field. No default value.

Valid Values: Any valid string

Changes Take Effect: After a link restart

Specifies the login ID of the user who is requesting the TSAPI service.

## Predictive Dialing Options

These options support Predictive Dialing functionality.

### num-ring-no-answer

Default Value: 5

Valid Values: Any positive integer from 2–15

Changes Take Effect: Immediately

Specifies the number of times that the switch lets a phone ring before detecting a No Answer timeout. This feature is designed for use during predictive calling campaigns. You can specify also the number of rings for each call.

If the `Timeout` attribute is passed in the `MakePredictiveCall` message to T-Server, the value of this attribute is used to define the No Answer timeout instead of the T-Server's own settings.

---

**Note:** This configuration option provides compatibility with 3.x versions only. Use this option if you have not specified a value for the `ring-timeout` configuration option.

---

### ring-back-tout

Default Value: 6 (the length of the ringback cycle in the United States)

Valid Values: Any integer except 0

Changes Take Effect: Immediately

Used by predictive dialing to determine the number of rings to a destination number before abandoning the call, where `number of rings = ring-timeout/ring-back-tout`.

---

**Note:** You must use this option if you are also using the `ring-timeout` option.

---

### ring-timeout

Default Value: 0

Valid Values: Any integer

Changes Take Effect: Immediately

Specifies the length of time (in seconds) after which the switch considers the call unanswered. This feature is designed for use during predictive calling campaigns. You can specify this timeout also for each call.

If the `Timeout` attribute is passed in the `MakePredictiveCall` message to T-Server, then the value of this attribute is used to define the No Answer timeout instead of the T-Server's own settings.

The default value (0) means that the `num-ring-no-answer` configuration option is used.

---

**Note:** You must use this configuration option if you are also using the `ring-back-tout` configuration option. The `ring-timeout` configuration option overrides the `num-ring-no-answer` configuration option.

---

### use-am-detection

Default Value: true, drop

Valid Values:

true, drop	Switch answering machine detection is requested. The switch attempts to classify the call as an answering machine and drops the call when an answering machine is detected.
connect	Switch answering machine detection is requested. The switch attempts to classify the call as an answering machine and does not drop the call when an answering machine is detected.
admin	The switch applies a treatment according to the switch configured AMD Treatment.
false, unspecified	No answering machine detection is requested.

Changes Take Effect: Immediately

Specifies whether T-Server requests the switch-based Answering Machine Detection for predictive calls. This configuration option is valid only for the `TMakePredictiveCall` request.

---

**Note:** You can configure T-Server to override the default value and enable or disable Answering Machine Detection for each individual call. See the `TMakePredictiveCall` function in the *Genesys Events and Models Reference Manual* and *Voice Platform SDK 8.x .NET (or Java) API Reference*.

---

## Flow Control Options

The following Flow Control options support a new flow control mechanism to ensure that the number of requests sent to the link is limited to a given rate.

### high-water-mark

Default Value: 1000

Valid Values: 10-10000

Changes Take Effect: Immediately

Specifies the maximum allowable number of outstanding messages in flow control before T-Server warns of a backlog. When the message backlog increases above the high-water-mark value, T-Server generates the LMS

message Flow Control: Above high water mark (x messages buffered). When the message backlog drops to 50 messages to fewer than the high-water-mark value, T-Server generates the LMS message Flow Control: Below high water mark (x messages buffered).

---

**Note:** The high-water-mark value is applicable for use-link-bandwidth values only.

---

### **link-alarm-high**

Default Value: 0

Valid Values: 0-100

Changes Take Effect: Immediately

Specifies the percentage of the use-link-bandwidth option that should be exceeded before the LMS message LINK\_ALARM\_HIGH is reported. A value of 0 (zero) disables the LMS message.

### **use-link-bandwidth**

Default Value: 0

Valid Values: 0-3000

Changes Take Effect: Immediately

Related Features: “Support for Avaya Enterprise Survivable Server (ESS)” on [page 161](#)

Controls the number of messages that can be sent to the link within a one second period of time. A value of 0 (zero) disables flow control.

### **use-link-bandwidth-backup**

Default Value: 0

Valid Values: 0-3000

Changes Take Effect: Immediately

Related Features: “Support for Avaya Enterprise Survivable Server (ESS)” on [page 161](#)

Controls the number of messages that can be sent to the link within a one second period of time when T-Server is in backup mode. It allows the backup T-Server to use less bandwidth, preventing the combined primary and backup T-Servers from drawing too much bandwidth from the switch. If the value is 0 (zero), the use-link-bandwidth option is used instead.

## cause-to-callstate-map Section

The `cause-to-callstate-map` section contains restricted configuration options that control mapping of cause codes to the `CallState` attribute for predictive calling scenarios.

---

**Warning!** Use these options only when requested by Genesys Technical Support.

---

### **csta-<cause\_code>**

Default Value: No default value

Valid Values: An integer as specified in [Table 21](#)

Changes Take Effect: Immediately

Related Feature: “Support for Cause Codes” on [page 158](#)

Specifies the cause code returned by the switch link to be mapped to the `CallState` attribute that is related to predictive dialing scenarios. For a list of supported CSTA cause codes, see Table 14 on [page 158](#).

Examples of the configuration option names:

- `csta-1`—configuration option name for cause code 1
- `csta-34`—configuration option name for cause code 34

[Table 21](#) contains a list of valid values, integers, representing a Genesys `CallState` related to predictive dialing scenarios.

**Table 21: List of Valid Values**

Option Value	Description
0	CallStateOk
3	CallStateGeneralError
4	CallStateSystemError
6	CallStateBusy
7	CallStateNoAnswer
8	CallStateSitDetected
9	CallStateAnsweringMachineDetected
10	CallStateAllTrunksBusy
11	CallStateSitInvalidnum
12	CallStateSitVacant
13	CallStateSitIntercept
14	CallStateSitUnknown

**Table 21: List of Valid Values (Continued)**

Option Value	Description
15	CallStateSitNocircuit
16	CallStateSitReorder
17	CallStateFaxDetected
18	CallStateQueueFull
26	CallStateDropped

---

**Note:** It is important to ensure that any configured mappings of a cause code to a `CallState` attribute do not inadvertently impact Outbound Contact Server functionality. For example—the use of `CallStateBusy` describes scenarios where the dialed endpoint is found to be busy and should not be used in the mappings of an unrelated cause code.

---

## query-agent-state Section

The `query-agent-state` section defines the configuration options that control T-Server query rates for DN's in all work modes. It also describes how to configure these options to set several query rates.

These options set the query rates for 100 query timers, numbered from 0 (zero) to 99. The timer 0 (zero) sets the default rate. Timers 1 through 99 represent customer-defined reason codes.

By using these options, you can preserve bandwidth by reducing the DN query rate.

To specify a new query rate for a DN:

1. Enable the agent work mode timers by setting the `query-agent-work-mode` option to `on-timer`. This sets all query rates to their default values. See `query-agent-work-mode` on [page 244](#) for details.

---

**Warning!** To enable the query agent states feature, the `query-agent-work-mode` option must be set to `on-timer`.

---

2. Optionally, enable query agent options for any reason code by setting the `enable-query-on-timer` option to `true`. This leaves the query rate for all reason codes set to their default values.

3. Optionally, set a new query rate for an individual reason code, by setting its corresponding `query-on-timer-AUX<X>` option, where `<X>` is a number from 0 to 99 that identifies that reason code. Set `query-on-timer-AUX0` to set a default timer rate. T-Server queries all DNSs that return the reason code at the new rate. See `query-on-timer-AUX<X>` on [page 257](#) for details.
4. Optionally, continue setting reason code query rates as necessary. Query rates for reason codes remain at their default values if they are not set individually using these options.

You can exempt individual DNSs from the new query rates by using these options. See `query-on-timer` on [page 244](#).

### **enable-query-on-timer**

Default Value: `false`

Valid Values:

<code>true</code>	Enables variable query rates to be implemented based on individual <code>query-on-timer-AUX&lt;X&gt;</code> , <code>query-on-timer-acw</code> , <code>query-on-timer-auto-in</code> , and <code>query-on-timer-man-in</code> option settings. T-Server queries all DNSs reporting a given reason code, at the rate set by its corresponding option. DNSs in <code>AUX</code> state not reporting a reason code are queried at the rate set by the <code>query-on-timer-AUX0</code> option. Query rates that are not explicitly set by an option default to a value of 3 seconds minimum. When changing a timer value, any timer that has already started must finish before a new value takes effect.
<code>false</code>	Sets all query rates to their default values. If this value is set to <code>false</code> , the new setting does not stop timers that have previously been set.

Changes Take Effect: Immediately

Allows T-Server to change the DNS query rate, based on the reason code returned by DNSs logging out. This configuration option enables 100 `query-on-timer-AUX<X>` options in an environment in which the value of the `query-agent-work-mode` option has also been set to `on-timer`. All T-Server query intervals default to a value of 3 seconds minimum. You can selectively override this default value for individual reason codes, by setting corresponding `query-on-timer-AUX<X>` options as necessary.

---

**Note:** The `enable-query-on-timer-aux` option is still available for backward compatibility if you choose not to use the `enable-query-on-timer` option.

---



**query-on-timer-acw**

Default Value: 3

Valid Values: 3–900

Changes Take Effect: Immediately

Sets the query interval (in seconds) for DNs that report themselves in the `AfterCallWork` work mode.

**query-on-timer-auto-in**

Default Value: 3

Valid Values: 3–900

Changes Take Effect: Immediately

Sets the query interval (in seconds) for DNs that report themselves in the `AutoIn (Ready)` work mode.

**query-on-timer-AUX<X>**

Default Value: 3

Valid Value: 3–900

Changes Take Effect: Immediately

This is the option name format for 100 `query-agent-state` options. Each `query-agent-state` option name conforms to the format `query-on-timer-AUX<X>`, where `<X>` is the reason code that is returned to T-Server by the switch when a particular DN is in the `AUX` work mode. When no reason code is returned to T-Server, T-Server uses the default value that is set by `query-on-timer-AUX0`. The reason code values range from 1 to 99. The `query-on-timer-AUX0` option sets the query interval for DNs that report themselves in a `NotReady/AUX` state, but that do not report a reason code.

To set the query interval time for a reason code from 1 to 99, set the value (in seconds) of its corresponding `query-on-timer-AUX<X>` option, and set the value of the `enable-query-on-timer` to `true`. T-Server queries all DNs that report the reason code at the new query rate.

**query-on-timer-man-in**

Default Value: 3

Valid Values: 3–900

Changes Take Effect: Immediately

Sets the query interval (in seconds) for DNs that report themselves in the `ManualIn (Ready)` work mode.

## tsapi-configuration Section

The following restricted configuration options control the ACD Queue size parameters in the `AcsOpenStream` request. These configuration options are set in the `tsapi-configuration` section.

### **recv-extra-bufs**

Default Value: 0

Valid Values: 0 to 4294967294

Changes Take Effect: Immediately

Controls the `recvExtraBufs` parameter in the `AcsOpenStream` request.

---

**Warning!** Use this option only when requested by Genesys Technical Support.

---

### **recv-q-size**

Default Value: 0

Valid Values: 0 to 4294967294

Changes Take Effect: Immediately

Controls the `recvQSize` parameter in the `AcsOpenStream` request.

---

**Warning!** Use this option only when requested by Genesys Technical Support.

---

### **send-extra-bufs**

Default Value: 0

Valid Values: 0 to 4294967294

Changes Take Effect: Immediately

Controls the `sendExtraBufs` parameter in the `AcsOpenStream` request.

---

**Warning!** Use this option only when requested by Genesys Technical Support.

---

### **send-q-size**

Default Value: 0

Valid Values: 0 to 4294967294

Changes Take Effect: Immediately

Controls the `sendQSize` parameter in the `AcsOpenStream` request.

---

**Warning!** Use this option only when requested by Genesys Technical Support.

---

## extrouter Section

This multi-site support section, `extrouter`, contains the configuration options that are used to support multi-site environments with the Inter Server Call Control (ISCC) feature.

For a description of the ways in which T-Server supports multi-site configurations and for an explanation of the configuration possibilities for a multi-site operation, see the “[Multi-Site Support](#)” chapter.

### default-network-call-id-matching

Default Value: No default value

Valid Values: TSAPI

Changes Take Effect: Immediately

Specifies that the `NetworkCallID` attribute is used for the ISCC/COF call matching. If the value of this configuration option is set to TSAPI, T-Server uses the `NetworkCallID` attribute for the ISCC/COF call matching.

To activate this feature, the value for the `cof-feature` configuration option must be set to true.

## CTI-Link Section for DMCC

The section name is specified by the `link-n-name` option.

### hostname

Default Value: Mandatory field. No default value.

Valid Values: Any valid host name

Changes Take Effect: Immediately

Specifies the host of the link according to the switch configuration.

### link-type

Default Value: `asai`

Valid Values: `asai`, `dmcc`

Changes Take Effect: Immediately

Specifies the link type that is used.

### password

Default Value: Mandatory field. No default value.

Valid Values: Any character string

Changes Take Effect: Immediately

Specifies the DMCC password as administered on Avaya TSAPI.

**port**

Default Value: Mandatory field. No default value.

Valid Values: Any valid port address

Changes Take Effect: Immediately

Specifies the DMCC port of the link according to the switch configuration.

**session-duration**

Default Value: 80

Valid Values: 10-2147483647 seconds

Changes Take Effect: Immediately

Related Feature: “Support for Real-Time Agent State Using Device, Media and Call Control API” on [page 155](#)

Specifies the length of time, in seconds, that is used by T-Server to request a specific DMCC application session time. The `session-duration` option impacts the `ResetApplicationSessionTimer` requests that are sent at 1/3 of the actual session duration. Any failed response to this request will cause T-Server to close the DMCC link.

---

**Note:** The switch can override this requested value.

---

**switch-name**

Default Value: Mandatory field. No default value.

Valid Values: Any character string

Changes Take Effect: Immediately

Specifies the name of the switch as required by DMCC device registration.

**username**

Default Value: Mandatory field. No default value.

Valid Values: Any character string

Changes Take Effect: Immediately

Specifies the username as administered on Avaya TSAPI.

---

## DN-Level Options

These options are set in the `TServer` section on the `Annex` tab of a DN configuration object in Configuration Manager. Each option applies only to the DN for which it is configured.

For ease of reference, the options have been arranged in alphabetical order.

## TServer Section

### **enable-dmcc**

Default value: true

Valid Values: true, false

Changes Take Effect: During next registration

If the value of this configuration option is set to true, T-Server will register the DN over the DMCC link.

---

**Note:** DNs that are not DMCC-enabled on the physical switch must be also configured in Configuration Manager to disable DMCC. Each DN must be disabled by setting the `enable-dmcc` option to false.

---

### **password**

Default Value: Mandatory field. No default value.

Valid Values: Any character string

Changes Take Effect: After T-Server is restarted

Assigns the password to a specific device and administered on Avaya TSAPI. If no password is provided, the password is assumed to be the same digits as the associated DN.

---

**Note:** The DMCC password is a required field, called Security Code, in Avaya TSAPI.

---

### **query-on-timer**

Default Value: not configured

Valid Values: true, false, not configured

Changes Take Effect: Immediately

Enables queries for a specified DN. If the value of this configuration option is set to true or not configured and the value of the `query-agent-work-mode` option is set to on-timer, queries are enabled for this DN. If the value of this option is set to false and the value of query-agent-work-mode is set to on-timer, queries are disabled for this DN. The query-on-timer option is in effect only if the query-agent-work-mode option is set to on-timer.

### **second-call-as-consult**

Default Value: not configured

Valid Values: true, false, not configured

Changes Take Effect: Immediately

Treats a second call, initiated from an extension, as a consultation call to a call on hold. If the value of the configuration option is set to true, a call is on hold on an extension, and a second call is initiated from that extension, T-Server treats the second call as a consultation call to the call on hold. if the value of

the configuration option is set to `false`, the second call is a regular call type. If the setting is not configured for this DN, then the value of the configuration option `second-call-as-consult` set at the Application-level takes precedence.

### **tacw**

Default value: 0

Valid Values: Any integer

Changes Take Effect: Immediately with the next call

Specifies the number of seconds that T-Server waits after this DN releases a call before querying the switch to verify that the switch TACW has updated the agent state.

**Note:** This value should be coordinated with the switch TACW value. See “Configuring the TimedAfterCallWork (TACW) Option” on [page 135](#) for details.

## Changes from Release 8.0 to 8.1

[Table 22](#) lists configuration options that:

- Are new or changed in the 8.1 release of T-Server
- Have been added or changed since the most recent 8.0 release of this document changed between the 8.0 and 8.1 releases of T-Server.

**Table 22: T-Server Option Changes from 8.0 to 8.1**

Option Name	Type of Change	Details
<b>TServer Section</b>		
recv-extra-bufs	New since 8.0.006.03	See <a href="#">page 258</a> for details.
recv-q-size	New since 8.0.006.03	See <a href="#">page 258</a> for details.
releasing-party-report	New since 8.0.101.05	See <a href="#">page 245</a> for details.
send-extra-bufs	New since 8.0.006.03	See <a href="#">page 258</a> for details.
send-q-size	New since 8.0.006.03	See <a href="#">page 258</a> for details.
set-call-type-on-dialing	New	See <a href="#">page 247</a> for details.

## Related Documentation Resources

The following resources provide additional information that is relevant to this software. Consult these additional resources as necessary:

### T-Server for Avaya TSAPI

- The Release Notes and Product Advisories for this product, which are available on the Genesys Technical Support website at <http://genesyslab.com/support>.

### Management Framework

Consult these additional resources as necessary:

- The *Framework 8.1 Deployment Guide*, which will help you configure, install, start, and stop Framework components.
- The *Framework 8.1 Configuration Manager Help*, which describes how to use Configuration Manager in either an enterprise or multi-tenant environment.
- The *Framework 8.1 Genesys Administrator Help*, which describes how to use Genesys Administrator in either an enterprise or multi-tenant environment.
- The *Framework 8.0 Configuration Options Reference Manual*, which will provide you with descriptions of configuration options for other Framework components.

### Platform SDK

- The *Genesys Events and Models Reference Manual*, which contains an extensive collection of events and call models describing core interaction processing in Genesys environments.

- The *Voice Platform SDK 8.x .NET (or Java) API Reference*, which contains technical details of T-Library functions.

## Genesys

- *Genesys Technical Publications Glossary*, which ships on the Genesys Documentation Library DVD and which provides a comprehensive list of the Genesys and computer-telephony integration (CTI) terminology and acronyms used in this document.
- *Genesys Migration Guide*, which ships on the Genesys Documentation Library DVD, and which provides documented migration strategies for Genesys product releases. Contact Genesys Technical Support for more information.

Information about supported hardware and third-party software is available on the Genesys Technical Support website in the following documents:

- [\*Genesys Supported Operating Environment Reference Manual\*](#)
- [\*Genesys Supported Media Interfaces Reference Manual\*](#)

Consult these additional resources as necessary:

- *Genesys Hardware Sizing Guide*, which provides information about Genesys hardware sizing guidelines for the Genesys 7.x and 8.x releases.
- *Genesys Interoperability Guide*, which provides information on the compatibility of Genesys products with various Configuration Layer Environments; Interoperability of Reporting Templates and Solutions; and Gplus Adapters Interoperability.
- *Genesys Licensing Guide*, which introduces you to the concepts, terminology, and procedures relevant to the Genesys licensing system.
- *Genesys Database Sizing Estimator 8.0 Worksheets*, which provides a range of expected database sizes for various Genesys products.

For additional system-wide planning tools and information, see the release-specific listings of System Level Documents on the Genesys Technical Support website, accessible from the [system level documents by release](#) tab in the Knowledge Base Browse Documents Section.

Genesys product documentation is available on the:

- Genesys Technical Support website at <http://genesyslab.com/support>.
- Genesys Documentation Library DVD, which you can order by e-mail from Genesys Order Management at [orderman@genesyslab.com](mailto:orderman@genesyslab.com).



# Document Conventions

This document uses certain stylistic and typographical conventions—introduced here—that serve as shorthands for particular kinds of information.

## Document Version Number

A version number appears at the bottom of the inside front cover of this document. Version numbers change as new information is added to this document. Here is a sample version number:

81fr\_ref\_06-2011\_v8.1.000.01

You will need this number when you are talking with Genesys Technical Support about this product.

## Screen Captures Used in This Document

Screen captures from the product graphical user interface (GUI), as used in this document, may sometimes contain minor spelling, capitalization, or grammatical errors. The text accompanying and explaining the screen captures corrects such errors *except* when such a correction would prevent you from installing, configuring, or successfully using the product. For example, if the name of an option contains a usage error, the name would be presented exactly as it appears in the product GUI; the error would not be corrected in any accompanying text.

## Type Styles

[Table 23](#) describes and illustrates the type conventions that are used in this document.

**Table 23: Type Styles**

Type Style	Used For	Examples
Italic	<ul style="list-style-type: none"> <li>Document titles</li> <li>Emphasis</li> <li>Definitions of (or first references to) unfamiliar terms</li> <li>Mathematical variables</li> </ul> <p>Also used to indicate placeholder text within code samples or commands, in the special case where angle brackets are a required part of the syntax (see the note about angle brackets on <a href="#">page 266</a>).</p>	<p>Please consult the <i>Genesys Migration Guide</i> for more information.</p> <p>Do <i>not</i> use this value for this option.</p> <p>A <i>customary and usual</i> practice is one that is widely accepted and used within a particular industry or profession.</p> <p>The formula, <math>x + 1 = 7</math> where <math>x</math> stands for . . .</p>
Monospace font (Looks like teletype or typewriter text)	<p>All programming identifiers and GUI elements. This convention includes:</p> <ul style="list-style-type: none"> <li>The <i>names</i> of directories, files, folders, configuration objects, paths, scripts, dialog boxes, options, fields, text and list boxes, operational modes, all buttons (including radio buttons), check boxes, commands, tabs, CTI events, and error messages.</li> <li>The values of options.</li> <li>Logical arguments and command syntax.</li> <li>Code samples.</li> </ul> <p>Also used for any text that users must manually enter during a configuration or installation procedure, or on a command line.</p>	<p>Select the Show variables on screen check box.</p> <p>In the Operand text box, enter your formula.</p> <p>Click OK to exit the Properties dialog box.</p> <p>T-Server distributes the error messages in EventError events.</p> <p>If you select true for the inbound-bsns-calls option, all established inbound calls on a local agent are considered business calls.</p> <p>Enter exit on the command line.</p>
Square brackets ([ ])	A particular parameter or value that is optional within a logical argument, a command, or some programming syntax. That is, the presence of the parameter or value is not required to resolve the argument, command, or block of code. The user decides whether to include this optional information.	<code>smcp_server -host [/flags]</code>
Angle brackets (< >)	<p>A placeholder for a value that the user must specify. This might be a DN or a port number specific to your enterprise.</p> <p><b>Note:</b> In some cases, angle brackets are required characters in code syntax (for example, in XML schemas). In these cases, italic text is used for placeholder values.</p>	<code>smcp_server -host &lt;confighost&gt;</code>



# Index

## Symbols

[] (square brackets)	266
< > (angle brackets)	266
<key name> common log option	204

## A

Access Code	
configuration	104
defined	37, 102
ADDP	54
addp-remote-timeout	
configuration option	230
addp-timeout	
configuration option	231
addp-trace	
configuration option	231
Advanced Disconnect Detection Protocol	23
after-call-fac	
configuration option	238
Agent Login objects	38
agent reservation	
defined	28
agent work mode	152
agent-no-answer-action	
configuration option	239
agent-no-answer-overflow	
configuration option	239
agent-no-answer-timeout	
configuration option	240
agent-reservation section	
configuration options	218–219
alarm	
common log option	195
all	
common log option	194
angle brackets	266
ANI	67

ani-distribution	
configuration option	210
app	
command line parameter	115
Application objects	
multi-site operation	101
Application-level options	
configuration options	237
auto-in-fac	
configuration option	240
aux-work-fac	
configuration option	240

## B

background-processing	
configuration option	210
background-timeout	
configuration option	211
backup servers	45
backup-sync section	
configuration options	230–231
configuring hot standby	54
brackets	
angle	266
square	266
buffering	
common log option	188

## C

call release tracking	157
call-cleanup section	
configuration options	232–233
call-delete-delay-msec	
configuration option	240
CallerID	
support for	154
cast-type	
configuration option	66, 221

cause-to-callstate-map section		
configuration options	254	
CDN	73	
changes from 8.0 to 8.1	262	
common configuration options	207	
T-Server common configuration options	235	
check-point		
common log option	192	
check-tenant-profile		
configuration option	211	
cleanup-idle-tout		
configuration option	232	
Code property	104, 105	
cof-ci-defer-create		
configuration option	226	
cof-ci-defer-delete		
configuration option	226	
cof-ci-req-tout		
configuration option	82, 226	
cof-ci-wait-all		
configuration option	227	
cof-feature		
configuration option	227	
cof-rci-tout		
configuration option	227	
collect-lower-priority-requests		
configuration option	218	
command line parameters	115	
app	115	
host	115	
l	116	
lmspath	116	
nco X/Y	116	
port	115	
V	116	
commenting on this document	12	
common configuration options	188–208	
changes from 8.0 to 8.1	207	
common section	207	
disable-rbac	205	
enable-async-dns	207	
hangup-restart	206	
heartbeat-period	205	
heartbeat-period-thread-class-<n>	206	
log section	188–202	
log-extended section	202–204	
log-filter section	204	
log-filter-data section	204–205	
mandatory	188	
rebind-delay	207	
security section	205	
setting	187	
sml section	205–207	
suspending-wait-timeout	206	
common log options	188–204	
<key name>	204	
alarm	195	
all	194	
buffering	188	
check-point	192	
compatible-output-priority	193	
debug	197	
default-filter-type	204	
expire	189	
interaction	196	
keep-startup-file	190	
level-reassign-<eventID>	202	
level-reassign-disable	204	
log section	188–202	
log-extended section	202–204	
log-filter section	204	
log-filter-data section	204–205	
mandatory options	188	
memory	192	
memory-storage-size	193	
message_format	190	
messagefile	190	
print-attributes	192	
segment	189	
setting	187	
spool	193	
standard	196	
time_convert	191	
time_format	191	
trace	196	
verbose	188	
x-conn-debug-all	202	
x-conn-debug-api	201	
x-conn-debug-dns	201	
x-conn-debug-open	200	
x-conn-debug-security	201	
x-conn-debug-select	200	
x-conn-debug-timers	200	
x-conn-debug-write	200	
common options		
common log options	188–204	
common section	207	
mandatory options	188	
sml section	205–207	
common section		
common options	207	
compatible-output-priority		
common log option	193	
compound-dn-representation		
configuration option	228	
Configuration Manager		
configuring T-Server	39	
multiple ports	40	
configuration options		
addp-remote-timeout	230	
addp-timeout	231	
addp-trace	231	

after-call-fac	238
agent-no-answer-action	239
agent-no-answer-overflow	239
agent-no-answer-timeout	240
agent-reservation section	218–219
ani-distribution	210
auto-in-fac	240
aux-work-fac	240
background-processing	210
background-timeout	211
backup-sync section	230–231
call-cleanup section	232–233
call-delete-delay-msec	240
cast-type	221
cause-to-callstate-map section	254
changes from 8.0 to 8.1	235
check-tenant-profile	211
cleanup-idle-tout	232
cof-ci-defer-create	226
cof-ci-defer-delete	226
cof-ci-req-tout	226
cof-ci-wait-all	227
cof-feature	227
cof-rci-tout	227
collect-lower-priority-requests	218
common log options	188–204
common options	188–208
compound-dn-representation	228
consult-user-data	211
create-addr-on-register	241
csta-<cause_code>	254
CTI-Link section for DMCC	259
customer-id	212
default-dn	222
default-network-call-id-matching	228, 259
delay-logout-report	241
direct-digits-key	222
disable-digits-collection	241
dn-for-unexpected-calls	223
DN-level options	260–262
dn-scope	96, 161, 162, 212
enable-query-on-timer	256
epp-tout	97, 229
event-propagation	229
extrouter section	219–230
Flow Control	252
handle-vsp	230
high-water-mark	252
hostname	259
inbound-translator-<n>	229
ink-alarm-high	253
license section	215–218
link-type	259
local-node-id	227
log-trace-flags	213
log-trace-flags (specific to this T-Server)	242
management-port	213
mandatory options	188, 238
manual-in-fac	242
match-call-once	220
max-attempts-to-register	242
merge-consult-data	243
merged-user-data	213
msec-wait-for-ack	243
network-request-timeout	223
notify-idle-tout	232
num-of-licenses	215
num-ring-no-answer	251
num-sdn-licenses	216
out-of-service-retry-interval	243
password	259
periodic-check-tout	232
port	260
predict-agent-work-mode	244
Predictive Dialing	251
propagated-call-type	96, 161, 214
protocol	231
query-agent-state section	255–257
query-agent-work-mode	244
query-on-timer	244
query-on-timer-acw	257
query-on-timer-auto-in	257
query-on-timer-AUX<X>	257
query-on-timer-man-in	257
reconnect-tout	220
recv-extra-bufs	258
recv-q-size	258
register-attempts	223
register-tout	223
reject-subsequent-request	219
releasing-party-report	245
report-connid-changes	220
request-collection-time	219
request-tout	223
reservation-time	219
resource-allocation-mode	224
resource-load-maximum	224
ring-back-tout	251
ring-timeout	251
route-dn	224
route-failure-alarm-high-wm	246
route-failure-alarm-low-wm	246
route-failure-alarm-period	246
route-thru-queue	246
rule-<n>	233
second-call-as-consult	247
security section	234
send-extra-bufs	258
send-q-size	258
send-tcs-dtmf	247
server-id	214
session-duration	260

- set-call-type-on-dialing . . . . . 247
  - setting . . . . . 209
    - common . . . . . 187
  - simulated-heartbeat-enabled . . . . . 248
  - simulated-heartbeat-interval . . . . . 248
  - soft-login-support . . . . . 248
  - soft-wrap-up-time . . . . . 249
  - switch-name . . . . . 260
  - sync-reconnect-tout . . . . . 231
  - tcs-queue . . . . . 225
  - tcs-use . . . . . 226
  - timeout . . . . . 225
  - timeout value format . . . . . 234
  - Translation Rules section . . . . . 233
  - tsapi-configuration section . . . . . 258
  - tsapi-heartbeat-interval . . . . . 249
  - tsapi-server-id . . . . . 250
  - TServer section . . . . . 210–215, 238–253
  - update-button-info . . . . . 250
  - use-am-detection . . . . . 252
  - use-data-from . . . . . 221
  - use-implicit-access-numbers . . . . . 225
  - use-link-bandwidth . . . . . 161, 253
  - use-link-bandwidth-backup . . . . . 161, 253
  - use-pending-work-mode . . . . . 250
  - user-data-limit . . . . . 215
  - user-login . . . . . 250
  - username . . . . . 260
  - configuring
    - high availability
      - T-Server . . . . . 53–55
    - multi-site operation . . . . . 101–114
      - steps . . . . . 101
    - T-Server . . . . . 39
      - multiple ports . . . . . 40
  - consult-user-data
    - configuration option . . . . . 211
  - conventions
    - in document . . . . . 265
    - type styles . . . . . 266
  - create-addr-on-register option . . . . . 241
  - csta-<cause\_code>
    - configuration option . . . . . 254
  - CTI Link configuration
    - switch configuration . . . . . 132
  - CTI-Link section for DMCC
    - configuration options . . . . . 259
  - customer-id
    - configuration option . . . . . 212
- D**
- debug
    - common log option . . . . . 197
  - Default Access Code
    - configuration . . . . . 103
    - defined . . . . . 102
  - default-dn
    - configuration option . . . . . 222
  - default-filter-type
    - common log option . . . . . 204
  - default-network-call-id-matching
    - configuration option . . . . . 228, 259
  - delay-logout-report
    - configuration option . . . . . 241
  - destination location . . . . . 60
  - destination T-Server . . . . . 66
  - direct-ani
    - ISCC transaction type . . . . . 67, 75
  - direct-callid
    - ISCC transaction type . . . . . 68, 75
  - direct-digits
    - transaction type . . . . . 75
  - direct-digits-key
    - configuration option . . . . . 222
  - direct-network-callid
    - ISCC transaction type . . . . . 68, 75
  - direct-notoken
    - ISCC transaction type . . . . . 69, 75
  - direct-uui
    - ISCC transaction type . . . . . 69, 75
  - disable-digits-collection
    - configuration option . . . . . 241
  - disable-rbac
    - common configuration option . . . . . 205
  - DMCC
    - ESS . . . . . 161
  - DN objects . . . . . 38
  - dn-for-unexpected-calls
    - configuration option . . . . . 223
  - dnis-pool
    - in load-balancing mode . . . . . 71
    - ISCC transaction type . . . . . 62, 70, 75
  - DN-level configuration options
    - enable-dmcc . . . . . 261
    - password . . . . . 261
    - query-on-timer . . . . . 261
    - second-call-as-consult . . . . . 261
    - tacw . . . . . 262
  - DN-level options
    - configuration options . . . . . 260–262
  - DNs
    - configuring for multi-sites . . . . . 108
  - dn-scope
    - configuration option . . . . . 96, 161, 162, 212
  - document
    - change history . . . . . 13
    - conventions . . . . . 265
    - errors, commenting on . . . . . 12
    - version number . . . . . 265

**E**

- enable-async-dns
  - common configuration option . . . . . 207
- enable-dmcc
  - DN-level configuration option . . . . . 261
- enable-query-on-timer
  - configuration option . . . . . 256
- enterprise survivable server . . . . . 161
- epp-tout
  - configuration option . . . . . 97, 229
- error messages
  - supported functionality . . . . . 179
- ESS . . . . . 165
  - architecture . . . . . 161
  - automatic call distribution . . . . . 161
  - bandwidth . . . . . 161
  - DMCC . . . . . 161
  - enterprise survivable server . . . . . 161
  - failure
    - server . . . . . 163, 164, 165
- Event Propagation
  - defined . . . . . 93
- EventAttachedDataChanged . . . . . 94
- event-propagation
  - configuration option . . . . . 229
- expire
  - common log option . . . . . 189
- Extensions attribute
  - supported functionality . . . . . 167
- extrouter section
  - configuration options . . . . . 219–230
  - configuring for multi-site operation . . . . 102
  - configuring party events propagation . . . . 98
  - configuring the Number Translation feature . 91

**F**

- failure
  - management site . . . . . 163
  - network . . . . . 165
  - primary media server . . . . . 162
  - single services site . . . . . 164
- figures
  - hot standby redundancy . . . . . 48
  - Multiple-to-Point mode . . . . . 74
  - Point-to-Point mode . . . . . 73
  - steps in ISCC/Call Overflow . . . . . 81
- Flow Control
  - configuration options . . . . . 252
- font styles
  - italic . . . . . 266
  - monospace . . . . . 266

**G**

- Genesys requirements for the switch
  - switch configuration . . . . . 141

**H**

- HA
  - See also high availability
  - See hot standby
- HA configuration . . . . . 45–55
- HA Proxy
  - starting . . . . . 122, 123
- handle-vsp
  - configuration option . . . . . 230
- hangup-restart
  - common configuration option . . . . . 206
- heartbeat-period
  - common configuration option . . . . . 205
- heartbeat-period-thread-class-<n>
  - common configuration option . . . . . 206
- high-availability configuration . . . . . 45–55
- high-water-mark
  - configuration option . . . . . 252
- host
  - command line parameter . . . . . 115
- hostname
  - configuration option . . . . . 259
- hot standby . . . . . 24, 45
  - defined . . . . . 25
  - figure . . . . . 48
  - T-Server configuration . . . . . 52

**I**

- inbound-translator-<n>
  - configuration option . . . . . 229
- Inter Server Call Control . . . . . 60–79
- Inter Server Call Control/Call Overflow . . 79–83
- interaction
  - common log option . . . . . 196
- ISCC
  - destination T-Server . . . . . 66
  - origination T-Server . . . . . 66
- ISCC transaction types . . . . . 61, 66
  - direct-ani . . . . . 67, 75
  - direct-callid . . . . . 68, 75
  - direct-digits . . . . . 75
  - direct-network-callid . . . . . 68, 75
  - direct-notoken . . . . . 69, 75
  - direct-uid . . . . . 69, 75
  - dnis-pool . . . . . 70, 75
    - in load-balancing mode . . . . . 71
  - pullback . . . . . 71, 75
  - reroute . . . . . 72, 75



- route . . . . . 73, 75
- route-uuui . . . . . 74
- supported . . . . . 75
- ISCC/COF
  - supported . . . . . 80
- iscc-xaction-type . . . . . 61
- italics . . . . . 266

## K

- keep-startup-file
  - common log option . . . . . 190

## L

- l
  - command line parameter . . . . . 116
- level-reassign-<eventID>
  - common log option . . . . . 202
- level-reassign-disable
  - common log option . . . . . 204
- license section
  - configuration options . . . . . 215–218
- link-alarm-high
  - configuration option . . . . . 253
- link-type
  - configuration option . . . . . 259
- lmspath
  - command line parameter . . . . . 116
- local-node-id
  - configuration option . . . . . 227
- location parameter . . . . . 60
- log configuration options . . . . . 188–194
- log section
  - common log options . . . . . 188–202
- log-extended section
  - common log options . . . . . 202–204
- log-filter section
  - common log options . . . . . 204
- log-filter-data section
  - common log options . . . . . 204–205
- log-trace-flags
  - configuration option . . . . . 213
- log-trace-flags (specific to this T-Server)
  - configuration option . . . . . 242

## M

- Management Layer . . . . . 36
- management-port
  - configuration option . . . . . 213
- mandatory options
  - configuration options . . . . . 210, 238

- manual-in-fac
  - configuration option . . . . . 242
- match-call-once
  - configuration option . . . . . 220
- max-attempts-to-register
  - configuration option . . . . . 242
- memory
  - common log option . . . . . 192
- memory-storage-size
  - common log option . . . . . 193
- merge-consult-data
  - configuration option . . . . . 243
- merged-user-data
  - configuration option . . . . . 213
- message\_format
  - common log option . . . . . 190
- messagefile
  - common log option . . . . . 190
- monospace font . . . . . 266
- msec-wait-for-ack
  - configuration option . . . . . 243
- Multiple-to-One mode . . . . . 73
- Multiple-to-Point mode . . . . . 73, 74

## N

- NAT/C feature . . . . . 91
- nco X/Y
  - command line parameter . . . . . 116
- network attended transfer/conference . . . . . 91
- network objects . . . . . 36
- network-request-timeout
  - configuration option . . . . . 223
- notification of failed routing attempts . . . . . 156
- notify-idle-tout
  - configuration option . . . . . 232
- Number Translation feature . . . . . 83–91
- number translation rules . . . . . 84
- num-of-licenses
  - configuration option . . . . . 215
- num-ring-no-answer
  - configuration option . . . . . 251
- num-sdn-licenses
  - configuration option . . . . . 216

## O

- objects
  - Agent Logins . . . . . 38
  - DNs . . . . . 38
  - network . . . . . 36
  - Switches . . . . . 37
  - Switching Offices . . . . . 37
- One-to-One mode . . . . . 73
- origination location . . . . . 60



origination T-Server . . . . . 66  
 out-of-service-retry-interval  
   configuration option . . . . . 243

## P

password  
   configuration option . . . . . 259  
   DN-level configuration option . . . . . 261  
 periodic-check-tout  
   configuration option . . . . . 232  
 Point-to-Point mode . . . . . 73  
 port  
   command line parameter . . . . . 115  
   configuration option . . . . . 260  
 predict-agent-work-mode  
   configuration option . . . . . 244  
 Predictive Dialing  
   configuration options . . . . . 251  
 primary servers . . . . . 45  
 print-attributes  
   common log option . . . . . 192  
 propagated-call-type  
   configuration option . . . . . 96, 214  
   configuration options . . . . . 161  
 protocol  
   configuration option . . . . . 231  
 pullback  
   ISCC transaction type . . . . . 71, 75

## Q

query-agent-state section  
   configuration options . . . . . 255–257  
 query-agent-work-mode  
   configuration option . . . . . 244  
 query-on-timer  
   configuration option . . . . . 244  
   DN-level configuration option . . . . . 261  
 query-on-timer-acw  
   configuration option . . . . . 257  
 query-on-timer-auto-in  
   configuration option . . . . . 257  
 query-on-timer-AUX<X>  
   configuration option . . . . . 257  
 query-on-timer-man-in  
   configuration option . . . . . 257

## R

real-time agent state using DMCC . . . . . 155  
 rebind-delay  
   common configuration option . . . . . 207

reconnect-tout  
   configuration option . . . . . 220  
 recv-extra-bufs  
   configuration option . . . . . 258  
 recv-q-size  
   configuration option . . . . . 258  
 redundancy  
   hot standby . . . . . 24, 45  
   warm standby . . . . . 24, 45  
 redundancy types . . . . . 49, 50, 52  
   hot standby . . . . . 25  
 register-attempts  
   configuration option . . . . . 223  
 register-tout  
   configuration option . . . . . 223  
 reject-subsequent-request  
   configuration option . . . . . 219  
 releasing-party-report  
   configuration option . . . . . 245  
 replacing calling party number . . . . . 154  
 report-connid-changes  
   configuration option . . . . . 220  
 request-collection-time  
   configuration option . . . . . 219  
 request-tout  
   configuration option . . . . . 62, 223  
 reroute  
   ISCC transaction type . . . . . 72, 75  
 reservation-time  
   configuration option . . . . . 219  
 resource-allocation-mode  
   configuration option . . . . . 224  
 resource-load-maximum  
   configuration option . . . . . 224  
 ring-back-tout  
   configuration option . . . . . 251  
 ring-timeout  
   configuration option . . . . . 251  
 route  
   ISCC transaction type . . . . . 62, 73, 75, 108  
 route-dn  
   configuration option . . . . . 224  
 route-failure-alarm-high-wm  
   configuration option . . . . . 246  
 route-failure-alarm-low-wm  
   configuration option . . . . . 246  
 route-failure-alarm-period  
   configuration option . . . . . 246  
 route-thru-queue  
   configuration option . . . . . 246  
 route-uui  
   ISCC transaction type . . . . . 74  
 routing  
   Inter Server Call Control . . . . . 66–79  
 rule-<n>  
   configuration option . . . . . 233

run.bat . . . . . 119  
 run.sh . . . . . 118

## S

second-call-as-consult  
   configuration option . . . . . 247  
   DN-level configuration option . . . . . 261  
 security section  
   common configuration options . . . . . 205, 234  
 segment  
   common log option . . . . . 189  
 send-extra-bufs  
   configuration option . . . . . 258  
 send-q-size  
   configuration option . . . . . 258  
 send-tcs-dtmf  
   configuration option . . . . . 247  
 server  
   entreprise survivable . . . . . 161  
 server-id  
   configuration option . . . . . 214  
 session-duration  
   configuration option . . . . . 260  
 set-call-type-on-dialing  
   configuration option . . . . . 247  
 setting configuration options  
   common . . . . . 187  
 setting DN types  
   switch configuration . . . . . 131  
 simulated-heartbeat-enabled  
   configuration option . . . . . 248  
 simulated-heartbeat-interval  
   configuration option . . . . . 248  
 single services . . . . . 164  
 site  
   management . . . . . 163  
     ESS . . . . . 163  
   single services . . . . . 164  
     ESS . . . . . 164  
 sml section  
   common options . . . . . 205–207  
 soft-login-support  
   configuration options . . . . . 248  
 soft-wrap-up-time  
   configuration option . . . . . 249  
 spool  
   common log option . . . . . 193  
 square brackets . . . . . 266  
 standard  
   common log option . . . . . 196  
 starting  
   HA Proxy . . . . . 122  
   T-Server . . . . . 123

support  
   agent work mode . . . . . 152  
   call release tracking . . . . . 157  
   calling party number . . . . . 154  
   notification of failed routing attempts . . . . . 156  
   real-time agent state using DMCC . . . . . 155  
 supported agent work modes  
   supported functionality . . . . . 152  
 supported functionality . . . . . 143  
   error messages . . . . . 179  
   Extensions attribute . . . . . 167  
   High-Availability configurations . . . . . 185  
   supported agent work modes . . . . . 152  
   UserData attribute . . . . . 178  
 supported functionality table . . . . . 144  
 suspending-wait-timeout  
   common configuration option . . . . . 206  
 switch configuration . . . . . 129  
   CTI Link configuration . . . . . 132  
   Genesys requirements for the switch . . . . . 141  
   setting DN Types . . . . . 131  
   TACW configuration . . . . . 135  
   TSAPI Link . . . . . 134  
 Switch objects . . . . . 37  
   multi-site operation . . . . . 101  
 switch partitioning  
   defined . . . . . 96  
   T-Server support . . . . . 97  
 switch requirements . . . . . 139  
 Switching Office objects . . . . . 37  
   multi-site operation . . . . . 102, 103, 104, 108  
 switch-name  
   configuration option . . . . . 260  
 sync-reconnect-tout  
   configuration option . . . . . 231

## T

tacw  
   DN-level configuration option . . . . . 262  
 Target ISCC  
   Access Code configuration . . . . . 105  
   Default Access Code configuration . . . . . 104  
 tcs-queue  
   configuration option . . . . . 225  
 tcs-use  
   configuration option . . . . . 226  
 time\_convert  
   common log option . . . . . 191  
 time\_format  
   common log option . . . . . 191  
 TimedAfterCallWork (TACW) configuration  
   switch configuration . . . . . 135  
 timeout  
   configuration option . . . . . 62, 225

timeout value format  
     configuration options . . . . . 234  
 TInitiateConference . . . . . 60  
 TInitiateTransfer . . . . . 60  
 T-Library functionality . . . . . 143  
 TMakeCall . . . . . 60  
 TMuteTransfer . . . . . 60  
 trace  
     common log option . . . . . 196  
 transaction types (ISCC) . . . . . 61, 66  
     supported . . . . . 75  
 transfer connect service . . . . . 78  
 Translation Rules section  
     configuration option . . . . . 233  
 TRouteCall . . . . . 60  
 trunk lines . . . . . 73  
 TSAPI Link configuration  
     switch configuration . . . . . 134  
 tsapi-configuration section  
     configuration options . . . . . 258  
 tsapi-heartbeat-interval  
     configuration option . . . . . 249  
 tsapi-server-id  
     configuration option . . . . . 250  
 T-Server  
     configuring Application objects . . . . . 39  
         for multi-sites . . . . . 101  
     configuring redundancy . . . . . 50  
     HA . . . . . 52  
     high availability . . . . . 52  
     hot standby . . . . . 52  
     multi-site operation . . . . . 101–114  
     redundancy . . . . . 49, 50, 52  
     starting . . . . . 123, 124  
     using Configuration Manager . . . . . 39  
         multiple ports . . . . . 40  
     warm standby . . . . . 50  
 TServer section  
     configuration options . . . . . 210–215, 238–253  
 TSingleStepTransfer . . . . . 60  
 TXRouteType . . . . . 61  
 type styles  
     conventions . . . . . 266  
     italic . . . . . 266  
     monospace . . . . . 266  
 typographical styles . . . . . 265, 266

## U

UNIX  
     installing T-Server . . . . . 41  
     starting applications . . . . . 119  
     starting HA Proxy . . . . . 123  
     starting T-Server . . . . . 124  
     starting with run.sh . . . . . 118

update-button-info  
     configuration option . . . . . 250  
 use-am-detection  
     configuration option . . . . . 252  
 use-data-from  
     configuration option . . . . . 221  
 use-implicit-access-numbers  
     configuration option . . . . . 225  
 use-link-bandwidth  
     configuration option . . . . . 161, 253  
 use-link-bandwidth-backup  
     configuration option . . . . . 161, 253  
 use-pending-work-mode  
     configuration option . . . . . 250  
 user data propagation . . . . . 94  
 UserData attribute  
     supported functionality . . . . . 178  
 user-data-limit  
     configuration option . . . . . 215  
 user-login  
     configuration option . . . . . 250  
 username  
     configuration option . . . . . 260

## V

V  
     command line parameters . . . . . 116  
 VDN . . . . . 73  
 verbose  
     common log option . . . . . 188  
 version numbering, document . . . . . 265

## W

warm standby . . . . . 24, 45  
     figure . . . . . 46  
     T-Server configuration . . . . . 50  
 Windows  
     installing T-Server . . . . . 42  
     starting applications . . . . . 119  
     starting HA Proxy . . . . . 123  
     starting T-Server . . . . . 124  
     starting with run.bat . . . . . 119

## X

x-conn-debug-all  
     common log option . . . . . 202  
 x-conn-debug-api  
     common log option . . . . . 201  
 x-conn-debug-dns  
     common log option . . . . . 201

x-conn-debug-open	
common log option . . . . .	200
x-conn-debug-security	
common log option . . . . .	201
x-conn-debug-select	
common log option . . . . .	200
x-conn-debug-timers	
common log option . . . . .	200
x-conn-debug-write	
common log option . . . . .	200